

HUSQVARNA - SPARE PARTS CATALOG

LAWN MOWERS: CONSUMER WALK-BEHINDS: HUSQVARNA LB 146I

foretjardin.com


Sparepartslist

SPAREPARTSLIST

LAWN MOWERS: CONSUMER WALK-
BEHINDS

HUSQVARNA LB 146I


B LB 146i
HANDLE

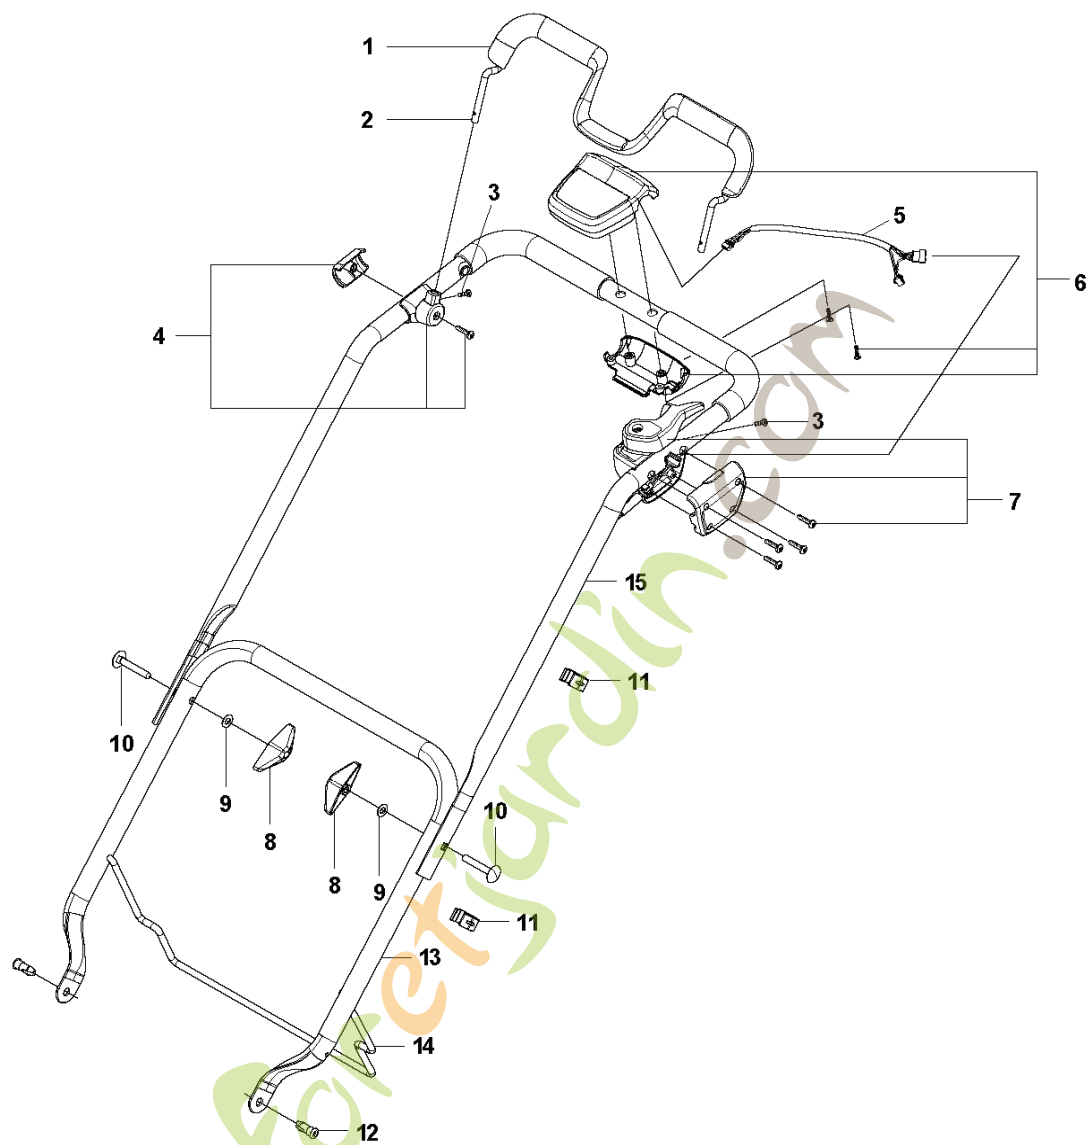


LAWN MOWERS: CONSUMER WALK-BEHINDS

PXM_REF	PXM_PARTNO	DESCRIPTION	PXM_REMARK
1	590593801	POIGNÉE	
2	590593902	REGLAGE	
3	593198701	VIS	
4	593118701	ENSEMBLE DE BRAS DE CAUTIONNEMENT	
5	593198601	CABLE D'EXTENSION	
6	593300701	CARTE DE COMMANDE	
7	593117901	SWITCHBOX ASSY	
8	512793167	ÉCROU PAPILLON	
9	514026603	RONDELLE	
10	514994501	BOULON	
11	593129601	SUPPORT DE CÂBLE	
12	578292501	GOUPILLE	
13	582725502	POIGNÉE	
14	582785201	REGLAGE	
15	594702001	POIGNEE COMPLÈTE	Complete upper handle with control panel

C LB 146i
MOTOR

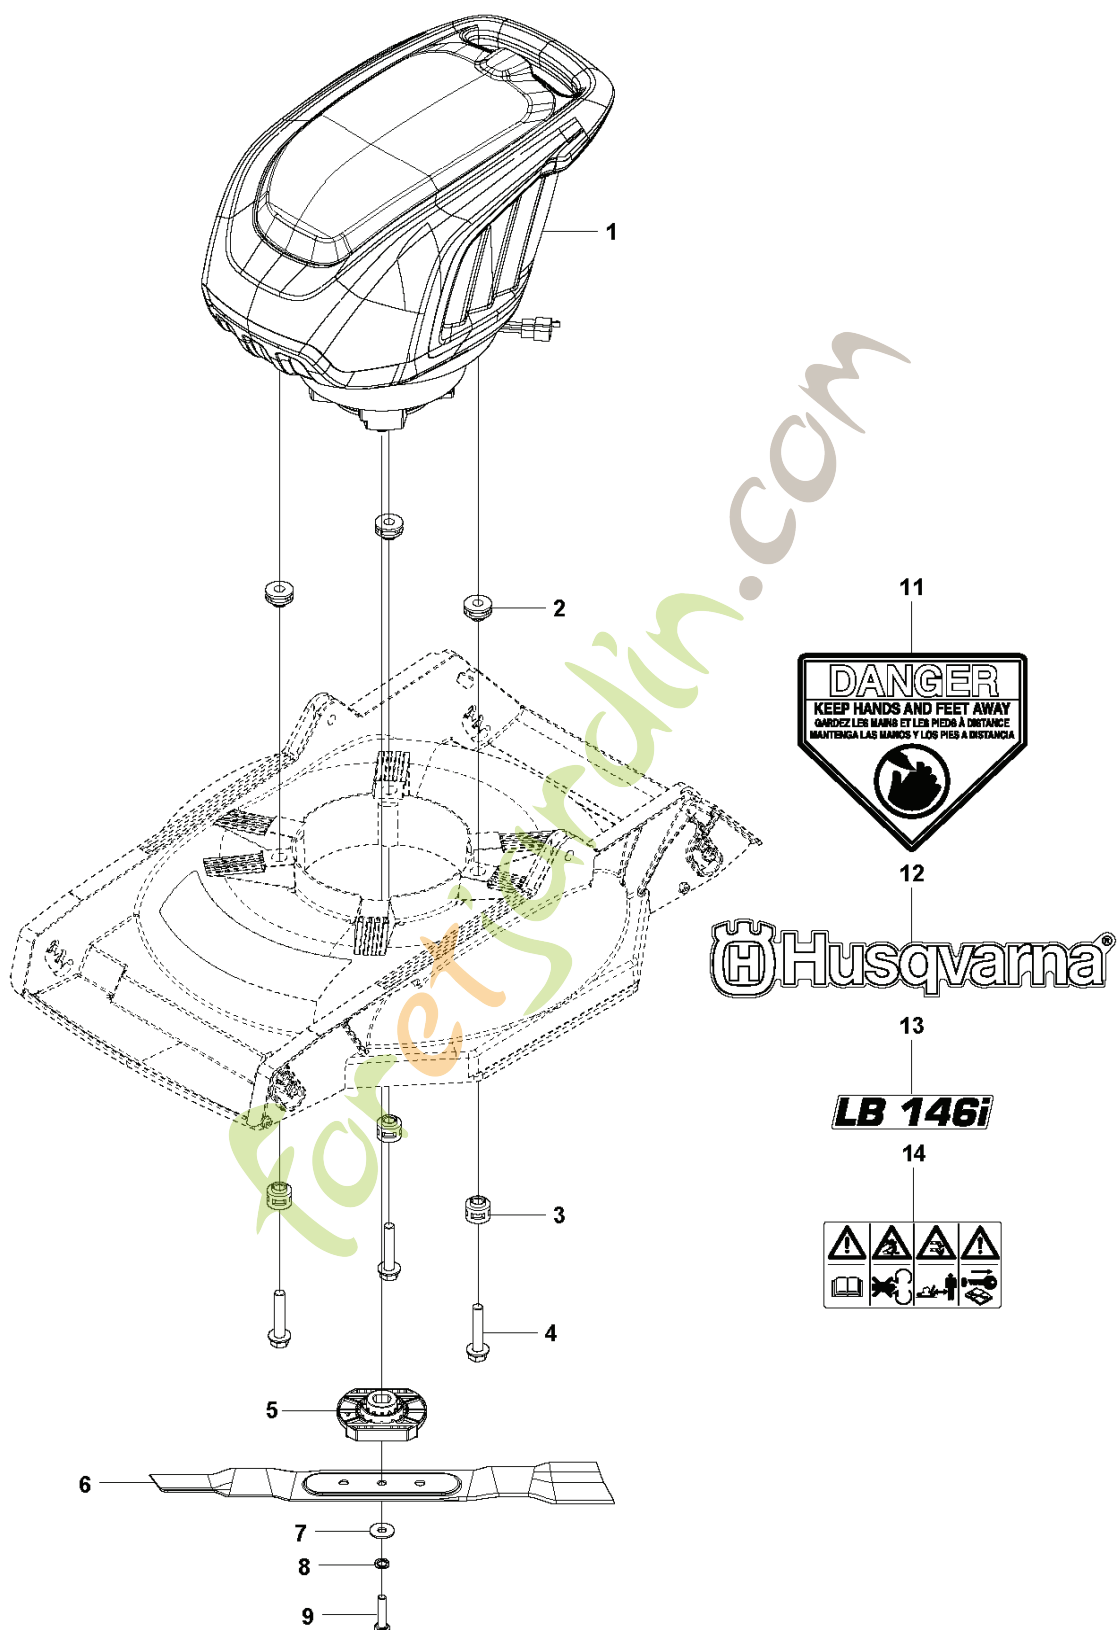


PXM_REF	PXM_PARTNO	DESCRIPTION
1	590531403	UNITÉ D'ENTRAÎNEMENT
2	513102600	DOUILLE D'ESPACEMENT
3	510770000	BUSH DECK INSULATOR
4	596054201	BOULON
5	591084301	SUPPORT DE LAME
6	594702210	COUTEAU
7	734116441	RONDELLE
8	579684201	RONDELLE DU RESSORT
9	531207071	VIS
11	513996102	DECAL
12	584805301	AUTOCOLLANT
13	TBD	TBD
14	595944001	DECAL

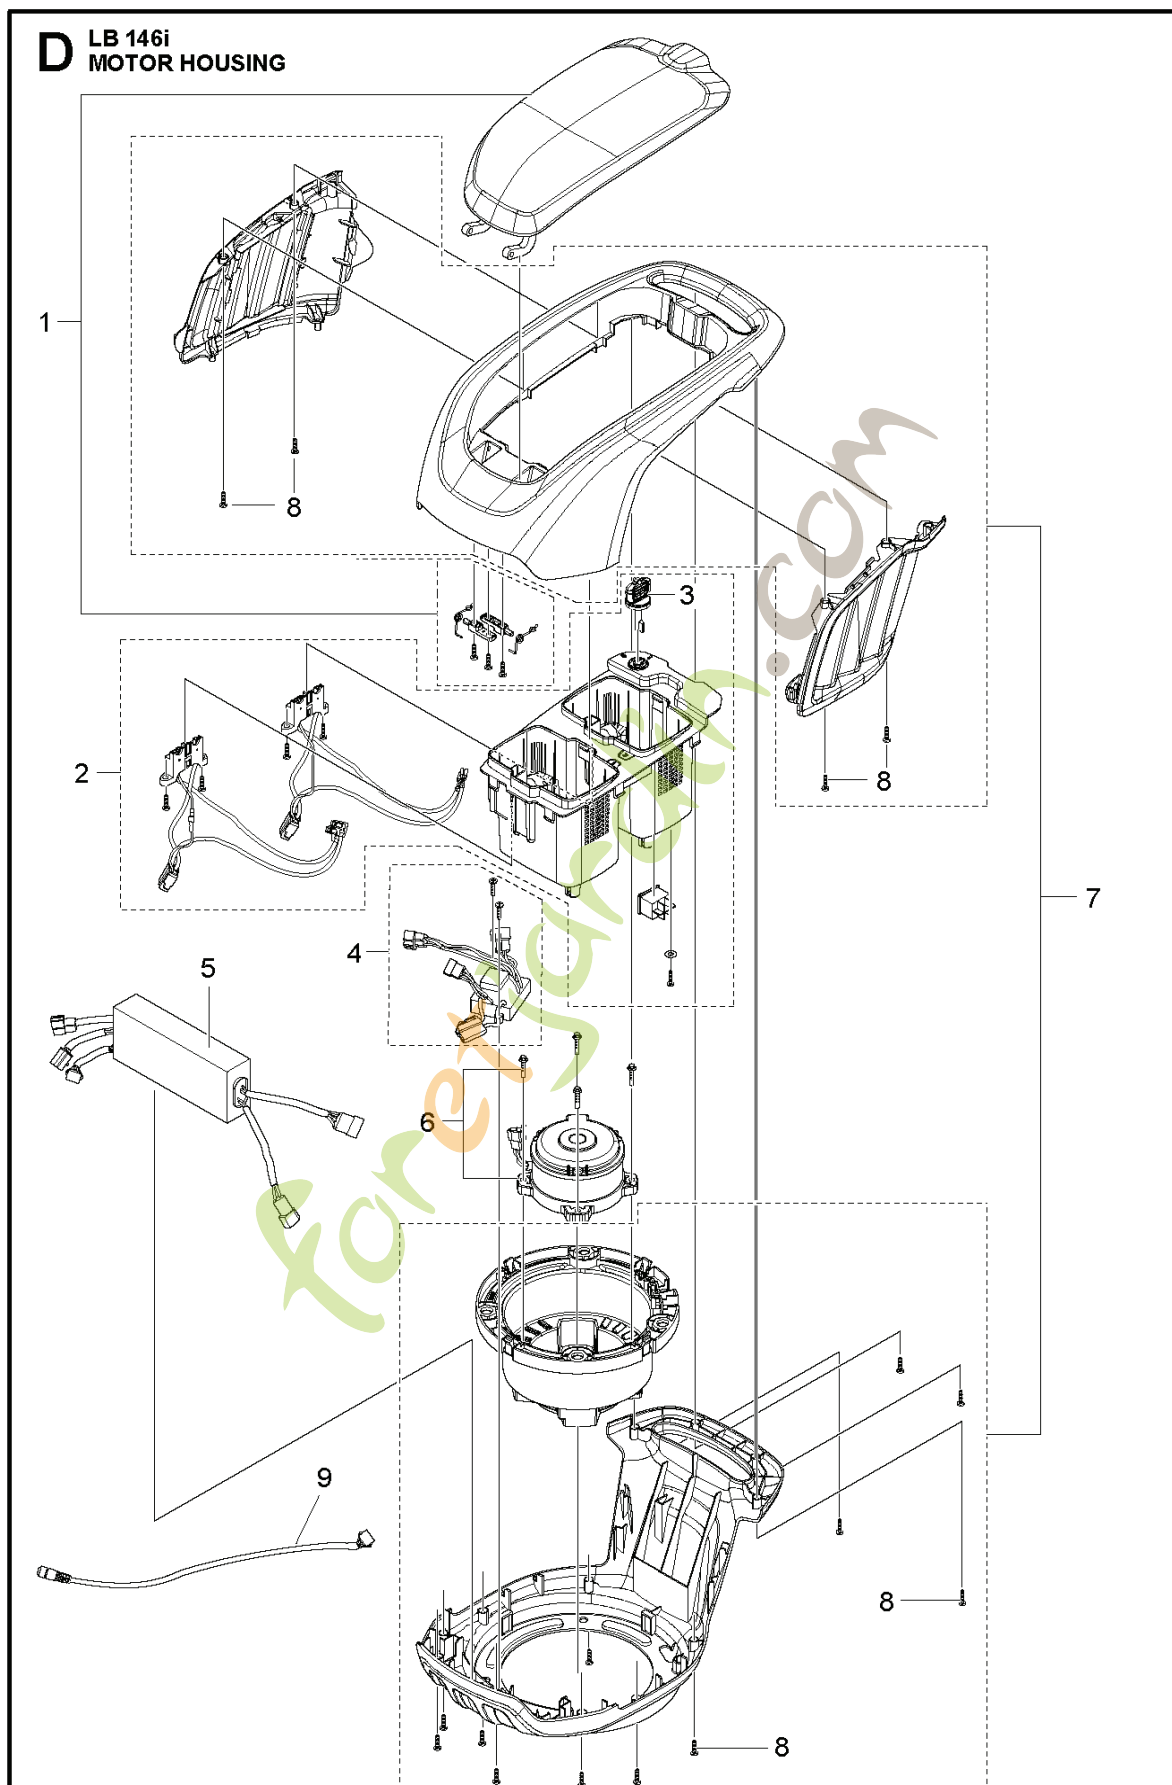

PXM_REF	PXM_PARTNO	DESCRIPTION
1	593124301	LID ASSY
2	593124501	BOITIER DE LA BATTERIE
3	593722401	TOUCHE
3	501490101	TOUCHE
4	593133601	PLAQUE DE CONTACT
5	593300303	UNITÉ DE COMMANDE
6	593783801	MOTEUR
7	593203902	CAPOT DU MOTEUR COMPLET
8	593755501	VIS
9	593783901	CÂBLE

A LB 146i
DECK

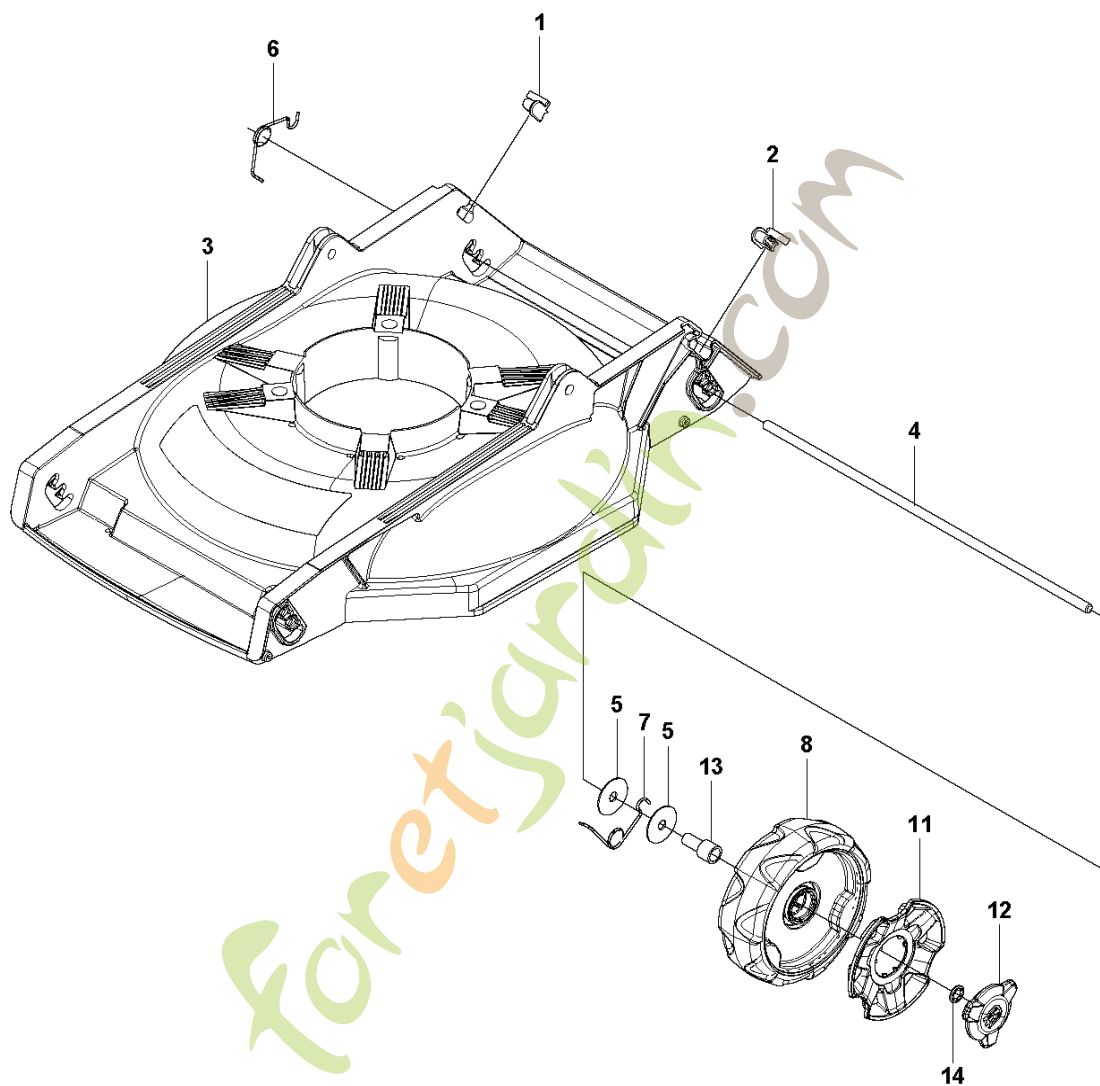

PXM_REF	PXM_PARTNO	DESCRIPTION
1	578292601	INSERT
2	578292602	INSERT
3	510694064	DECK
4	513102801	AXE
5	583943801	RONDELLE
6	513104500	RESSORT
7	513104501	RESSORT
8	587631501	ROUE COMPLÈTE
11	587632701	ENJOLIVEUR
12	584159401	PROTÈGE-ÉCROU
13	513906001	BUSHING
14	514903100	STARLOCK