

 
SPARE PARTS CATALOGUE
SNOW BLOWERS/THROWERS: HUSQVARNA 10527 SBB

Spare Parts List

SPARE PARTS LIST

SNOW BLOWERS/THROWERS

HUSQVARNA 10527 SBB

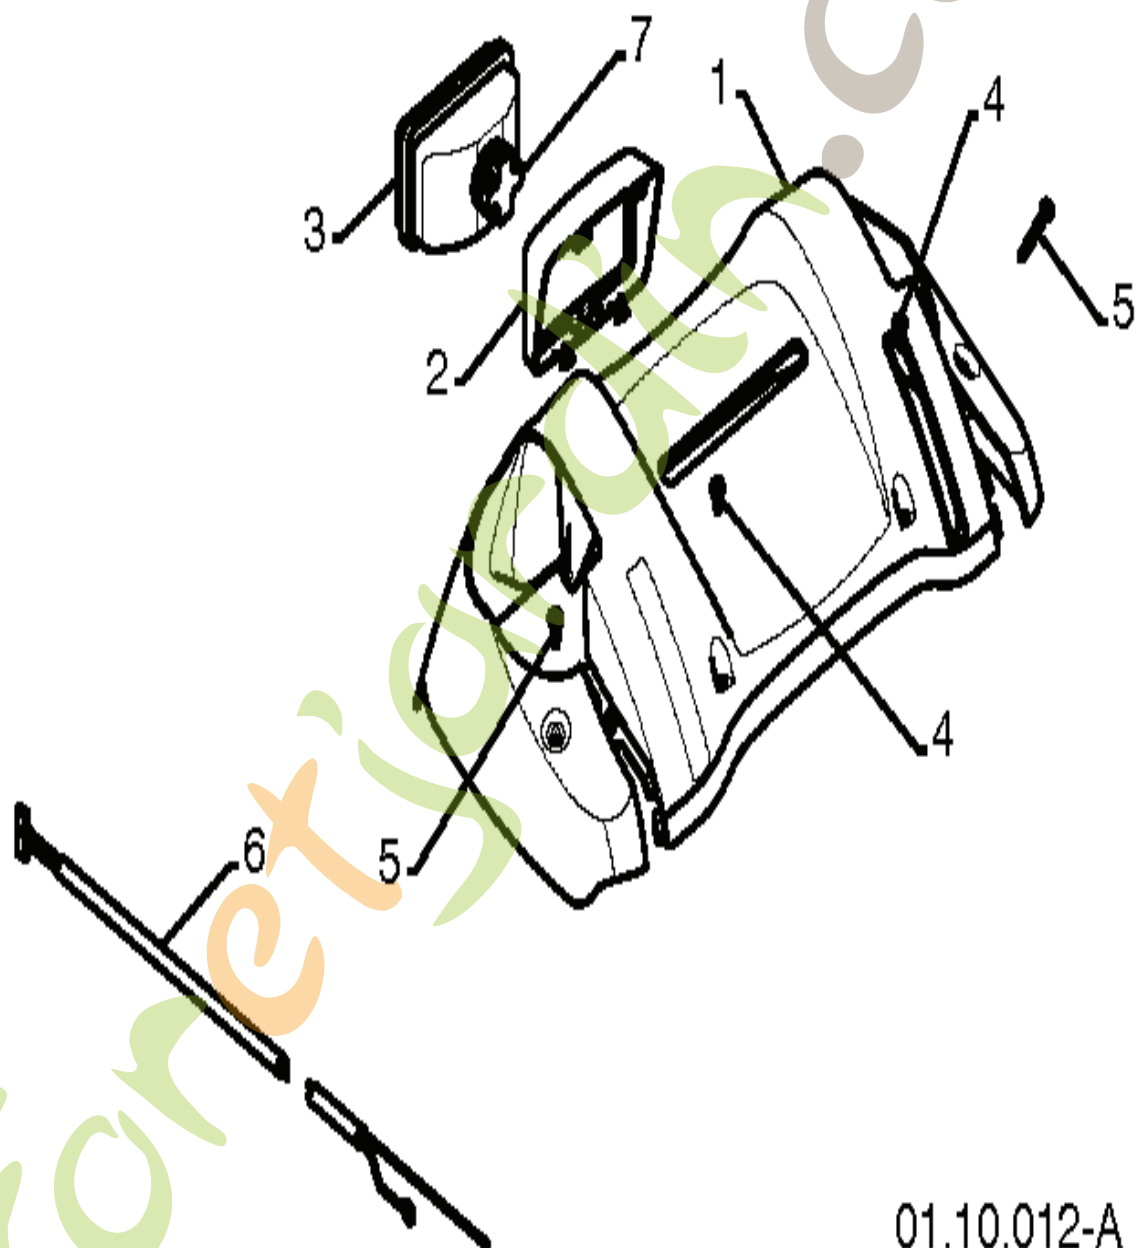

01.10.012-A


PXM_REF	PXM_PARTNO	DESCRIPTION	PXM_REMARK
1	532421381	SUPPORT	GRAY
2	532421448	CADRE	GRAY
3	532180927	PROJECTEUR	
4	532184471	VIS	
5	532175262	VIS	
6	532178770	CÂBLAGE	
7	532183784	FLOOD BULB	

ForêtJardin.com

REPAIR PARTS

WHEELS

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

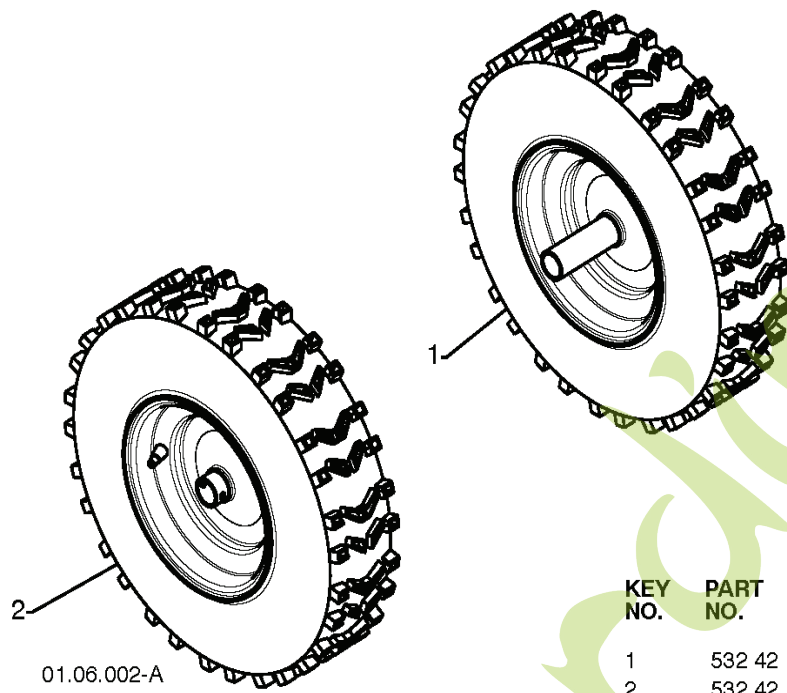

KEY NO.	PART NO.	DESCRIPTION
1	532 42 17-30	WHEEL ASSEMBLY LH
2	532 42 17-31	WHEEL ASSEMBLY RH

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm
IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
Failure to do so could be hazardous, damage your snow thrower and void your warranty.

PXM_REF	PXM_PARTNO	DESCRIPTION	PXM_REMARK
1	532421730	ROUE	LH
2	532421731	ROUE	RH


Forêtjardin.com



01.14.007-A

PXM_REF	PXM_PARTNO	DESCRIPTION
1	532193071	TOUCHE

 Forêtjardin.com

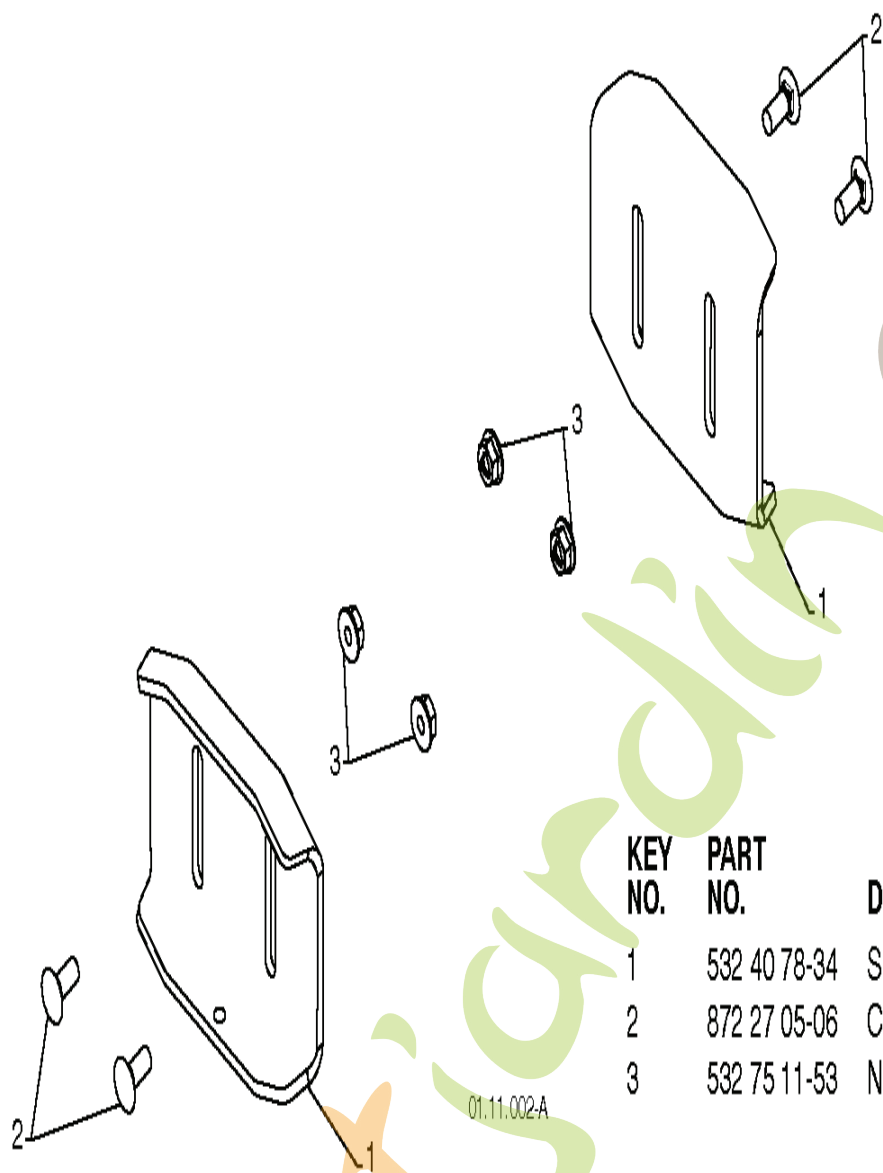

KEY NO.	PART NO.	DESCRIPTION
1	532 40 78-34	SKID PLATE
2	872 27 05-06	CARRIAGE BOLT 5/16-18X.750
3	532 75 11-53	NUT 5/16-18

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
Failure to do so could be hazardous, damage your snow thrower and void your warranty.

PXM_REF	PXM_PARTNO	DESCRIPTION
1	532407834	PLAQUE DE PROTECTION ANTI-DÉRAPAGE
2	872270506	BOULON
3	532751153	ÉCROU

foretjardin.com


PXM_REF	PXM_PARTNO	DESCRIPTION
1	532407650	TUBE
2	532184113	DÉFLECTEUR
3	532420325	JOINT
4	532184114	SANGLES
5	532191938	BOUTON
6	532128415	RIVET
7	532185600	BOULON
8	872270505	BOULON
9	532191730	ÉCROU
10	532155415	RONDELLE
11	532179246	RONDELLE

foretjardin.com

REPAIR PARTS

DECALS

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

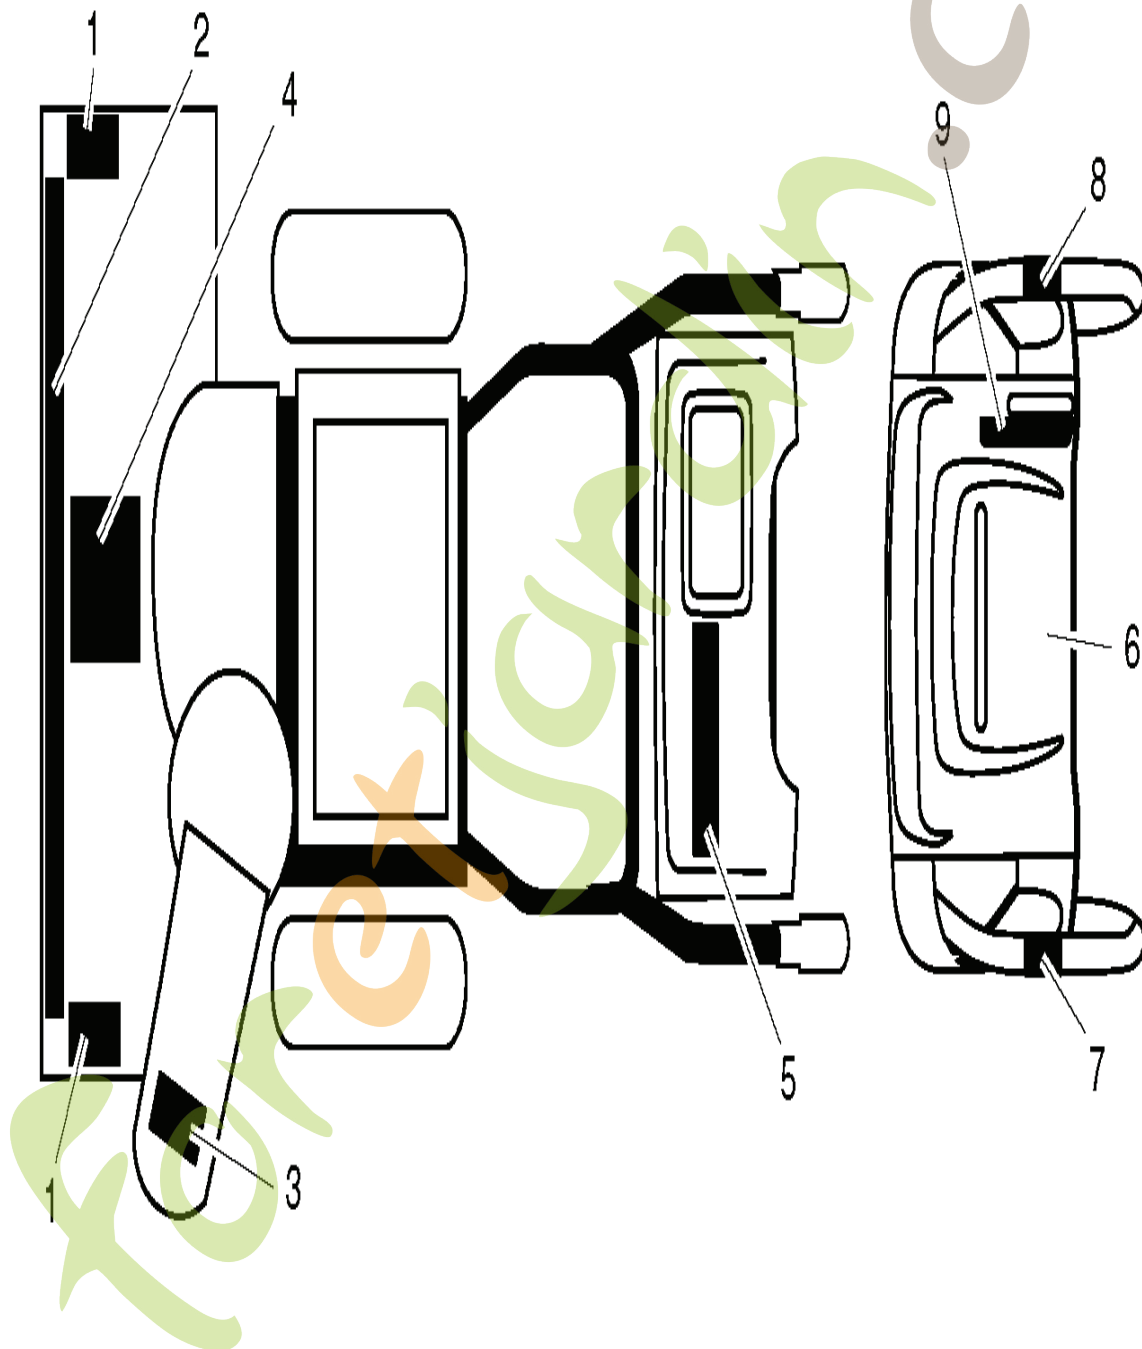


PXM_REF	PXM_PARTNO	DESCRIPTION
1	532181037	DECAL
2	532423708	DECAL
3	532181035	DECAL
4	532181042	DECAL
5	532423707	DECAL
6	532181033	DECAL
7	532415391	DECAL
8	532415390	DECAL
9	532415475	DECAL

foretjardin.com

REPAIR PARTS

SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

 DRIVE

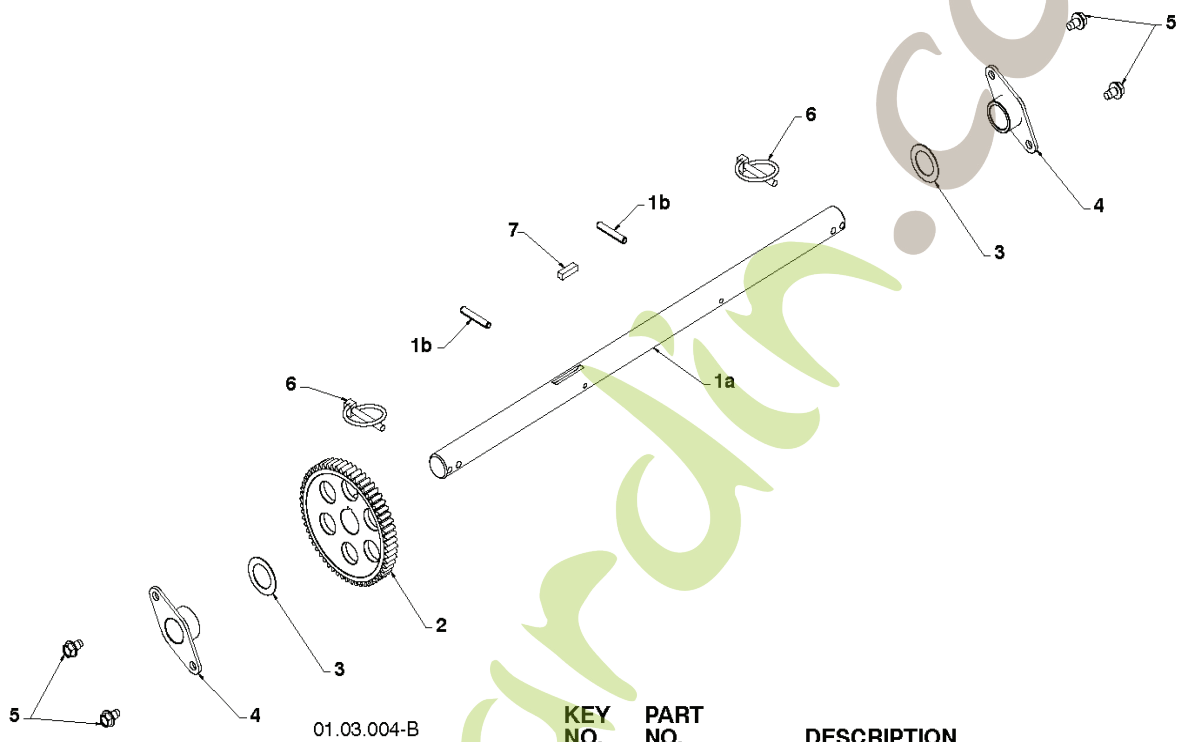

KEY NO.	PART NO.	DESCRIPTION
1	532 18 82-26	(assy of 1a,1b) AXLE ASSEMBLY
1a	532 17 93-52	AXLE SHAFT
1b	532 18 42-06	ROLL PIN 3/16
2	532 18 00-81	GEAR
3	532 17 46-97	THRUST WASHER
4	532 17 98-30	BEARING
5	817 49 05-08	BOLT 5/16-18 X .500
6	532 15 54-43	CLIK PIN
7	532 18 92-82	SQUARE KEY

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your snow thrower and void your warranty.


PXM_REF	PXM_PARTNO	DESCRIPTION
1	532188226	AXE
1a	532179352	ARBRE
1b	532184206	AXE
2	532180081	ENGRENAGE
3	532174697	RONDELLE
4	532179830	ROULEMENT
5	817490508	VIS
6	532155443	STYLO
7	532189282	TOUCHE

Forêtjardin.com

REPAIR PARTS

BAG OF PARTS

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

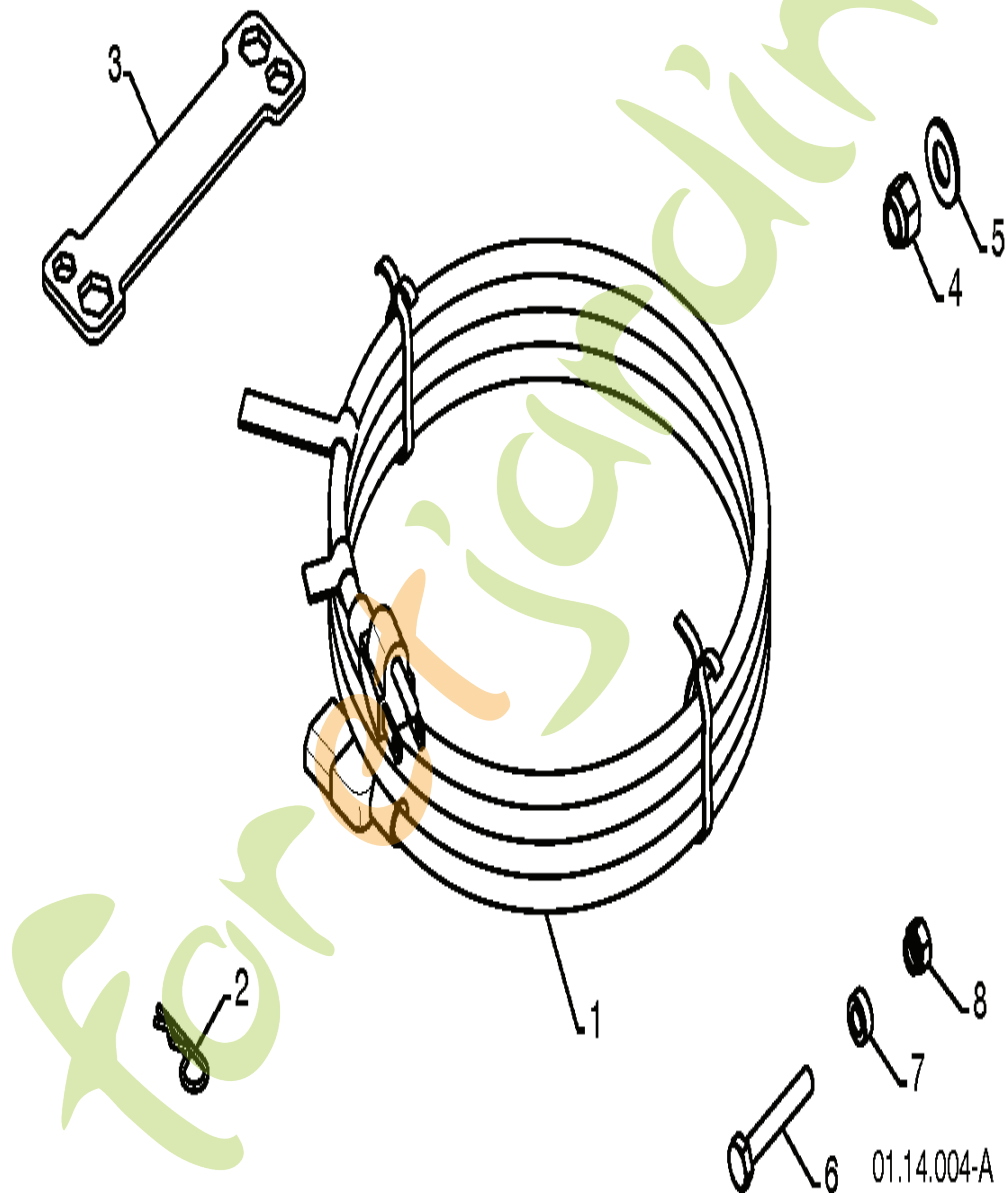


PXM_REF	PXM_PARTNO	DESCRIPTION
1	532198563	POWER CORD
2	532169675	AXE
3	532180684	WRENCH. SNOWTHROWER
4	873800600	ÉCROU
5	819131316	RONDELLE
6	532198636	BOULON
7	532198638	RONDELLE D'ESPACEMENT
8	873800400	ÉCROU

foretjardin.com

REPAIR PARTS


AUGER HOUSING / IMPELLER ASSEMBLY

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

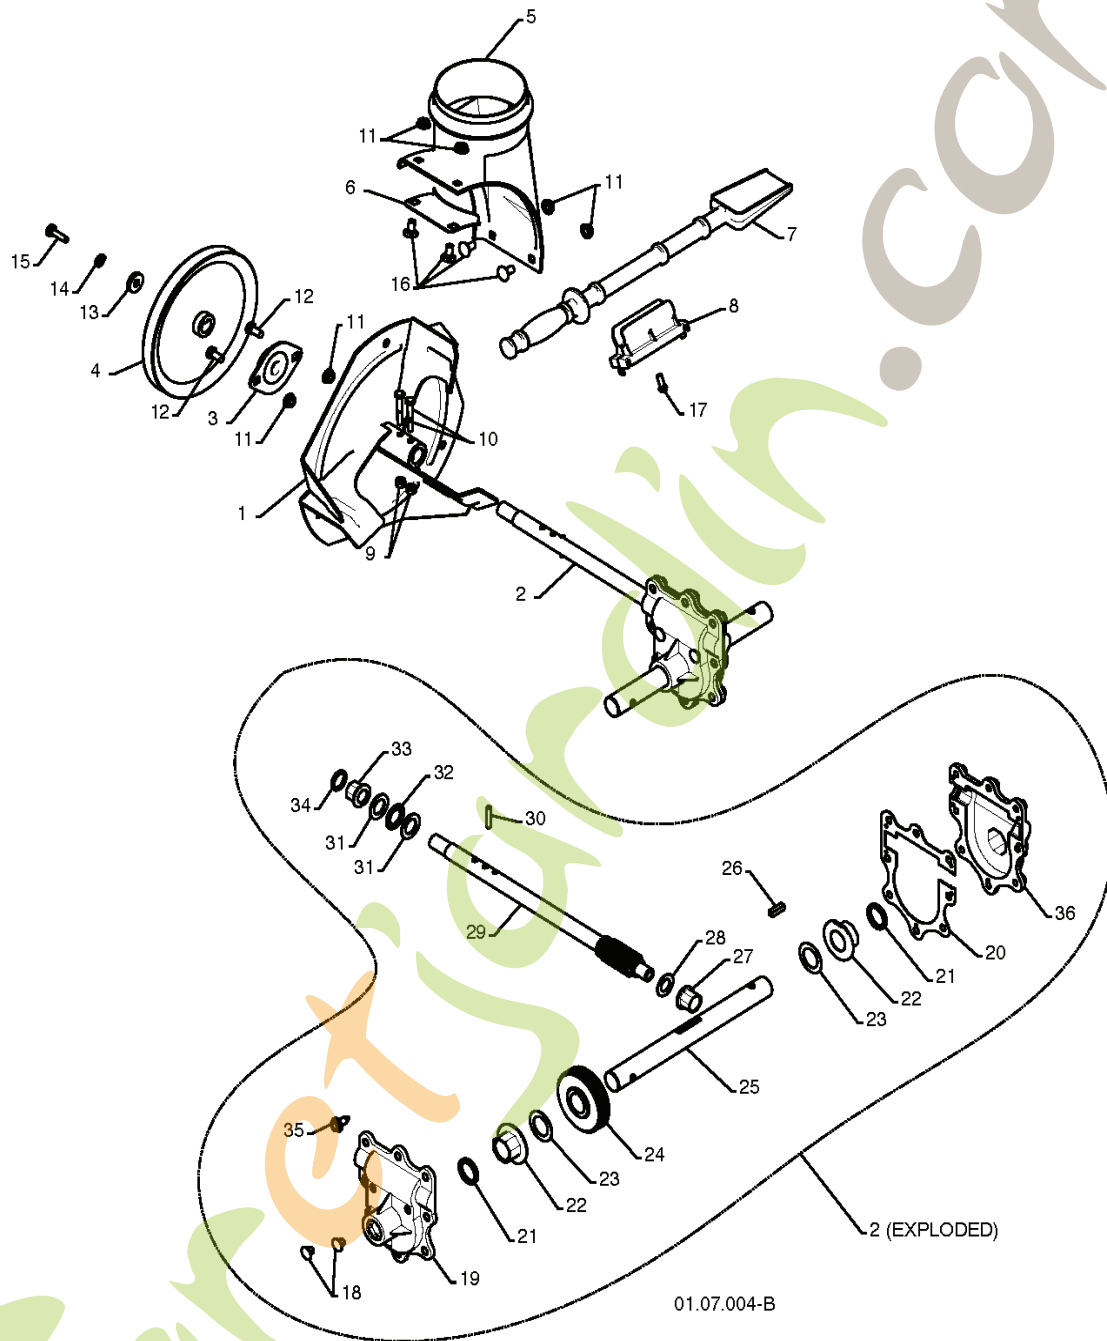

SNOW BLOWERS/THROWERS


PXM_REF	PXM_PARTNO	DESCRIPTION	PXM_REMARK
1	532184105	ROUE	
2	532196710	GEARBOX	
3	532188909	ROULEMENT	
4	532191079	POULIE	
5	532175322	DÉFLECTEUR	
6	532184095	PLAQUE	
7	532192199	OUTIL	
8	532405400	COUVERCLE	
9	873800400	ÉCROU	
10	874780426	VIS	
11	532155377	ÉCROU	
12	532163183	BOULON	
13	819111507	RONDELLE	
14	810040500	RONDELLE	
15	874940516	VIS	
16	532180355	BOULON	
17	532194189	VIS	
18	532407760	BOUCHON	
19	532407761	CARTER	
20	532407766	JOINT	
21	532407770	JOINT	
22	532407762	BUSHING	
23	532174697	RONDELLE	
24	532407763	ENGRENAGE	
25	532407764	ARBRE	
26	532189282	TOUCHE	
27	532407758	BUSHING	
28	532174683	RONDELLE	
29	532407757	ARBRE	
30	532184205	AXE	
31	532174681	RONDELLE	
32	532174684	ROULEMENT	
33	532407769	BUSHING	
34	532407768	JOINT TORIQUE	
35	532407767	VIS	
36	532407765	CARTER	LH

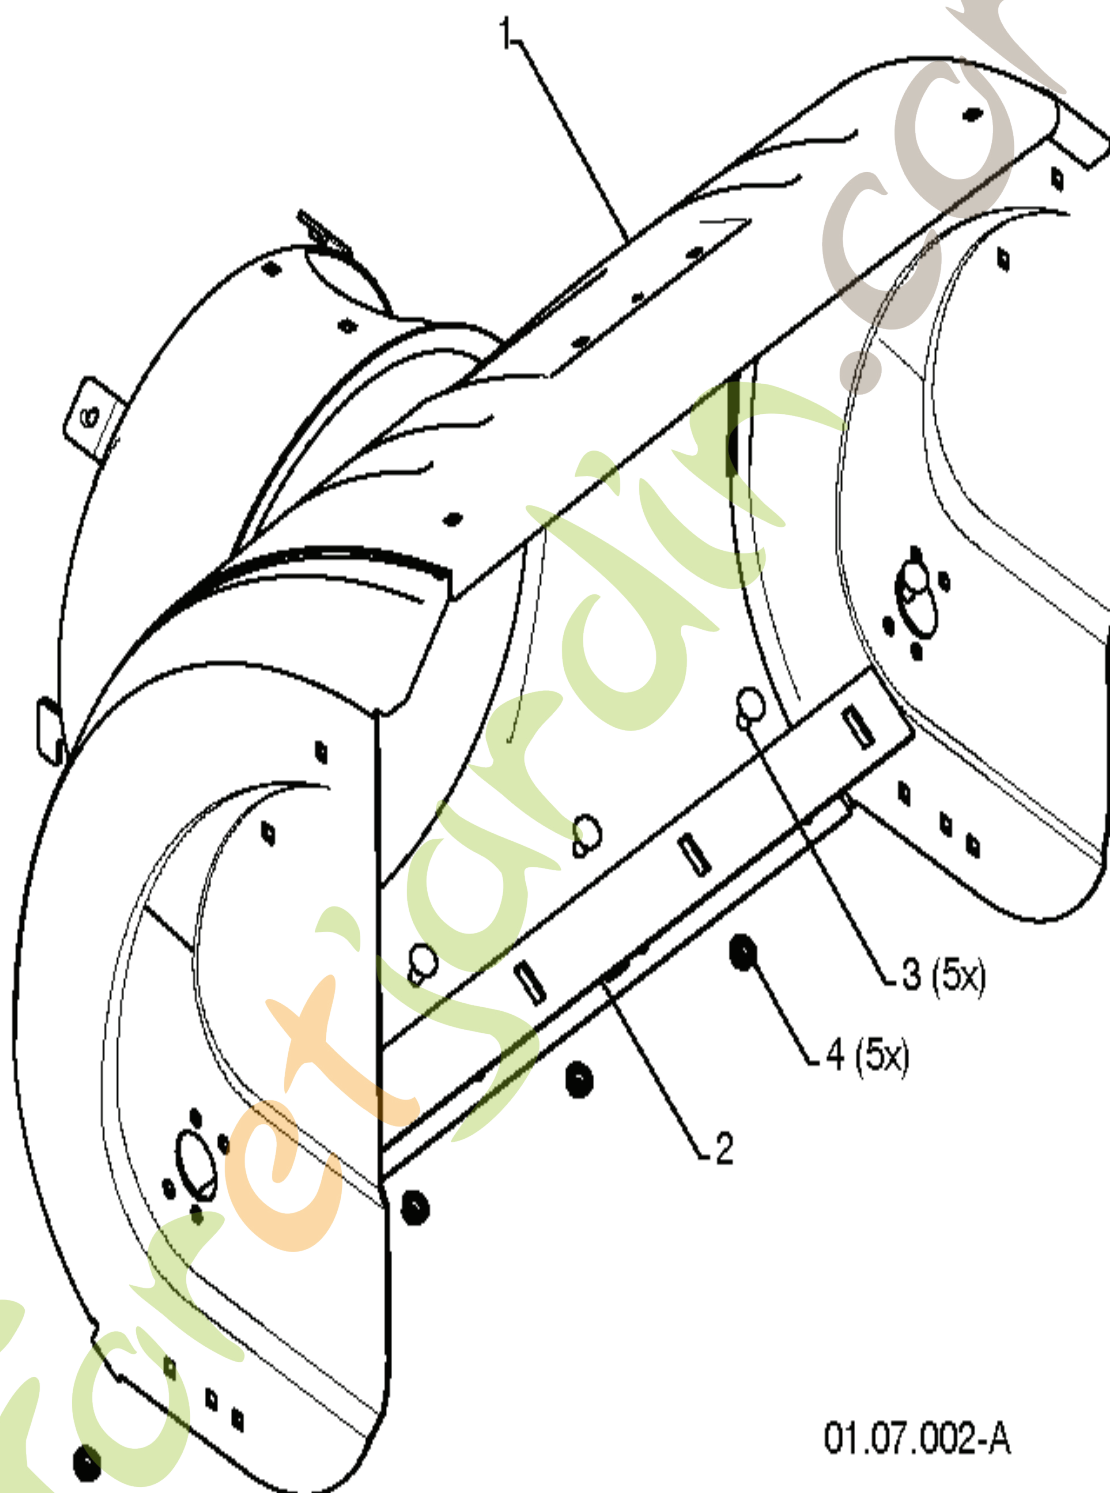 

01.07.002-A

PXM_REF	PXM_PARTNO	DESCRIPTION
1	532407739	CARTER
2	532407727	GUIDE-CHAÎNE
3	872270505	BOULON
4	532155377	ÉCROU

 Forêtjardin.com

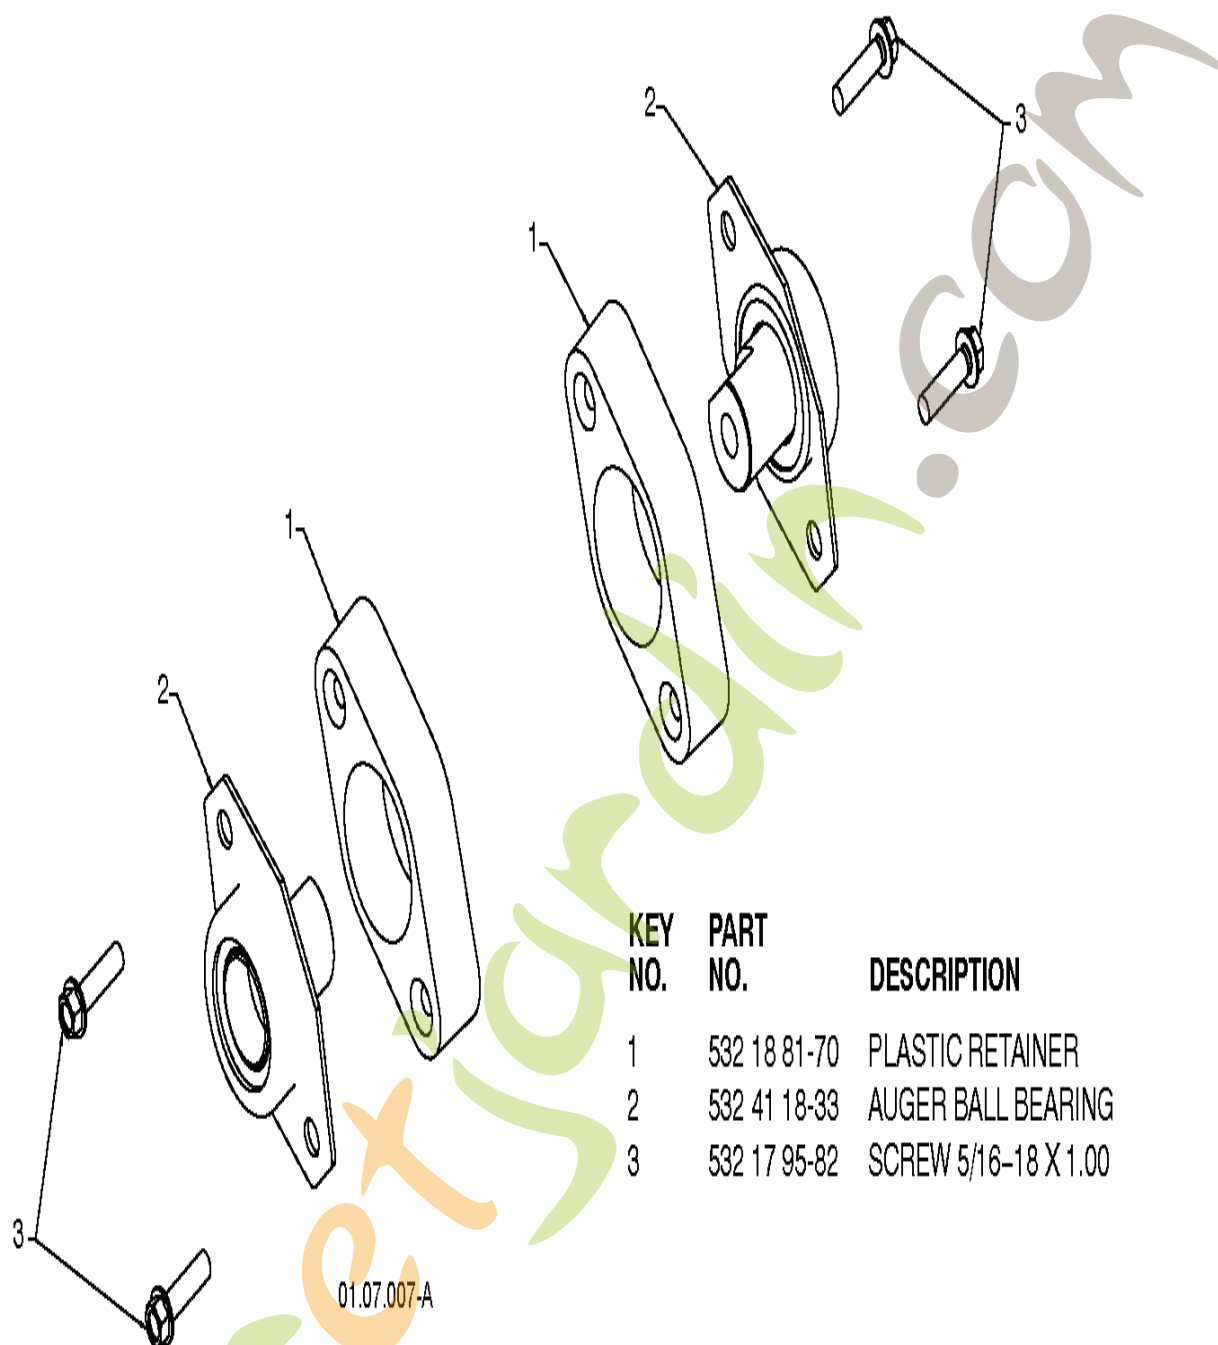

KEY NO.	PART NO.	DESCRIPTION
1	532 18 81-70	PLASTIC RETAINER
2	532 41 18-33	AUGER BALL BEARING
3	532 17 95-82	SCREW 5/16-18 X 1.00

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
Failure to do so could be hazardous, damage your snow thrower and void your warranty.

PXM_REF	PXM_PARTNO	DESCRIPTION
1	532188170	HOLDER
2	532411833	ROULEMENT
3	532179582	VIS

Forêtjardin.com



01.07.018-A


PXM_REF	PXM_PARTNO	DESCRIPTION	PXM_REMARK
1	532421135	VIS D'AVANCE	LH
2	532421123	VIS D'AVANCE	RH

for
et
jardin.com

REPAIR PARTS

CHASSIS / ENGINE / PULLEYS

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

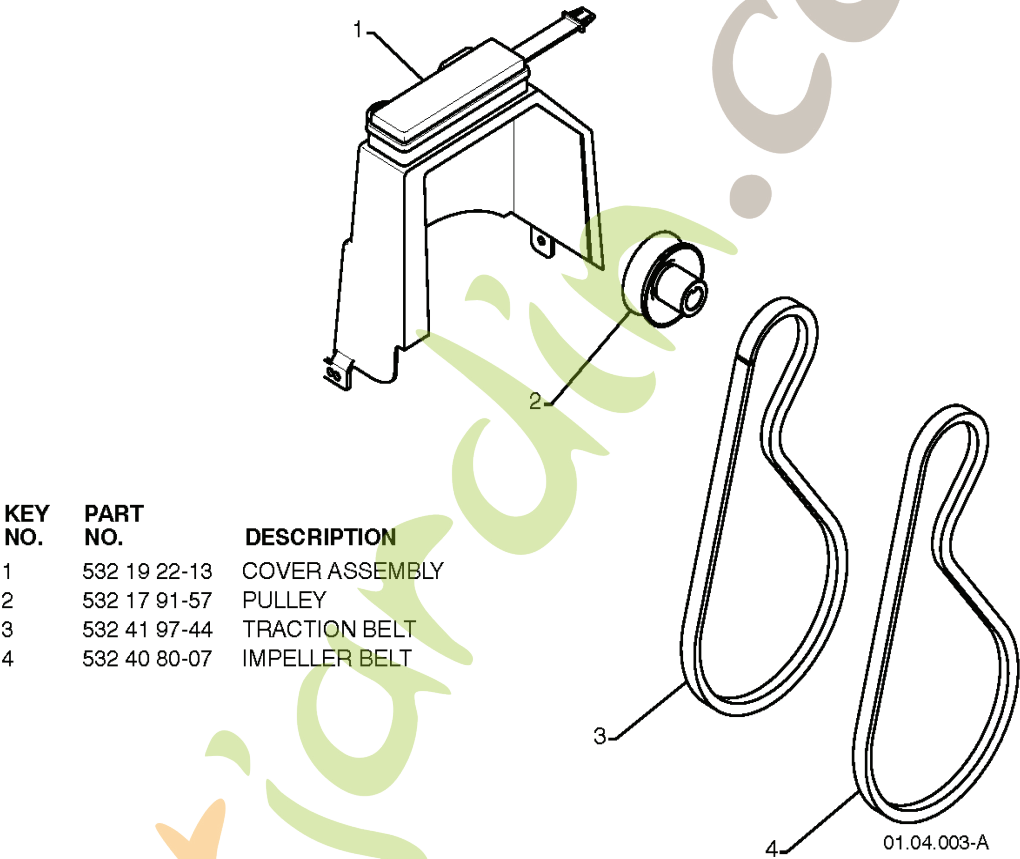

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your snow thrower and void your warranty.


PXM_REF	PXM_PARTNO	DESCRIPTION
1	532192213	PROTECTOR
2	532179157	POULIE
3	532419744	COURROIE
4	532408007	COURROIE

Forêtjardin.com

REPAIR PARTS

CONTROL PANEL / DISCHARGE CHUTE

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

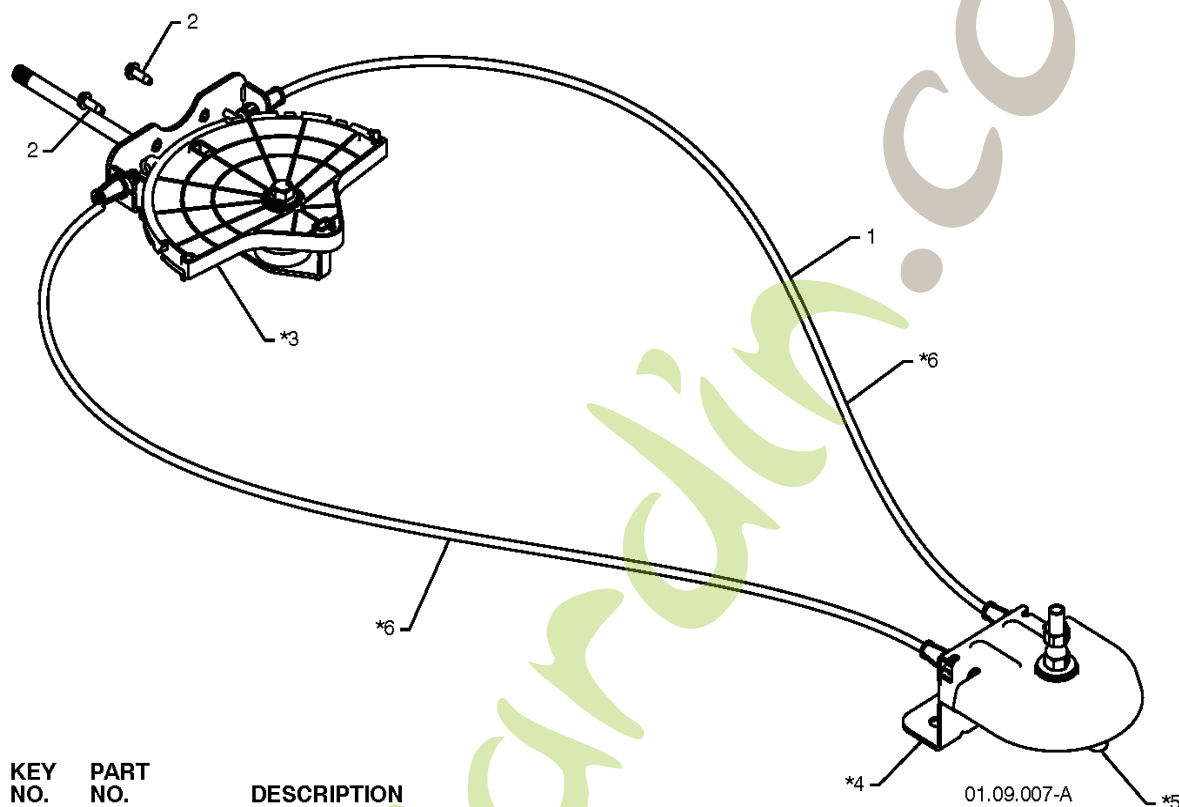

KEY NO.	PART NO.	DESCRIPTION
1	532 42 03-37	LEVER/CABLE ROTATOR ASSEMBLY
2	817 50 10-10	SCREW 10-24 X .625
*3	532 42 06-78	ROTATOR HEAD
*4	532 42 06-77	ROTATOR PIVOT BRACKET
*5	532 42 06-75	PULLEY PIVOT
*6	532 42 06-74	CABLE ASSEMBLY

NOTES:

1. ITEMS INDICATED WITH AN * ARE LISTED AS REFERENCE FOR SERVICE PARTS ONLY.

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm**IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your snow thrower and void your warranty.


PXM_REF	PXM_PARTNO	DESCRIPTION
1	532420337	CÂBLE
2	817501010	VIS
3	532420678	SUPPORT
4	532420677	SUPPORT
5	532420675	POULIE
6	532420674	CÂBLE

ForêtJardin.com

REPAIR PARTS

DRIVE

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

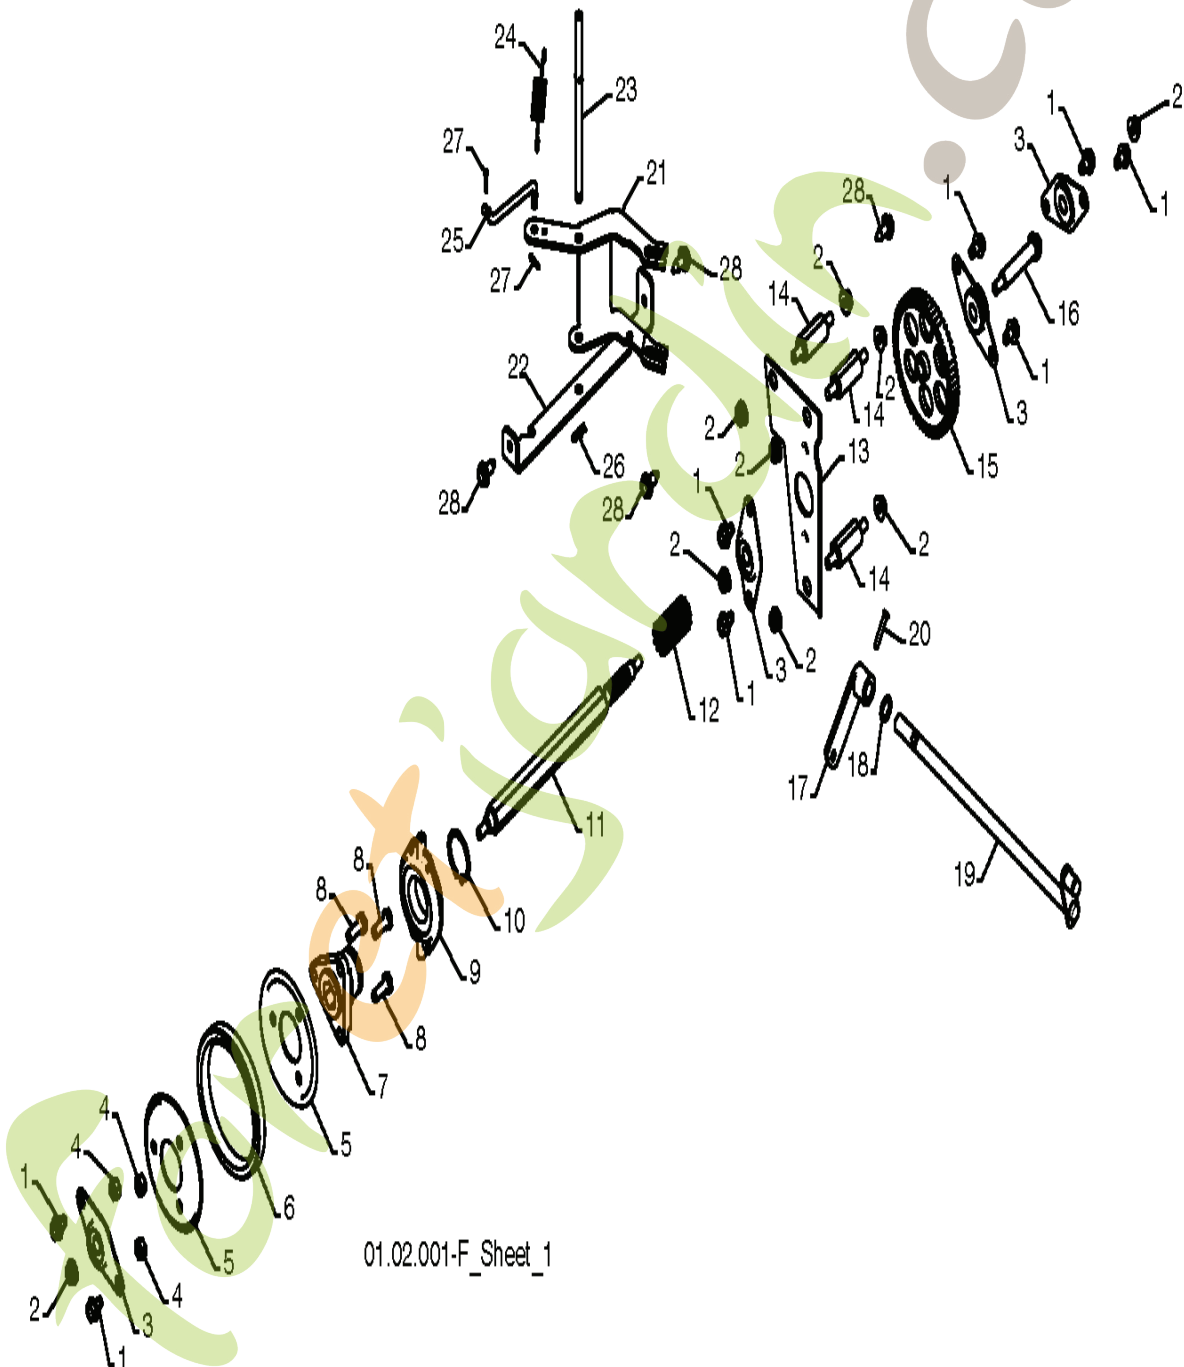

01.02.001-F_Sheet_1

PXM_REF	PXM_PARTNO	DESCRIPTION
1	817490508	VIS
2	532751153	ÉCROU
3	532180017	ROULEMENT
4	873930500	ÉCROU
5	532199509	PLAQUE
6	532179831	ANNEAU
7	532178613	MOYEU
8	874760514	BOULON
9	532175344	ROULEMENT
10	812000012	BAGUE DE RETENUE
11	532180066	ARBRE
12	532180065	ENGRENAGE
13	532192907	PLAQUE
14	532179270	RONDELLE D'ESPACEMENT
15	532180082	ENGRENAGE
16	532180134	ARBRE
17	532405485	BRAS
18	532057079	RONDELLE
19	532406109	ARBRE
20	532198580	AXE
21	532184080	LEVIER
22	532187857	SUPPORT
23	532178807	STYLO
24	532180135	RESSORT
25	532187101	MAILLON
26	532085179	COLLIER DE SERRAGE
27	532700279	COLLIER DE SERRAGE
28	532150078	VIS

REPAIR PARTS

DRIVE

SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36



01.02.001-F_Sheet_2


SNOW BLOWERS/THROWERS

PXM_REF	PXM_PARTNO	DESCRIPTION
1	532198474	LEVIER
2	817501010	VIS
3	532197763	PLAQUE
4	532197764	ARBRE
5	532175344	ROULEMENT
6	812000012	BAGUE DE RETENUE
7	872270505	BOULON
8	532188909	ROULEMENT
9	532182504	RONDELLE D'ESPACEMENT
10	532184077	LEVIER
11	532184076	SUPPORT
12	532178695	STYLO
13	532085179	COLLIER DE SERRAGE
14	817490408	VIS
15	817490508	VIS
16	532184075	PLATE, DRIVE MOUNTING
17	532155377	ÉCROU
18	532191080	POULIE
19	819111507	RONDELLE
20	810040500	RONDELLE
21	874950512	VIS
22	532422111	SUPPORT
23	532180523	POULIE
24	532184074	SUPPORT
25	532175330	STYLO
26	874780524	BOULON
27	532166785	ÉCROU
28	532181044	RESSORT
29	532184804	BRAS
30	532180522	POULIE
31	874780520	BOULON
32	532059289	RONDELLE
33	873930500	ÉCROU
34	532851084	VIS
35	532850263	RONDELLE
36	532400026	RONDELLE
37	532180478	POULIE
38	532409475	RONDELLE D'ESPACEMENT
39	532179095	RESSORT
40	532155452	GUIDE
41	874610516	VIS
42	532175331	BUSHING
43	811050500	RONDELLE
44	532178828	RESSORT

REPAIR PARTS


CHASSIS / ENGINE / PULLEYS

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

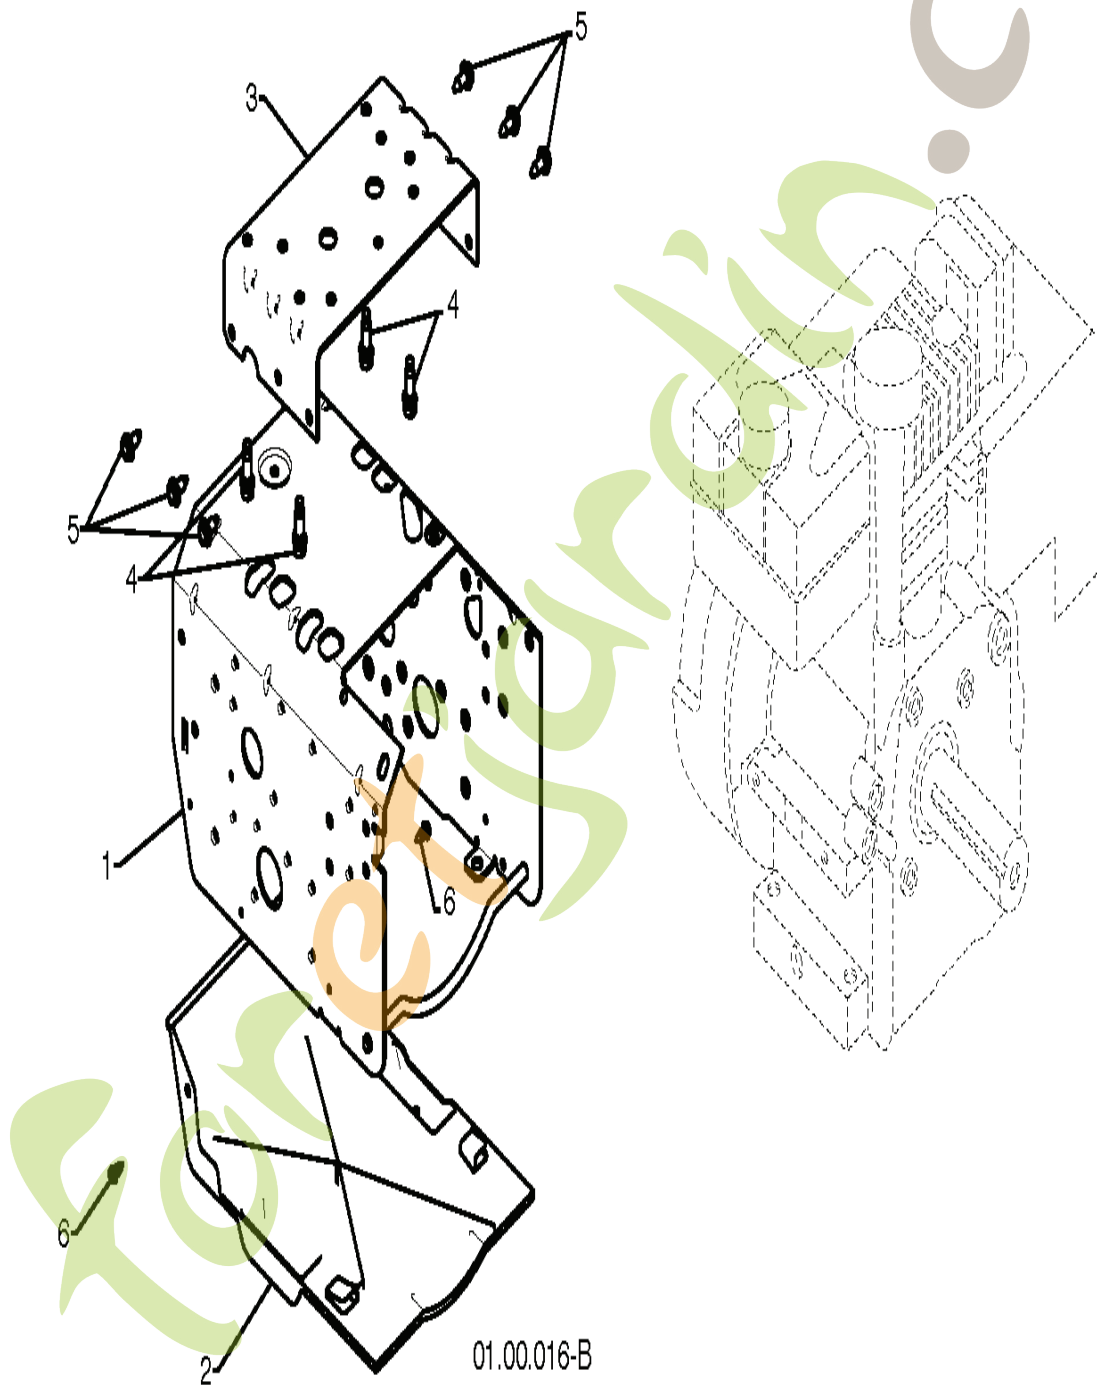


PXM_REF	PXM_PARTNO	DESCRIPTION
1	532415340	CADRE
2	532410877	PLAQUE
3	532423870	PLAQUE
4	532150406	BOULON
5	532150078	VIS
6	532184471	VIS

 foretjardin.com

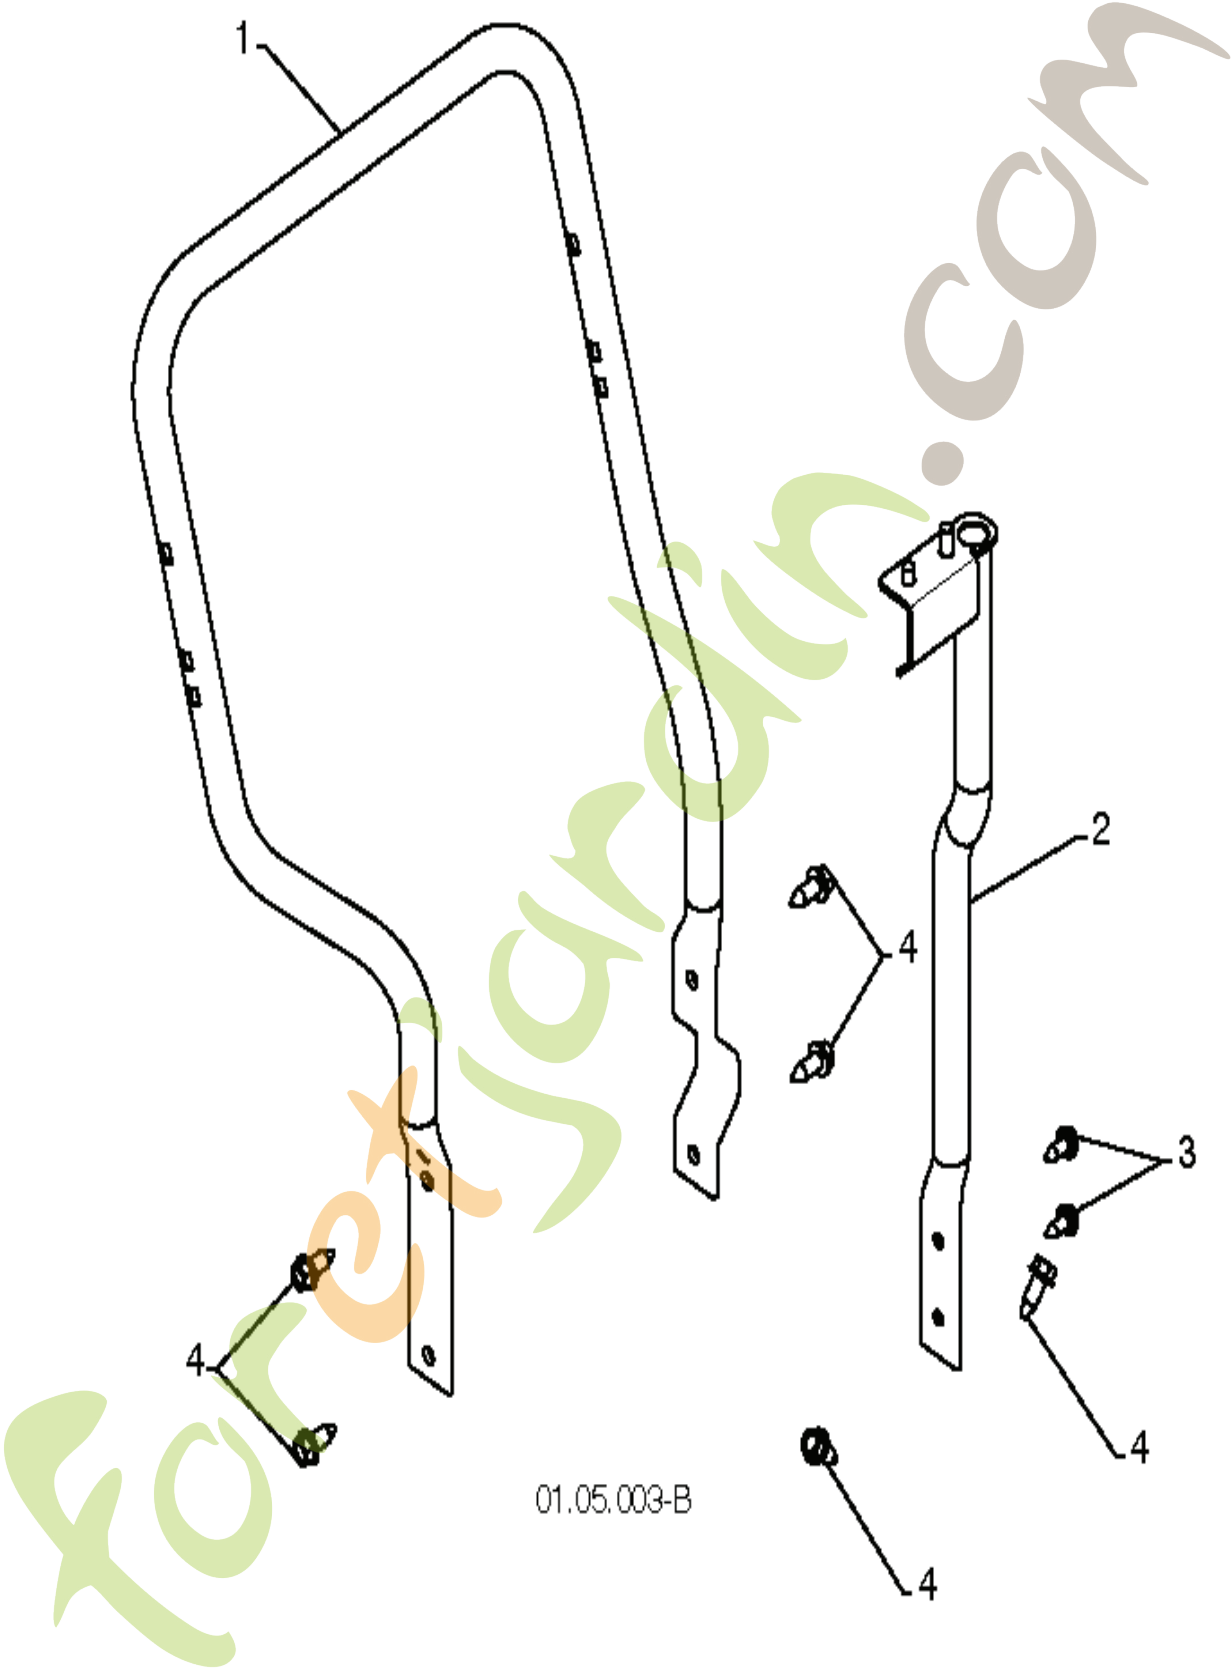

PXM_REF	PXM_PARTNO	DESCRIPTION
1	532421059	TUBE
2	532422117	SUPPORT
3	532150078	VIS
4	817000616	VIS

 Forêtjardin.com

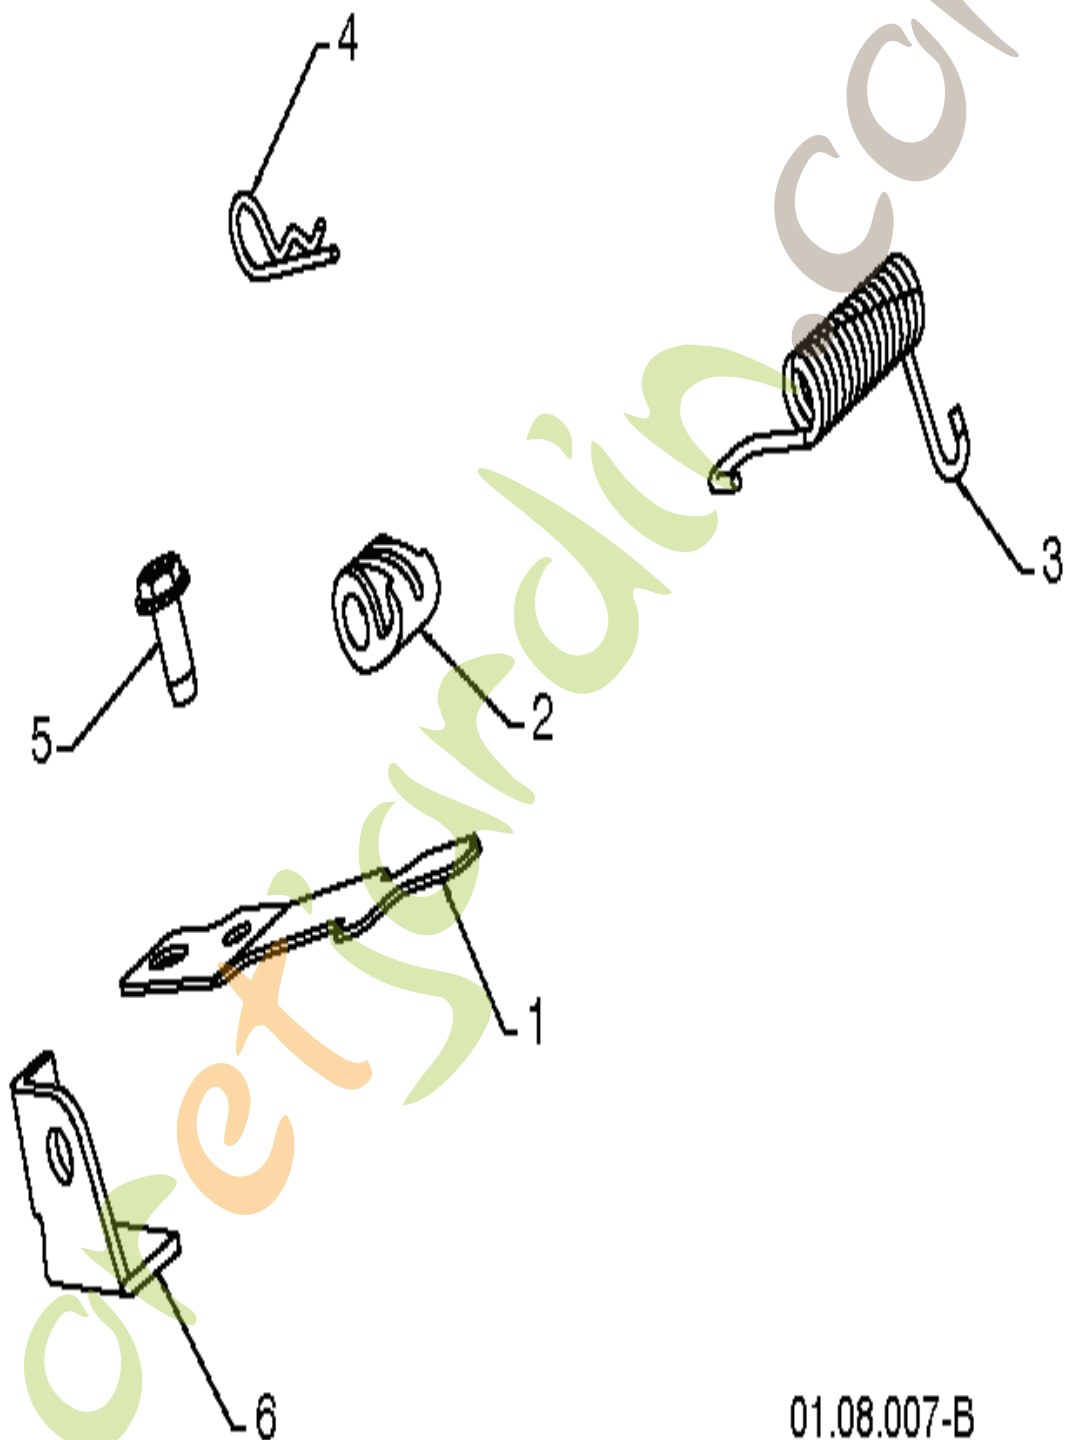


01.08.007-B

PXM_REF	PXM_PARTNO	DESCRIPTION
1	532416288	RESSORT
2	532414572	SUPPORT
3	532178831	RESSORT
4	532169675	AXE
5	817060410	VIS
6	532421814	SUPPORT

for

 etjardin.com

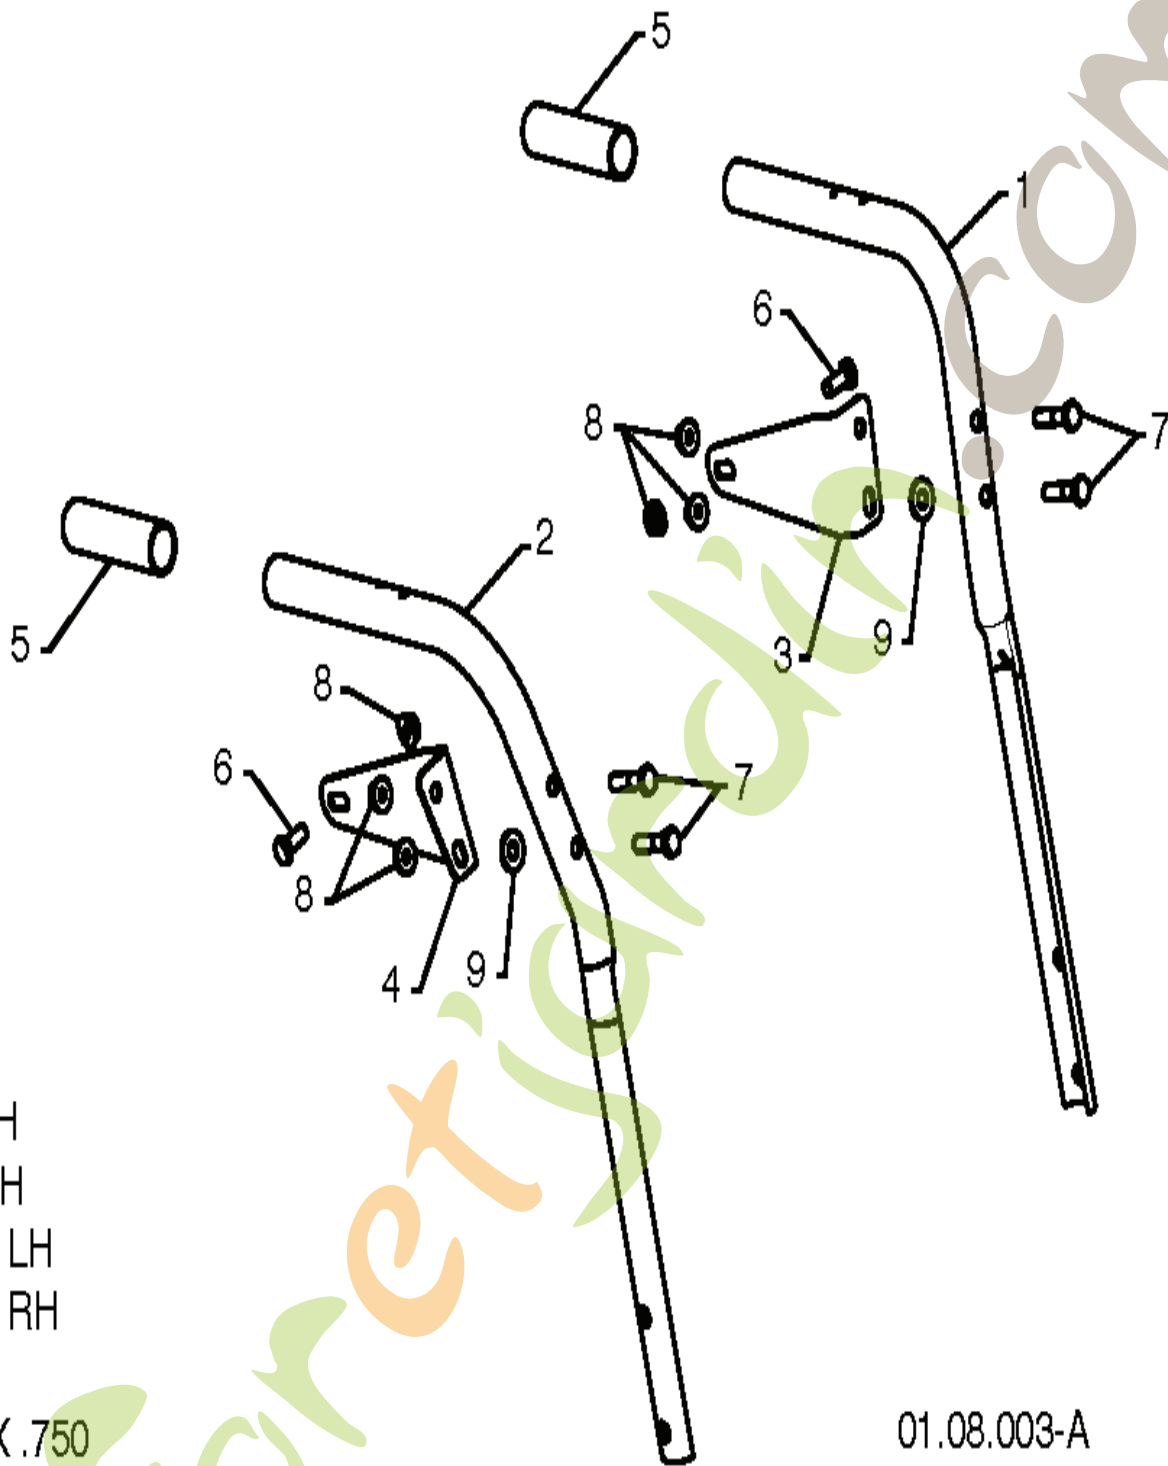

LH
RH
LH
RH

X.750
X.150


01.08.003-A

PXM_REF	PXM_PARTNO	DESCRIPTION	PXM_REMARK
1	532421069	DEMI-POIGNÉE	LH
2	532421070	DEMI-POIGNÉE	RH
3	532196944	MOUNTING BRACKET, HANDLE, RH	LH
4	532196943	MOUNTING BRACKET, HANDLE, RH	RH
5	532199513	GRIP, HANDLE	
6	874780512	VIS	
7	874780524	BOULON	
8	532751153	ÉCROU	
9	532155415	RONDELLE	

REPAIR PARTS

HANDLES

 SNOW THROWER - MODEL NO. **10527SBB** (96193003600), PRODUCT NO. 961 93 00-36

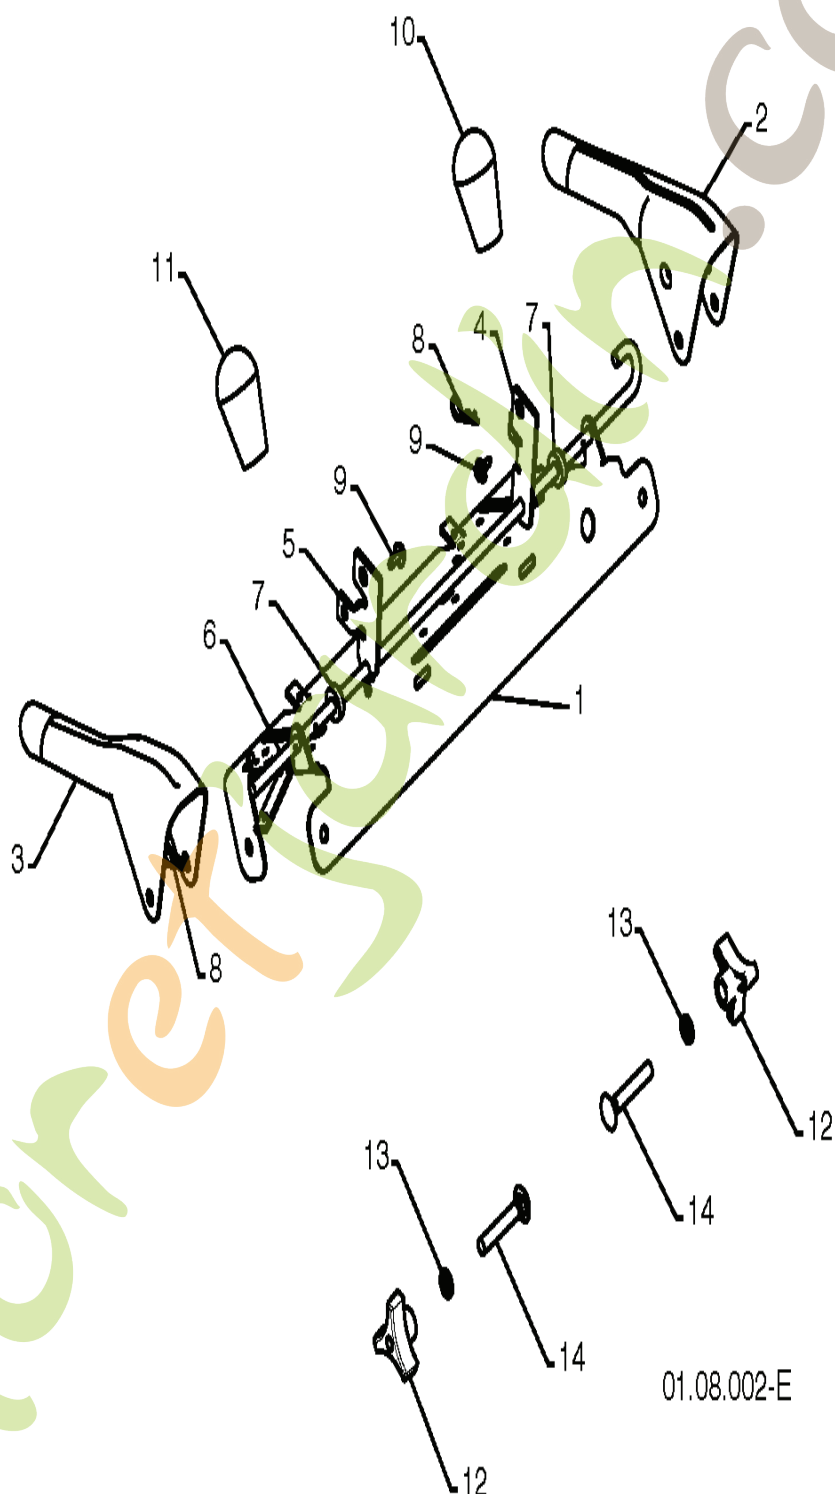


01.08.002-E

PXM_REF	PXM_PARTNO	DESCRIPTION	PXM_REMARK
1	532415539	PANNEAU	
2	532415541	LEVIER	LH
3	532415542	LEVIER	RH
4	532414446	POIGNÉE	
5	532421492	ROUE	
6	532412677	BARRE	
7	532421613	RONDELLE D'ESPACEMENT	
8	532169675	AXE	
9	817060408	VIS	
10	532414280	BOUTON	
11	532414281	BOUTON	
12	532178899	BOUTON	
13	819131316	RONDELLE	
14	872120618	BOULON	

REPAIR PARTS

HANDLES

 SNOW THROWER - MODEL NO. 10527SBB (96193003600), PRODUCT NO. 961 93 00-36

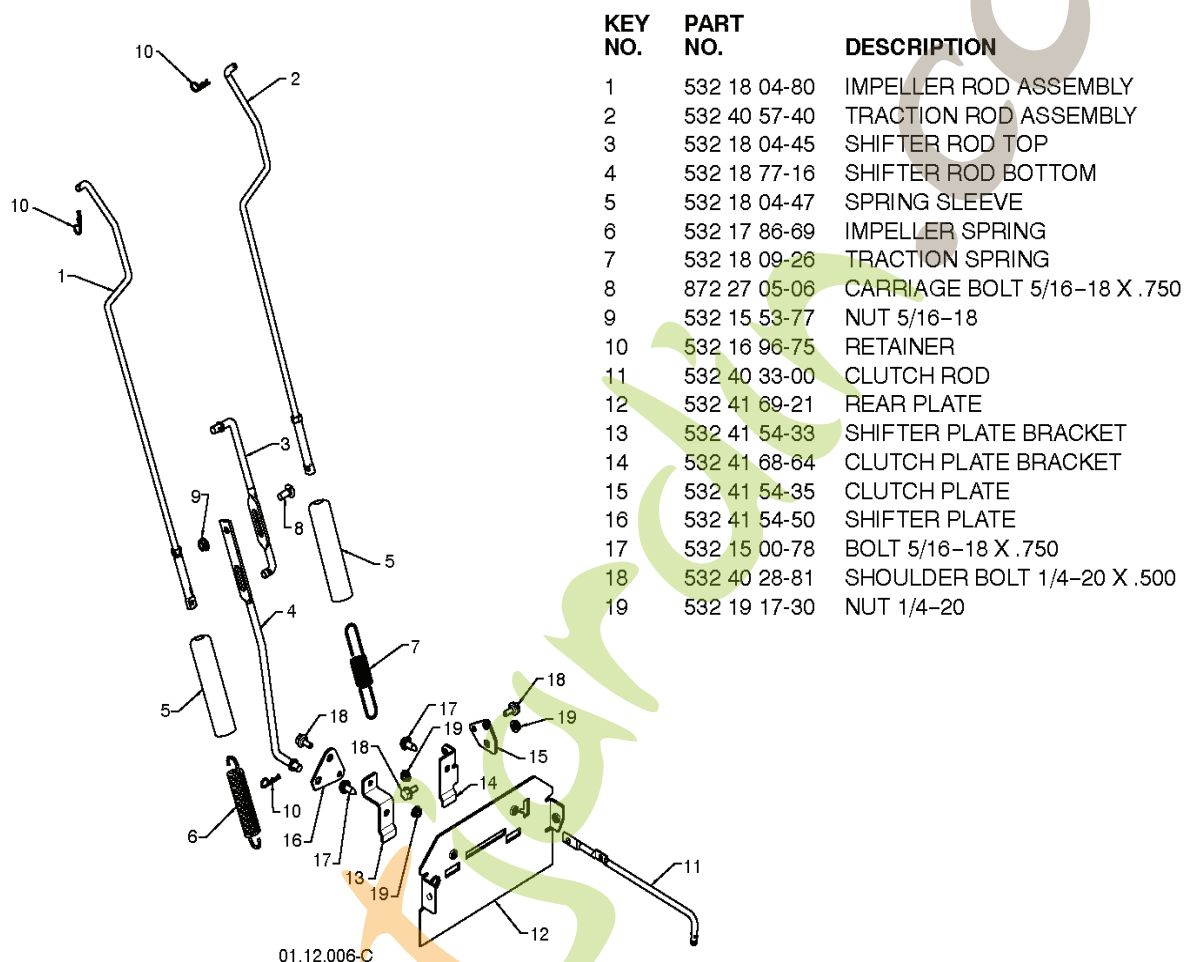

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your snow thrower and void your warranty.

PXM_REF	PXM_PARTNO	DESCRIPTION
1	532180480	BARRE
2	532405740	BARRE
3	532180445	LEVIER
4	532187716	BARRE
5	532180447	DOUILLE
6	532178669	RESSORT
7	532180926	RESSORT
8	872270506	BOULON
9	532155377	ÉCROU
10	532169675	AXE
11	532403300	BARRE
12	532416921	PLAQUE
13	532415433	LEVIER
14	532416864	SUPPORT
15	532415435	PLAQUE
16	532415450	PLAQUE
17	532150078	VIS
18	532402881	BOULON
19	532191730	ÉCROU

foretjardin.com