



# SPARE PARTS LIST

LAWN MOWERS: CONSUMER  
WALK-BEHINDS

M53-625 CMDE, 96141019802, 2010-02

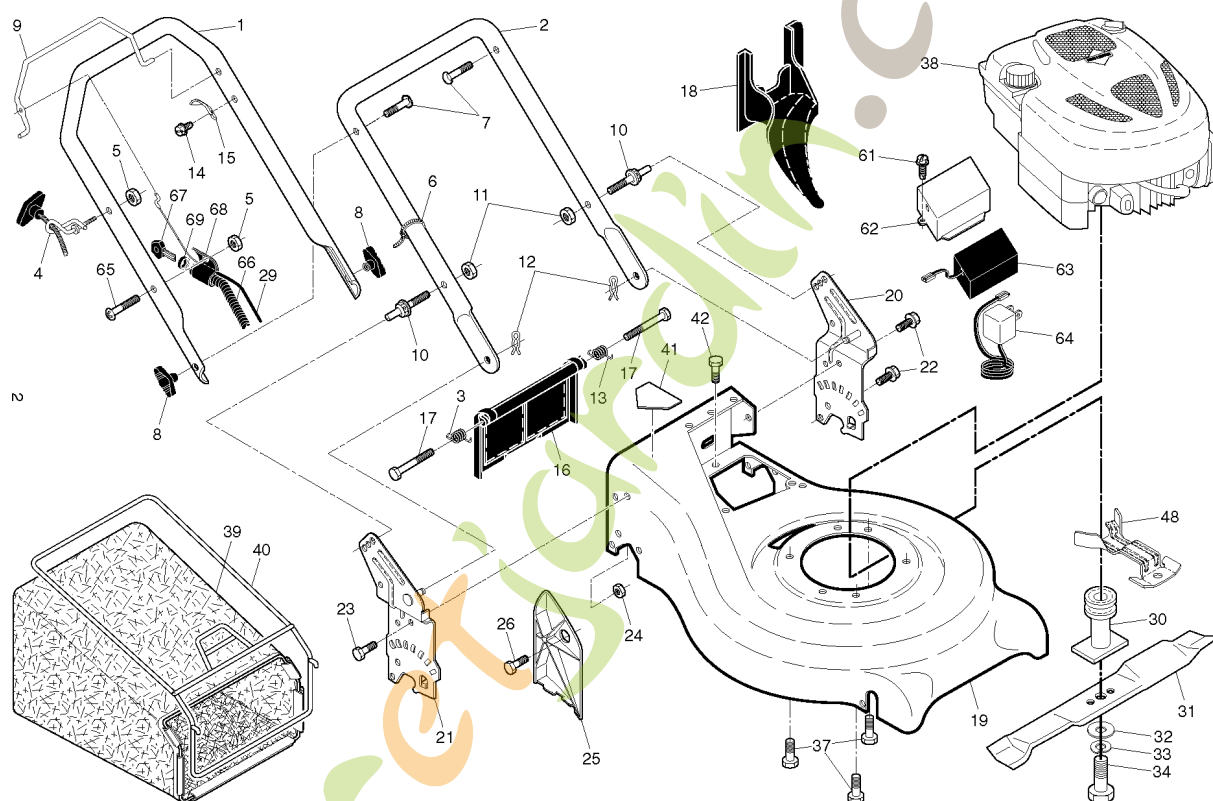

| Référence | Numéro de Pièce | Description                    | Remarque           |
|-----------|-----------------|--------------------------------|--------------------|
| 1         | 532 17 80-67    | POIGNÉE                        |                    |
| 2         | 532 19 60-05    | POIGNÉE                        |                    |
| 3         | 532 40 54-16    | RESSORT                        |                    |
| 4         | 532 19 47-88    | GUIDE                          |                    |
| 5         | 532 13 20-04    | ÉCROU                          |                    |
| 6         | 532 06 64-26    | HOOP                           |                    |
| 7         | 532 19 15-74    | VIS                            |                    |
| 8         | 532 19 19-38    | BOUTON                         |                    |
| 9         | 532 19 18-19    | REGLAGE                        |                    |
| 10        | 532 18 88-21    | BOULON                         |                    |
| 11        | 532 75 11-53    | ÉCROU                          |                    |
| 12        | 532 05 17-93    | AXE                            |                    |
| 13        | 532 40 54-15    | RESSORT                        |                    |
| 14        | 532 75 06-34    | VIS                            |                    |
| 15        | 532 12 51-62    | PLAQUE                         |                    |
| 16        | 532 40 88-88    | DÉFLECTEUR                     |                    |
| 17        | 532 18 41-93    | BOULON                         |                    |
| 18        | 532 19 81-70    | BOUCHON                        |                    |
| 19        | 532 40 97-11    | CARTER                         |                    |
| 20        | 532 19 40-29    | SUPPORT                        | LH                 |
| 21        | 532 19 40-31    | SUPPORT                        | RH                 |
| 22        | 532 42 88-67    | BOULON                         |                    |
| 23        | 532 16 31-83    | BOULON                         |                    |
| 24        | 873 80 05-00    | LOCK NUT                       |                    |
| 25        | 532 16 13-33    | PLAQUE                         |                    |
| 26        | 532 16 34-09    | VIS                            |                    |
| 29        | 532 19 59-48    | STOP CABLE                     |                    |
| 30        | 532 42 11-76    | ADAPTATEUR                     |                    |
| 31        | 532 19 93-77    | MOWER BLADE                    |                    |
| 32        | 532 85 10-74    | RONDELLE                       |                    |
| 33        | 532 85 02-63    | RONDELLE                       |                    |
| 34        | 532 85 10-84    | VIS                            |                    |
| 37        | 532 15 04-06    | BOULON                         |                    |
| 38        | 000 00 00-00    | W/O DESCRIPTION                | B&S 122T05-4984-EA |
| 39        | 532 41 06-76    | GRASSBAG                       |                    |
| 40        | 532 41 19-51    | CADRE                          |                    |
| 41        | 532 18 21-66    | DECAL                          |                    |
| 42        | 817 06 04-10    | VIS                            |                    |
| 48        | 532 42 90-01    | SUPPORT                        |                    |
| 61        | 532 16 34-09    | VIS                            |                    |
| 62        | 532 40 80-02    | BOX.BATTERY.21RD.RWGD *SUBS/2* |                    |
| 63        | 532 18 95-89    | BATTERIE                       |                    |
| 64        | 532 19 24-36    | CHARGEUR DE BATTERIE           |                    |
| 65        | 532 18 61-59    | VIS                            |                    |
| 66        | 532 19 73-63    | HARNAIS                        |                    |
| 67        | 532 18 03-31    | TOUCHE                         |                    |
| 68        | 532 19 49-53    | COMMANDE                       |                    |
| 69        | 532 19 48-48    | PROTÈGE-ÉCROU                  |                    |

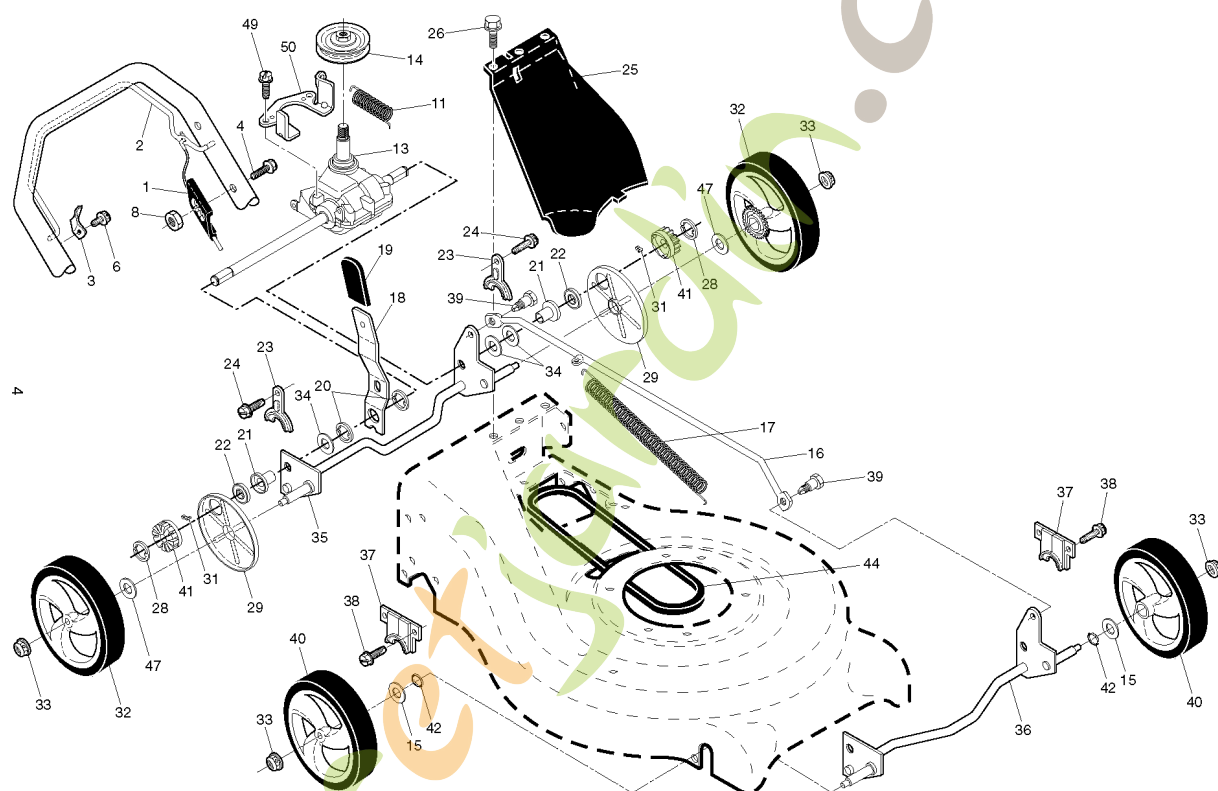

| Référence | Numéro de Pièce | Description                    |
|-----------|-----------------|--------------------------------|
| 1         | 532 40 65-31    | CÂBLE                          |
| 2         | 532 41 78-19    | COMMANDE                       |
| 3         | 532 16 45-57    | ARRÊT                          |
| 4         | 532 19 96-87    | VIS                            |
| 6         | 532 75 06-34    | VIS                            |
| 8         | 532 19 17-30    | ÉCROU                          |
| 11        | 532 40 65-58    | RESSORT                        |
| 13        | 532 41 92-13    | BOITE A VITESSE                |
| 14        | 532 40 57-03    | POULIE                         |
| 15        | 532 08 83-48    | RONDELLE                       |
| 16        | 532 40 71-47    | BARRE                          |
| 17        | 532 40 96-16    | RESSORT                        |
| 18        | 532 41 88-66    | RESSORT                        |
| 19        | 532 19 00-69    | BOUTON                         |
| 20        | 812 00 00-22    | BAGUE DE RETENUE               |
| 21        | 532 41 24-50    | SUPPORT DE ROULEMENT           |
| 22        | 532 19 10-39    | ROULEMENT                      |
| 23        | 532 16 45-55    | SUPPORT                        |
| 24        | 817 06 04-10    | VIS                            |
| 25        | 532 41 39-30    | CARTER                         |
| 26        | 532 75 06-34    | VIS                            |
| 28        | 812 00 00-58    | CIRCLIP                        |
| 29        | 532 18 94-03    | PARE-POUSSIÈRE                 |
| 31        | 532 40 48-45    | PAWL, DRIVE                    |
| 32        | 532 41 37-23    | ROUE                           |
| 33        | 532 40 91-48    | ÉCROU                          |
| 34        | 532 85 12-26    | RONDELLE                       |
| 35        | 532 41 09-22    | ARBRE                          |
| 36        | 532 41 09-33    | ARBRE                          |
| 37        | 532 16 14-63    | SUPPORT                        |
| 38        | 532 16 34-09    | VIS                            |
| 39        | 532 40 70-59    | SHOULDER BOLT SEMI GIMLET PT.  |
| 40        | 532 41 09-21    | ROUE                           |
| 41        | 532 40 48-35    | PIGNON                         |
| 42        | 532 19 74-80    | JOINT TORIQUE                  |
| 44        | 532 40 65-57    | COURROIE                       |
| 47        | 532 06 77-25    | RONDELLE                       |
| 49        | 532 16 34-09    | VIS                            |
| 50        | 532 41 37-22    | BRACKET.BELT.KEEPE/AUT*SUBS/2* |