

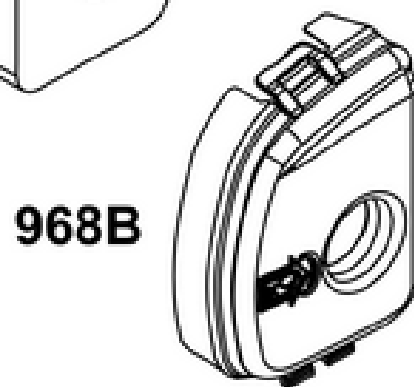
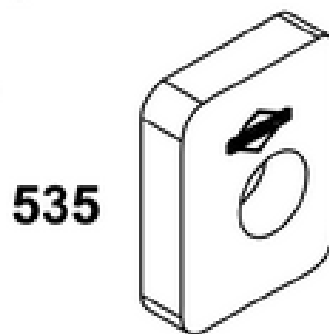


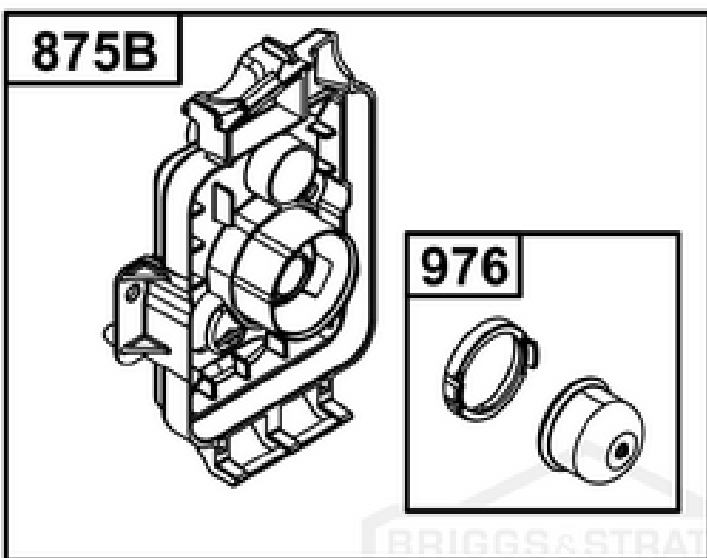

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	590522	TUBE, Breather	1		
318	793480	SCREW	2	(Mounting Bracket)	
535	799579	FILTER, Air Cleaner Foam	1		
875B	595663	BASE, Air Cleaner	1		
968B	595660	COVER, Air Cleaner	1		
971	590552	SCREW	2	(Air Cleaner Base to Carburetor/Throttle Body)	
976	594281	PRIMER, Carburetor	1		

1036

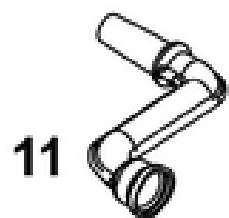


1319



1319A




1319B

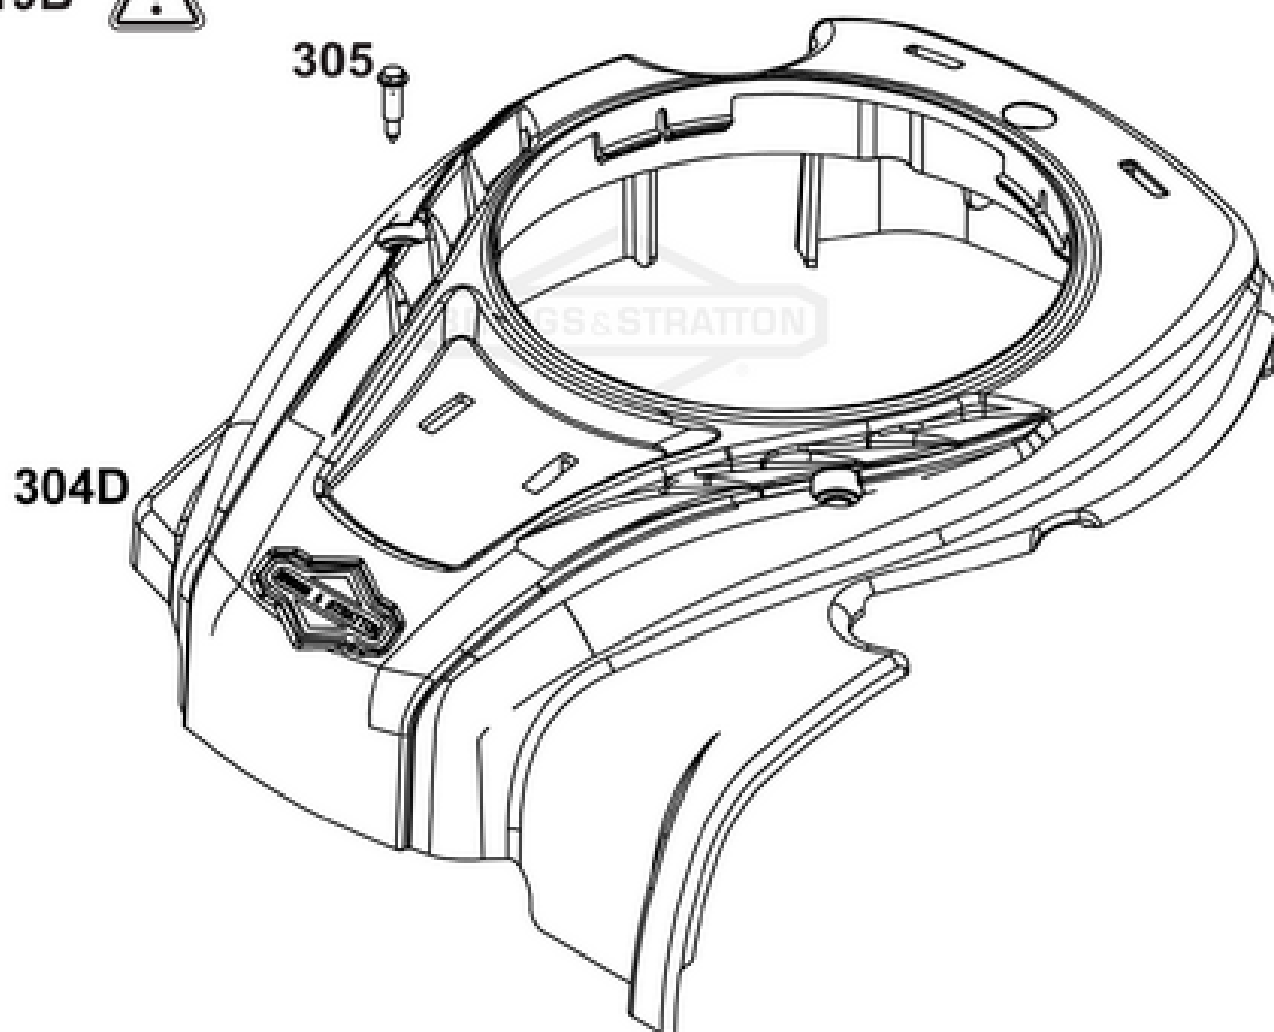




Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
304D	596457	HOUSING, Blower	1		
305	590586	SCREW	3	(Blower Housing)	
1036		LABEL, Emissions	1	(Available From A Briggs & Stratton Authorized Service Dealer)	
1319	794467	LABEL, Warning	1	(Required When Replacing Parts With Warning Labels Affixed)	
1319A	797669	LABEL, Warning	1	(Required When Replacing Parts With Warning Labels Affixed)	
1319B	278911GS	LABEL, Warning	1		

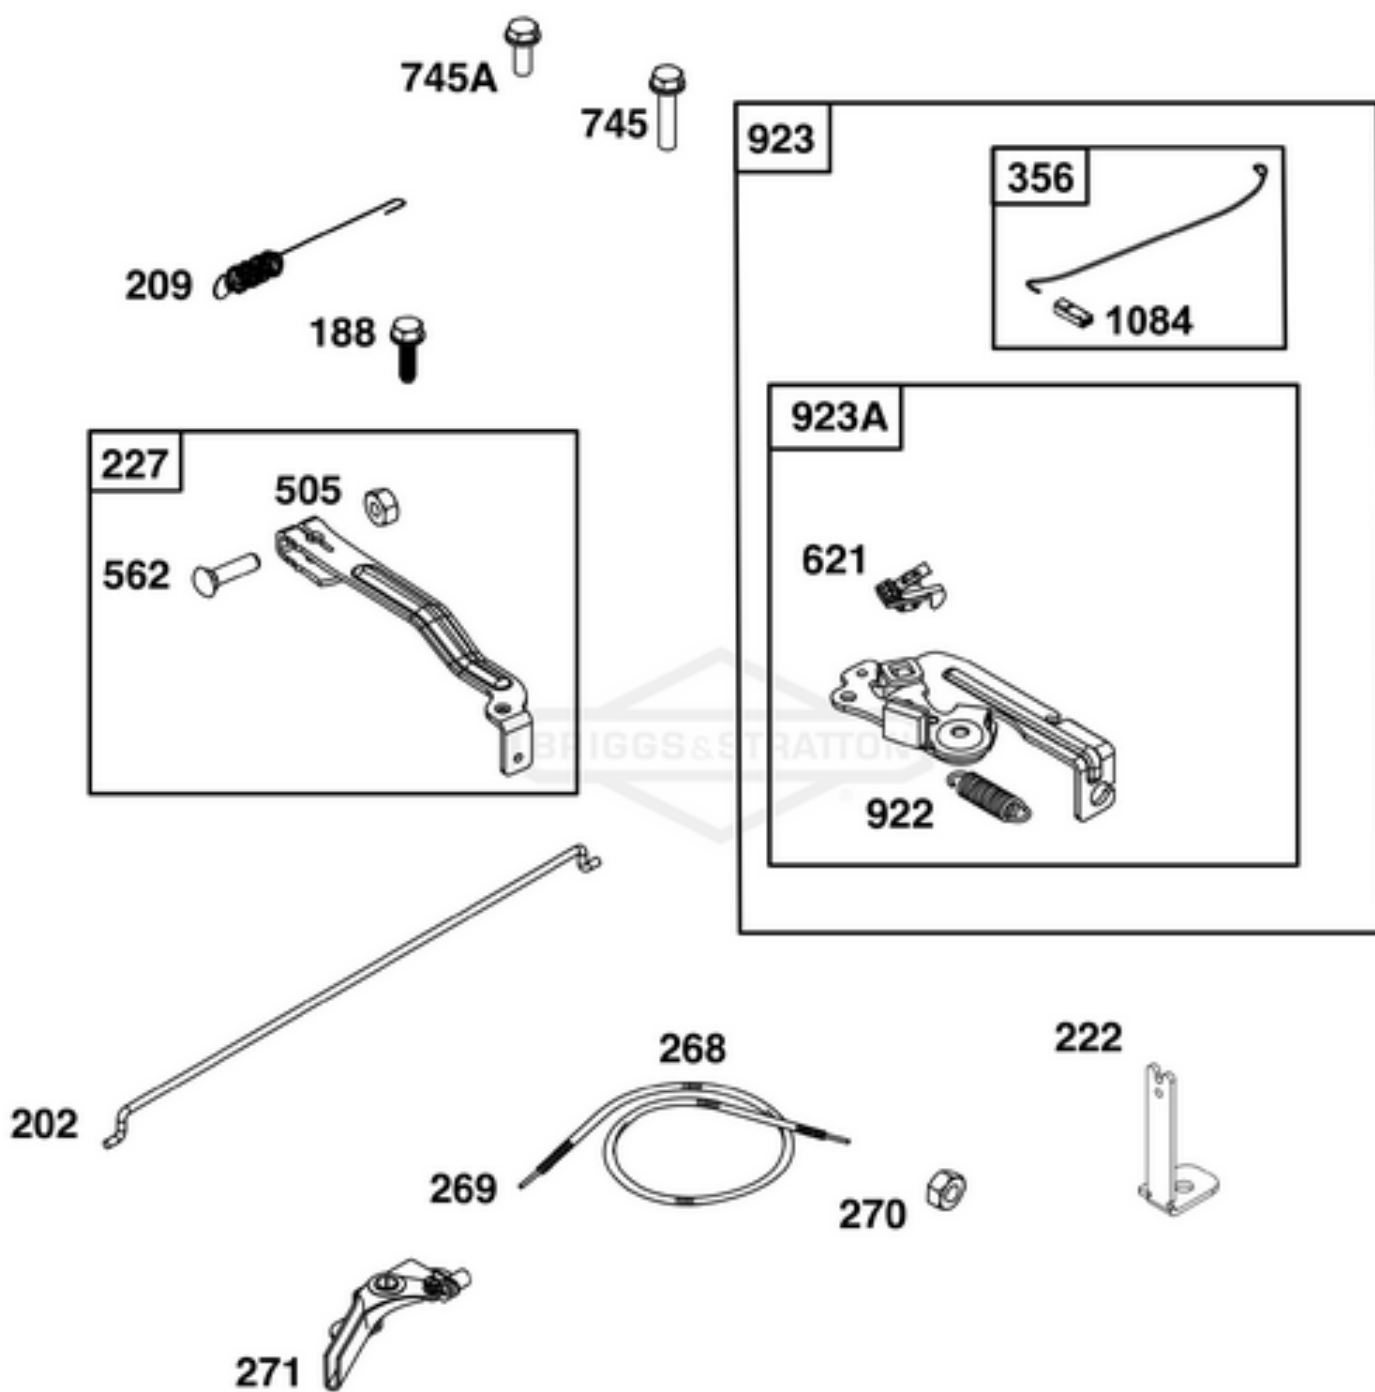


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	793480	SCREW	1	(Control Bracket)	
202	590517	LINK, Mechanical Governor	1		
209	597378	SPRING, Governor	1		
222	596754	BRACKET, Control			
227	590520	LEVER, Governor Control	1		
268	691025	CASING, WIRE	1		
269	691026	WIRE, Control	1		
270	691027	NUT	1	(Control Wire Casing)	
271	691028	LEVER, Control	1		
356		WIRE, Stop	1	(Part information located in Flywheel/Ignition/Starter Group.)	
505	793515	NUT	1	(Governor Control Lever)	
562	793514	BOLT	1	(Governor Lever)	
621	692310	SWITCH, Stop	1		
745	691146	SCREW	1	(Brake)	
745A	690859	SCREW, MACHINE HEX	1	(Brake)	
922	692135	SPRING, Brake	1		
923	595812	BRAKE	1		
923A	691487	BRAKE ASSY	1		
1084		CONNECTOR, Terminal	1	(Part information located in Flywheel/Ignition/Starter Group.)	

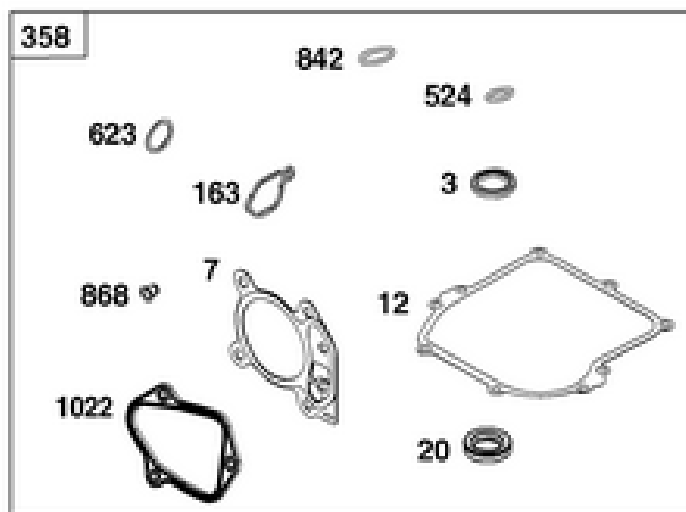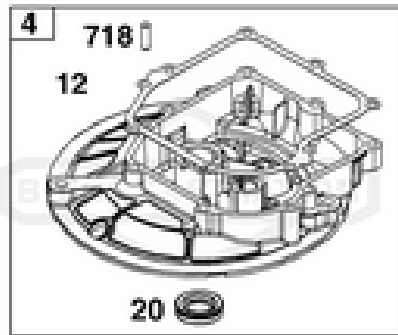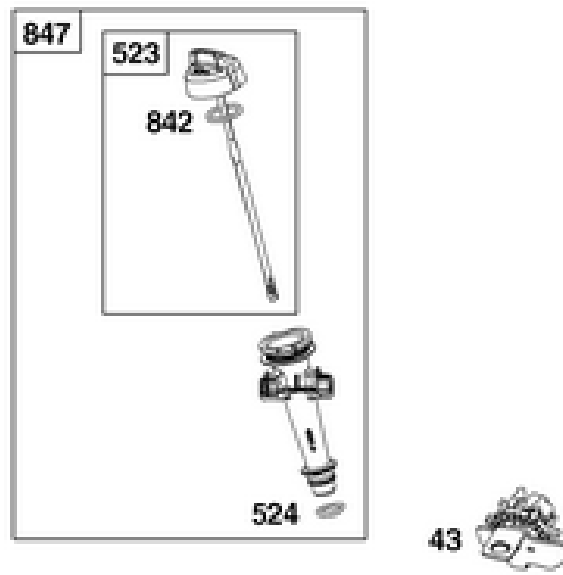

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
3		SEAL, Oil	1	(Part information located in Cylinder Group.)	
4	84002141	SUMP-ENGINE	1		
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
12	799587	GASKET, Crankcase	1		
20	391483S	SEAL, Oil	1	(PTO Side)	
22	692551	SCREW, MACHINE HEX	6	(Crankcase Cover/Sump)	
22A	590763	SCREW	1	(Crankcase Cover/Sump)	
43	594560	SLINGER, Governor/Oil	1		
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
358	84001272	GASKET SET, Engine	1		
523	796503	DIPSTICK	1		
524	691876	SEAL-O RING	1	(Dipstick Tube)	
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
718	690959	PIN, Locating	2		
842	691031	SEAL, O-Ring	1	(Dipstick Cap)	
847	590572	DIPSTICK/TUBE ASSEMBLY	1		
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
1022		GASKET, Rocker Cover	1	(Part information located in Cylinder Head Group.)	

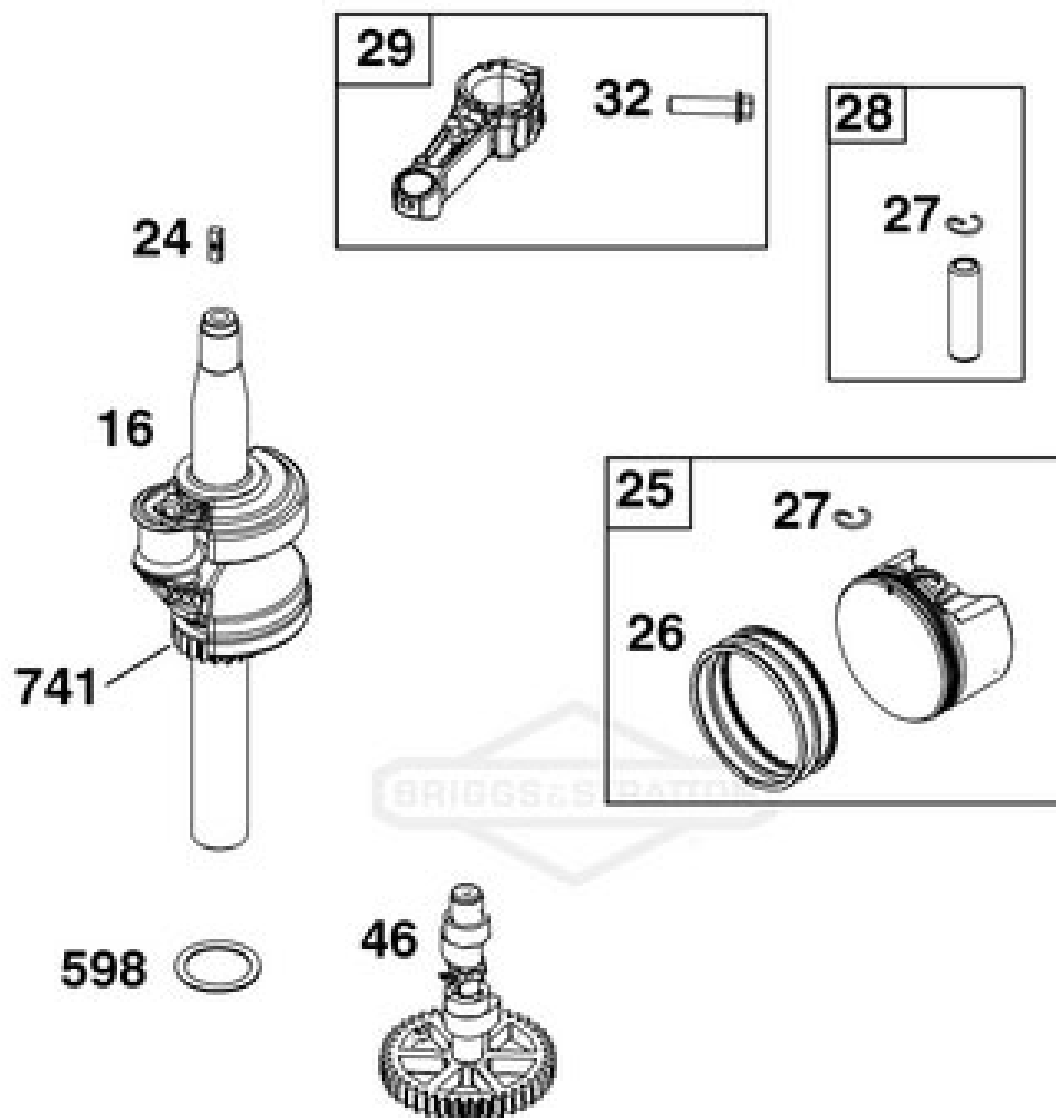

Ref #	Part #	Description	Qty	Context Note	Foot Note
16	590537	CRANKSHAFT	1		
24	222698S	KEY-FLYWHEEL	1		
25	591975	PISTON ASSEMBLY	1		
26	591976	SET, Ring	1		
27	691588	LOCK-PISTON PIN	1		
28	699659	PIN, Piston	1		
29	590518	ROD, Connecting	1		
32	691664	SCREW	2	(Connecting Rod)	
46	592968	CAMSHAFT	1		
598	593291	SHIM, End Play	1	(Crankshaft or Camshaft Bearing)	
741	796210	GEAR, Timing	1		

972A


957B

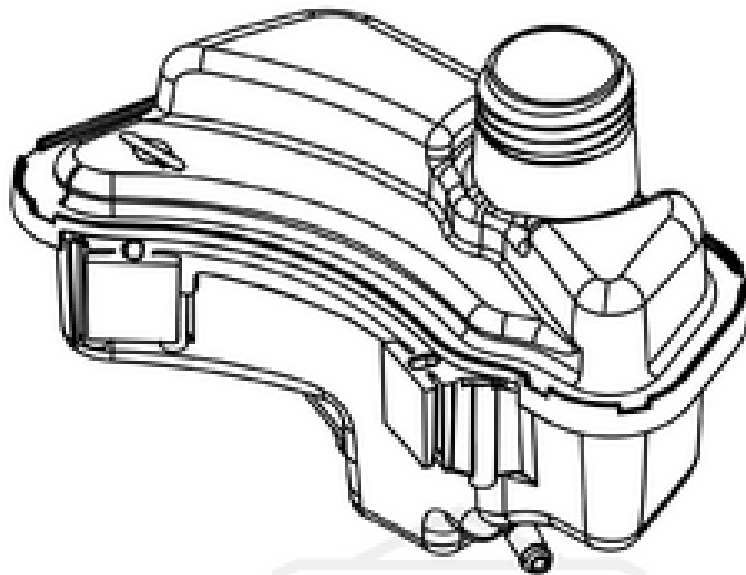

BRIGGS & STRATTON

187

601

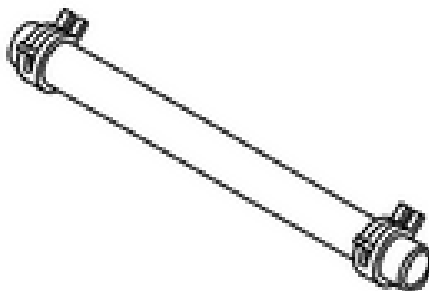

Ref #	Part #	Description	Qty	Context	Note	Foot	Note
187	791766	FUEL LINE	1				
601	791850	CLAMP-HOSE	2				
957B	692046	CAP, Fuel Tank	1				
972A	591947	TANK, Fuel	1				

615 


404 

1264 

1263 

616 

850

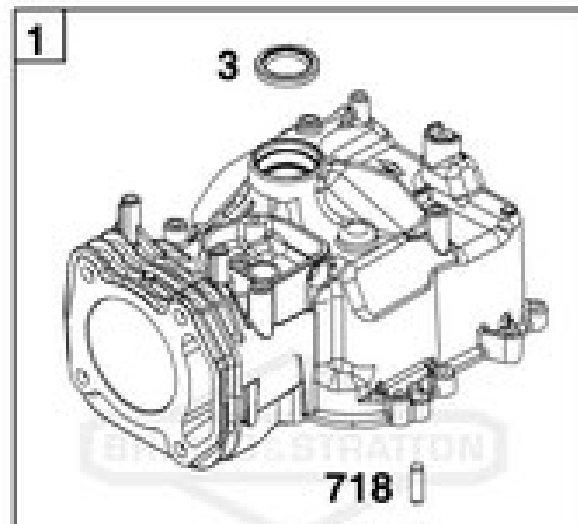

358

842 

524 

623 


163 

3 

868 



12

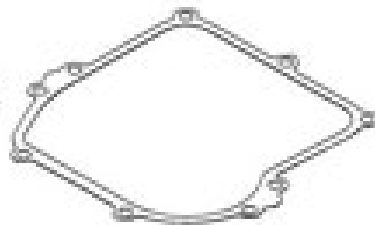


1022





20 

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	592048	CYLINDER ASSEMBLY	1		
3	299819S	SEAL, Oil	1	(Magneto Side)	
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
358		GASKET SET, Engine	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
404	690272	77-7470	1	(Governor Crank)	
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
615	690340	77-7480	1		
616	590516	CRANK, Governor	1		
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
718	690959	PIN, Locating	2		
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850	100106	SEALANT, Liquid	1		
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
1022		GASKET, Rocker Cover	1	(Part information located in Cylinder Head Group.)	
1263	697124	REED, Breather	1		
1264	793453	SCREW	1	(Breather Reed)	

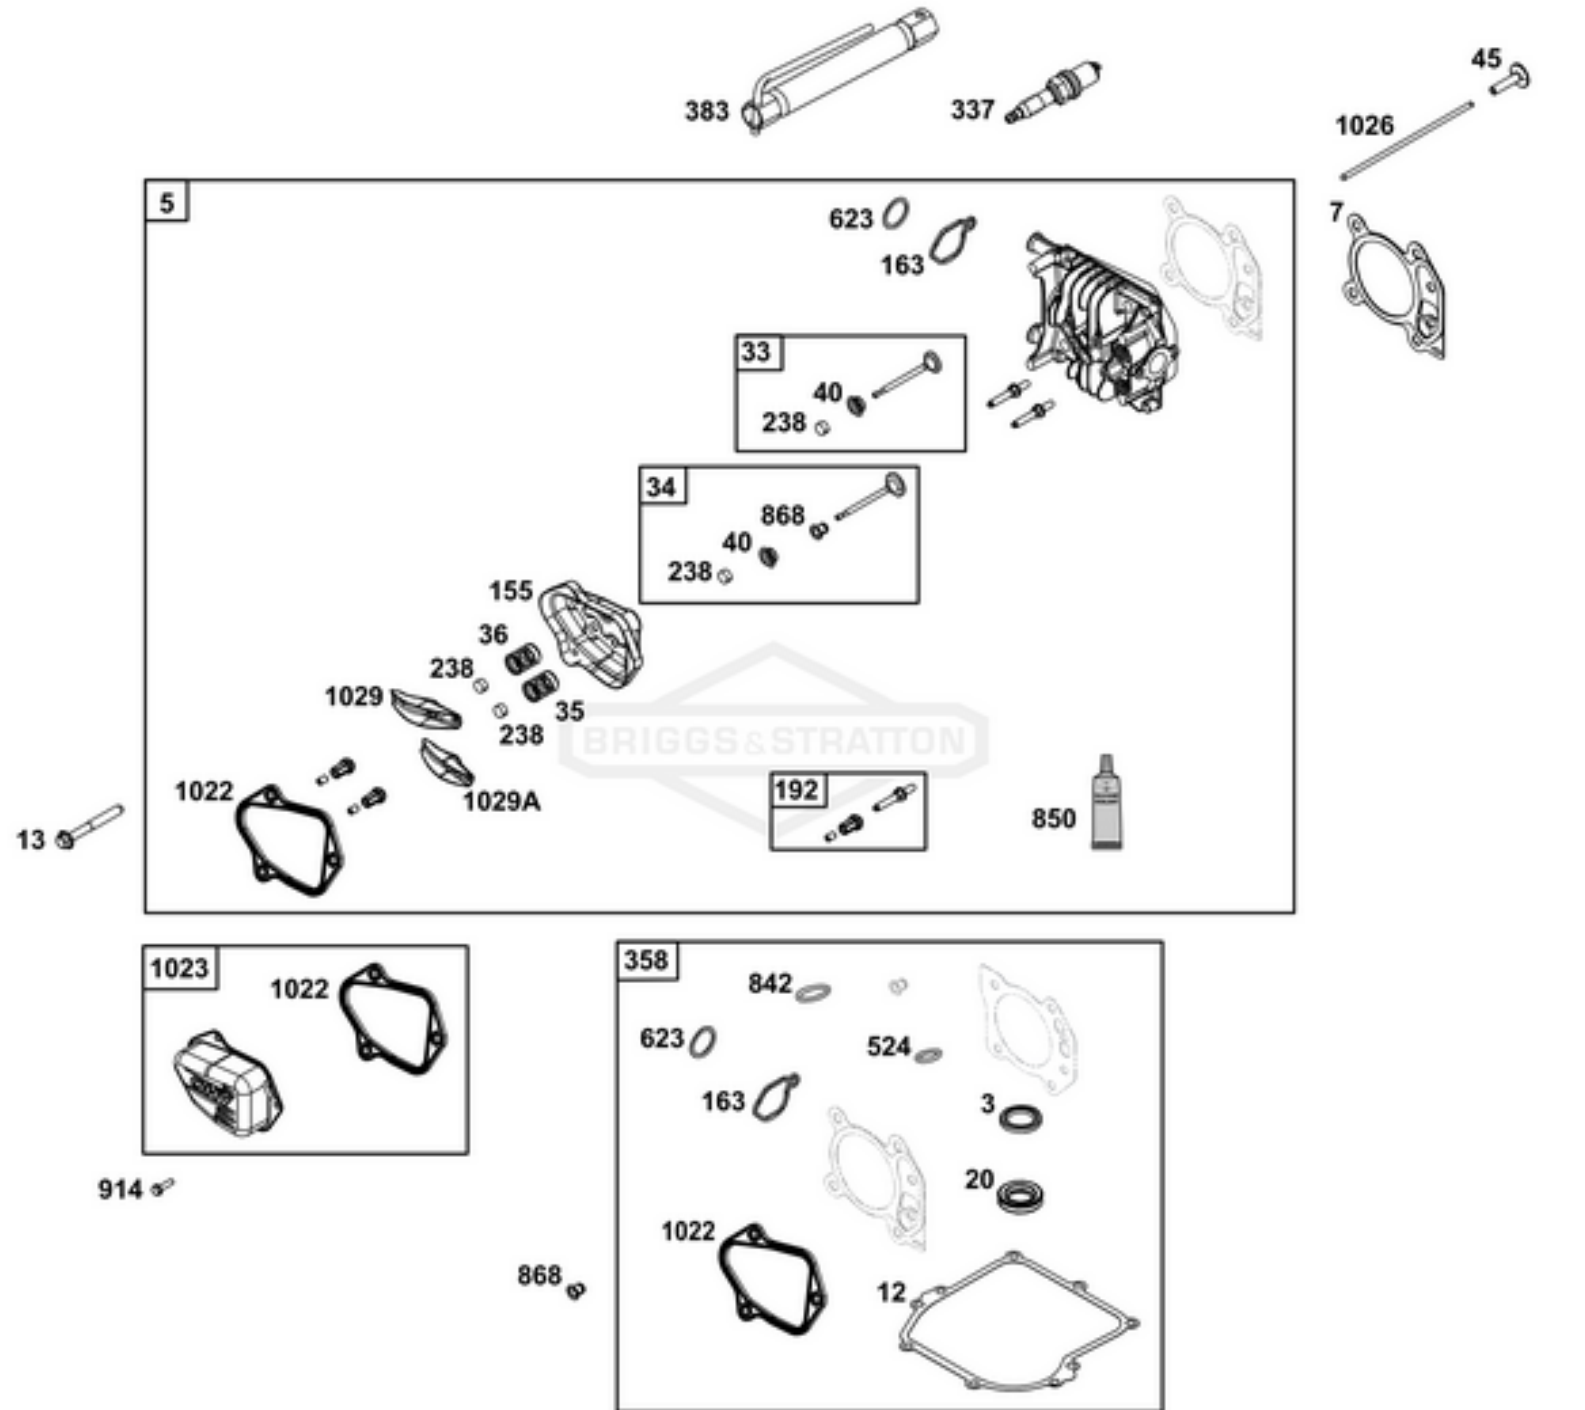




Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
3		SEAL, Oil	1	(Part information located in Cylinder Group.)	
5	84001270	HEAD, Cylinder	1		
7	84001992	GASKET, Cylinder Head	1		
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
13	590512	SCREW	4	(Cylinder Head)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
33	590531	VALVE, Exhaust	1		
34	590530	VALVE, Intake	1		
35	590532	SPRING, Valve	1	(Intake)	
36	590532	SPRING, Valve	1	(Exhaust)	
40	590528	RETAINER, Valve	2		
45	590514	TAPPET, Valve	2		
155	590529	PLATE, Cylinder Head	1		
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
192	590535	ADJUSTER, Rocker Arm	2		
238	590533	CAP, Valve	2		
337	692720	PLUG, Spark	1		
358		GASKET SET, Engine	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
383	19576S	WRENCH, SPARK PLUG 8"	1		
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850		SEALANT, Liquid	1	(Part information located in Cylinder Group.)	
868	84001271	SEAL, Valve	1		
914	591103	SCREW	3	(Rocker Cover)	
1022	84006580	GASKET-ROCKER COVER	1		
1023	595349	COVER, Rocker	1		
1026	590515	ROD, Push	2		
1029	590526	ARM, Rocker	1		
1029A	590527	ARM, Rocker	1		


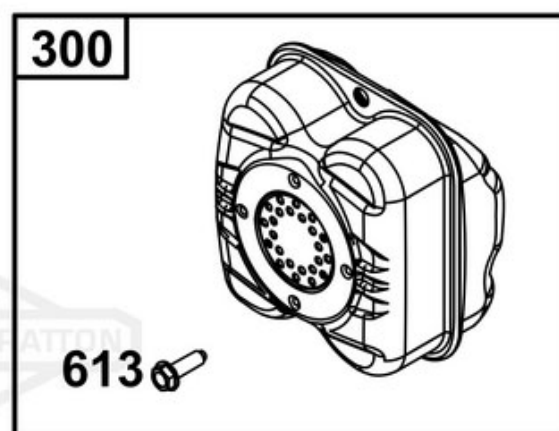
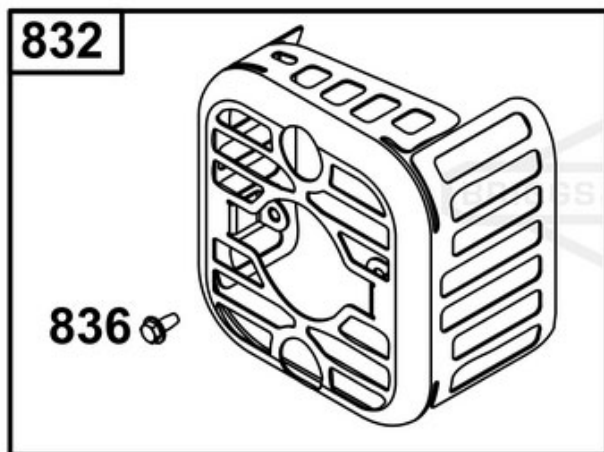


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
300	590565	MUFFLER	1		
613	590562	SCREW	2	(Muffler)	
832	592709	GUARD, Muffler	1		
836	690661	77-9050	3	(Muffler Guard)	

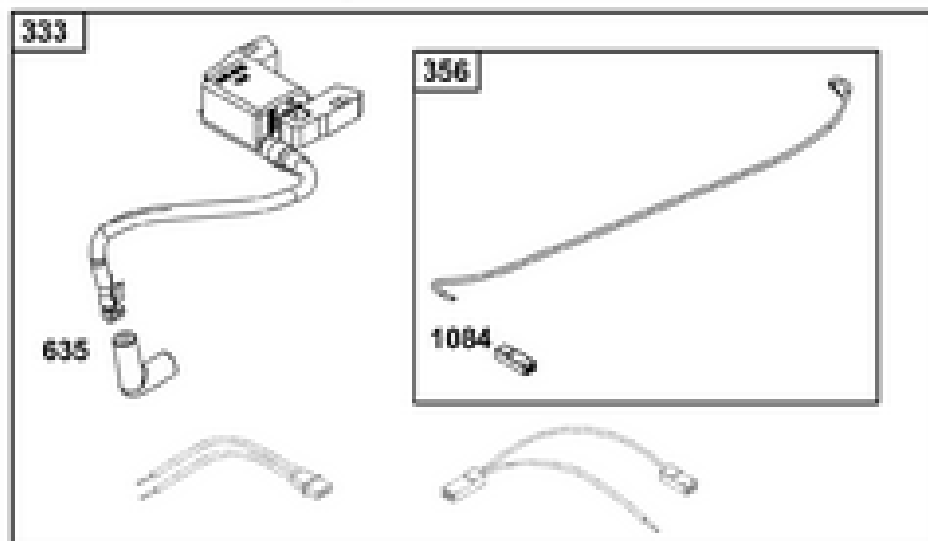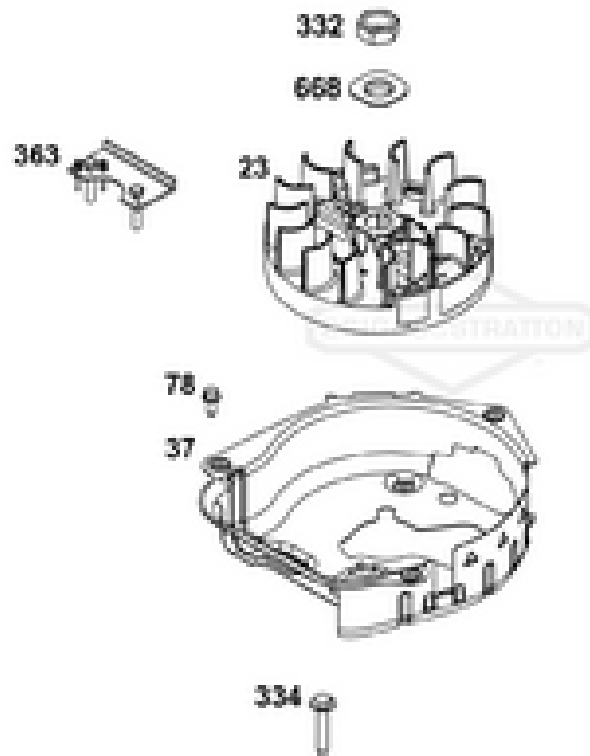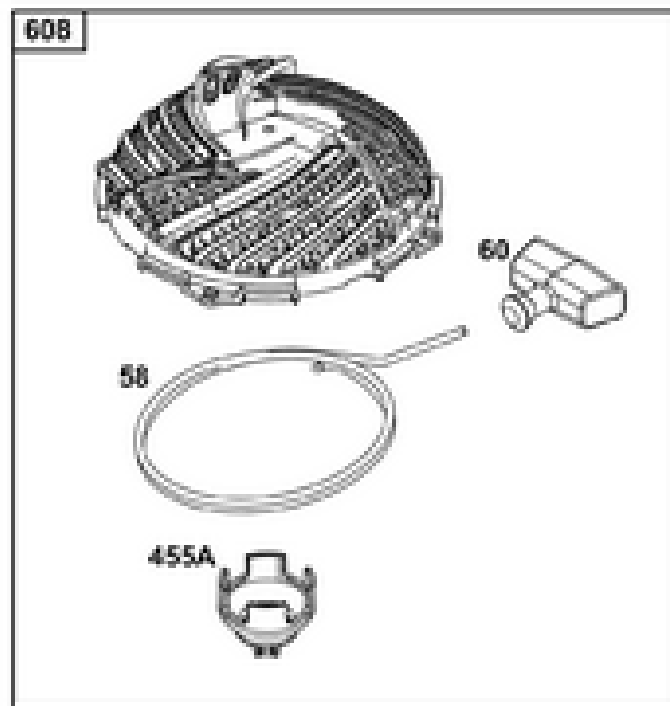

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	590544	FLYWHEEL	1		
37	594729	GUARD, Flywheel	1		
58	591108	ROPE, Starter	1		
60	691915	GRIP, Starter Rope	1		
78	793480	SCREW	5	(Flywheel Guard)	
332	690662	NUT, JAM	1	(Flywheel)	
333	84005272	ARMATURE-MAGNETO	1		
334	691061	SCREW	2	(Magneto Armature)	
356	595018	WIRE, Stop	1		
363	19619	PULLER, Flywheel	1		
455A	593960	CUP, Flywheel	1		
608	593959	STARTER, Rewind	1		
635	692076	BOOT, Spark Plug	1		
668	590546	SPACER	1		
1084	399365S	CONNECTOR, Terminal	1		

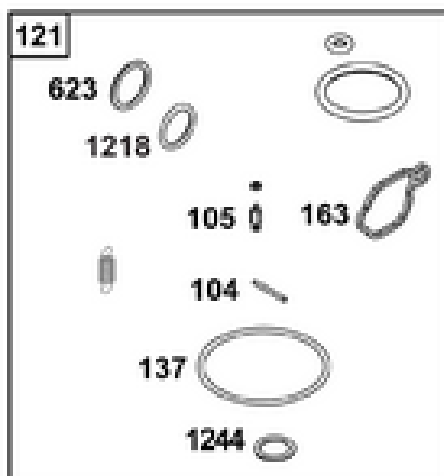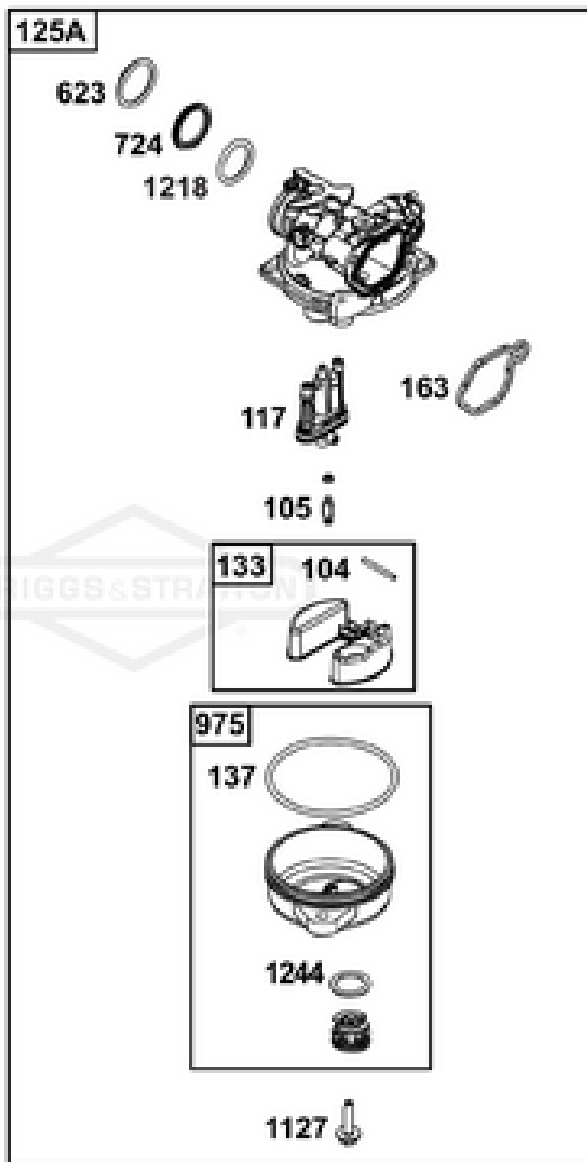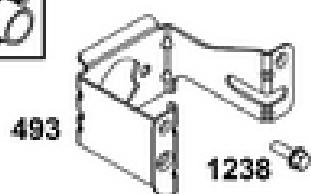

Ref #	Part #	Description	Qty	Context Note	Foot Note
104	590558	PIN, Float Hinge	1		
105	594581	VALVE, Float Needle	1		
117	84001983	JET, Main	1	(Standard)	
117	84002021	JET, Main	1	(Standard)	
118	84001984	JET, Main	1	(High Altitude)	
118	84002022	JET, Main	1	(High Altitude)	
121	594636	KIT, Carburetor Overhaul	1	(Service Kits may include extra parts not specific to this engine.)	
122	590549	SPACER, Carburetor	1		
125A	84001028	CARBURETOR	1		
133	591120	FLOAT, Carburetor	1		
137	594633	GASKET, Float Bowl	1		
163	799580	GASKET, Air Cleaner	1		
493	593330	BRACKET, Mounting	1		
623	799581	SEAL, O-Ring	1	(Carburetor Spacer)	
724	697478	RETAINER, Seal	1		
975	594632	BOWL, Float	1		
1127	590554	SCREW	2	(Float Bowl to Carburetor Body)	
1218	270344S	SEAL, O-Ring	1	(Carburetor)	
1238	590562	SCREW	2	(Carburetor Spacer)	
1244	597314	SEAL, O-Ring	1	(Carburetor Bowl Drain)	