
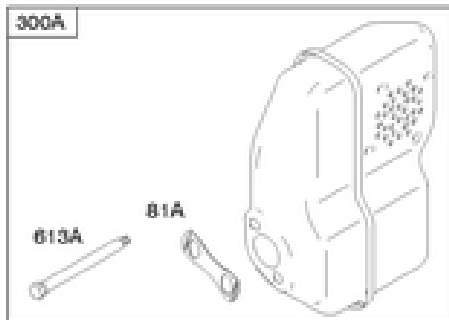
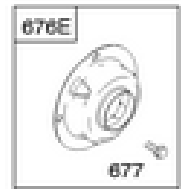
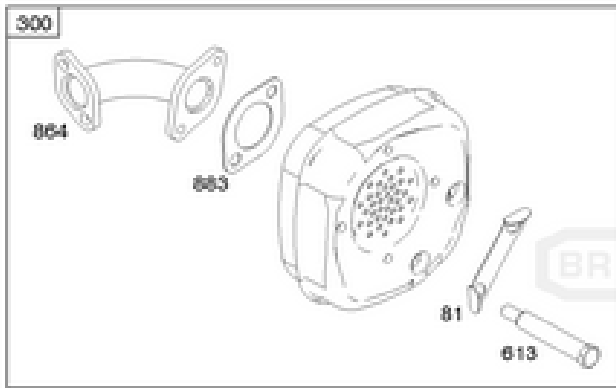
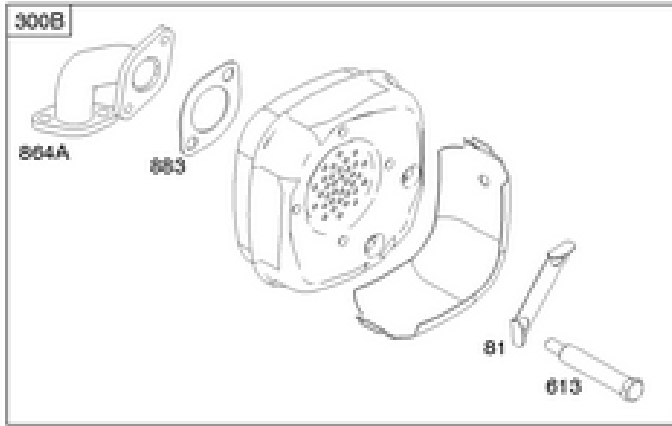


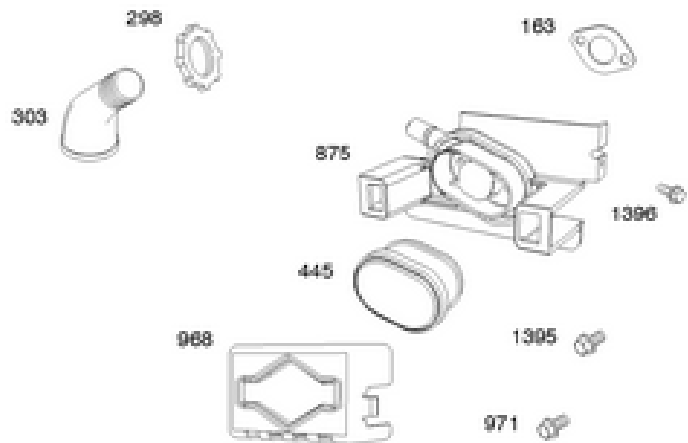


Copyright © Briggs & Stratton, Ltd. All rights reserved.




Ref #	Part #	Description	Qty	Context Note	Foot Note
81A	691179	LOCK, Muffler Screw			
163	272948S	GASKET, Air Cleaner		(Air Cleaner)	
300A	792661	MUFFLER			
445	790166	FILTER, A/C Cartridge			
613A	691340	SCREW		(Muffler) (2 3/4)	
676B	393760	DEFLECTOR, Muffler			
677	690661	SCREW		(Muffler Deflector)	
823	699554	SCREW		(Muffler Adapter) (5/8)	
832A	792665	GUARD, Muffler			
836	690367	SCREW		(Muffler Guard)	
864	791316	ADAPTER, Muffler			
875	790171	BASE, Air Cleaner		(Plastic)	
883	691881	GASKET, Exhaust		(Between Adapter And Muffler)	
883A	691880	GASKET, Exhaust		(Between Adapter And Cylinder)	
968	790172	COVER, Air Cleaner			
1395	692523	SCREW		(Air Cleaner Base to Air Cleaner Bracket) (To Carburetor)	

1036 EMISSIONS LABEL

70" Rope




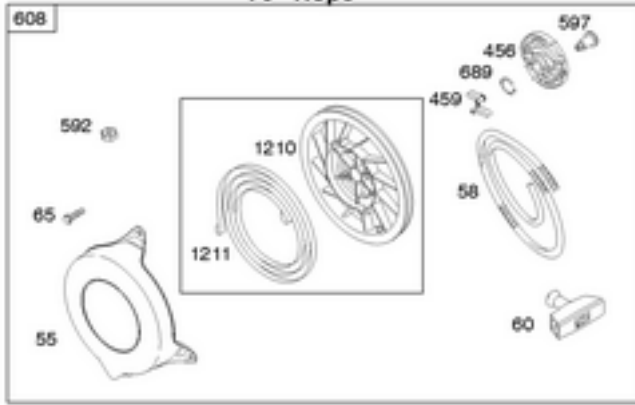


88 5/8" Rope

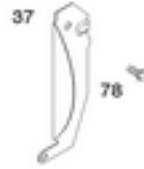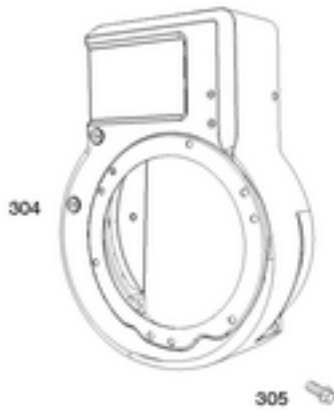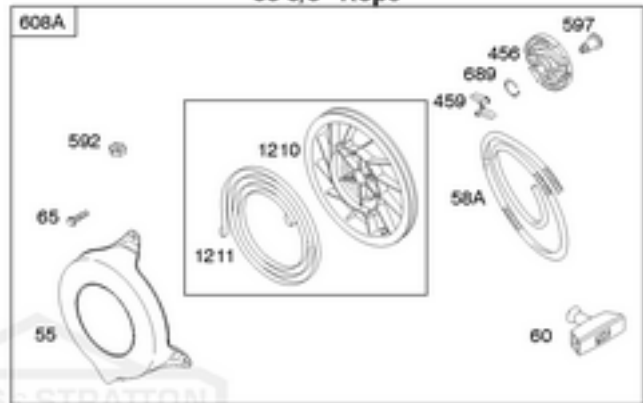


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	795695	FLYWHEEL			
37	690463	GUARD, Flywheel			
55	692144	HOUSING, Rewind Starter			
58	691921	ROPE, Starter		(70)	
58A	697316	ROPE, Starter		(88 5/8)	
60	691915	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
73	699850	SCREEN, Rotating			
78	690364	SCREW		(Flywheel Guard)	
304	790165	HOUSING, Blower			
305	692198	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
363	19069	PULLER, Flywheel			
455	691236	CUP, Flywheel			
456	692299	PLATE, Pawl Friction			
459	281505S	PAWL, Ratchet			
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	690101	STARTER, Rewind		(70 Rope)	
689	691855	SPRING, Friction		(Rewind Starter)	
930	691348	GUARD, Rewind			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1210	499901	PULLEY/SPRING ASSEMBLY		(Pulley)	
1211	499901	PULLEY/SPRING ASSEMBLY		(Spring)	

 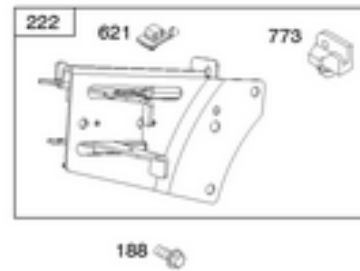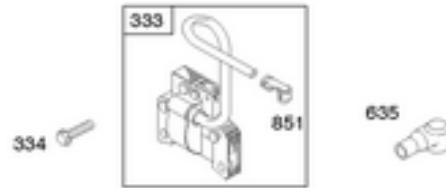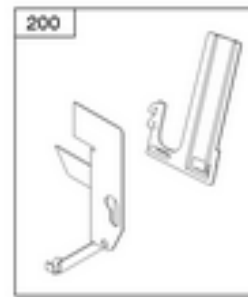

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
188	691637	SCREW		(Control Bracket)	
200	795470	BLADE, Governor			
202	790168	LINK, Mechanical Governor			
209	795471	SPRING, Governor			
211	790308	SPRING, Governed Idle			
216	790271	LINK, Choke			
222	790164	BRACKET, Control			
265	691024	CLAMP, Casing			
265A	690798	CLAMP, Casing			
267	692577	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
333	793281	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356	692390	WIRE, Stop			
356A	792672	WIRE, Stop			
578	695283	WIRE ASSEMBLY			
621	692310	SWITCH, Stop			
635	66538S	BOOT, Spark Plug			
773	697325	RETAINER			
780	691211	ANCHOR, Spring			
831	691099	SCREW		(Spring Anchor)	
851	493880S	TERMINAL, Spark Plug			

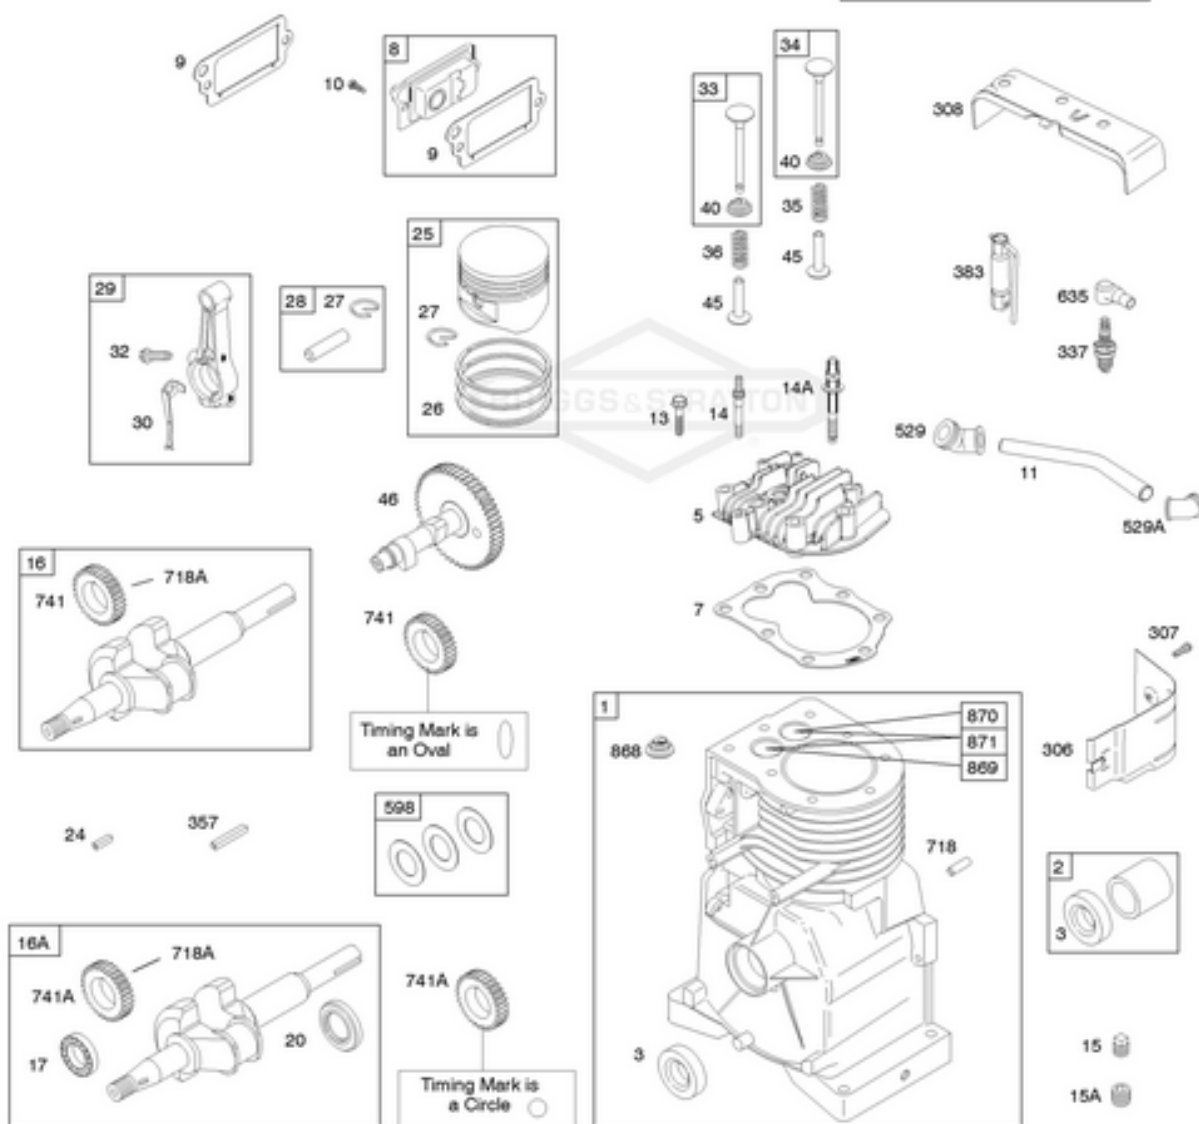

Copyright © Briggs & Stratton, LLC. All rights reserved.






Ref #	Part #	Description	Qty	Context Note	Foot Note
1	791358	CYLINDER ASSEMBLY			
2	796961	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL, Oil		(Magneto Side)	
5	790169	HEAD, Cylinder			
7	698717	GASKET, Cylinder Head			
8	791779	BREATHER ASSEMBLY			
9	695890	GASKET, Breather			
10	691666	SCREW		(Breather Assembly)	
11	790162	TUBE, Breather			
13	691640	SCREW		(Cylinder Head)	
14	690361	SCREW		(Cylinder Head) (2 5/64)	
14A	792660	STUD		(Cylinder Head) (3 1/3)	
15	691686	PLUG, Oil Drain			
15A	691682	PLUG, Oil Drain			
16	793152	CRANKSHAFT		(Use Reference 741 Timing Gear)	
20	692020	SEAL, Oil		(PTO Side)	
24	222698S	KEY, Flywheel			
25	795689	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 05051800	
25	795691	PISTON ASSEMBLY		(Standard)	
26	795688	SET, Ring		(.020 Oversize) Used After Code Date 05051800	
26	795690	SET, Ring		(Standard) Used After Code Date 05051800	
26	695169	SET, Ring		(Standard) Used Before Code Date 05051900	
26	695172	SET, Ring		(.020 Oversize) Used Before Code Date 05051900	
27	691588	LOCK, Piston Pin			
28	298909	PIN, Piston		(Standard) Used Before Code Date 05051900	
28	699659	PIN, Piston		(Standard) Used After Code Date 05051800	
28	298908	PIN, Piston		(.005 Oversize) Used Before Code Date 05051900	
29	699655	ROD, Connecting		(Standard)	
30	691719	DIPPER, Connecting Rod			
32	691664	SCREW		(Connecting Rod)	
33	296676	VALVE, Exhaust		(Grooved Stem-Includes Retainer)	
34	296677	VALVE, Intake		(Grooved stem-includes Retainer)	
35	690520	SPRING, Valve		(Intake)	
36	690520	SPRING, Valve		(Exhaust)	
40	692194	RETAINER, Valve			

Ref #	Part #	Description	Qty	Context Note	Foot Note
45	691762	TAPPET, Valve			
46	691998	CAMSHAFT			
306	690461	SHIELD, Cylinder			
307	691660	SCREW		(Cylinder Shield)	
308	690462	COVER, Cylinder Head			
337	796112S	PLUG, Spark			
383	89838S	WRENCH, Spark Plug			
529	692189	GROMMET		(90 Degree)	
529A	692187	GROMMET		(45 Degree)	
598	791387	SHIM, End Play		(Crankshaft or Camshaft Bearing) (Pump Applications Only) Used After Code Date 05013000	
635	66538S	BOOT, Spark Plug			
718	690959	PIN, Locating		(Cylinder)	
718A	499047	PIN, Locating		(Crankshaft)	
741	791124	GEAR, Timing		[Timing Mark is an Oval {}]	
741A	691805	GEAR, Timing		{Timing Mark is a Circle (O)}	
868	697338	SEAL, Valve			
869	691701	SEAT, Valve		(Intake)	
870	691702	SEAT, Valve		(Exhaust)	
871	262001	BUSHING, Valve Guide		(Exhaust)	
871	63709	BUSHING, Valve Guide		(Intake)	
1058	277098	MANUAL, Operator's			
1319	794467	LABEL, Warning			
1330	270962	MANUAL, Repair			

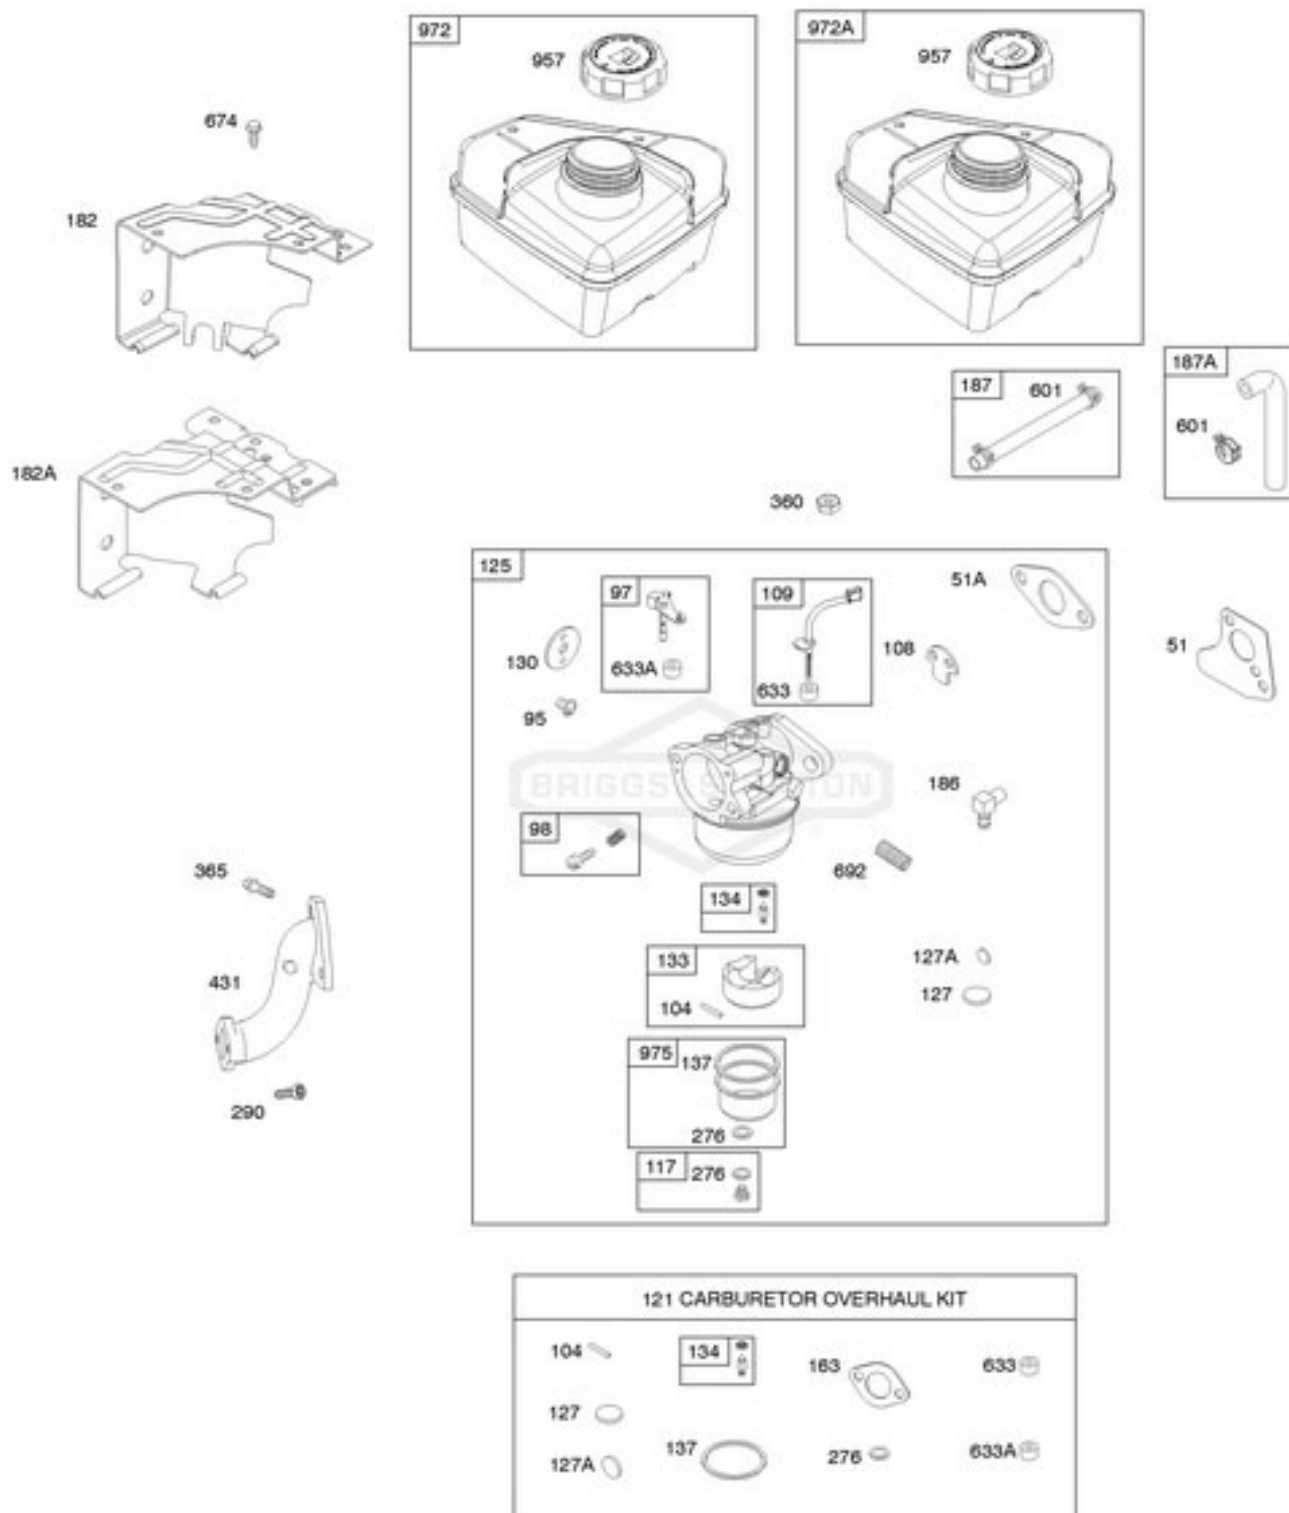


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	273113S	GASKET, Intake			
51A	692283	GASKET, Intake			
95	691636	SCREW		(Throttle Valve)	
97	790270	SHAFT, Throttle			
98	398185	KIT, Idle Speed		(Idle Speed) (Lmt 26, 27, 28, 31)	
104	797622	PIN, Float Hinge			
108	692567	VALVE, Choke			
109	790307	SHAFT, Choke			
117	697355	JET, Main		(Standard)	
121	695157	KIT, Carburetor Overhaul			
125	795533	CARBURETOR			
127	691739	PLUG, Welch		(5/16 Diameter)	
127A	694468	PLUG, Welch		(3/8 Diameter)	
130	691181	VALVE, Throttle			
133	398187	FLOAT, Carburetor			
134	398188	KIT, Needle/Seat			
137	693981	GASKET, Float Bowl			
163	272948S	GASKET, Air Cleaner		(Air Cleaner)	
182A	792663	BRACKET, Fuel Tank			
186	692317	CONNECTOR, Hose			
187	791766	LINE, Fuel		(Cut To Required Length)	
187A	792662	LINE, Fuel		(Formed Hose)	
276	271716	WASHER, Sealing			
290	699816	SCREW		(Intake Elbow)	
360	691105	LOCKNUT		(Fuel Tank Bracket)	
365	690953	SCREW		(Carburetor)	
431	790170	MANIFOLD, Intake			
601	791850	CLAMP, Hose			
633	693867	SEAL, Choke/Throttle Shaft		(Choke)	
633A	691321	SEAL, Choke/Throttle Shaft		(Throttle)	
674	690708	SCREW		(Fuel Tank Bracket) (Bracket to Tank)	
692	690572	SPRING, Detent			
957	795027	CAP, Fuel Tank		(Plastic)	
972A	792664	TANK, Fuel		(Plastic)	
975	796611	BOWL, Float			

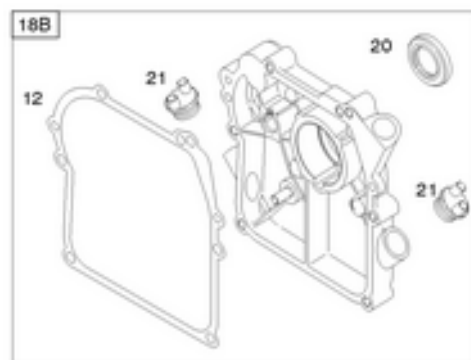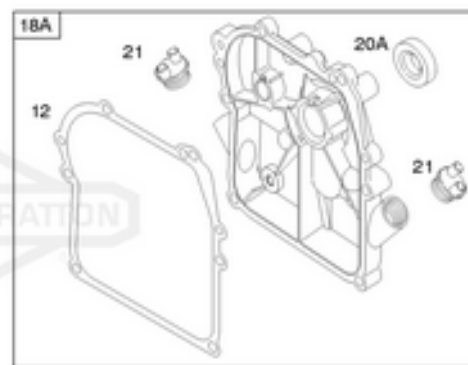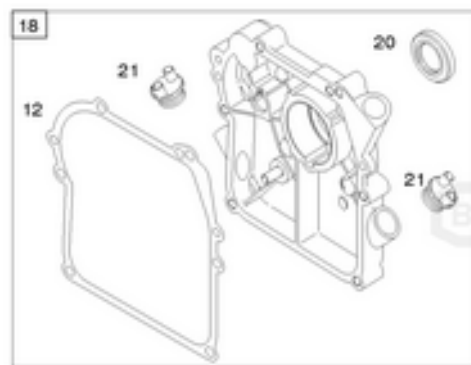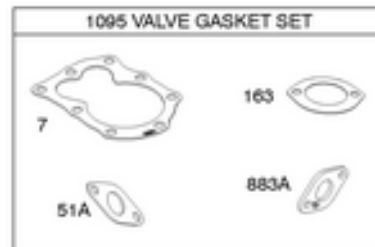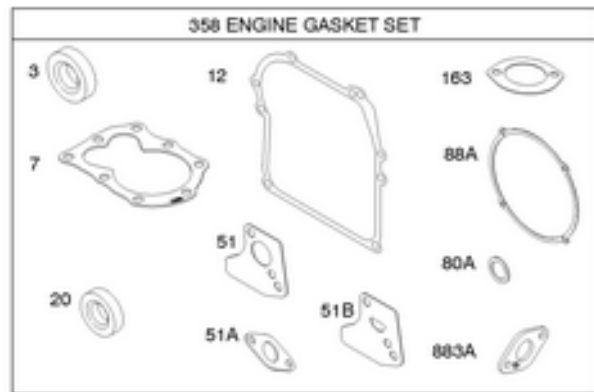

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
3	299819S	SEAL, Oil		(Magneto Side)	
7	698717	GASKET, Cylinder Head			
12	270895	GASKET, Crankcase		(.005)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
12	270896	GASKET, Crankcase		(.009)	
18A	699096	COVER, Crankcase			
19	796961	KIT, Bushing/Seal		(PTO Side)	
20	692020	SEAL, Oil		(PTO Side)	
20A	299819S	SEAL, Oil		(PTO Side)	
21	281658S	CAP, Oil Fill			
22	693732	SCREW		(Crankcase Cover/Sump) (7/8)	
51	273113S	GASKET, Intake			
51A	692283	GASKET, Intake			
51B	793883	GASKET, Intake			
163	272948S	GASKET, Air Cleaner		(Air Cleaner)	
170	691120	STUD		(Crankcase Cover/Sump)	
358	795971	GASKET SET, Engine			
883A	691880	GASKET, Exhaust		(Between Adapter And Cylinder)	
1095	498525	GASKET SET, Valve			

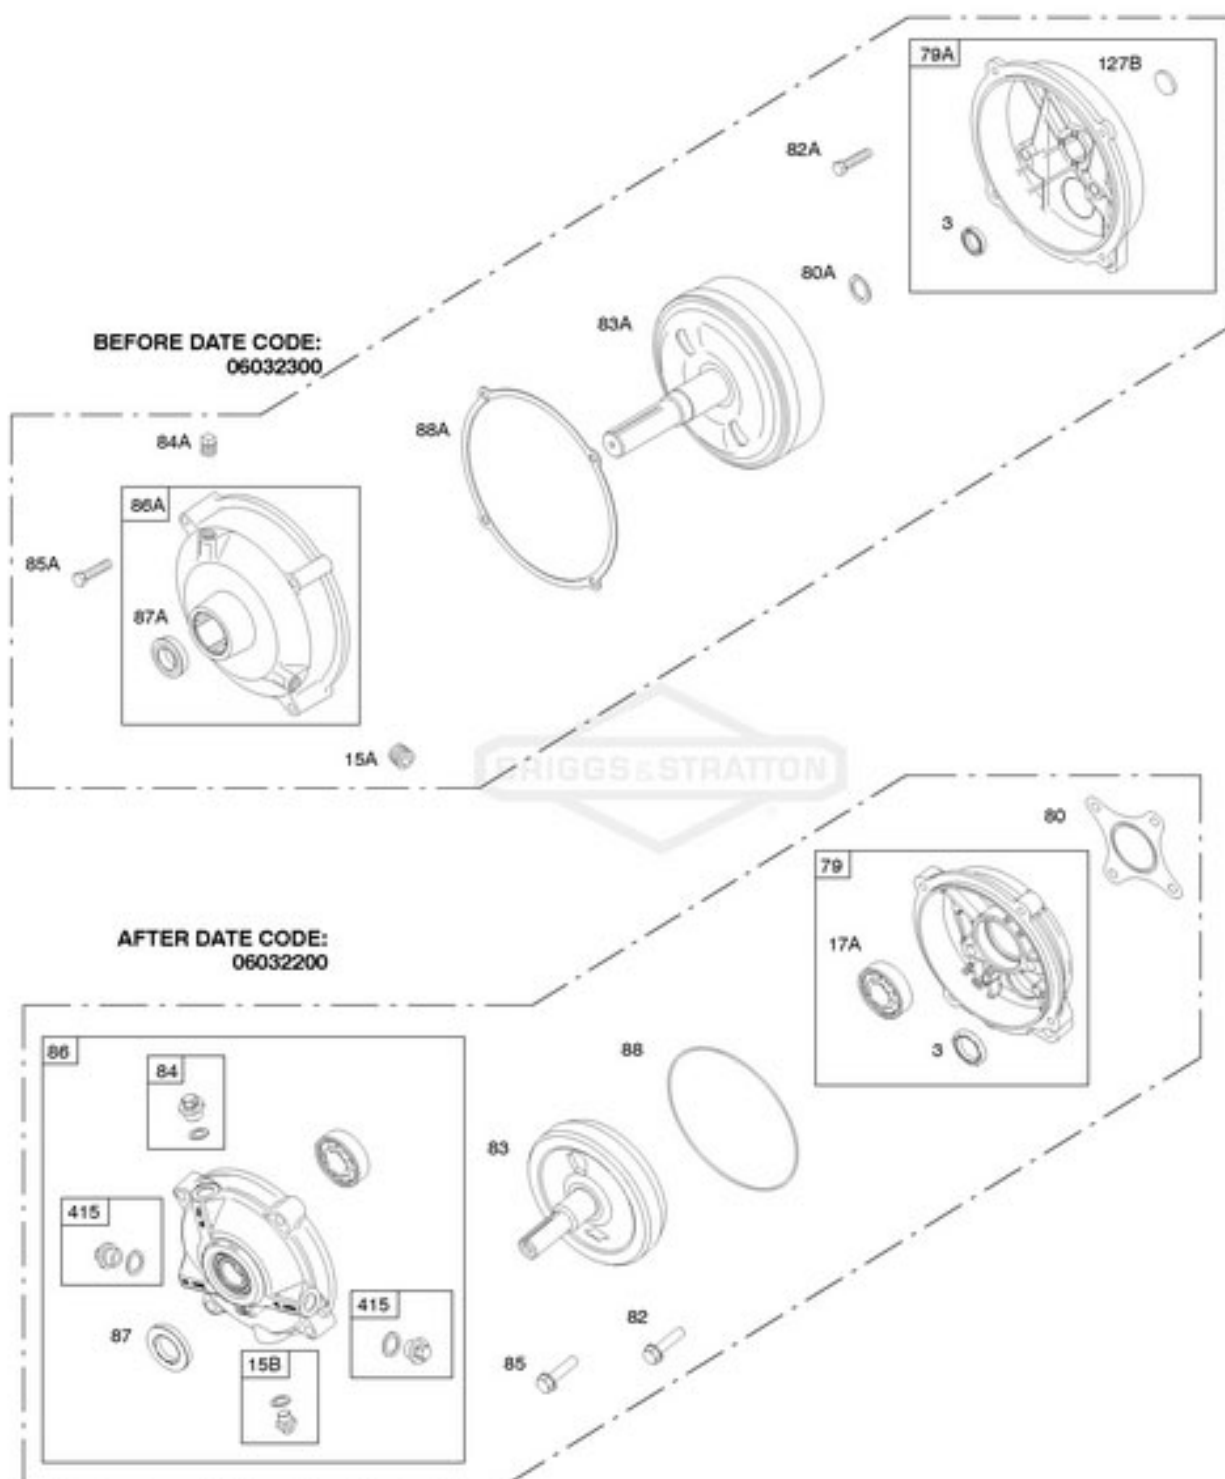

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
3	299819S	SEAL, Oil		(Magneto Side)	
15A	691682	PLUG, Oil Drain			