

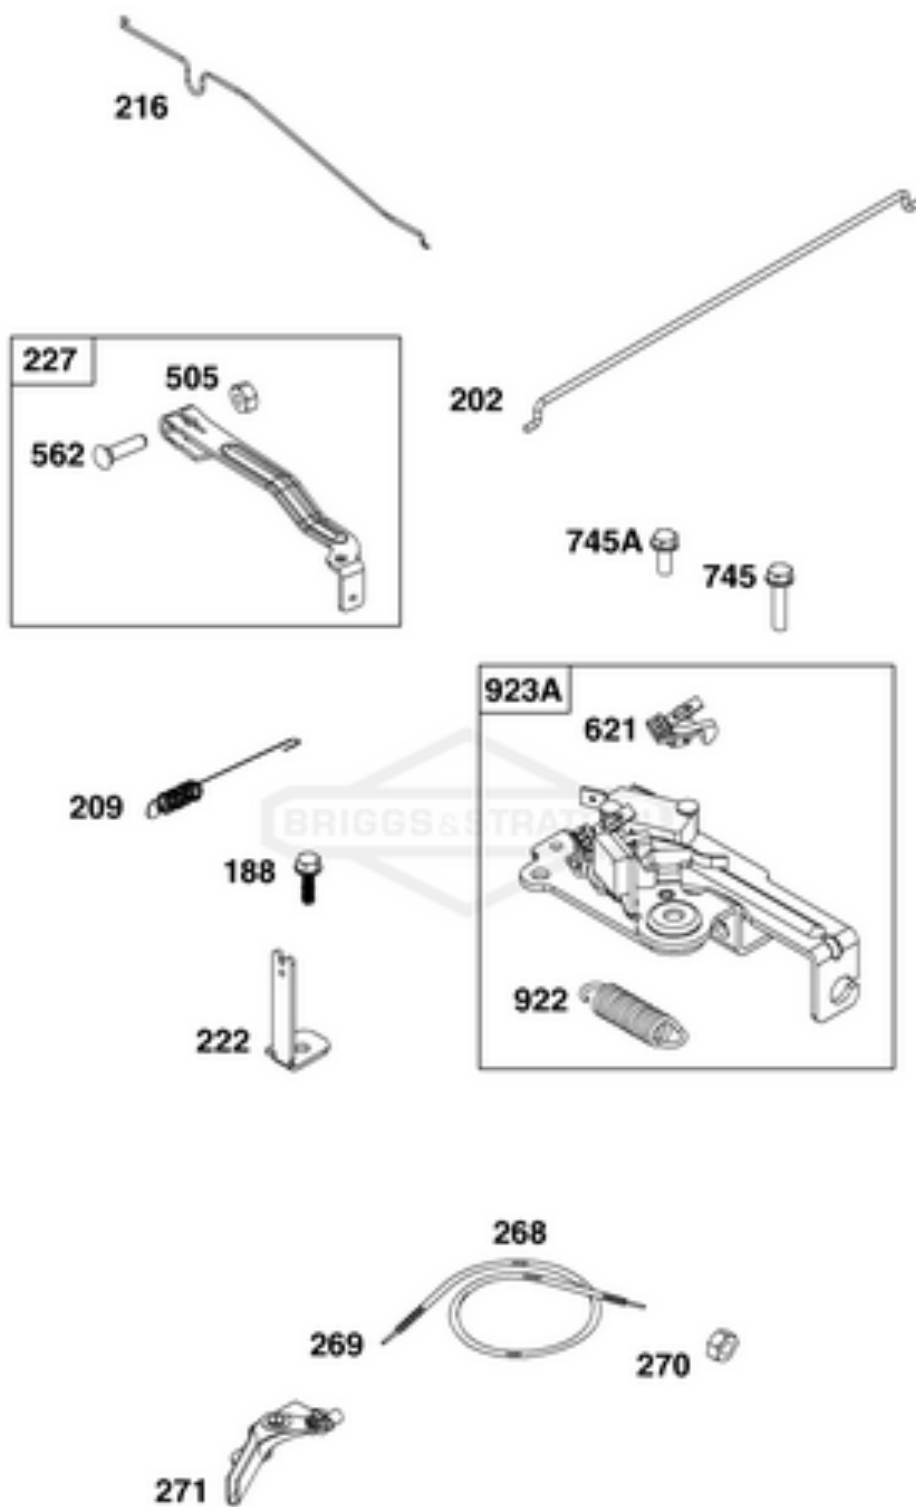


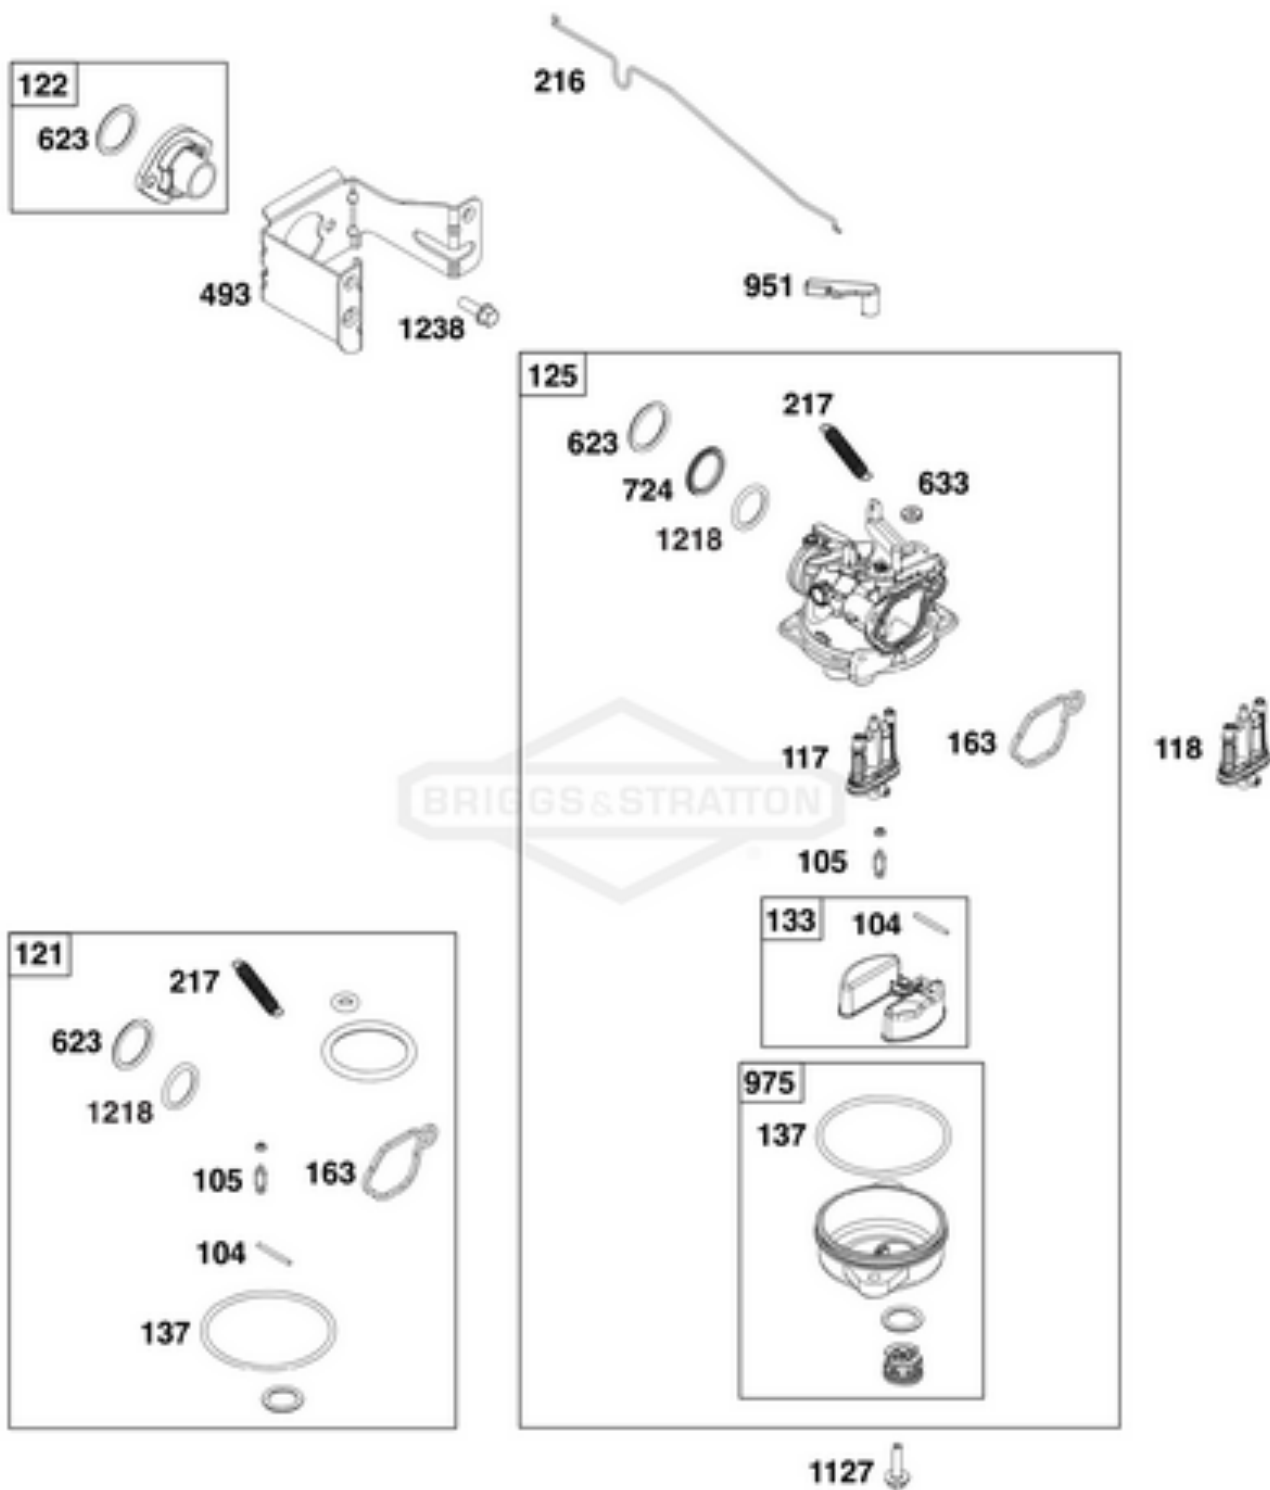


Ref #	Part #	Description	Qty	Context Note	Foot Note
188	793480	SCREW	1	(Control Bracket)	
202	590517	LINK, Mechanical Governor	1		
209	596743	SPRING, Governor	1		
216	590547	LINK, Choke	1		
222	596754	BRACKET, Control	1		
227	590520	LEVER, Governor Control	1		
268	691025	CASING, Control Wire	1		
269	691026	WIRE, Control	1		
270	691027	NUT	1	(Control Wire Casing)	
271	691028	LEVER, Control	1		
505	793515	NUT	1	(Governor Control Lever)	
562	793514	BOLT	1	(Governor Control Lever)	
621	692310	SWITCH, Stop	1		
745	691146	SCREW	1	(Brake)	
745A	690859	SCREW	1	(Brake)	
922	692135	SPRING, Brake	1		
923A	595195	BRAKE	1		

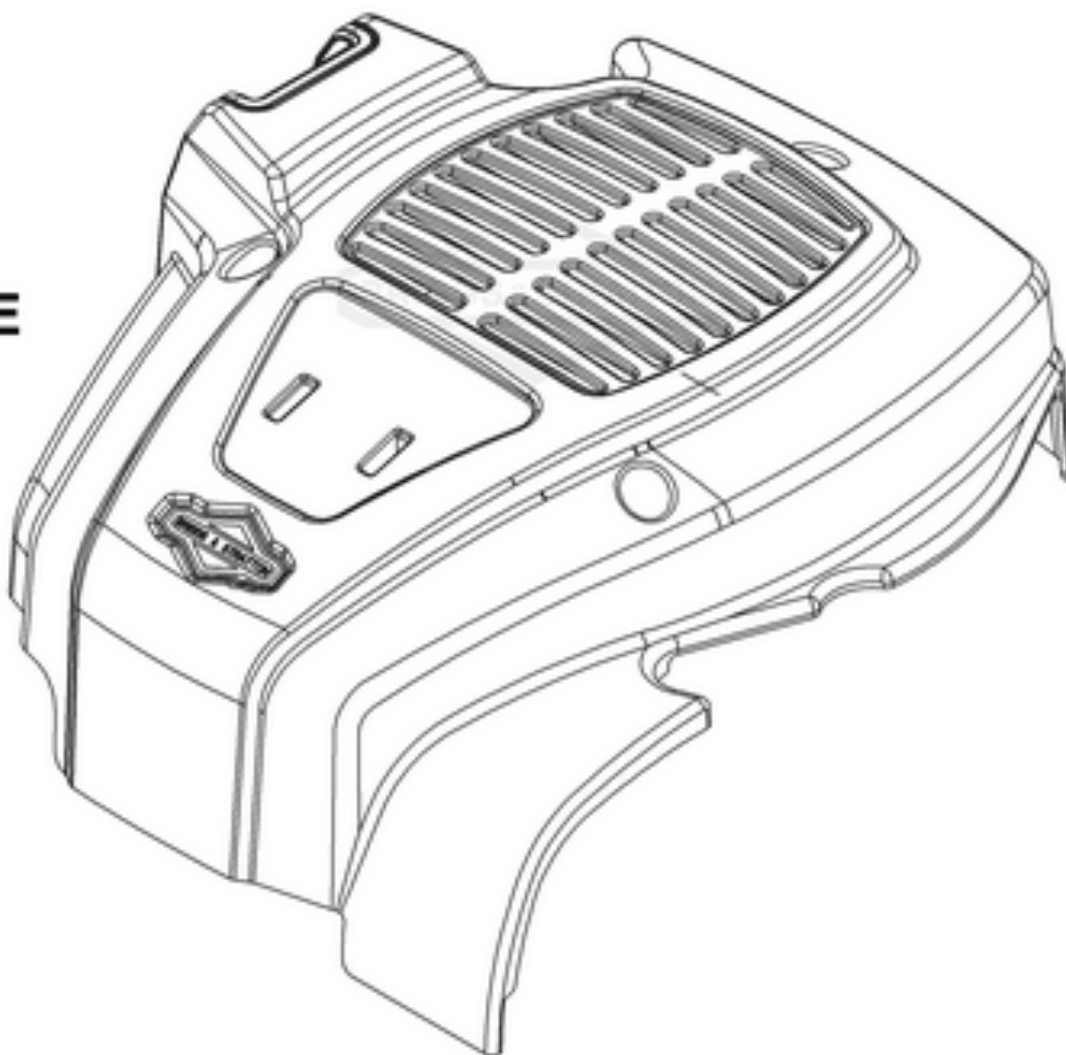

Ref #	Part #	Description	Qty	Context Note	Foot Note
104	590558	PIN, Float Hinge	1		
105	594581	VALVE, Float Needle	1		
117	84001966	JET, Main	1	(Standard)	
118	84001968	JET, Main	1	(High Altitude)	
121	594636	KIT, Carburetor Overhaul	1	(Service Kits may include extra parts not specific to this engine.)	
122	590549	SPACER, Carburetor	1		
125	84001041	CARBURETOR	1		
133	591120	FLOAT, Carburetor	1		
137	594633	GASKET, Float Bowl	1		
163	799580	GASKET, Air Cleaner	1	(Air Cleaner)	
216		LINK, Choke	1	(Part information located in Controls Group.)	
217	590740	SPRING, Choke Return	1		
493	593330	BRACKET, Mounting	1		
623	799581	SEAL, O-Ring	1	(Carburetor Spacer)	
633	84002188	SEAL, Choke/Throttle Shaft	1		
724	697478	RETAINER, Seal	1		
951	591104	LEVER, Choke	1		
975	594632	BOWL, Float	1		
1127	590554	SCREW	2	(Float Bowl to Carburetor Body)	
1218	270344S	SEAL, O-Ring	1	(Carburetor)	
1238	590562	SCREW	2	(Carburetor Spacer)	

1036**1319****1319A****305****304E**





Ref #	Part #	Description	Qty	Context Note	Foot Note
304E	84004203	HOUSING, Blower	1		
305	590586	SCREW	3	(Blower Housing)	
1036		LABEL, Emissions	1	(Available from a Briggs & Stratton Authorized Dealer)	
1319	794467	LABEL, Warning	1	(REQUIRED When Replacing Parts With Warning Labels Affixed)	
1319A	797669	LABEL, Warning	1	(REQUIRED When Replacing Parts With Warning Labels Affixed)	

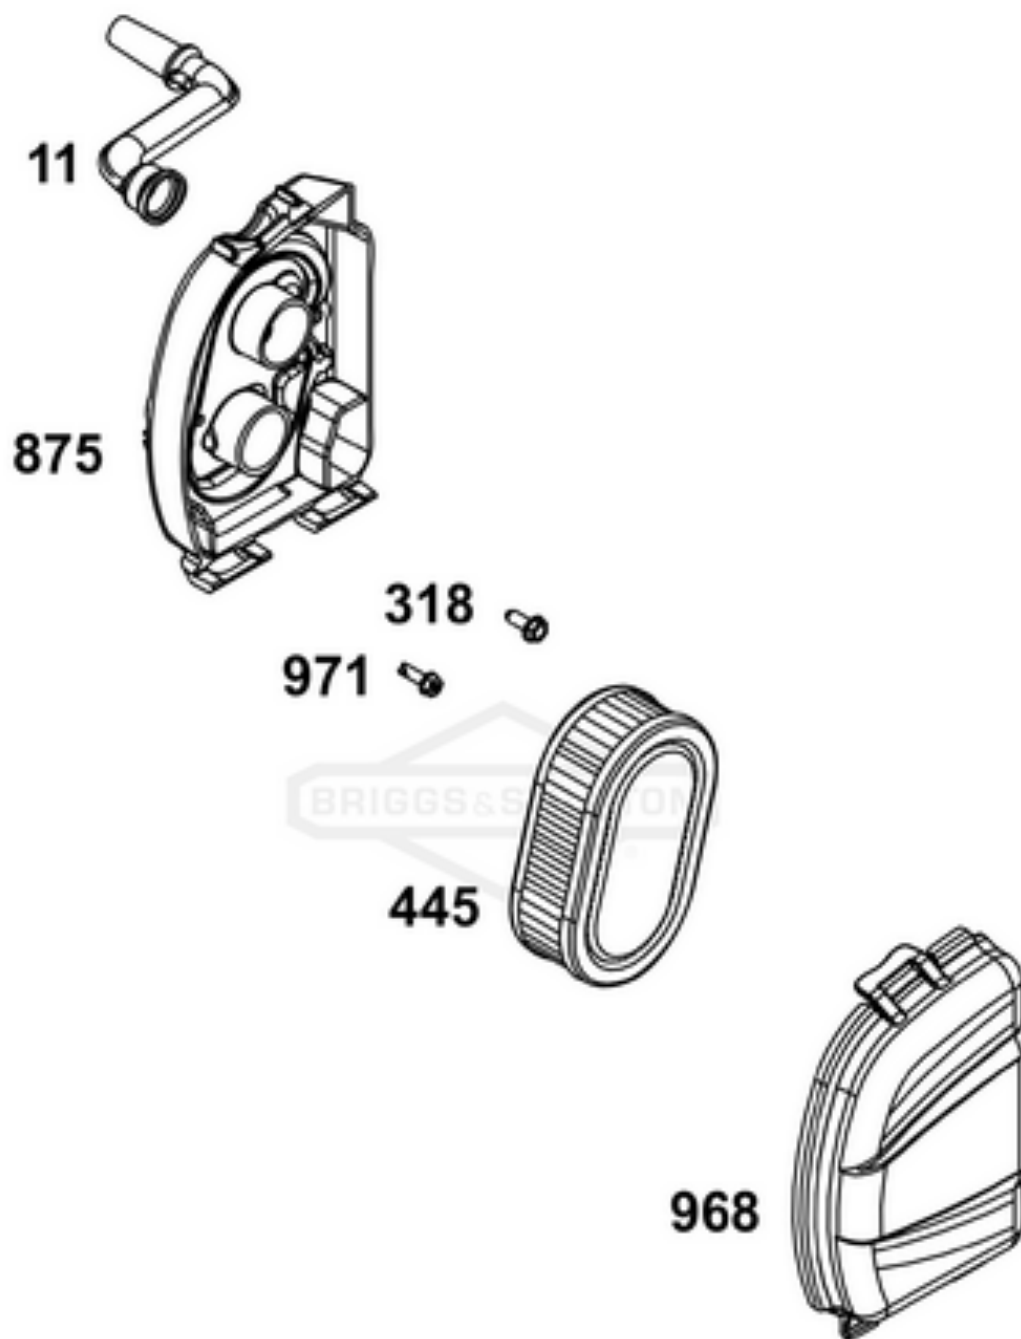


Ref #	Part #	Description	Qty	Context Note	Foot Note
11	590522	TUBE, Breather	1		
318	793480	SCREW	2	(Mounting Bracket)	
445	593260	FILTER, A/C Cartridge	1		
875	595661	BASE-AIR CLEANER	1		
968	595658	COVER, Air Cleaner	1		
971	590552	SCREW	2	(Air Cleaner Base to Carburetor/Throttle Body)	



Ref #	Part #	Description	Qty	Context Note	Foot Note
16	590537	CRANKSHAFT	1		
24	222698S	KEY, Flywheel	1		
25	590521	PISTON ASSEMBLY	1		
26	590523	SET, Ring	1		
27	691588	LOCK, Piston Pin	1		
28	699659	PIN, Piston	1		
29	590518	ROD, Connecting	1		
32	691664	SCREW	2	(Connecting Rod)	
46	592968	CAMSHAFT	1		
598	593291	SHIM, End Play	1	(Crankshaft or Camshaft Bearing)	
741	796210	GEAR, Timing	1		

 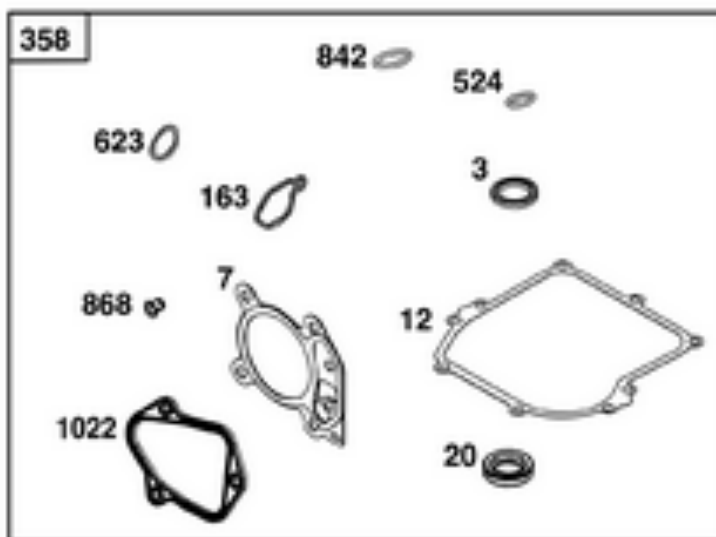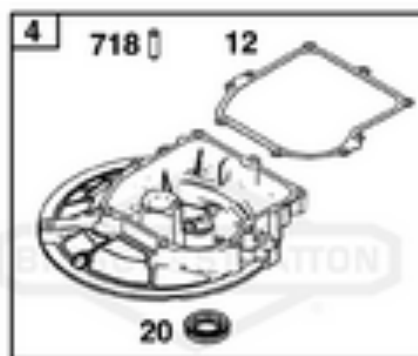
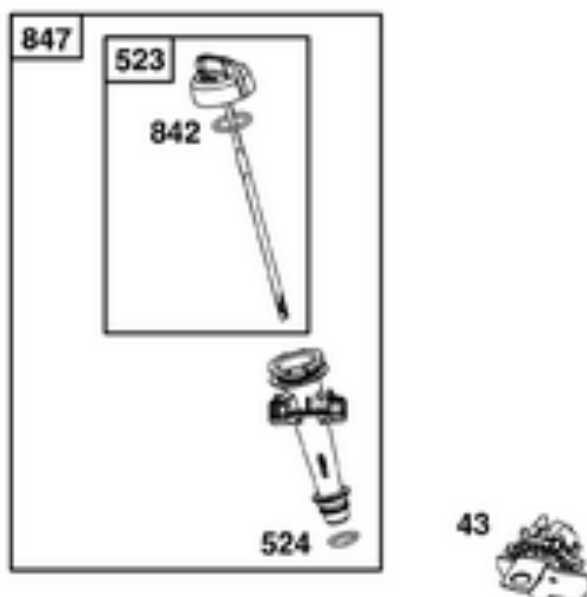


Ref #	Part #	Description	Qty	Context Note	Foot Note
3		SEAL, Oil	1	(Part information located in Cylinder Group.)	
4	84002141	BASE, ENGINE	1		
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
12	799587	GASKET, Crankcase	1		
20	391483S	SEAL, Oil	1	(PTO Side)	
22	692551	SCREW	6	(Crankcase Cover/Sump)	
22A	590763	SCREW	1	(Crankcase Cover/Sump)	
43	594560	SLINGER, Governor/Oil	1		
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
358	84001272	GASKET SET, Engine	1	(Service Kits may include extra parts not specific to this engine.)	
523	796503	DIPSTICK	1		
524	691876	SEAL, O-Ring	1	(Dipstick Tube)	
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
718	690959	PIN, Locating	2		
842	691031	SEAL, O-Ring	1	(Dipstick Cap)	
847	590572	DIPSTICK/TUBE ASSEMBLY	1		
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
1022		GASKET, Rocker Cover	1	(Part information located in Cylinder Head Group.)	

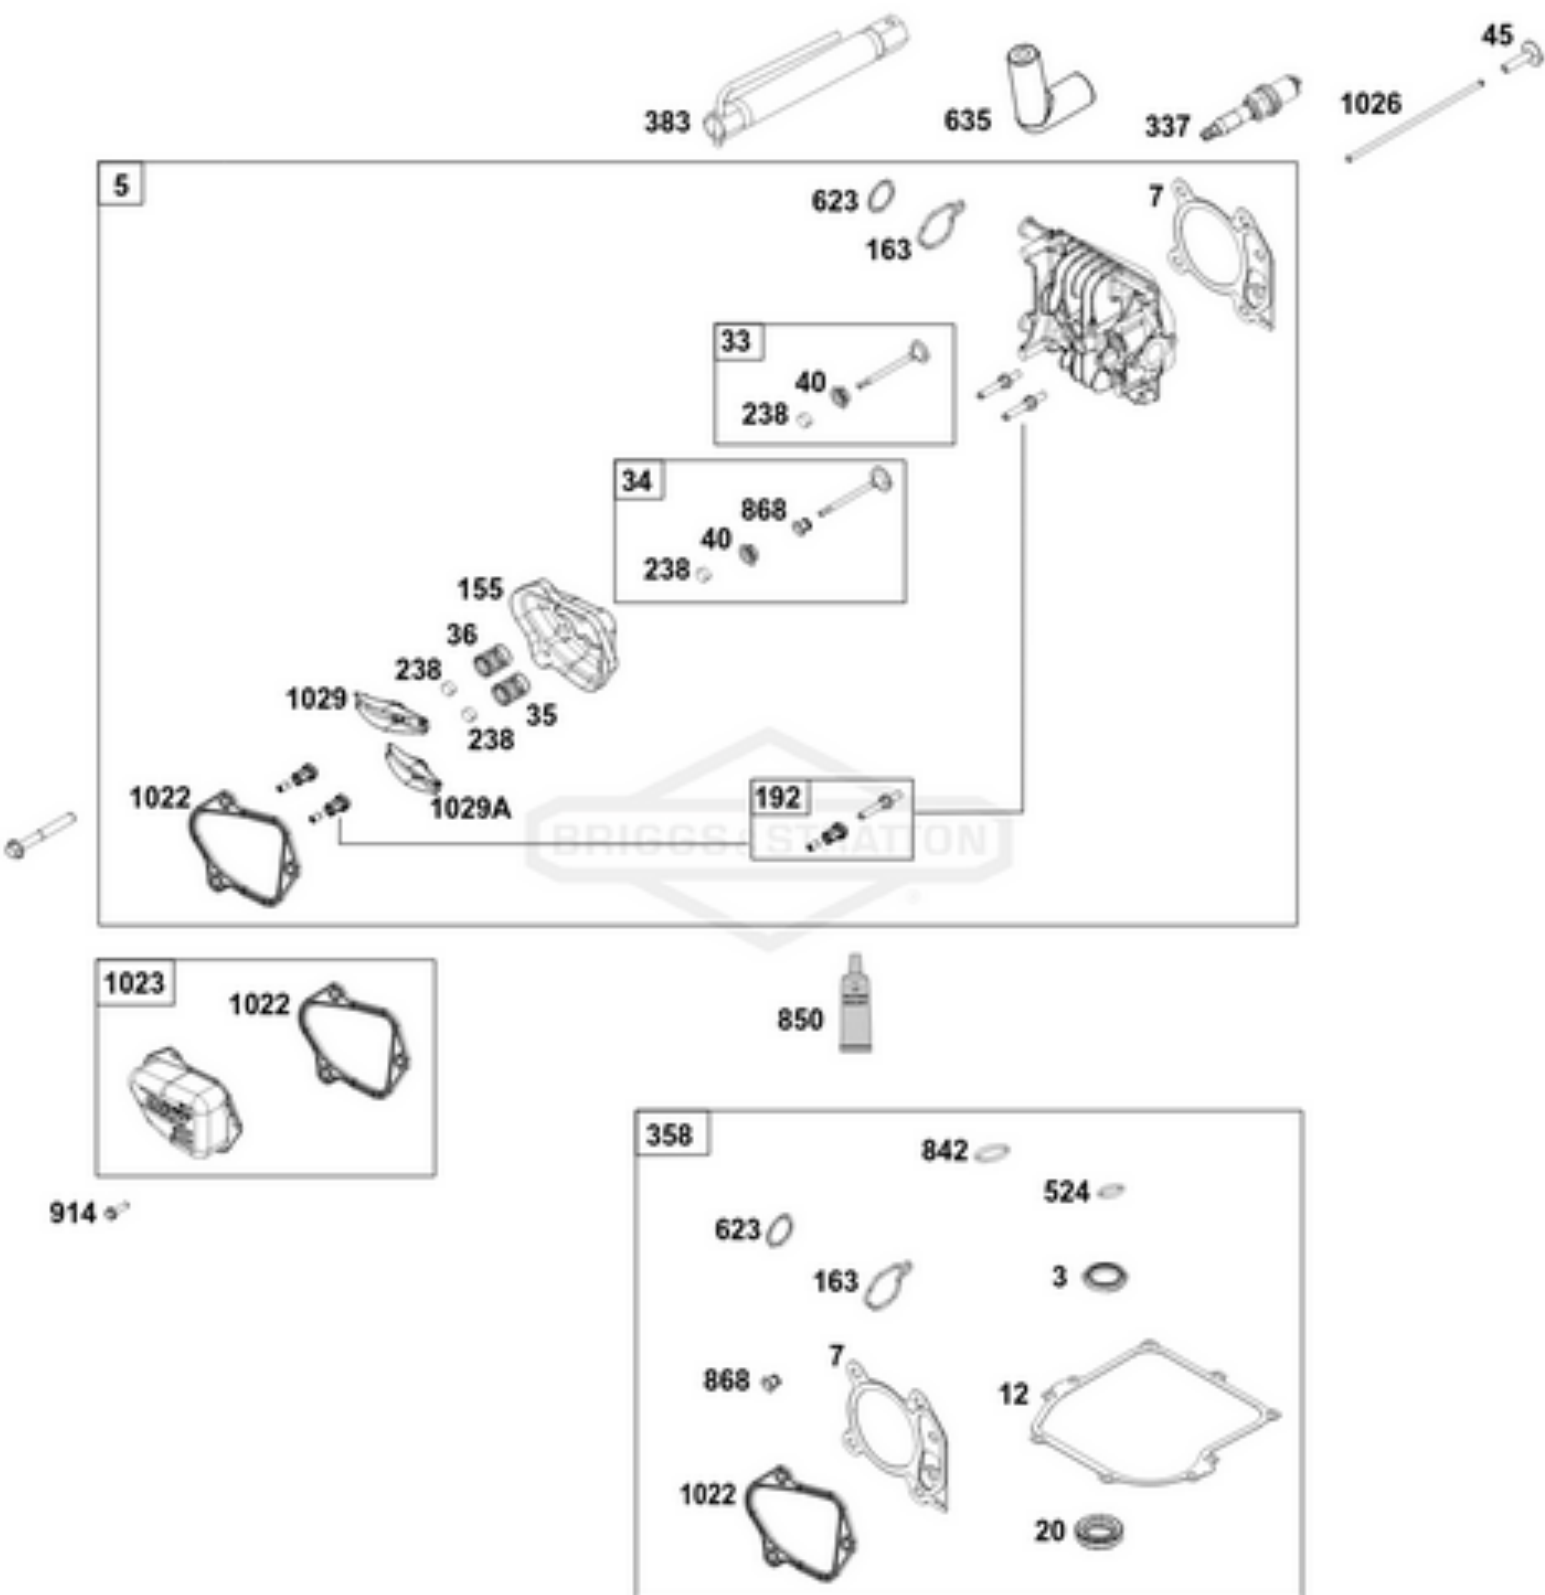


Ref #	Part #	Description	Qty	Context Note	Foot Note
3		SEAL, Oil	1	(Part information located in Cylinder Group.)	
5	84001270	HEAD, Cylinder	1		
7	799586	GASKET, Cylinder Head	1		
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
13	590512	SCREW	4	(Cylinder Head)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
33	590531	VALVE, Exhaust	1		
34	590530	VALVE, Intake	1		
35	590532	SPRING, Valve	1	(Intake)	
36	590532	SPRING, Valve	1	(Exhaust)	
40	590528	RETAINER, Valve	2		
45	590514	TAPPET, Valve	2		
155	590529	PLATE, Cylinder Head	1		
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
192	590535	ADJUSTER, Rocker Arm	2		
238	590533	CAP, Valve	2		
337	797434	PLUG, Spark	1		
358		GASKET SET, Engine	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
383	19576S	WRENCH, Spark Plug	1		
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
635	692076	BOOT, Spark Plug	1		
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850		SEALANT, Liquid	1	(Part information located in Cylinder Group.)	
868	84001271	SEAL, Valve	1		
914	591103	SCREW	3	(Rocker Cover)	
1022	595341	GASKET, Rocker Cover	1		
1023	590513	COVER, Rocker	1		
1026	590515	ROD, Push	2		

Ref #	Part #	Description	Qty	Context Note	Foot Note
1029	590526	ARM, Rocker	1		
1029A	590527	ARM, Rocker	1		

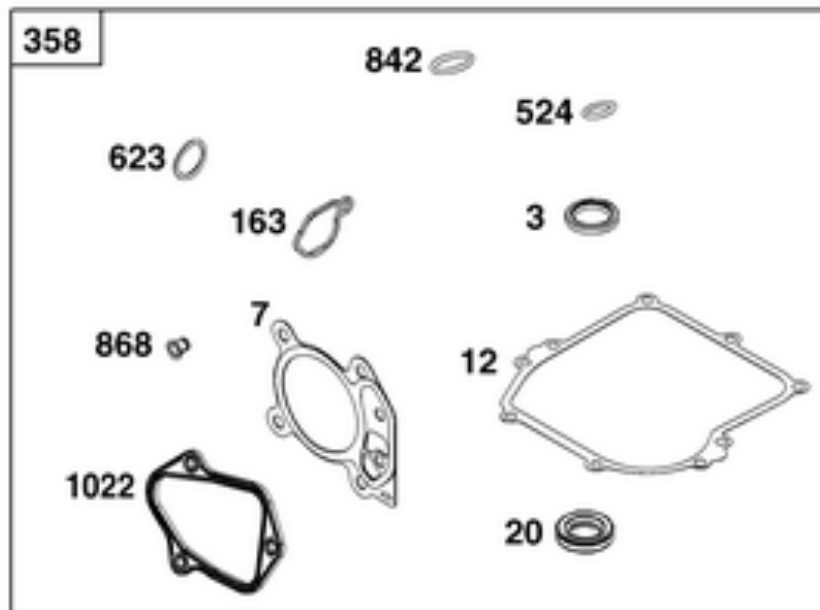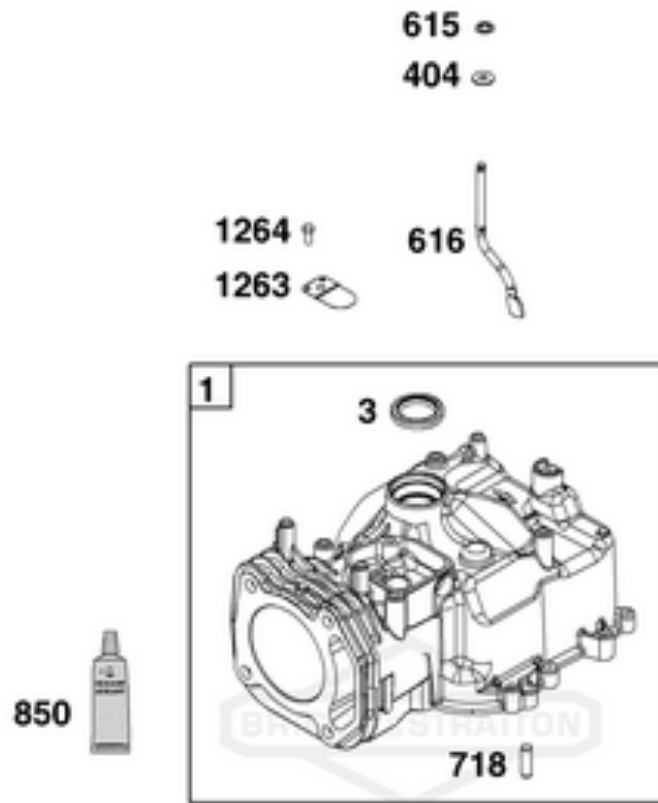


Ref #	Part #	Description	Qty	Context Note	Foot Note
1	84004586	CYLINDER ASSEMBLY	1		
3	299819S	SEAL, Oil	1	(Magneto Side)	
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
358		GASKET SET, Engine	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
404	690272	WASHER	1	(Governor Crank)	
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
615	690340	RETAINER, Governor Shaft	1		
616	590516	CRANK, Governor	1		
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
718	690959	PIN, Locating	2		
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850	100106	SEALANT, Liquid	1		
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
1022		GASKET, Rocker Cover	1	(Part information located in Cylinder Head Group.)	
1263	697124	REED, Breather	1		
1264	793453	SCREW	1	(Breather Reed)	

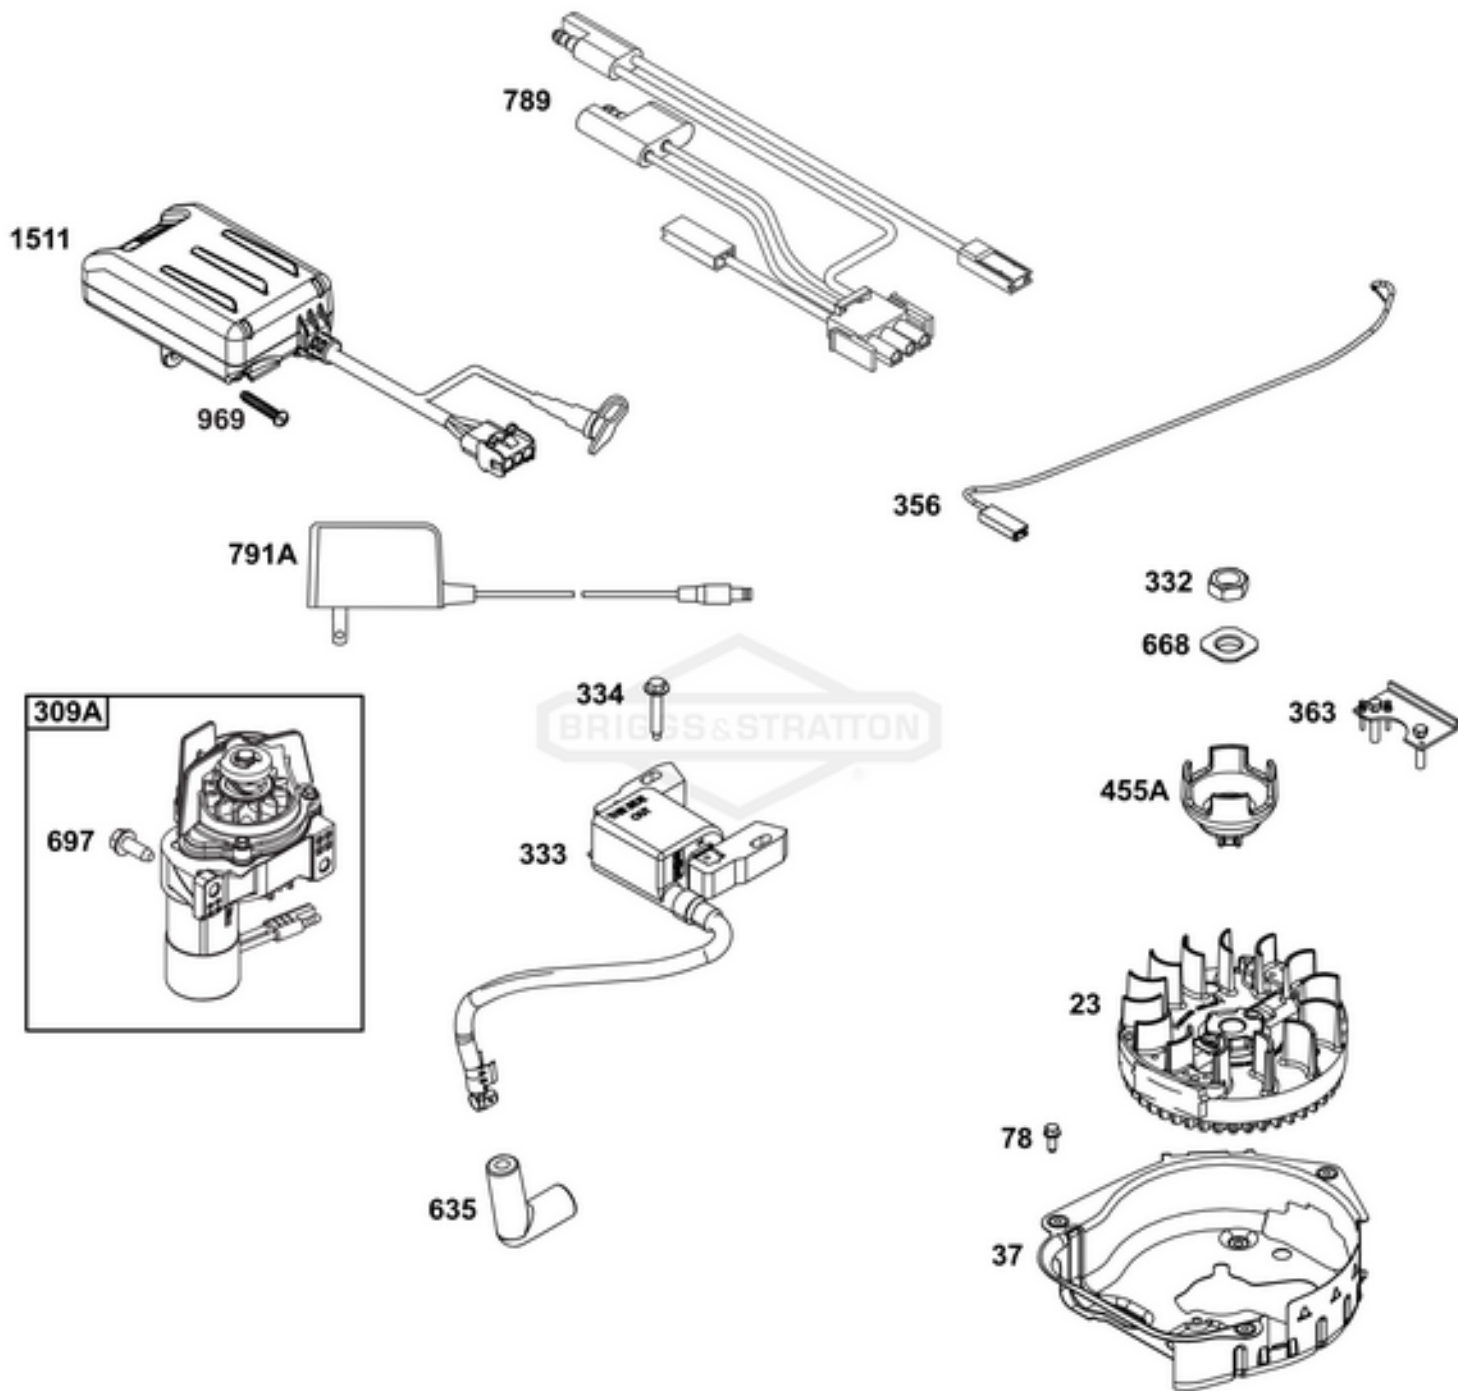


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	596753	FLYWHEEL	1		
37	596757	GUARD, Flywheel	1		
78	793480	SCREW	5	(Flywheel Guard)	
309A	84002163	MOTOR, Starter	1		
332	690662	NUT	1	(Flywheel)	
333	593872	ARMATURE, Magneto	1		
334	691061	SCREW	2	(Magneto Armature)	
356	84002396	WIRE, Stop	1		
363	19619	PULLER, Flywheel	1		
363	19619	PULLER, Flywheel	1		
455A	593960	CUP, Flywheel	1		
635		BOOT, Spark Plug	1	(Part information located in Cylinder Head Group.)	
668	590546	SPACER	1		
697	691127	SCREW	1	(Starter Motor) (Drive Cap)	
789	84004139	HARNESS, Wiring	1		
791A	84002790	CHARGER, Battery	1	(InStart)(North America)	
791A	84002791	CHARGER, Battery	1	(InStart)(United Kingdom)	
791A	84002792	CHARGER, Battery	1	(InStart)(Europe)	
791A	84002793	CHARGER, Battery	1	(InStart)(Australia)	
969	594115	SCREW	2	(Blower Housing Cover)	
1511	84002154	BATTERY	1	(InStart)(North America/United Kingdom/Europe/Australia)	

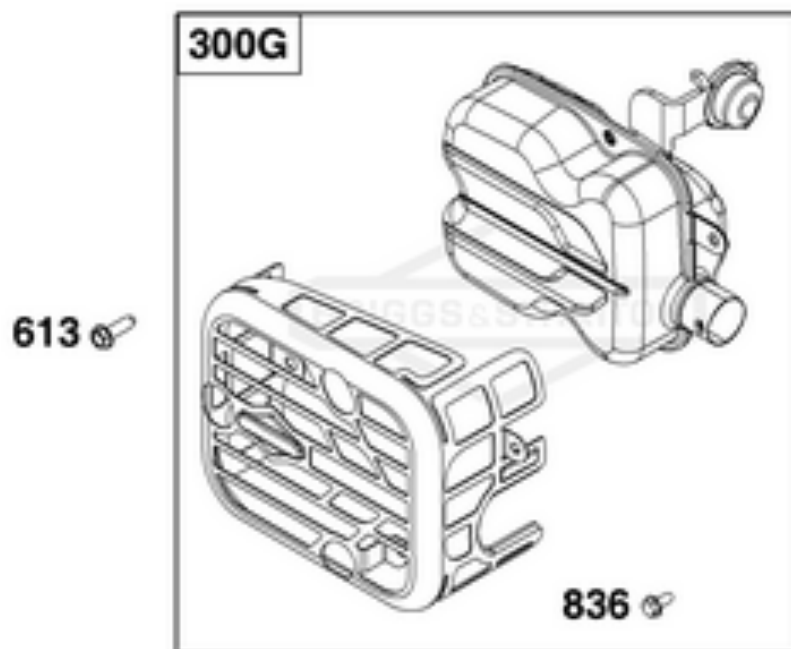

Ref #	Part #	Description	Qty	Context Note	Foot Note
300G	595516	MUFFLER	1		
613	590562	SCREW	2	(Muffler)	
836	690661	SCREW	3	(Muffler Guard)	

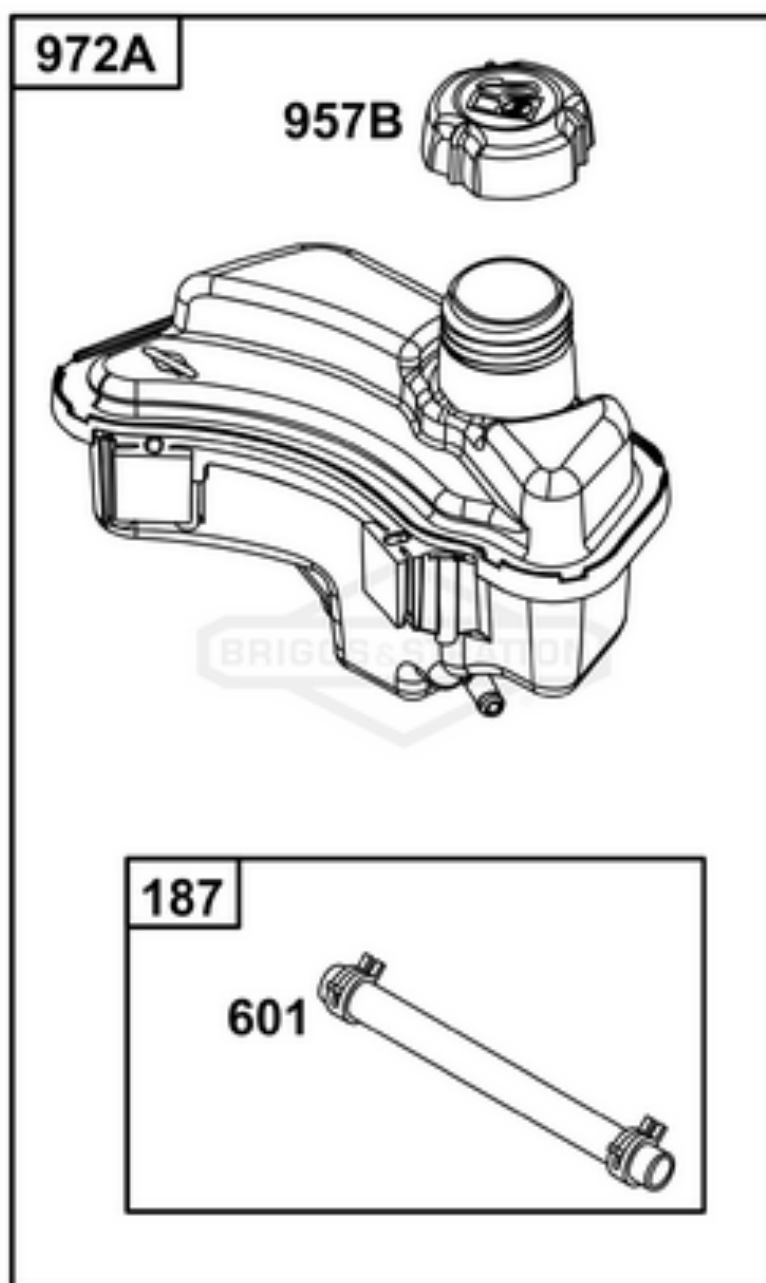

Ref #	Part #	Description	Qty	Context	Note	Foot	Note
187	791766	LINE, Fuel	1				
601	791850	CLAMP, Hose	2				
957B	692046	CAP, Fuel Tank	1				
972A	591947	TANK, Fuel	1				