


957B



972A

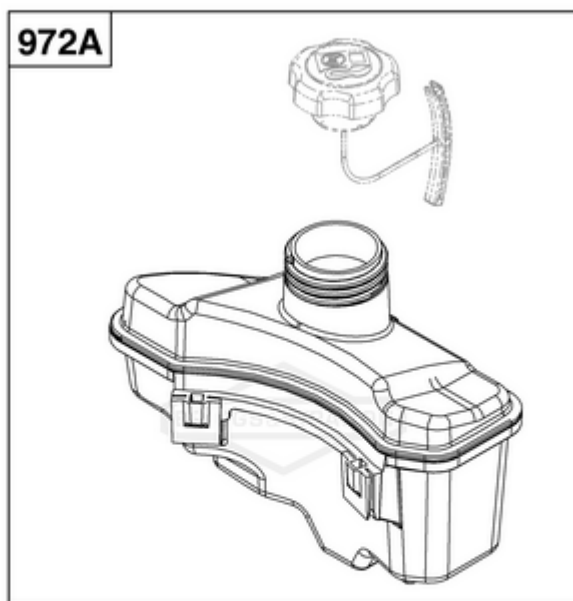


187

601




Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context	Note	Foot	Note
187	791766	LINE, Fuel	1				
601	791850	CLAMP-HOSE	2				
957B	596472	CAP, Fuel Tank	1				
972A	596207	TANK, Fuel	1				

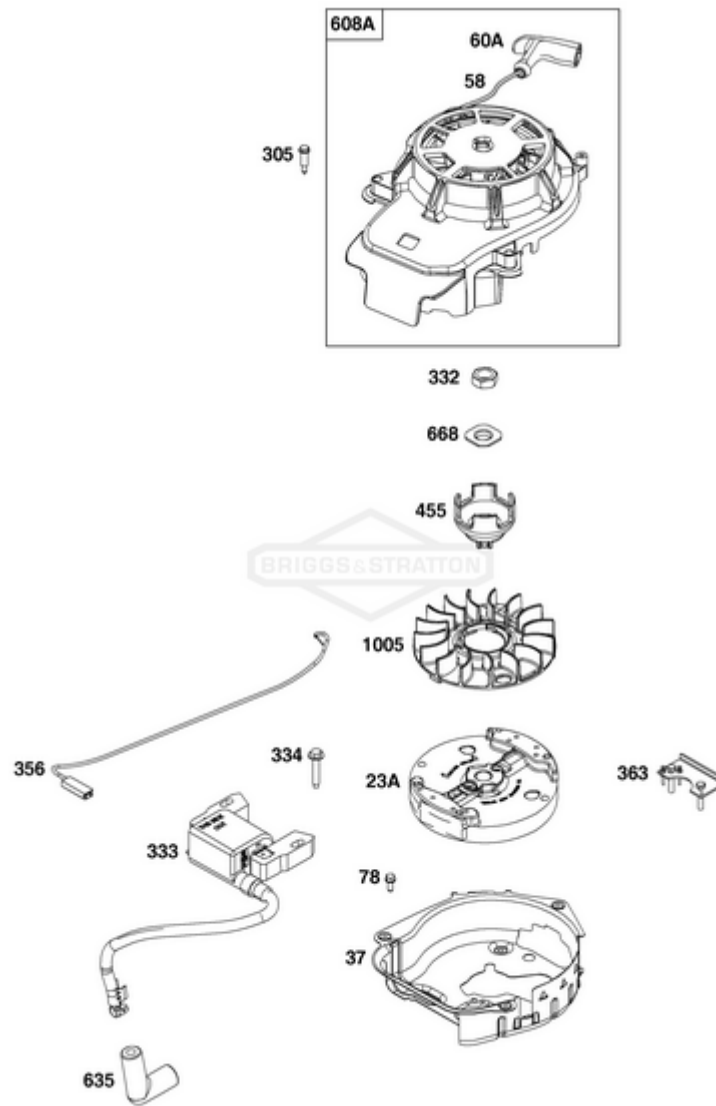



Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23A	594054	FLYWHEEL	1		
37	594103	GUARD, Flywheel	1		
58	591108	ROPE, Starter	1		
60A	281434S	GRIP, Starter Rope	1		
78	793480	SCREW	5	(Flywheel Guard)	
305	590586	SCREW	3	(Blower Housing)	
332	690662	NUT	1	(Flywheel)	
333	595009	ARMATURE, Magneto	1		
334	691061	SCREW	2	(Magneto Armature)	
356	595018	WIRE, Stop	1		
363	19619	PULLER, Flywheel	1		
455	593960	CUP, Flywheel	1		
608A	594062	STARTER, Rewind	1		
635	692076	BOOT, Spark Plug	1		
668	590546	SPACER	1		
1005	594102	FAN, Flywheel	1		

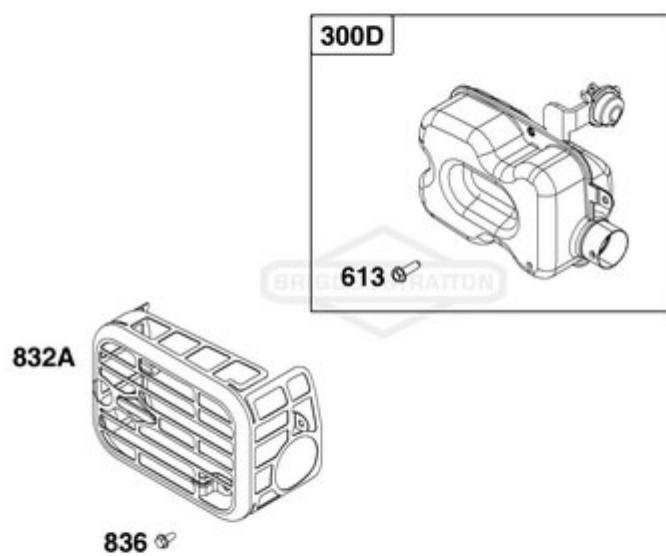



Copyright © Briggs & Stratton, U.S.C. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
300D	594108	MUFFLER	1		
613	590562	SCREW	2	(Muffler)	
832A	594109	GUARD, Muffler	1		
836	690661	SCREW	3	(Muffler Guard)	

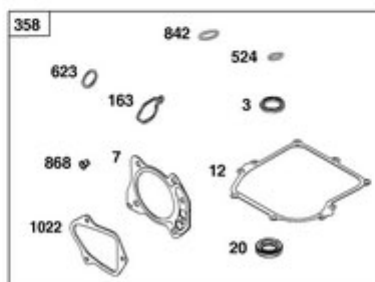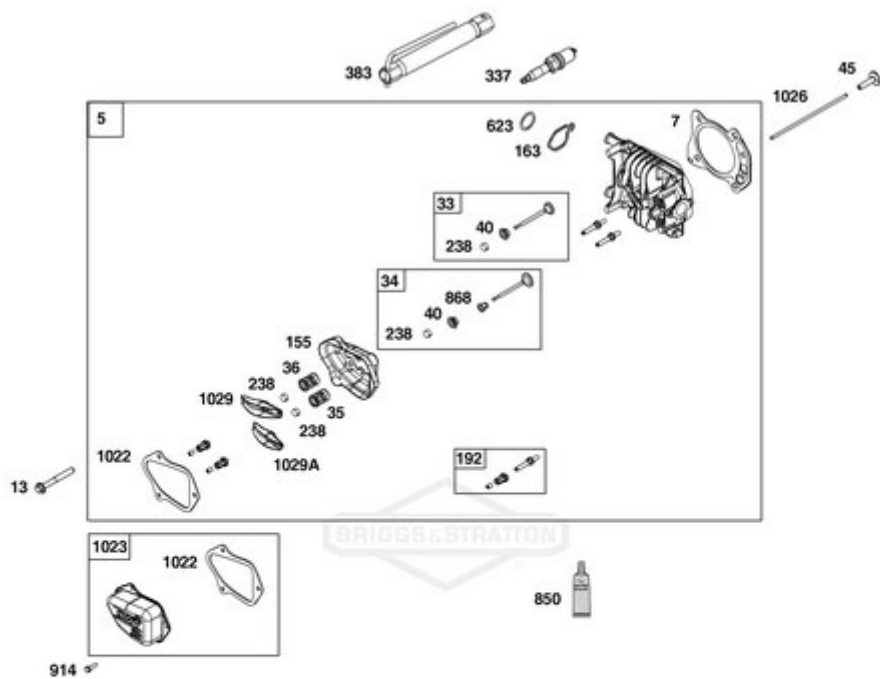


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
3		SEAL, Oil	1	(Part information located in Cylinder Group.)	
5	595353	HEAD, Cylinder	1		
7	592358	GASKET, Cylinder Head	1		
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
13	590512	SCREW	4	(Cylinder Head)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
33	594095	VALVE, Exhaust	1		
34	594094	VALVE, Intake	1		
35	590532	SPRING, Valve	1	(Intake)	
36	590532	SPRING, Valve	1	(Exhaust)	
40	594092	RETAINER, Valve	2		
45	590514	TAPPET, Valve	2		
155	594093	PLATE, Cylinder Head	1		
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
192	590535	ADJUSTER, Rocker Arm	2		
238	594097	CAP, Valve	2		
337	491055S	PLUG-SPARK	1		
358		GASKET SET, Engine	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
383	19576S	WRENCH, Spark Plug	1		
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850	100106	SEALANT, Liquid	1		
868	594096	SEAL, Valve	1		
914	591103	SCREW	3	(Rocker Cover)	
1022	595342	GASKET, Rocker Cover	1		
1023	595352	COVER, Rocker	1		
1026	590515	ROD, Push	2		
1029	590526	ARM, Rocker	1		
1029A	590527	ARM, Rocker	1		

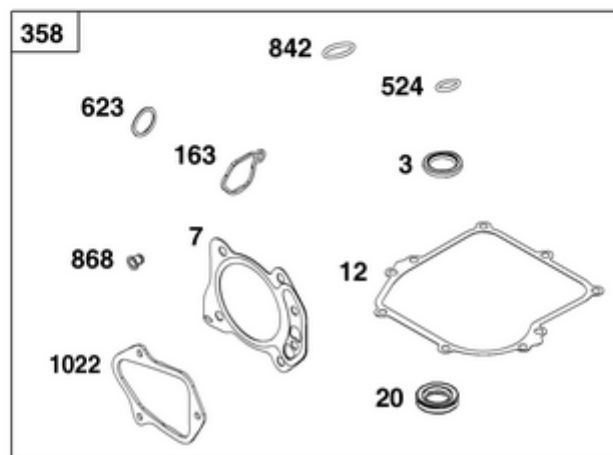
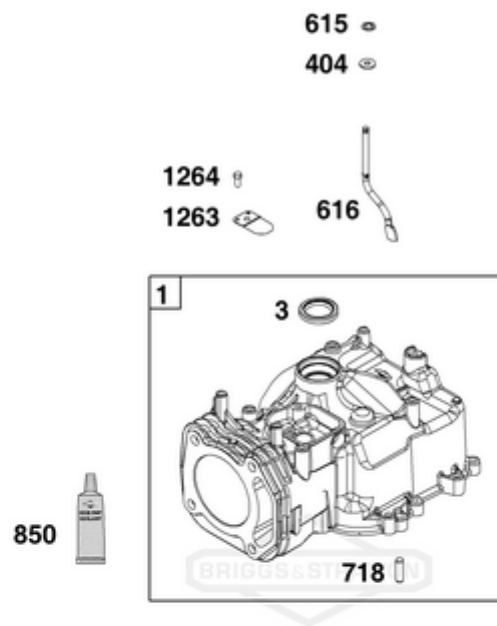


Ref #	Part #	Description	Qty	Context Note	Foot Note
1	594100	CYLINDER ASSEMBLY	1		
3	299819S	SEAL-OIL	1	(Magneto Side)	
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
358		GASKET SET, Engine	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
404	690272	WASHER	1	(Governor Crank)	
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
615	690340	RETAINER, Governor Shaft	1		
616	590516	CRANK, Governor	1		
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
718		PIN, Locating	2	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850		SEALANT, Liquid	1	(Part information located in Cylinder Head Group.)	
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
1022		GASKET, Rocker Cover	1	(Part information located in Cylinder Head Group.)	
1263	697124	REED, Breather	1		
1264	793453	SCREW	1	(Breather Reed)	

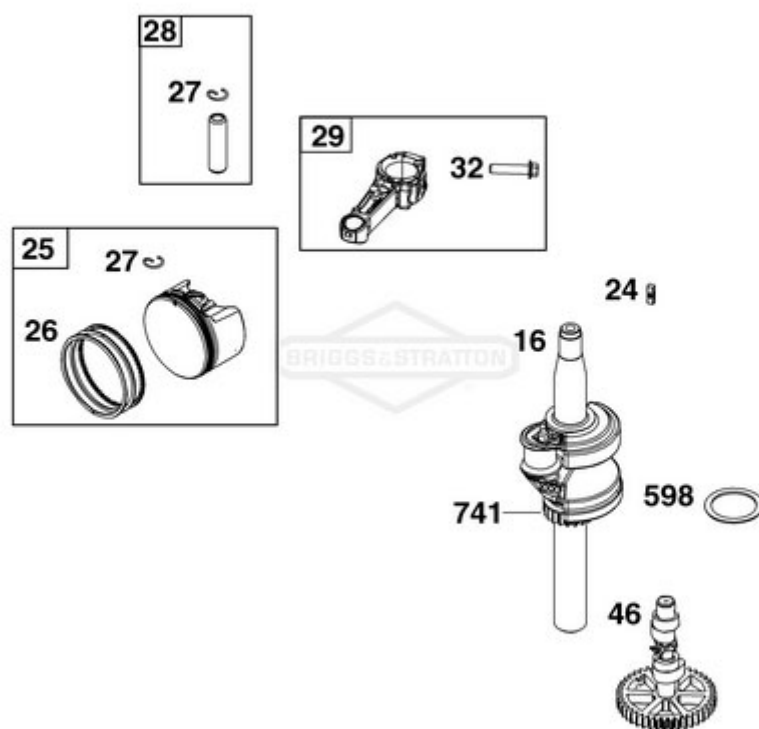


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
16	595241	CRANKSHAFT	1		
24	222698S	KEY, Flywheel	1		
25	594099	PISTON ASSEMBLY	1		
26	594098	SET, Ring	1		
27	691588	LOCK, Piston Pin	1		
28	298909	PIN-PISTON/STD	1		
29	594089	ROD, Connecting	1		
32	691664	SCREW	2	(Connecting Rod)	
46	594090	CAMSHAFT	1		
598	592587	SHIM, End Play	1	(Crankshaft or Camshaft Bearing)	
741	594105	GEAR, Timing	1		

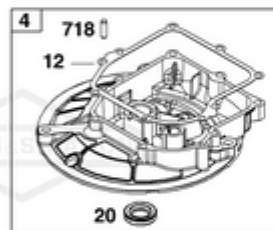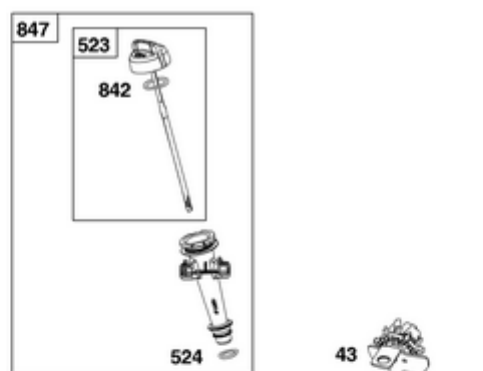


22A

22

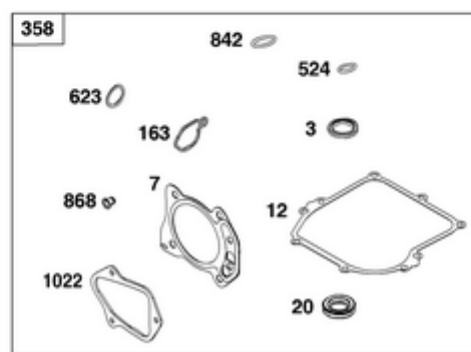


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
3		SEAL, Oil	1	(Part information located in Cylinder Group.)	
4	594101	SUMP, Engine	1		
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
12	799587	GASKET, Crankcase	1		
20	399781S	SEAL-OIL	1	(PTO Side)	
22	692551	SCREW	6	(Crankcase Cover/Sump)	
22A	590763	SCREW	1	(Crankcase Cover/Sump)	
43	594560	SLINGER, Governor/Oil	1		
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
358	595354	GASKET SET, Engine	1	(Service Kits may include extra parts not specific to this engine.)	
523	796503	DIPSTICK	1		
524	691876	SEAL-O RING	1	(Dipstick Tube)	
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
718	690959	PIN, Locating	2		
842	691031	SEAL, O-Ring	1	(Dipstick Cap)	
847	596092	DIPSTICK/TUBE ASSEMBLY	1		
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
1022		GASKET, Rocker Cover	1	(Part information located in Cylinder Head Group.)	

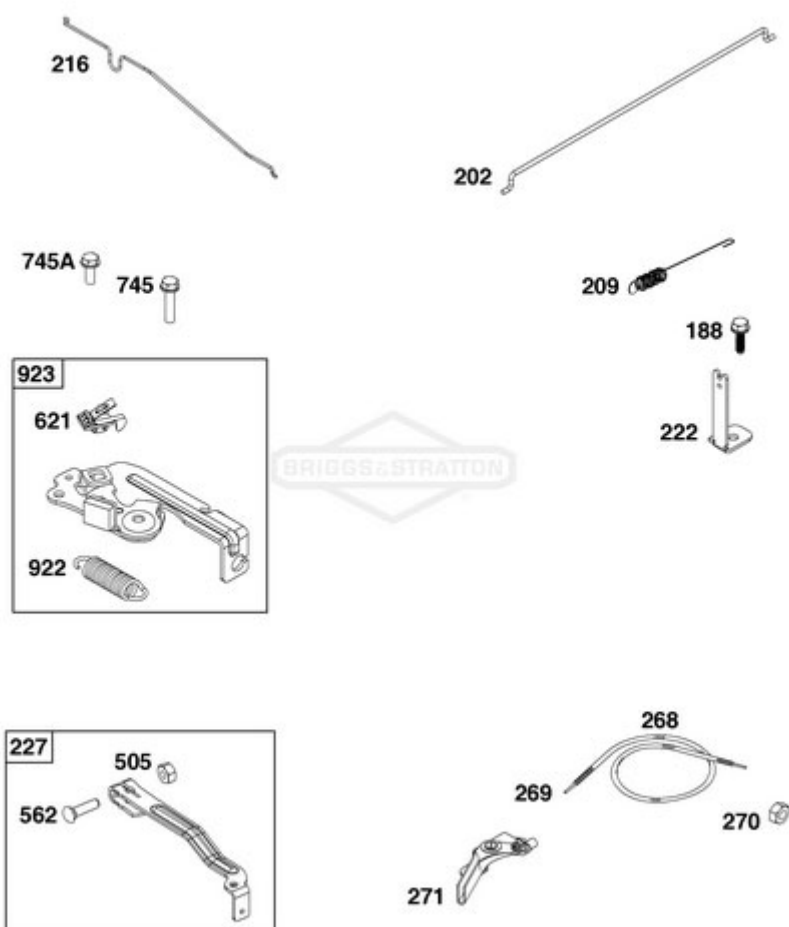

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	793480	SCREW	1	(Control Bracket)	
202	590517	LINK, Mechanical Governor	1		
209	596464	SPRING-GOVERNOR	1		
216	590547	LINK, Choke	1		
222	596754	BRACKET, Control	1		
227	590520	LEVER, Governor Control	1		
268	691025	CASING, Control Wire	1		
269	691026	WIRE, Control	1		
270	691027	NUT	1	(Control Wire Casing)	
271	691028	LEVER, Control	1		
505	793515	NUT	1	(Governor Control Lever)	
562	793514	BOLT	1	(Governor Lever)	
621	692310	SWITCH, Stop	1		
745	691146	SCREW	1	(Brake)	
745A	690859	SCREW	1	(Brake)	
922	692135	SPRING, Brake	1		
923	691487	BRAKE	1		

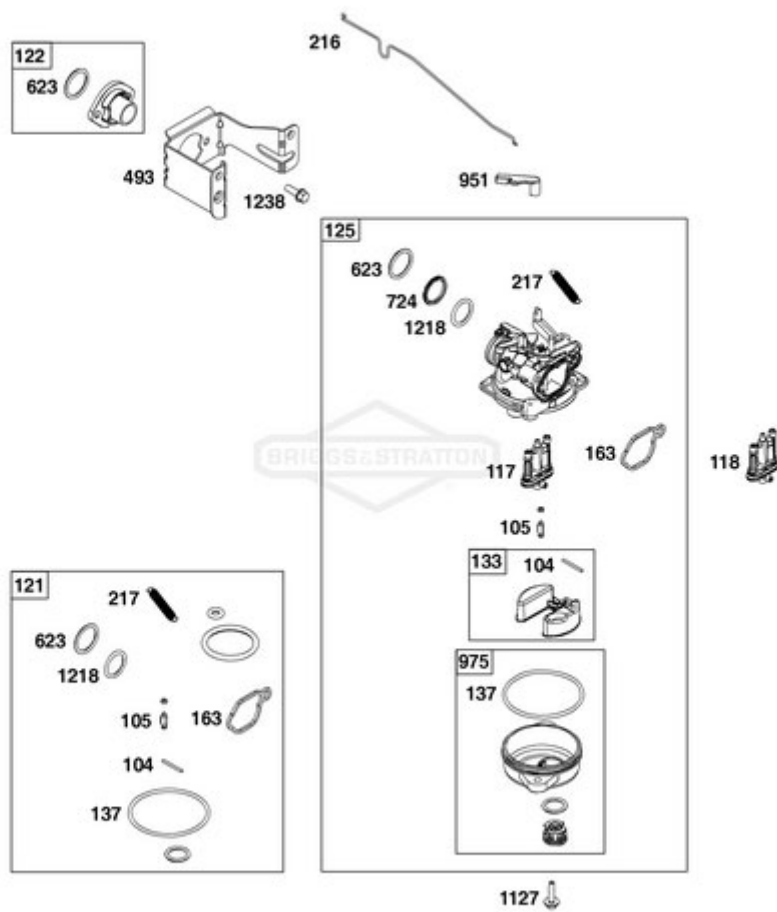

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
104	590558	PIN, Float Hinge	1		
105	594581	VALVE, Float Needle	1		
117	84001923	JET, Main	1	(Standard)	
118	84002024	JET, Main	1	(High Altitude)	
121	594636	KIT, Carburetor Overhaul	1	(Service Kits may include extra parts not specific to this engine.)	
122	590549	SPACER, Carburetor	1		
125	84001033	CARBURETOR	1		
133	591120	FLOAT, Carburetor	1		
137	594633	GASKET, Float Bowl	1		
163	799580	GASKET, Air Cleaner	1	(Air Cleaner)	
216		LINK, Choke	1	(Part information located in Controls Group.)	
217	590740	SPRING, Choke Return	1		
493	593330	BRACKET, Mounting	1		
623	799581	SEAL, O-Ring	1	(Carburetor Spacer)	
724	697478	RETAINER, Seal	1		
951	591104	LEVER, Choke	1		
975	594632	BOWL, Float	1		
1127	590554	SCREW	2	(Float Bowl to Carburetor Body)	
1218	270344S	SEAL, O-Ring	1	(Carburetor)	
1238	590562	SCREW	2	(Carburetor Spacer)	

969 

1036 


1319 

1319A 

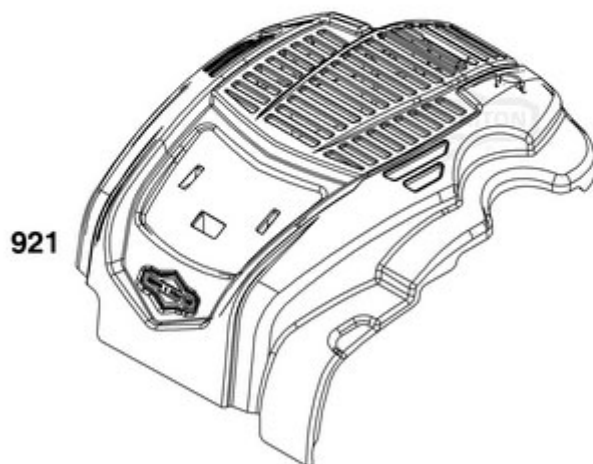

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1036		LABEL, Emissions	1	(Available from a Briggs & Stratton Authorized Dealer)	
1319	794467	LABEL, Warning	1	(REQUIRED When Replacing Parts With Warning Labels Affixed)	
1319A	797669	LABEL, Warning	1	(REQUIRED When Replacing Parts With Warning Labels Affixed)	
921	594116	COVER, Blower Housing	1		
969	594115	SCREW	2	(Blower Housing Cover)	

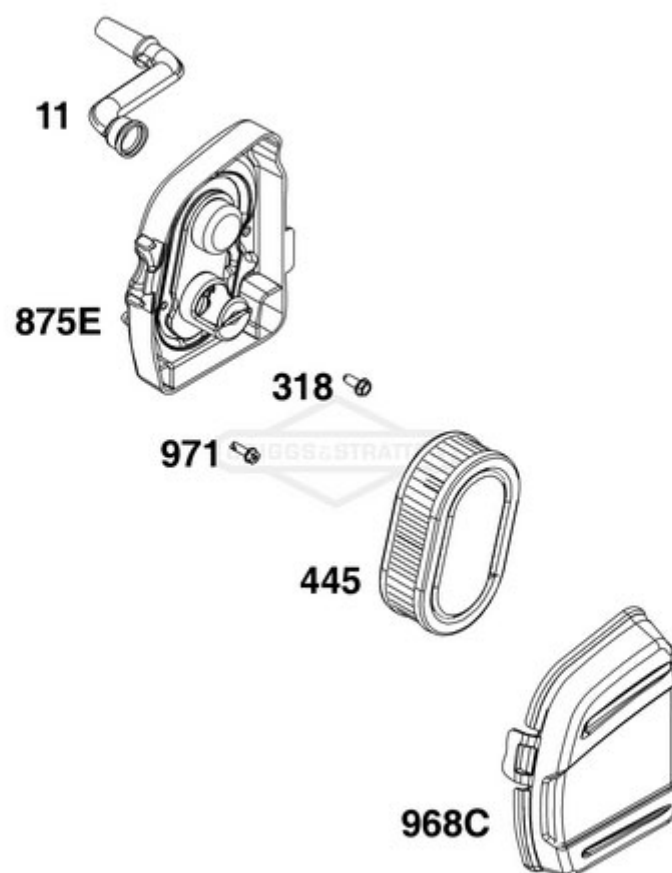

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	596501	TUBE, Breather	1		
318	793480	SCREW	2	(Mounting Bracket)	
445	593260	FILTER, A/C Cartridge	1		
875E	594574	BASE, Air Cleaner	1		
968C	594575	COVER, Air Cleaner	1		
971	590552	SCREW	2	(Air Cleaner Base to Carburetor/Throttle Body)	