



Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
187	791766	LINE, Fuel		(Cut To Required Length)	
300D	594108	MUFFLER			
300E	595012	MUFFLER			
300F	596511	MUFFLER			
601	791850	CLAMP-HOSE			
613	590562	SCREW		(Muffler)	
676A	594563	DEFLECTOR, Muffler			
832A	594109	GUARD, Muffler			
836	690661	SCREW		(Muffler Guard)	
957B	596472	CAP, Fuel Tank			
972A	596207	TANK, Fuel			
994	594562	ARRESTOR-SPARK			

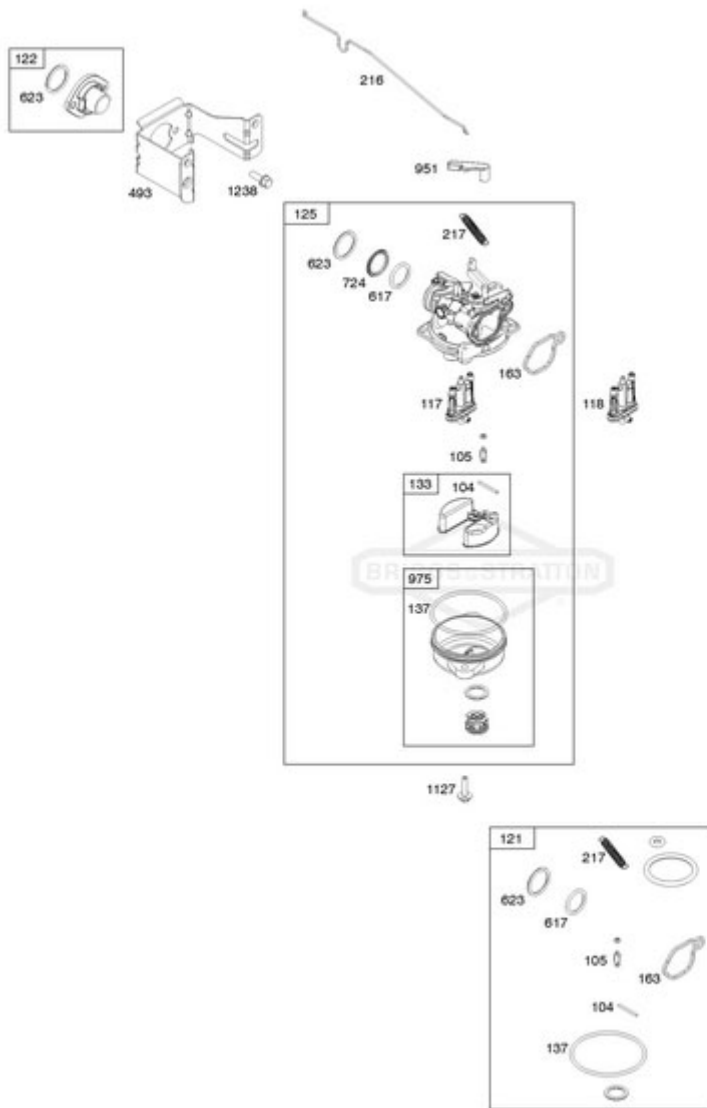

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
104	590558	PIN, Float Hinge			
105	594581	VALVE, Float Needle			
117	596862	JET, Main		(Standard) Used Before Code Date 18070100	
117	84001923	JET, Main		(Standard) Used After Code Date 18063000	
118	596863	JET, Main		(High Altitude) Used Before Code Date 18070100	
118	84002024	JET, Main		(High Altitude) Used After Code Date 18063000	
121	590589	KIT, Carburetor Overhaul		Used Before Code Date 15030900	
121	594636	KIT, Carburetor Overhaul		Used After Code Date 15030800	
122	590549	SPACER, Carburetor			
125	594926	CARBURETOR		Used Before Code Date 18070100	
125	84001033	CARBURETOR		Used After Code Date 18063000	
133	591120	FLOAT, Carburetor			
137	593235	GASKET, Float Bowl		(Pack of 5) Used Before Code Date 15030900	
137	594633	GASKET, Float Bowl		(Pack of 5) Used After Code Date 15030800	
163	799580	GASKET, Air Cleaner		(Air Cleaner)	
216	590547	LINK, Choke			
217	590740	SPRING, Choke Return			
493	593330	BRACKET, Mounting		(Carburetor)	
617	270344S	SEAL, O-Ring		(Intake Manifold)	
623	799581	SEAL, O-Ring		(Carburetor Spacer)	
724	697478	RETAINER, Seal			
951	591104	LEVER, Choke			
975	591492	BOWL, Float		Used Before Code Date 15030900	
975	594632	BOWL, Float		Used After Code Date 15030800	
1127	590554	SCREW		(Float Bowl to Carburetor Body)	
1238	590562	SCREW		(Carburetor Spacer)	

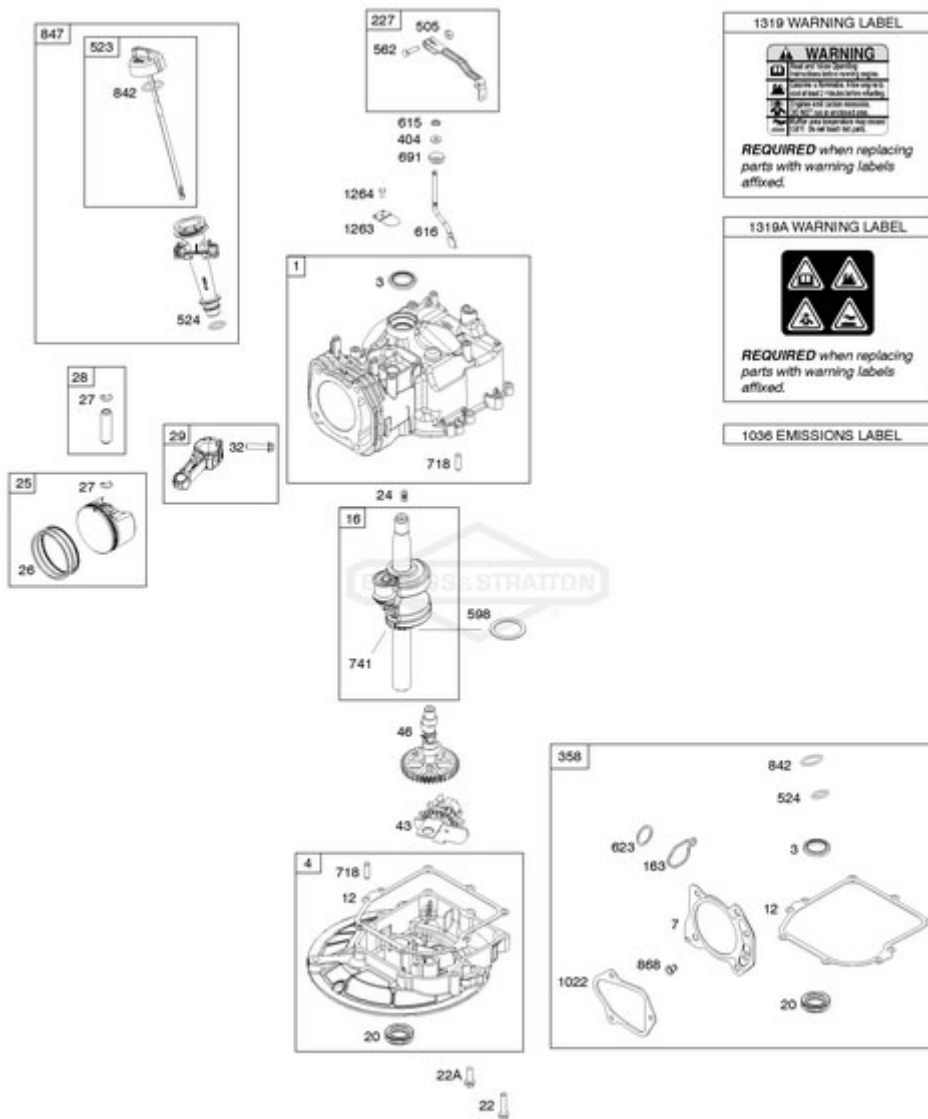

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
1	595179	CYLINDER ASSEMBLY			
3	299819S	SEAL-OIL		(Magneto Side)	
4	594101	SUMP, Engine			
7	592358	GASKET, Cylinder Head			
12	799587	GASKET, Crankcase			
16	595241	CRANKSHAFT			
20	399781S	SEAL-OIL		(PTO Side)	
22	692551	SCREW		(Crankcase Cover/Sump)	
22A	590763	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	594099	PISTON ASSEMBLY		(Standard)	
26	594098	SET, Ring		(Standard)	
27	691588	LOCK, Piston Pin			
28	298909	PIN-PISTON/STD			
29	594089	ROD, Connecting			
32	691664	SCREW		(Connecting Rod)	
43	697799	SLINGER, Governor/Oil			
46	594090	CAMSHAFT			
163	799580	GASKET, Air Cleaner		(Air Cleaner)	
227	590520	LEVER, Governor Control			
358	595354	GASKET SET, Engine			
404	690272	WASHER		(Governor Crank)	
505	793515	NUT		(Governor Control Lever)	
523	796503	DIPSTICK			
524	691876	SEAL-O RING			
562	793514	BOLT		(Governor Lever)	
598	592587	SHIM, End Play		(Crankshaft or Camshaft Bearing)	
615	690340	RETAINER, Governor Shaft			
616	590516	CRANK, Governor			
623	799581	SEAL, O-Ring		(Carburetor Spacer)	
691	593837	SEAL, Governor Shaft			
718	690959	PIN, Locating		(Crankcase Cover/Sump)	
741	594105	GEAR, Timing		(Plastic)	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	594110	DIPSTICK/TUBE ASSEMBLY			
868	594096	SEAL, Valve		(Intake)	
1022	595342	GASKET, Rocker Cover			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
1263	697124	REED, Breather			
1264	793453	SCREW		(Breather Reed)	
1319	794467	LABEL, Warning			
1319A	797669	LABEL, Warning			

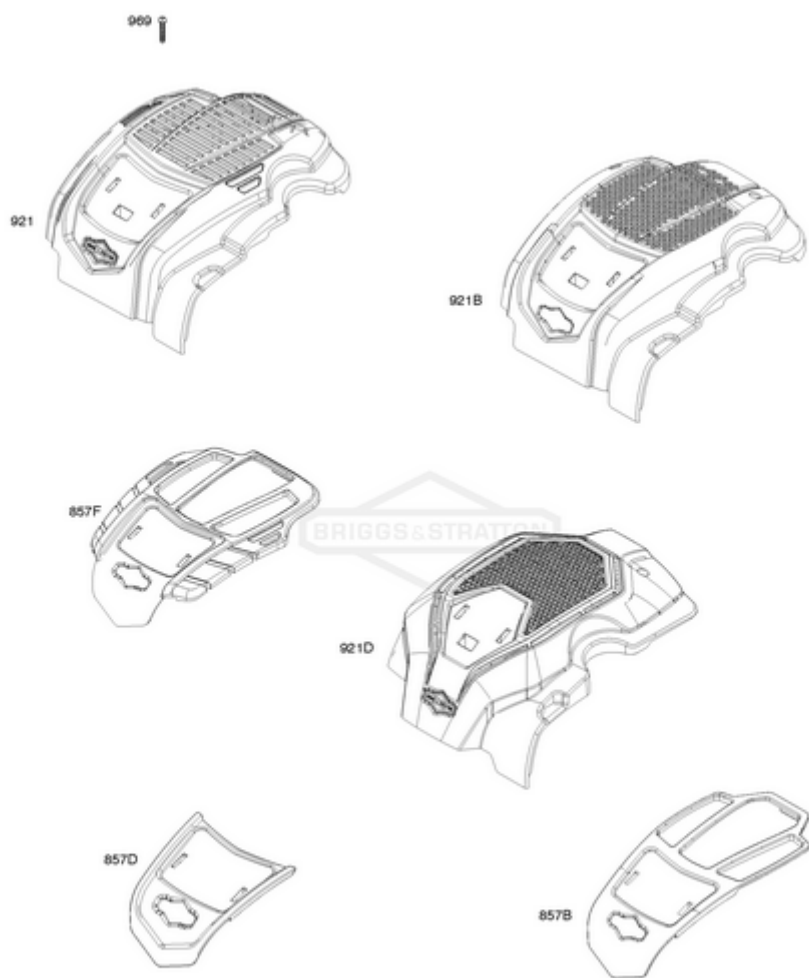


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
921	594116	COVER, Blower Housing			
921B	595212	COVER, Blower Housing			
921D	596507	HOUSING, Blower			
969	594115	SCREW		(Blower Housing Cover)	

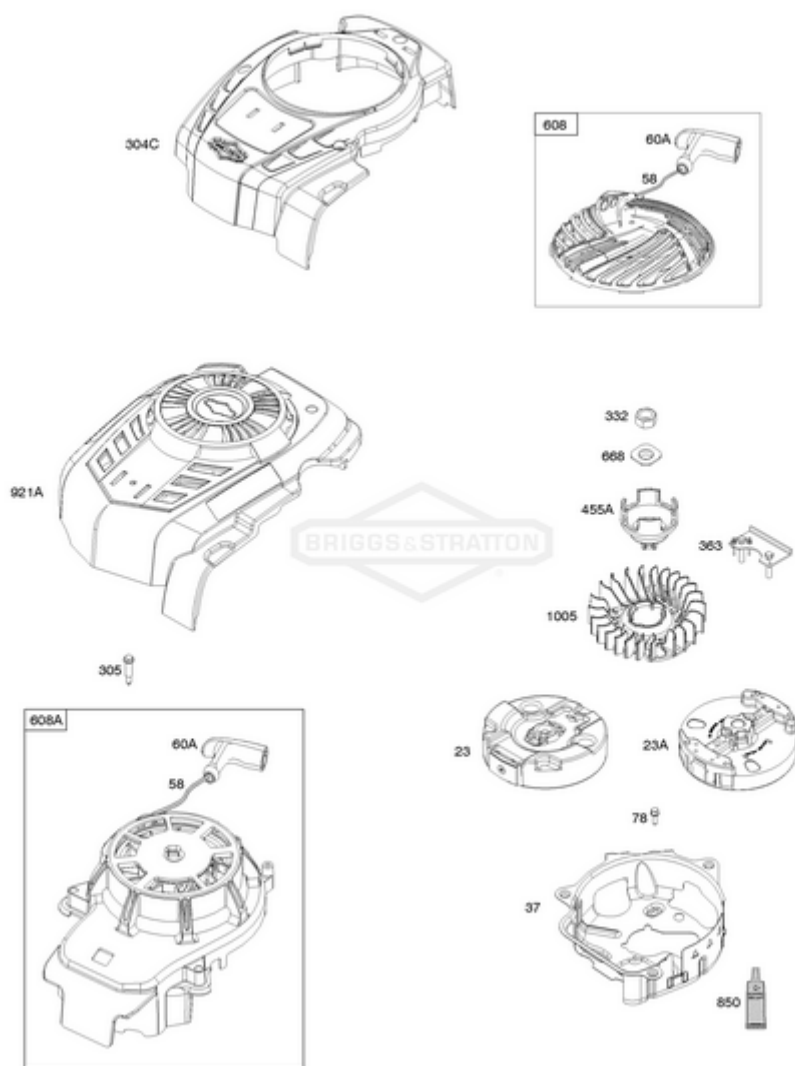


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
37	595188	GUARD, Flywheel			
58	591108	ROPE, Starter			
60A	281434S	GRIP, Starter Rope			
78	793480	SCREW		(Flywheel Guard)	
305	590586	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
363	19619	PULLER, Flywheel			
455A	593960	CUP, Flywheel			
668	590546	SPACER		(Flywheel)	
850	100106	SEALANT, Liquid			
921A	594550	HOUSING, Blower			
1005	594102	FAN, Flywheel			

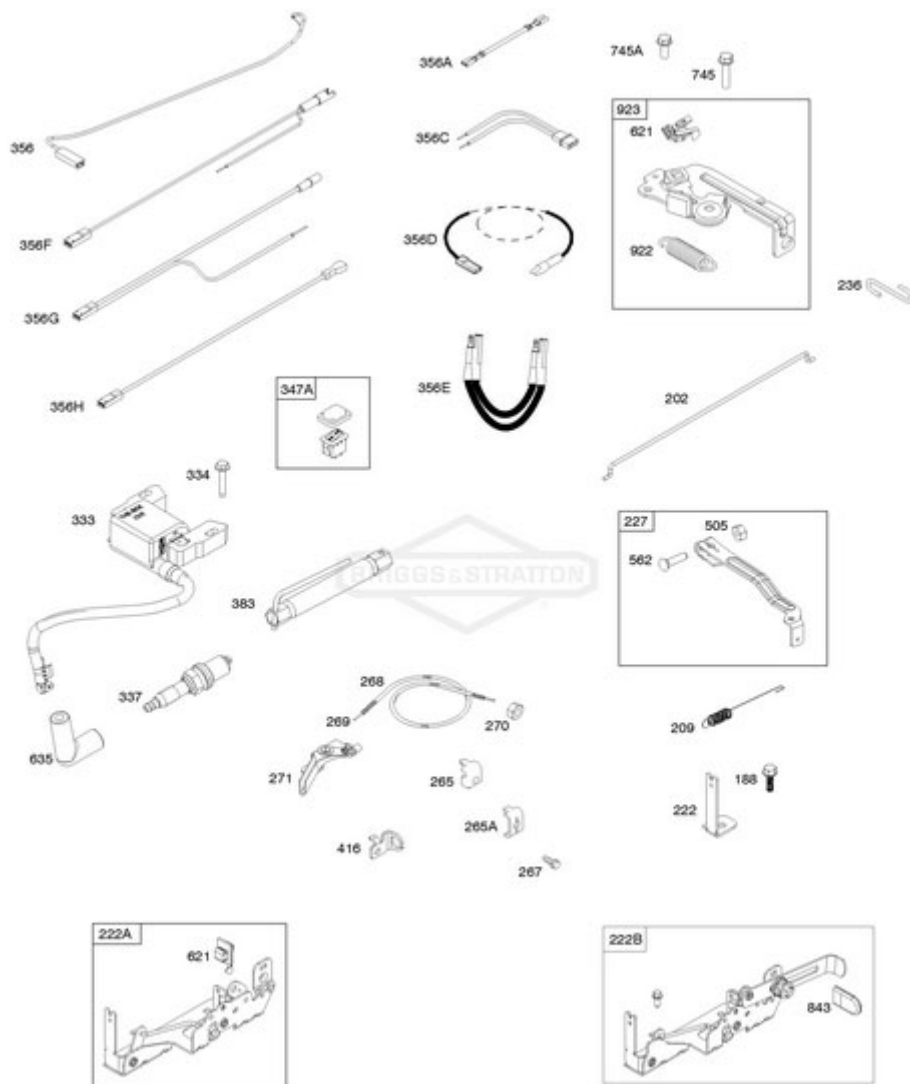


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	793480	SCREW		(Control Bracket)	
202	590517	LINK, Mechanical Governor			
209	594506	SPRING, Governor			
222	590560	BRACKET, Control			
222A	596458	BRACKET, Control		Used After Code Date 17010100	
222A	590561	BRACKET, Control		Used Before Code Date 17010200	
222B	593221	BRACKET, Control		Used Before Code Date 17010200	
222B	596465	BRACKET, Control		Used After Code Date 17010100	
227	590520	LEVER, Governor Control			
236	591292	LINK, Lockout			
265	690798	CLAMP, Casing			
265A	691024	CLAMP, Casing			
267	691044	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
333	595009	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
337	594056	PLUG, Spark		(Resistor)	
347A	592694	SWITCH, Rocker			
356F	595383	WIRE, Stop			
383	19576S	WRENCH, Spark Plug			
416	595196	BRACKET, Throttle Cable			
505	793515	NUT		(Governor Control Lever)	
562	793514	BOLT		(Governor Lever)	
621	692310	SWITCH, Stop			
635	692076	BOOT, Spark Plug			
745	691146	SCREW		(Brake)	
745A	690859	SCREW		(Brake)	
843	593215	SLEEVE, Lever			
922	692135	SPRING, Brake			
923	691487	BRAKE			

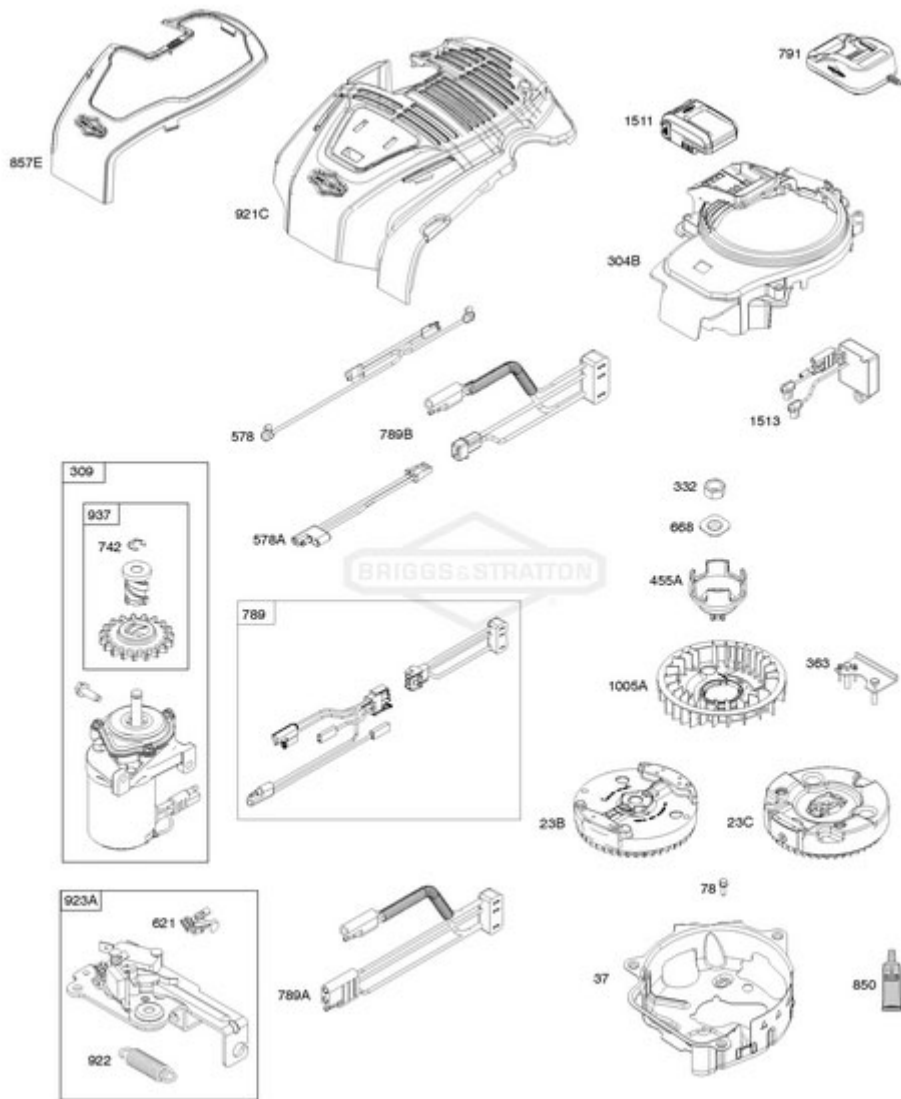

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23B	595183	FLYWHEEL			
37	595188	GUARD, Flywheel			
78	793480	SCREW		(Flywheel Guard)	
304B	595186	HOUSING, Blower			
309	594360	MOTOR, Starter			
332	690662	NUT		(Flywheel)	
363	19619	PULLER, Flywheel			
455A	593960	CUP, Flywheel			
578	595181	WIRE ASSEMBLY			
621	692310	SWITCH, Stop			
668	590546	SPACER		(Flywheel)	
742	93941	RETAINER, E Ring			
789A	595380	HARNESS, Wiring			
791	593561	CHARGER, Battery		(Instart)(North America)	
791	593562	CHARGER, Battery		(Instart)(Europe)	
791	593576	CHARGER, Battery		(Instart)(United Kingdom)	
791	595887	CHARGER, Battery		(Instart)(Australia)	
850	100106	SEALANT, Liquid			
857E	596103	TRIM, Blower Housing Cover		(Orange)	
921C	595180	HOUSING, Blower			
922	692135	SPRING, Brake			
923A	595195	BRAKE			
937	799420	SPLINE, Starter			
1005A	595182	FAN, Flywheel			
1511	593559	BATTERY		(Instart)(North America/Argentina)	
1511	593560	BATTERY		(InStart)(Europe/Australia /Japan)	
1513	595382	MODULE, Starter			

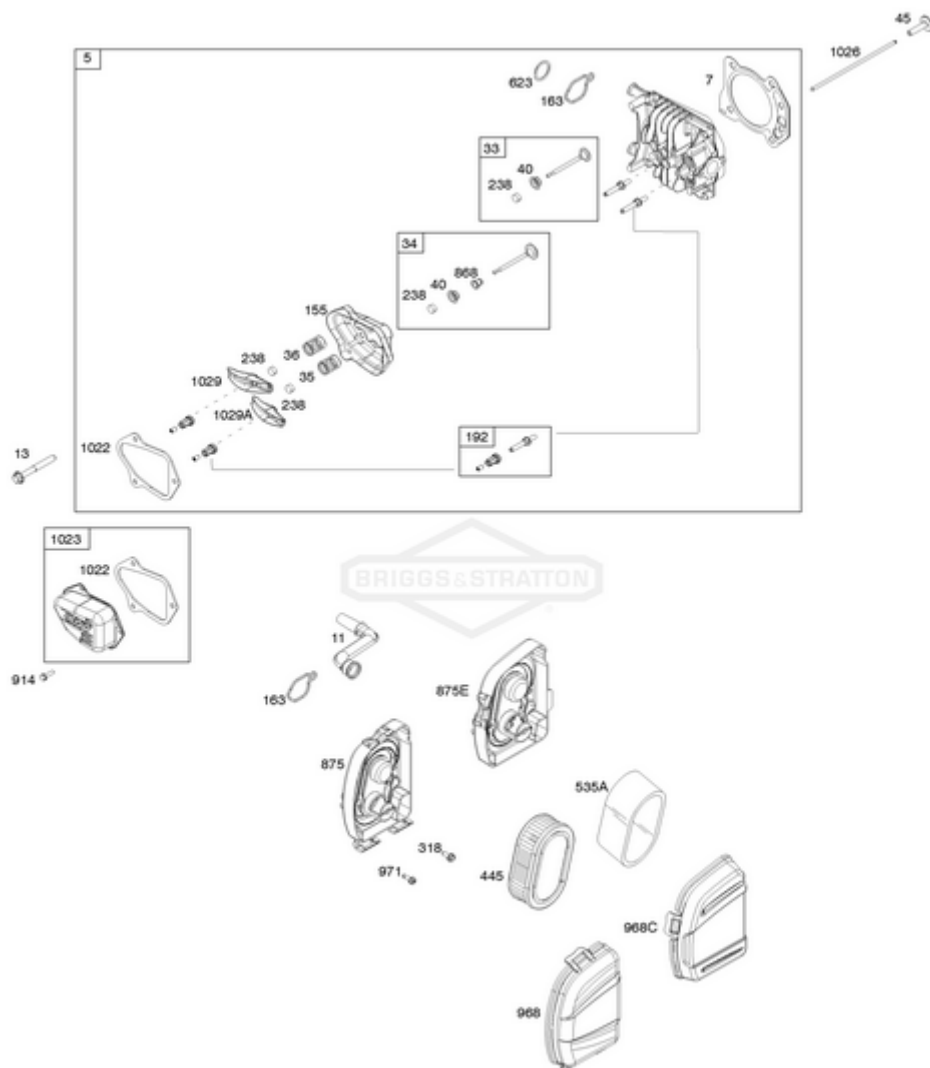

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
5	595353	HEAD, Cylinder			
7	592358	GASKET, Cylinder Head			
11	590522	TUBE, Breather			
13	590512	SCREW		(Cylinder Head)	
33	594095	VALVE, Exhaust			
34	594094	VALVE, Intake			
35	590532	SPRING, Valve		(Intake)	
36	590532	SPRING, Valve		(Exhaust)	
40	594092	RETAINER, Valve			
45	590514	TAPPET, Valve			
155	594093	PLATE, Cylinder Head			
163	799580	GASKET, Air Cleaner		(Air Cleaner)	
192	590535	ADJUSTER, Rocker Arm			
238	594097	CAP, Valve			
318	793480	SCREW		(Mounting Bracket)	
445	593260	FILTER, A/C Cartridge			
535A	595191	FILTER, Air Cleaner Foam			
623	799581	SEAL, O-Ring		(Carburetor Spacer)	
868	594096	SEAL, Valve		(Intake)	
875	594107	BASE, Air Cleaner			
875E	594574	BASE, Air Cleaner			
914	591103	SCREW		(Rocker Cover)	
968	594106	COVER, Air Cleaner			
968C	594575	COVER, Air Cleaner			
971	590552	SCREW		(Air Cleaner Base to Carburetor/Throttle Body)	
1022	595342	GASKET, Rocker Cover			
1023	595352	COVER, Rocker			
1026	590515	ROD, Push			
1029	590526	ARM, Rocker		(Exhaust)	
1029A	590527	ARM, Rocker		(Intake)	