


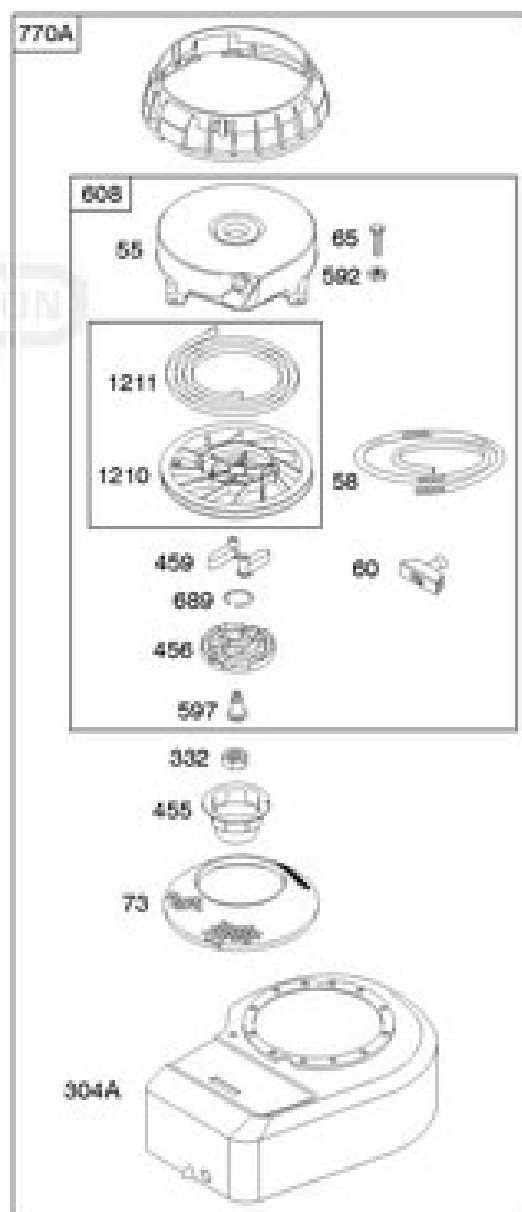
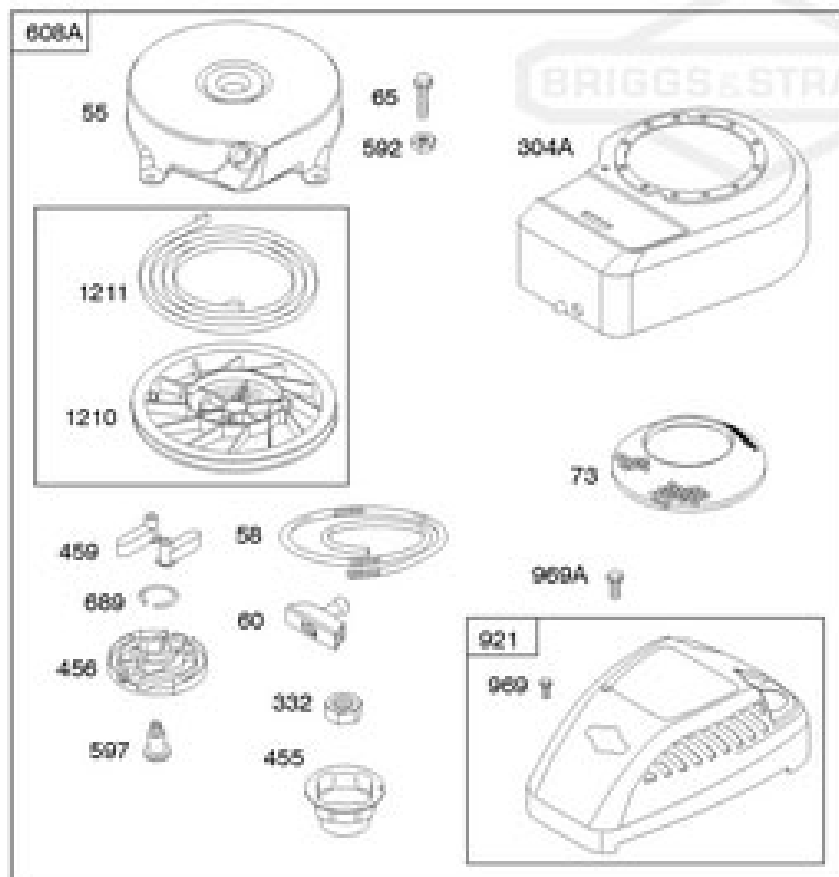
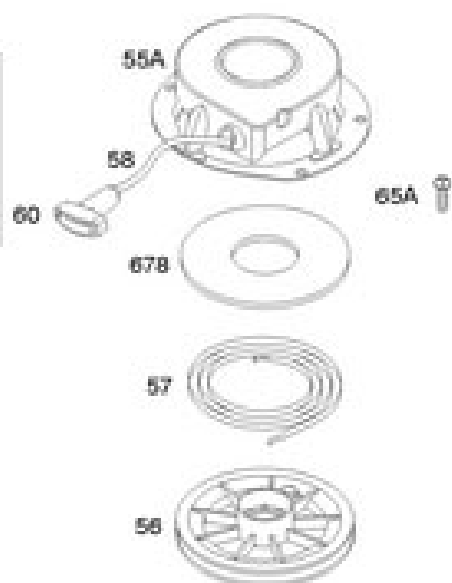
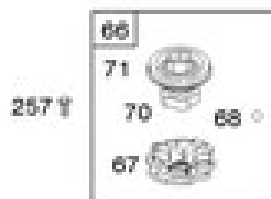
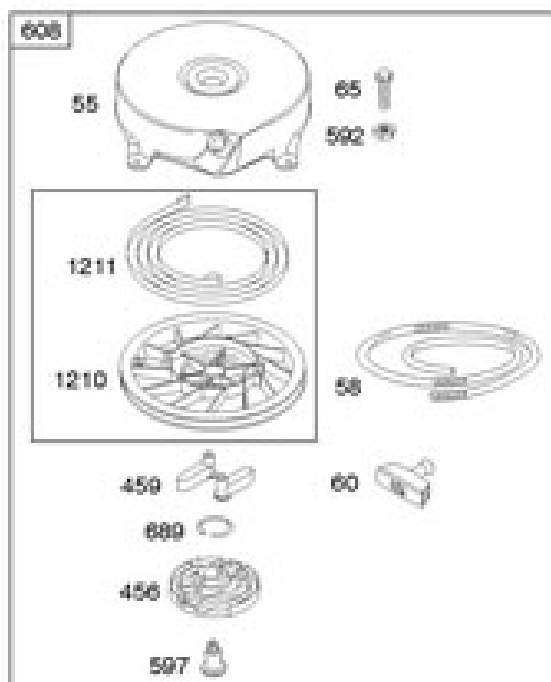
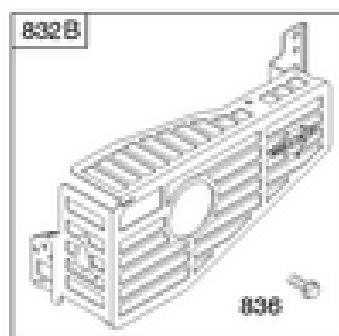
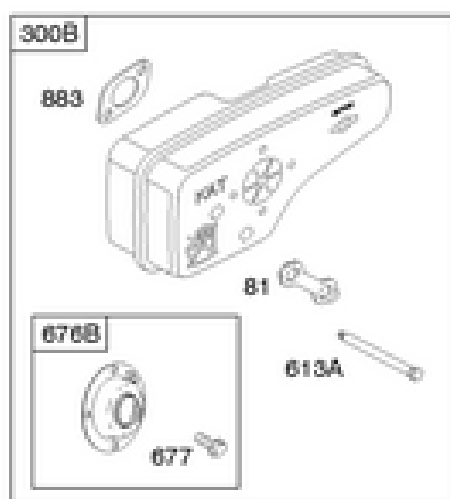
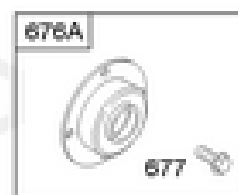
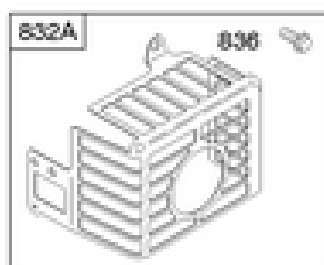


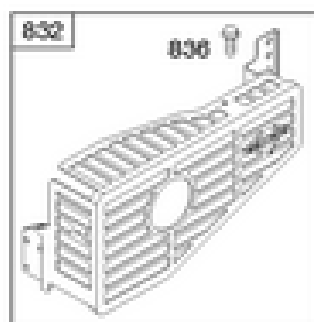

Ref #	Part #	Description	Qty	Context Note	Foot Note
55	692144	HOUSING, Rewind Starter			
55A	393576	HOUSING, Rewind Starter			
56	280439S	PULLEY, Rope Starter			
57	490179	SPRING-REWIND STR			
58	691921	ROPE, Starter		(70)	
58A	697316	ROPE, Starter		(88 5/8)	
60	691915	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
65A	690338	SCREW		(Rewind Starter) (3/8)	
66	399671	CLUTCH-STARTER			
67	394897	HOUSING, Clutch			
68	691604	BALL, Clutch			
70	691945	RATCHET-CLUTCH			
71	691359	COVER, Ratchet			
73	699850	SCREEN, Rotating		Used After Code Date 97052500	
257	691660	SCREW		(Starter Clutch)	
304A	694236	HOUSING-BLOWER		(Compliance Engines) Used After Code Date 99010300	
304A	694051	HOUSING-BLOWER		(Non Compliance Engines) Used After Code Date 99010300	
305	692198	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
455	691236	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	499706	STARTER, Rewind		(88 5/8 Rope) Used After Code Date 97071300	
608A	499926	KIT STARTER-REWIND		(Non Compliance Engines) (70 Rope)	
678	490817	SPACER-REWIND		(Rewind)	
689	691855	SPRING-FRICTION			
770A	499915	KIT, Rewind/Blower Housing		(Compliance Engines) Used Before Code Date 97100600	
921	694044	HOUSING, Blower			
969	692198	SCREW		(Blower Housing) (1/2)	
969A	694046	SCREW		(Blower Housing) (2 1/4)	
1210	499901	PULLEY/SPRING ASSY		(Pulley)	
1211	499901	PULLEY/SPRING ASSY		(Spring)	

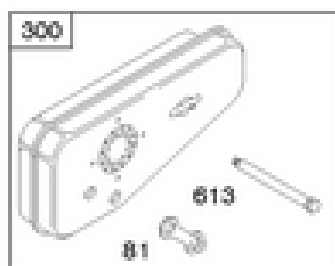


836B

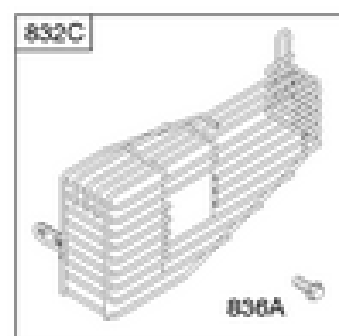


Ref #	Part #	Description	Qty	Context Note	Foot Note
81	691179	LOCK, Muffler Screw			
300	692307	MUFFLER		(Super Lo Tone)	
300A	394569S	MUFFLER		(Round Lo Tone)	
613	691413	SCREW		(Muffler) (Super Lo Tone)	
676	393756	DEFLECTOR, Muffler		(Side Outlet)	
677	690661	SCREW		(Muffler Deflector)	
832	699299	GUARD, Muffler		(Super Lo Tone)	
832A	699670	GUARD-MUFFLER		(Round Lo Tone)	
836	690664	SCREW		(Muffler Guard) (13/32)	
836A	790745	SCREW		(Muffler Guard) (1/2)	
883	691880	GASKET-EXHAUST			

1058 OPERATOR'S MANUAL

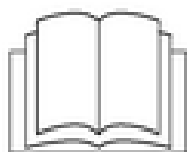

1330 REPAIR MANUAL


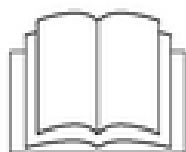


1319 WARNING LABEL






WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 3 minutes before refueling.
	Engines emit carbon monoxide. DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

358 ENGINE GASKET SET

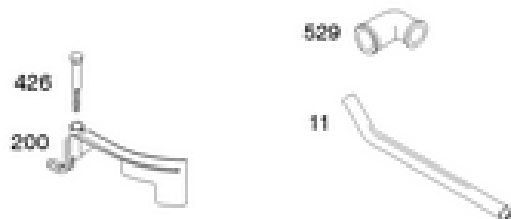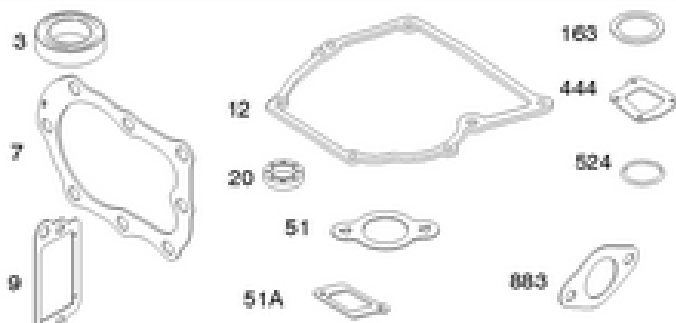



1095 VALVE GASKET SET

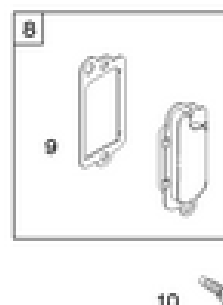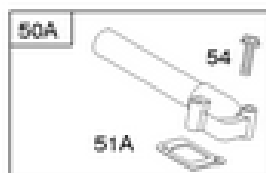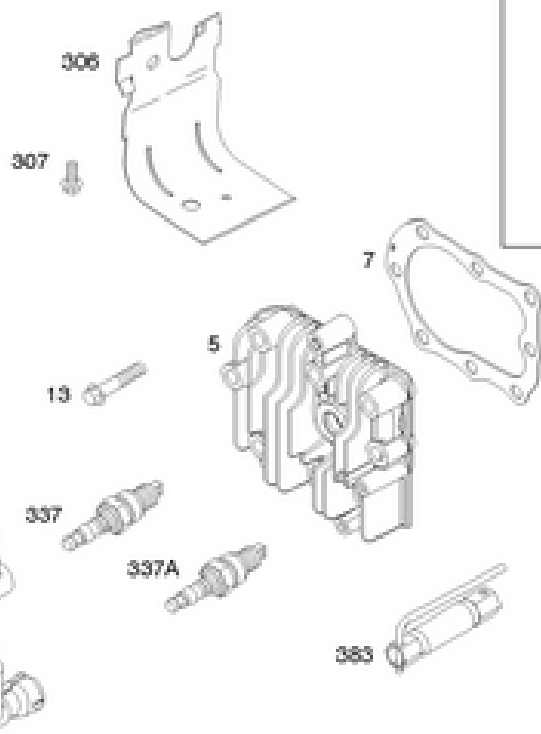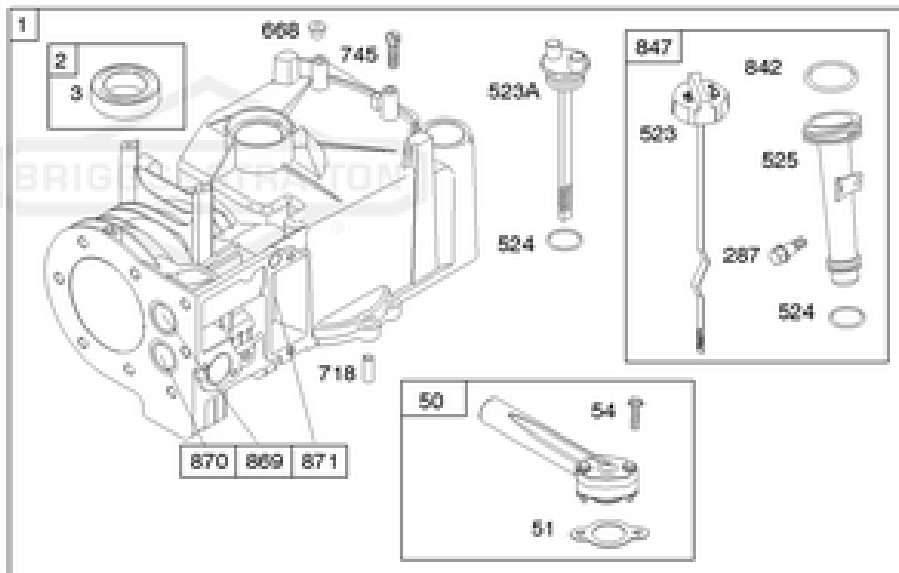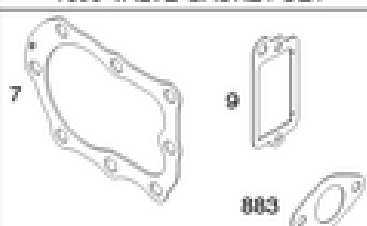


Copyright © Briggs & Stratton, Ltd. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	699653	CYLINDER ASSEMBLY			
2	399269	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL-OIL		(Magneto Side)	
5	790169	HEAD, Cylinder			
7	698717	GASKET-CYL HD			
8	791781	BREATHER ASSEMBLY			
9	695890	GASKET-BREATHER			
10	691666	SCREW		(Breather Assembly)	
11	691245	TUBE, Breather			
12	270896	GASKET, Crankcase		(.009)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
12	270895	GASKET, Crankcase		(.005)	
13	691640	SCREW		(Cylinder Head)	
20	391483S	SEAL, Oil		(PTO Side)	
50	699644	MANIFOLD, Intake		Used After Code Date 03080300	
50A	693446	MANIFOLD-INTAKE		Used Before Code Date 03080400	
51	699649	GASKET, Intake		Used After Code Date 03080300	
51A	270345S	GASKET, Intake		Used Before Code Date 03080400	
54	691111	SCREW		(Intake Manifold)	
163	271139S	GASKET, Air Cleaner		(Air Cleaner)	
200	691912	BLADE, Governor			
287	691002	SCREW		(Dipstick Tube)	
306	690400	SHIELD, Cylinder		Used Before Code Date 04071400	
307	690345	SCREW		(Cylinder Shield) Used Before Code Date 04071400	
337	802592S	PLUG, Spark		(Resistor)	
358	794209	GASKET SET, Engine			
383	89838S	WRENCH-SPARK PLUG			
426	691107	SCREW		(Governor Blade)	
444	691868	GASKET, Drive Gear Cover			
523	692040	DIPSTICK			
524	691876	SEAL-O RING			
525	691320	TUBE, Dipstick			
529	692189	GROMMET			
635	66538S	BOOT, Spark PLug			
668	692889	SPACER			
718	690959	PIN, Locating		(Cylinder)	
745	691146	SCREW		(Brake) (7/8)	
842	691870	SEAL, O-Ring		(Dipstick Tube)	
847	691440	DIPSTICK/TUBE ASSY			

Ref #	Part #	Description	Qty	Context Note	Foot Note
869	699641	SEAT, Valve		(Intake) Used After Code Date 03080300	
869	691701	SEAT-VALVE		(Intake) Used Before Code Date 03080400	
870	699642	SEAT, Valve		(Exhaust) Used After Code Date 03080300	
870	691702	SEAT, Valve		(Exhaust) Used Before Code Date 03080400	
871	231348	BUSHING-VALVE GUIDE		(Exhaust) Used Before Code Date 03080400	
871	699643	BUSHING, Valve Guide		(Exhaust) Used After Code Date 03080300	
871	63709	BUSHING, Valve Guide		(Intake)	
883	691880	GASKET-EXHAUST			
1058	277038	MANUAL, Operator's			
1095	498526	GASKET SET, Valve			
1319	794467	LABEL, Warning			
1330	270962	REP MAN-1 CYL L-HD			

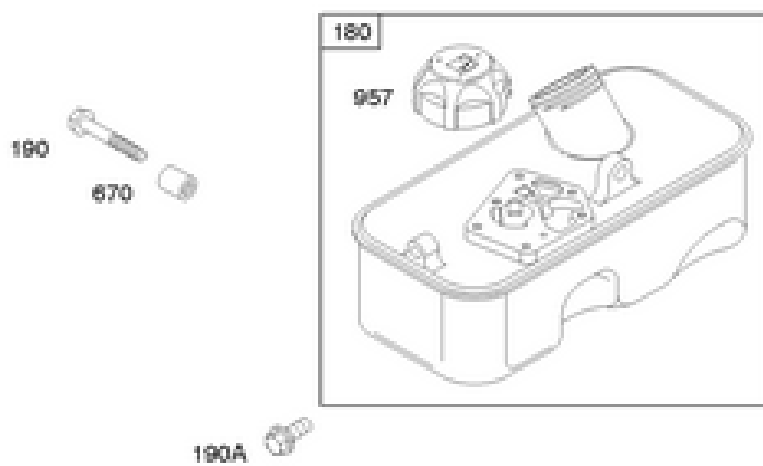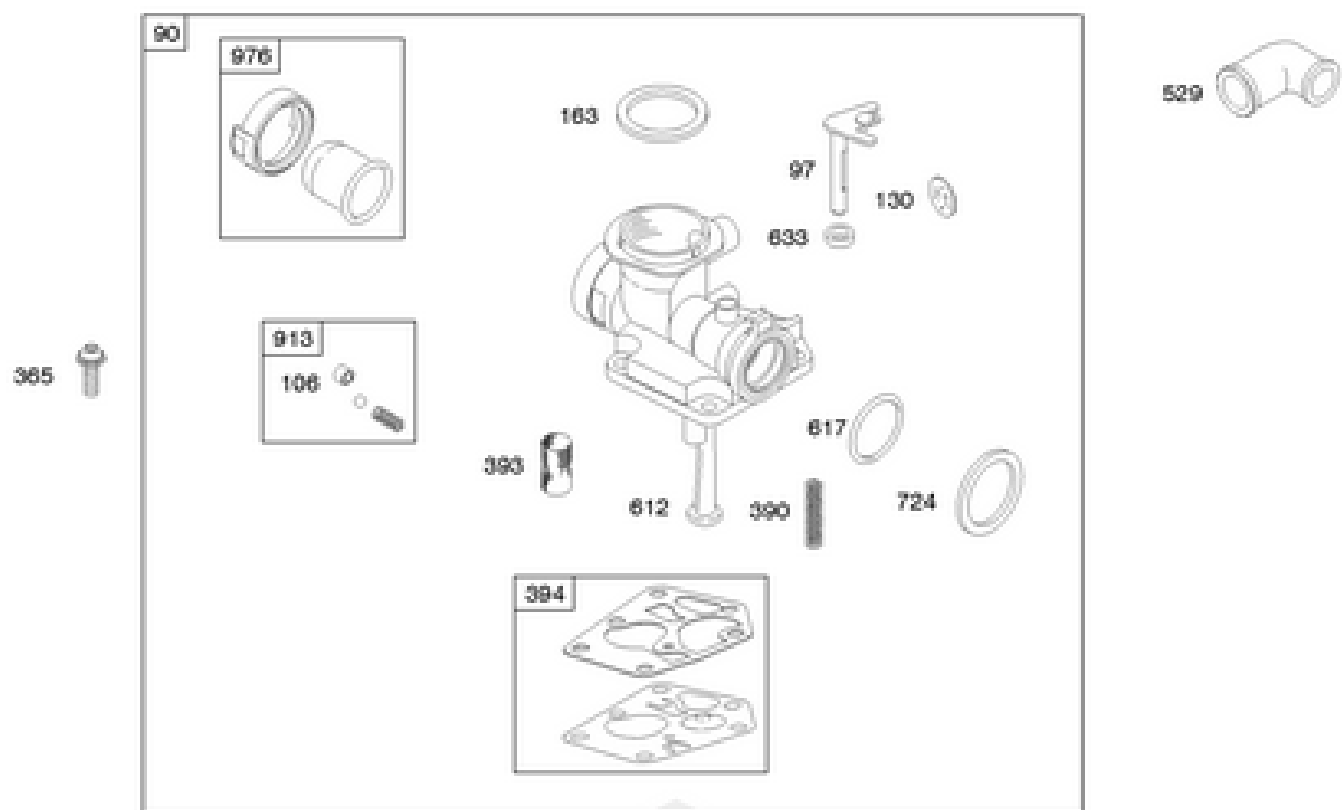


Ref #	Part #	Description	Qty	Context Note	Foot Note
90	497619	CARBURETOR		Used Before Code Date 96052000	
90	794161	CARBURETOR		Used After Code Date 96051900	
97	691931	SHAFT, Throttle			
106	691901	SEAT, Inlet			
130	691190	VALVE, Throttle			
163	271139S	GASKET, Air Cleaner		(Air Cleaner)	
180	494406	TANK, Fuel		(Metal)	
181	493982S	CAP, Fuel Tank		(Metal)	
190	691640	SCREW		(Fuel Tank) (1 3/4)	
190A	691108	SCREW		(Fuel Tank) (9/16" Long)	
365	790029	SCREW		(Carburetor)	
390	691839	SPRING-CHOKE DIAPH			
393	691837	SCREEN, Carburetor			
394	795083	DIAPHRAGM, Carburetor		Used After Code Date 07080800	
394	495770	GASKET, Carburetor Pump		Used Before Code Date 07080900	
529	692189	GROMMET			
612	496046S	TUBE-PICK UP			
617	270344S	SEAL, O-Ring		(Intake Manifold)	
633	691321	SEAL-CHOKE/THR SHAFT		(Throttle)	
670	691631	SPACER, Fuel Tank		Used Before Code Date 97071400	
670	691633	SPACER, Fuel Tank		Used After Code Date 97071300	
724	697478	RETAINER, Seal			
913	494409	SEAT, Valve			
957	497929S	CAP, Fuel Tank		(Plastic)	
976	694394	PRIMER-CARBURETOR			

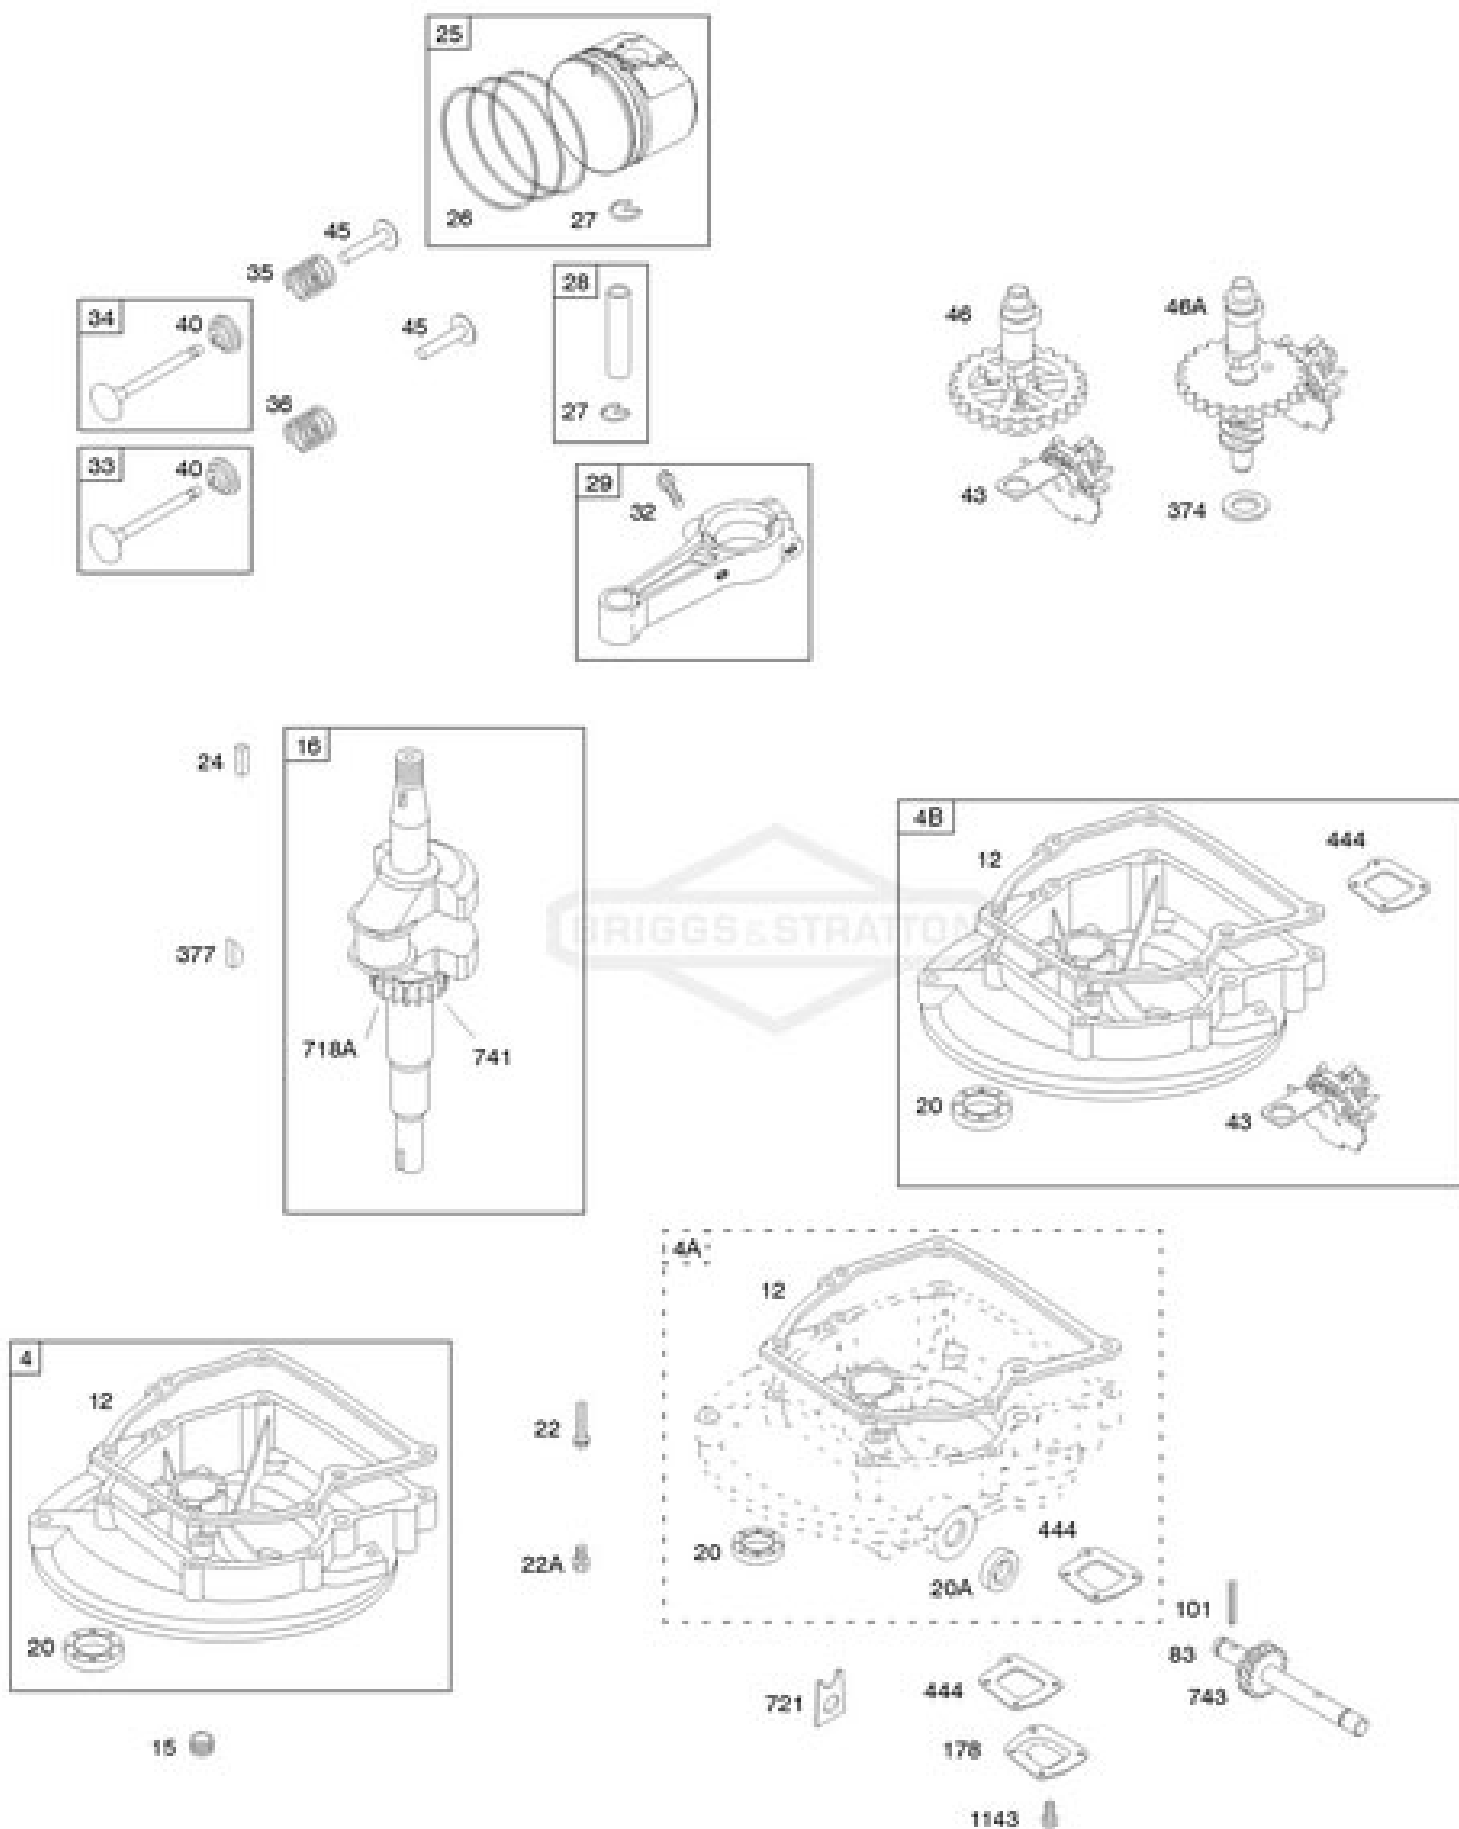

Ref #	Part #	Description	Qty	Context Note	Foot Note
4	395384	SUMP, Engine		Used Before Code Date 02111300	
4	698691	SUMP, Engine		Used After Code Date 02111200	
12	270895	GASKET, Crankcase		(.005)	
12	270896	GASKET, Crankcase		(.009)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
15	691680	PLUG-OIL DRAIN			
16	691471	CRANKSHAFT			
20	391483S	SEAL, Oil		(PTO Side)	
20A	691952	SEAL, Oil		(PTO Side) (Auxiliary PTO)	
22	692551	SCREW		(Crankcase Cover/Sump) (1 1/4)	
22A	691108	SCREW		(Crankcase Cover/Sump) (3/4" Long)	
24	222698S	KEY, Flywheel			
25	792532	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 96020500	
25	298906	PISTON ASSEMBLY		(.020 Oversize) Used Before Code Date 96020600	
25	298907	PISTON ASSEMBLY		(.030 Oversize) Used Before Code Date 96020600	
25	699657	PISTON ASSEMBLY		(Standard) Used Before Code Date 04111500	
25	790908	PISTON ASSEMBLY		(Standard) Used After Code Date 04111400	
26	795134	SET, Ring		(.020 Oversize) Used After Code Date 04111400	
26	298982	RING SET-STD		(Standard) Used Before Code Date 96020600	
26	298984	RING SET-020		(.020 Oversize) Used Before Code Date 96020600	
26	498680	RING SET-STD		(Standard) Used After Code Date 96020500 Used Before Code Date 03080400	
26	498682	SET, Ring		(.020 Oversize) Used After Code Date 96020500 Used Before Code Date 04111500	
26	498683	SET, Ring		(.030 Oversize) Used After Code Date 96020500 Used Before Code Date 04111500	
26	699658	SET, Ring		(Standard) Used After Code Date 03080300 Used Before Code Date 04111500	
26	790909	SET, Ring		(Standard) Used After Code Date 04111400	
27	691588	LOCK, Piston Pin			
28	298908	PIN, Piston		(.005 Oversize) Used Before Code Date 03100100	
28	298909	PIN-PISTON/STD		(Standard) Used Before Code Date 03100100	


Ref #	Part #	Description	Qty	Context Note	Foot Note
28	699659	PIN, Piston		(Standard) Used After Code Date 03093000	
29	699654	ROD-CONNECTING			
32	691664	SCREW		(Connecting Rod)	
33	296676	VALVE, Exhaust		(Grooved Stem-Includes Retainer)	
34	296677	VALVE, Intake		(Grooved stem-includes Retainer)	
35	690520	SPRING-VALVE		(Intake)	
36	690520	SPRING-VALVE		(Exhaust)	
40	692194	RETAINER, Valve			
43	691983	SLINGER, Governor/Oil		Used Before Code Date 02110500	
43	698690	SLINGER- GOVERNOR/OIL		Used After Code Date 02110400	
45	691762	TAPPET, Valve			
46	691998	CAMSHAFT			
46A	690644	CAMSHAFT		(Counterclockwise)	
101	691623	PIN, Shaft			
178	690398	COVER, Drive Gear			
374	691074	WASHER		(Camshaft)	
444	691868	GASKET, Drive Gear Cover			
718A	499047	PIN, Locating		(Crankshaft)	
721	690397	STOP, Shaft			
741	691805	GEAR, Timing			
743	691772	GEAR, Drive		(Counterclockwise)	
1143	691141	SCREW		(Drive Gear Cover)	

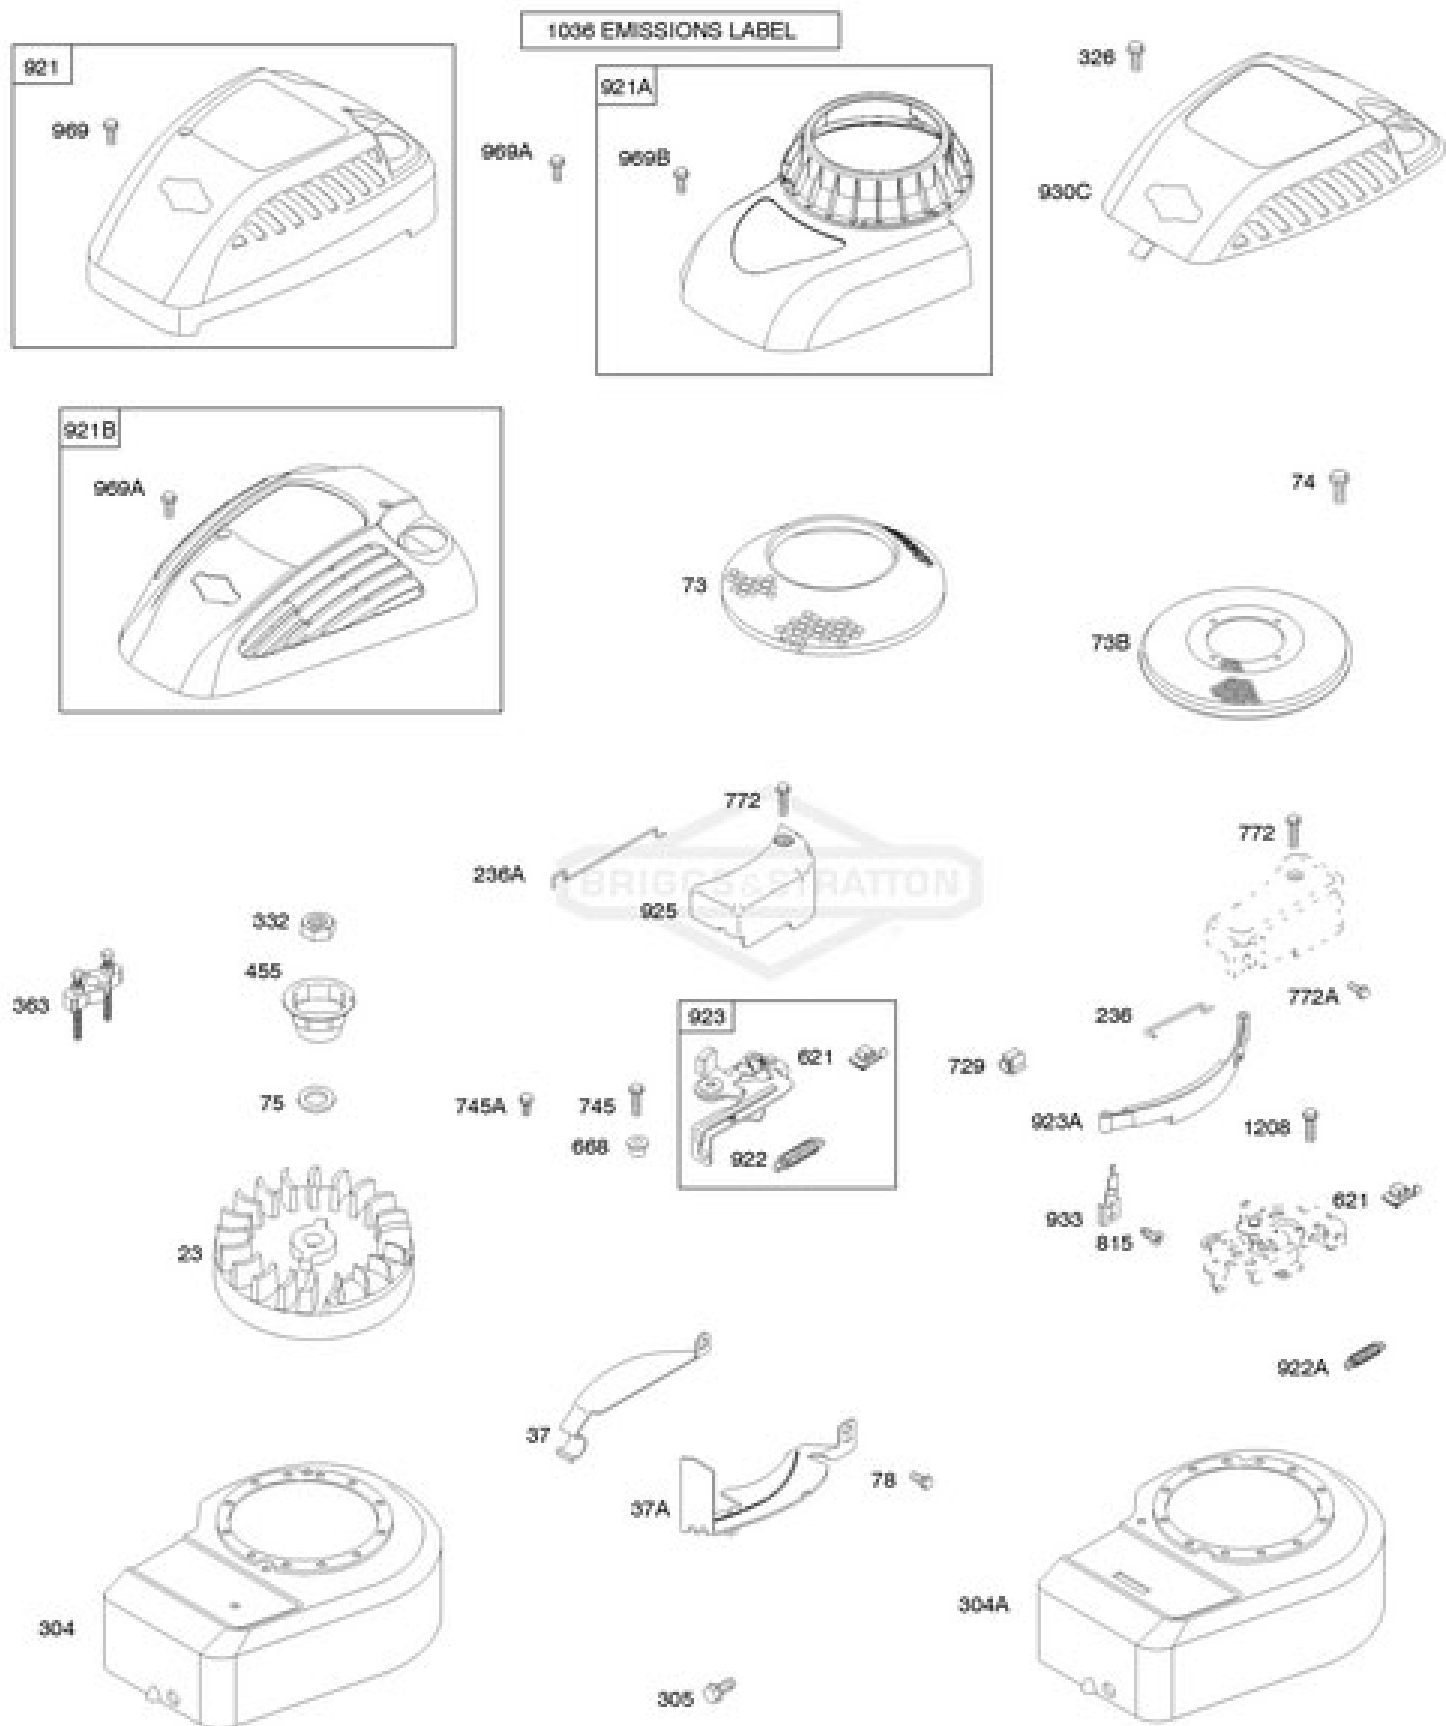

Copyright © Briggs & Stratton, Ltd. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	795549	FLYWHEEL			
37	690482	GUARD, Flywheel		(Carburetor Side)	
37A	691209	GUARD- FLYWHEEL		(Muffler Side)	
73	699850	SCREEN, Rotating		Used After Code Date 97052500	
73B	691725	SCREEN, Rotating		Used Before Code Date 97052600	
74	690345	SCREW		(Rotating Screen)	
75	691736	WASHER		(Flywheel)	
78	692198	SCREW		(Flywheel Guard)	
304	691484	HOUSING, Blower		(Compliance Engines) Used Before Code Date 99010400	
304	692536	HOUSING, Blower		(Non Compliance Engines) Used Before Code Date 99010400	
304A	694236	HOUSING- BLOWER		(Compliance Engines) Used After Code Date 99010300	
304A	694051	HOUSING- BLOWER		(Non Compliance Engines) Used After Code Date 99010300	
305	692198	SCREW		(Blower Housing)	
326	694046	SCREW		(Rewind Guard) (2 1/4) Used After Code Date 99010300	
326	691141	SCREW		(Rewind Guard) (1/2) Used Before Code Date 99010400	
332	690662	NUT		(Flywheel)	
363	19069	PULLER, Flywheel			
455	691236	CUP, Flywheel			
621	692310	SWITCH, Stop			
668	692889	SPACER			
729	690586	CLIP, Wire			
745	691146	SCREW		(Brake) (7/8)	
745A	690859	SCREW		(Brake) (1/2)	
772	691111	SCREW		(Linkage Cover) (1 1/8)	
772	691183	SCREW		(Linkage Cover) (3/4" Long)	
772A	690345	SCREW		(Linkage Cover) (1/2)	
815	690324	SCREW		(Band Brake Pivot)	
921	694044	HOUSING, Blower			
922	692135	SPRING, Brake		Used After Code Date 97071300	
922A	691809	SPRING, Brake		Used Before Code Date 97071400	
923	691487	BRAKE		Used After Code Date 97071300	
923A	394867	PIVOT, Band Brake		Used Before Code Date 97071400	
930C	691932	GUARD- REWIND			
933	690428	PIVOT, Band Brake			

Ref #	Part #	Description	Qty	Context Note	Foot Note
969	692198	SCREW		(Blower Housing) (1/2)	
969A	694046	SCREW		(Blower Housing) (2 1/4)	
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1208	690859	SCREW		(Brake Bracket)	

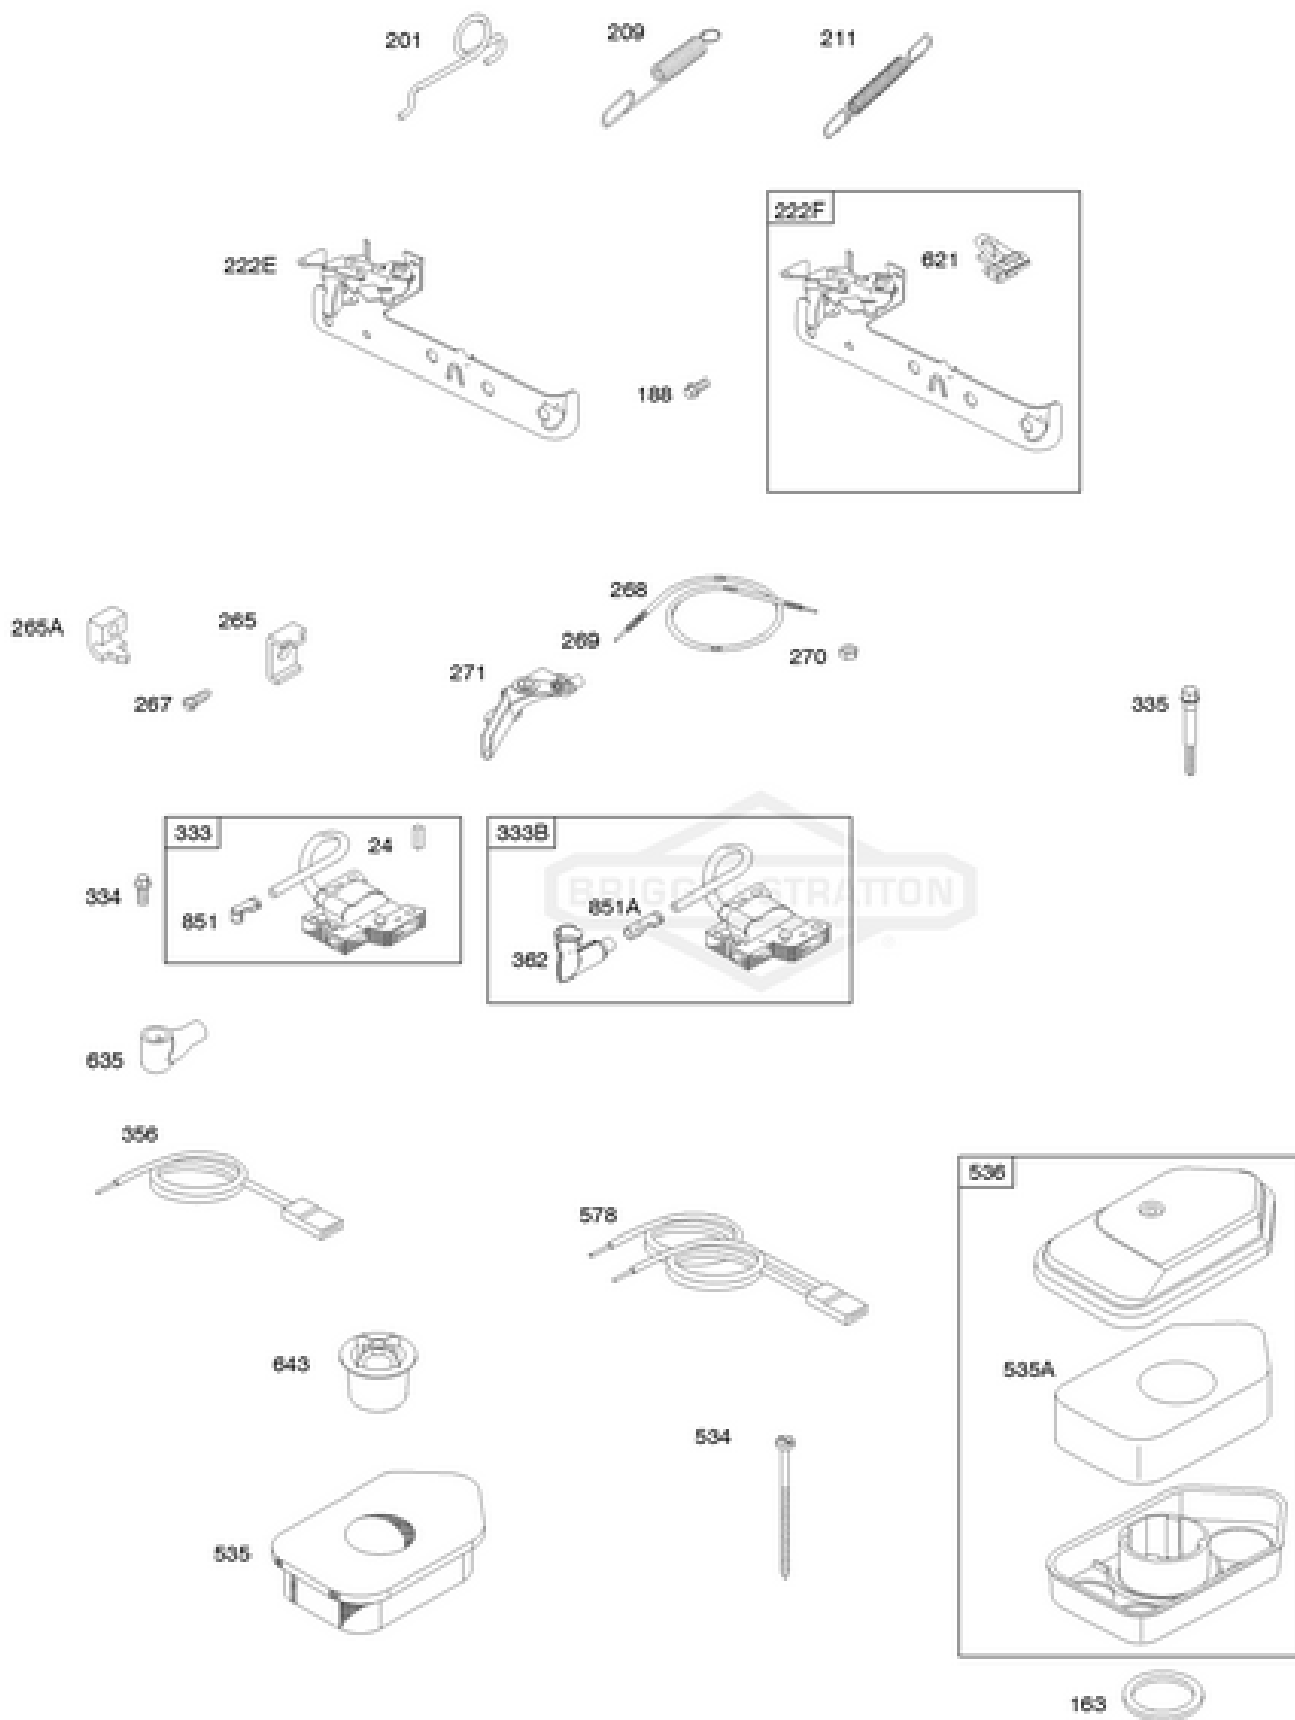

Copyright © Briggs & Stratton, Ltd. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
24	222698S	KEY, Flywheel			
163	271139S	GASKET, Air Cleaner		(Air Cleaner)	
188	692198	SCREW		(Control Bracket)	
201	690347	LINK, Air Vane			
209	690254	SPRING-GOVERNOR		Used After Code Date 96051900	
211	691859	SPRING, Governed Idle			
222E	691446	BRACKET-CONTROL			
222F	691445	BRACKET-CONTROL			
265	691024	CLAMP, Casing			
265A	690798	CLAMP, Casing			
267	691044	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(72" Long)(Cut To Required Length)	
269	691026	WIRE, Control		(78" Long)(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
333	793281	ARMATURE, Magneto			
333B	793352	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature) (1" Long)	
335	691107	SCREW		(Magneto Armature With Air Vane) (1 15/16)	
356	692390	WIRE, Stop			
534	691417	SCREW		(Air Cleaner)	
535	272235S	FILTER, Air Cleaner Foam		Used Before Code Date 02090100	
535A	698369	FILTER, Air Cleaner Foam		Used After Code Date 02083000	
536	698472	CLEANER, Air			
621	692310	SWITCH, Stop			
635	66538S	BOOT, Spark PLug			
643	691911	RETAINER, Air Filter		Used Before Code Date 97100600	
851	493880S	TERMINAL-SPARK PLUG			
851A	692424	TERMINAL, Spark Plug			