

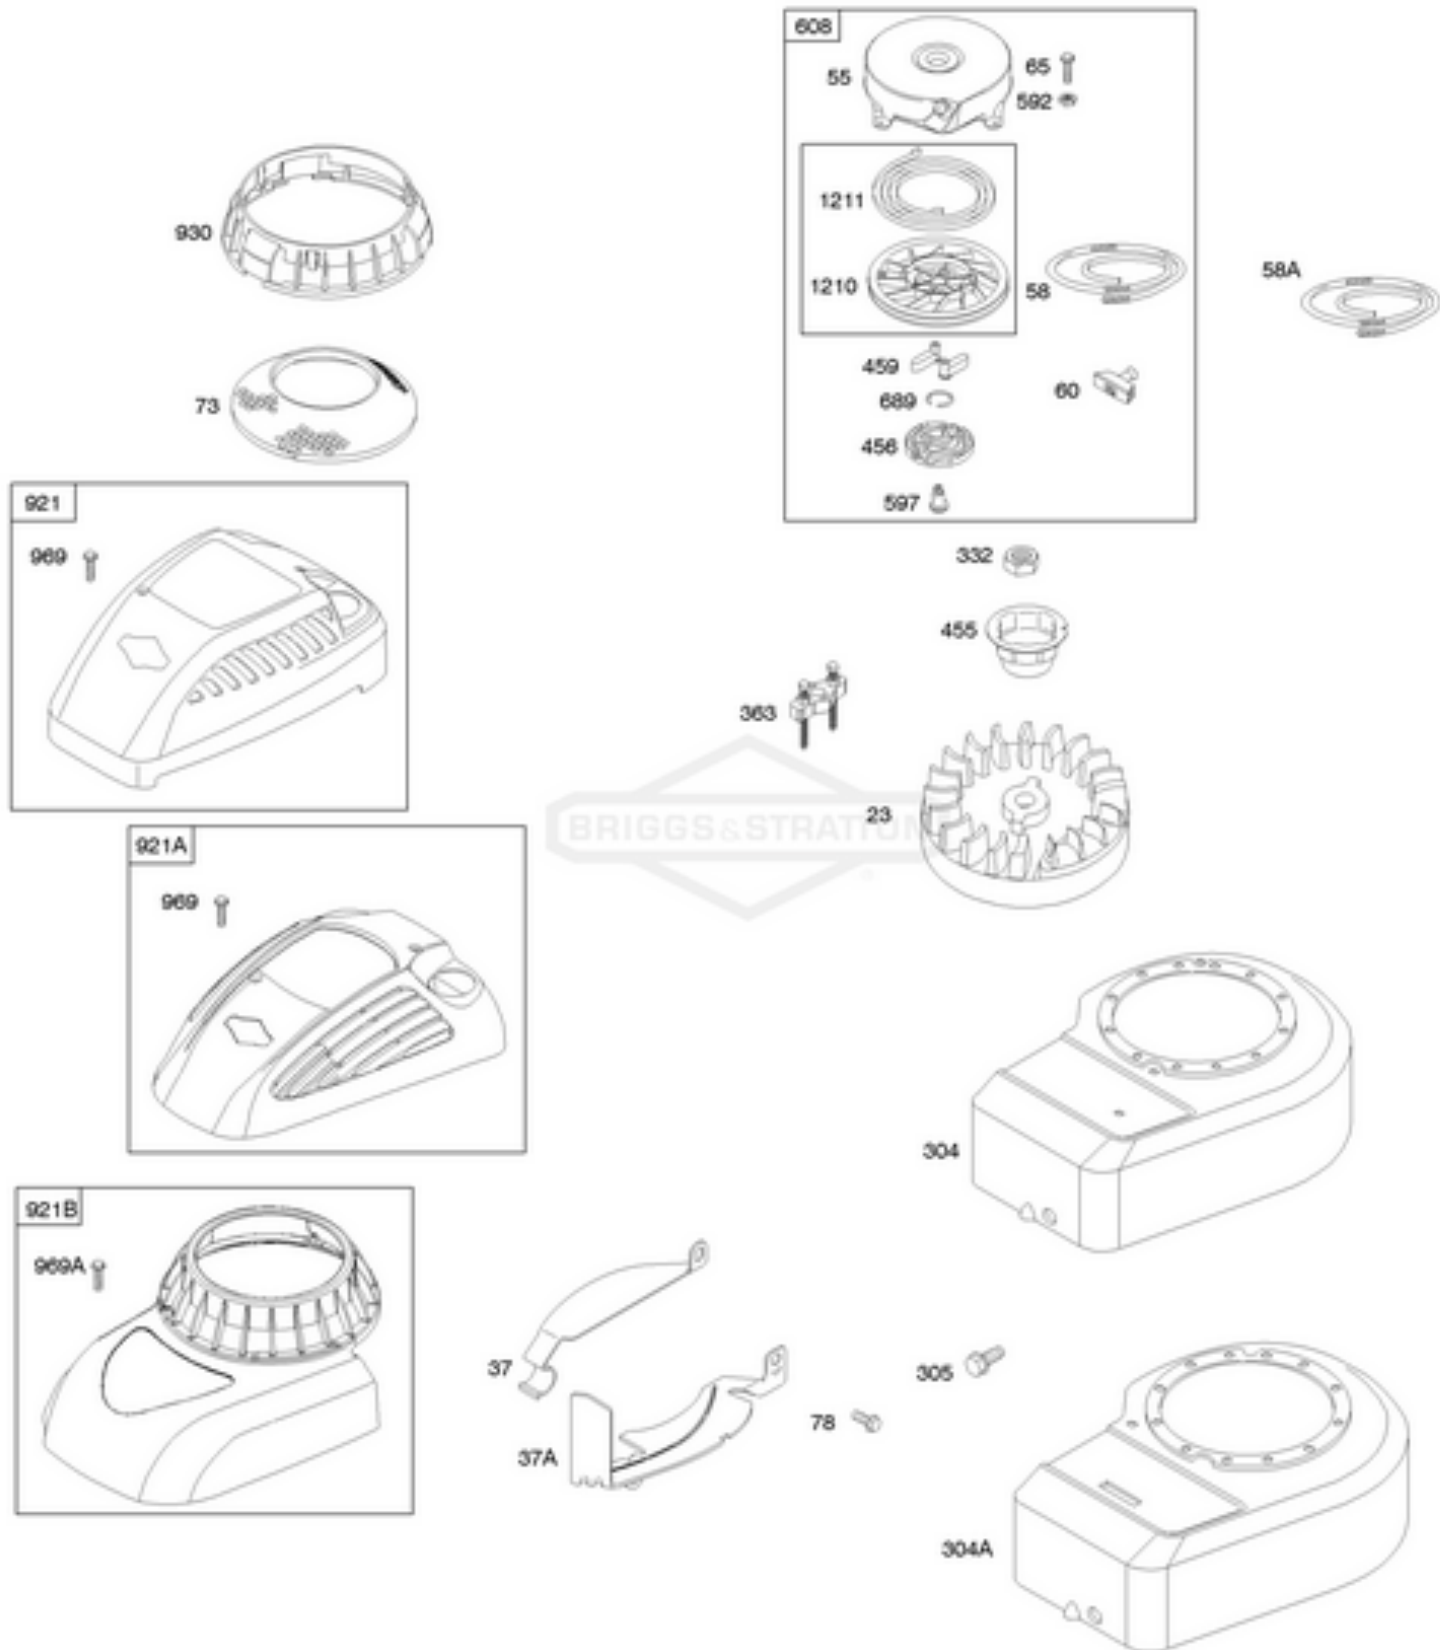
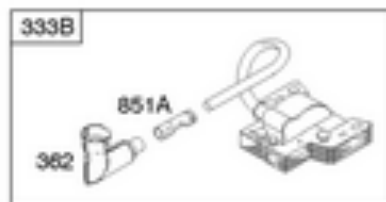



1036 EMISSIONS LABEL

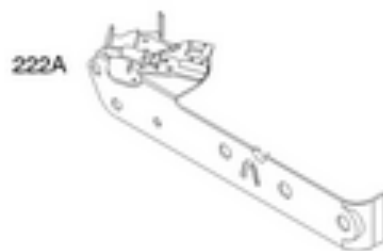

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	795695	FLYWHEEL		Used After Code Date 08012900	
23	690843	FLYWHEEL		Used Before Code Date 08013000	
37	690482	GUARD, Flywheel		(Carburetor Side)	
37A	691209	GUARD-FLYWHEEL		(Muffler Side)	
55	692144	HOUSING, Rewind Starter			
58A	691921	ROPE, Starter		(70)	
60	691915	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
73	699850	SCREEN, Rotating			
78	692198	SCREW		(Flywheel Guard)	
304A	694051	HOUSING-BLOWER		(Non Compliance Engines)	
305	692198	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
363	19069	PULLER, Flywheel			
455	691236	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	690101	STARTER, Rewind		(70 Rope)	
689	691855	SPRING-FRICTION			
930	691348	GUARD, Rewind			
969	694046	SCREW		(Blower Housing)	
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1210	499901	PULLEY/SPRING ASSY		(Pulley)	
1211	499901	PULLEY/SPRING ASSY		(Spring)	

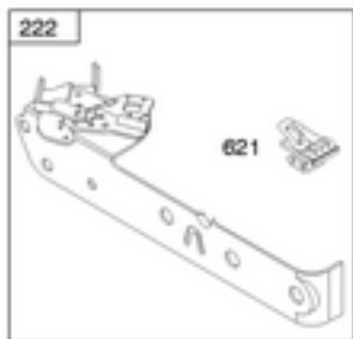








Ref #	Part #	Description	Qty	Context Note	Foot Note
24	222698S	KEY, Flywheel			
163	271139S	GASKET, Air Cleaner		(Air Cleaner)	
188	692198	SCREW		(Control Bracket)	
201	690347	LINK, Air Vane			
209	690251	SPRING-GOVERNOR		(Yellow)	
211	691859	SPRING, Governed Idle			
222	691445	BRACKET-CONTROL			
265A	690798	CLAMP, Casing			
267	691044	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(72" Long)(Cut To Required Length)	
269	691026	WIRE, Control		(78" Long)(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
333B	793352	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature) (1" Long)	
335	691107	SCREW		(Magneto Armature With Air Vane) (1 15/16)	
356	692390	WIRE, Stop			
362	793351	SHIELD-SPARK PLUG			
534	691417	SCREW		(Air Cleaner)	
535	272235S	FILTER, Air Cleaner Foam		Used Before Code Date 02110600	
535A	698369	FILTER, Air Cleaner Foam		Used After Code Date 02110500	
536	698472	CLEANER, Air			
621	692310	SWITCH, Stop			
635	66538S	BOOT, Spark PLug			
643	691911	RETAINER, Air Filter		Used Before Code Date 02110600	
851	493880S	TERMINAL-SPARK PLUG			
851A	692424	TERMINAL, Spark Plug			

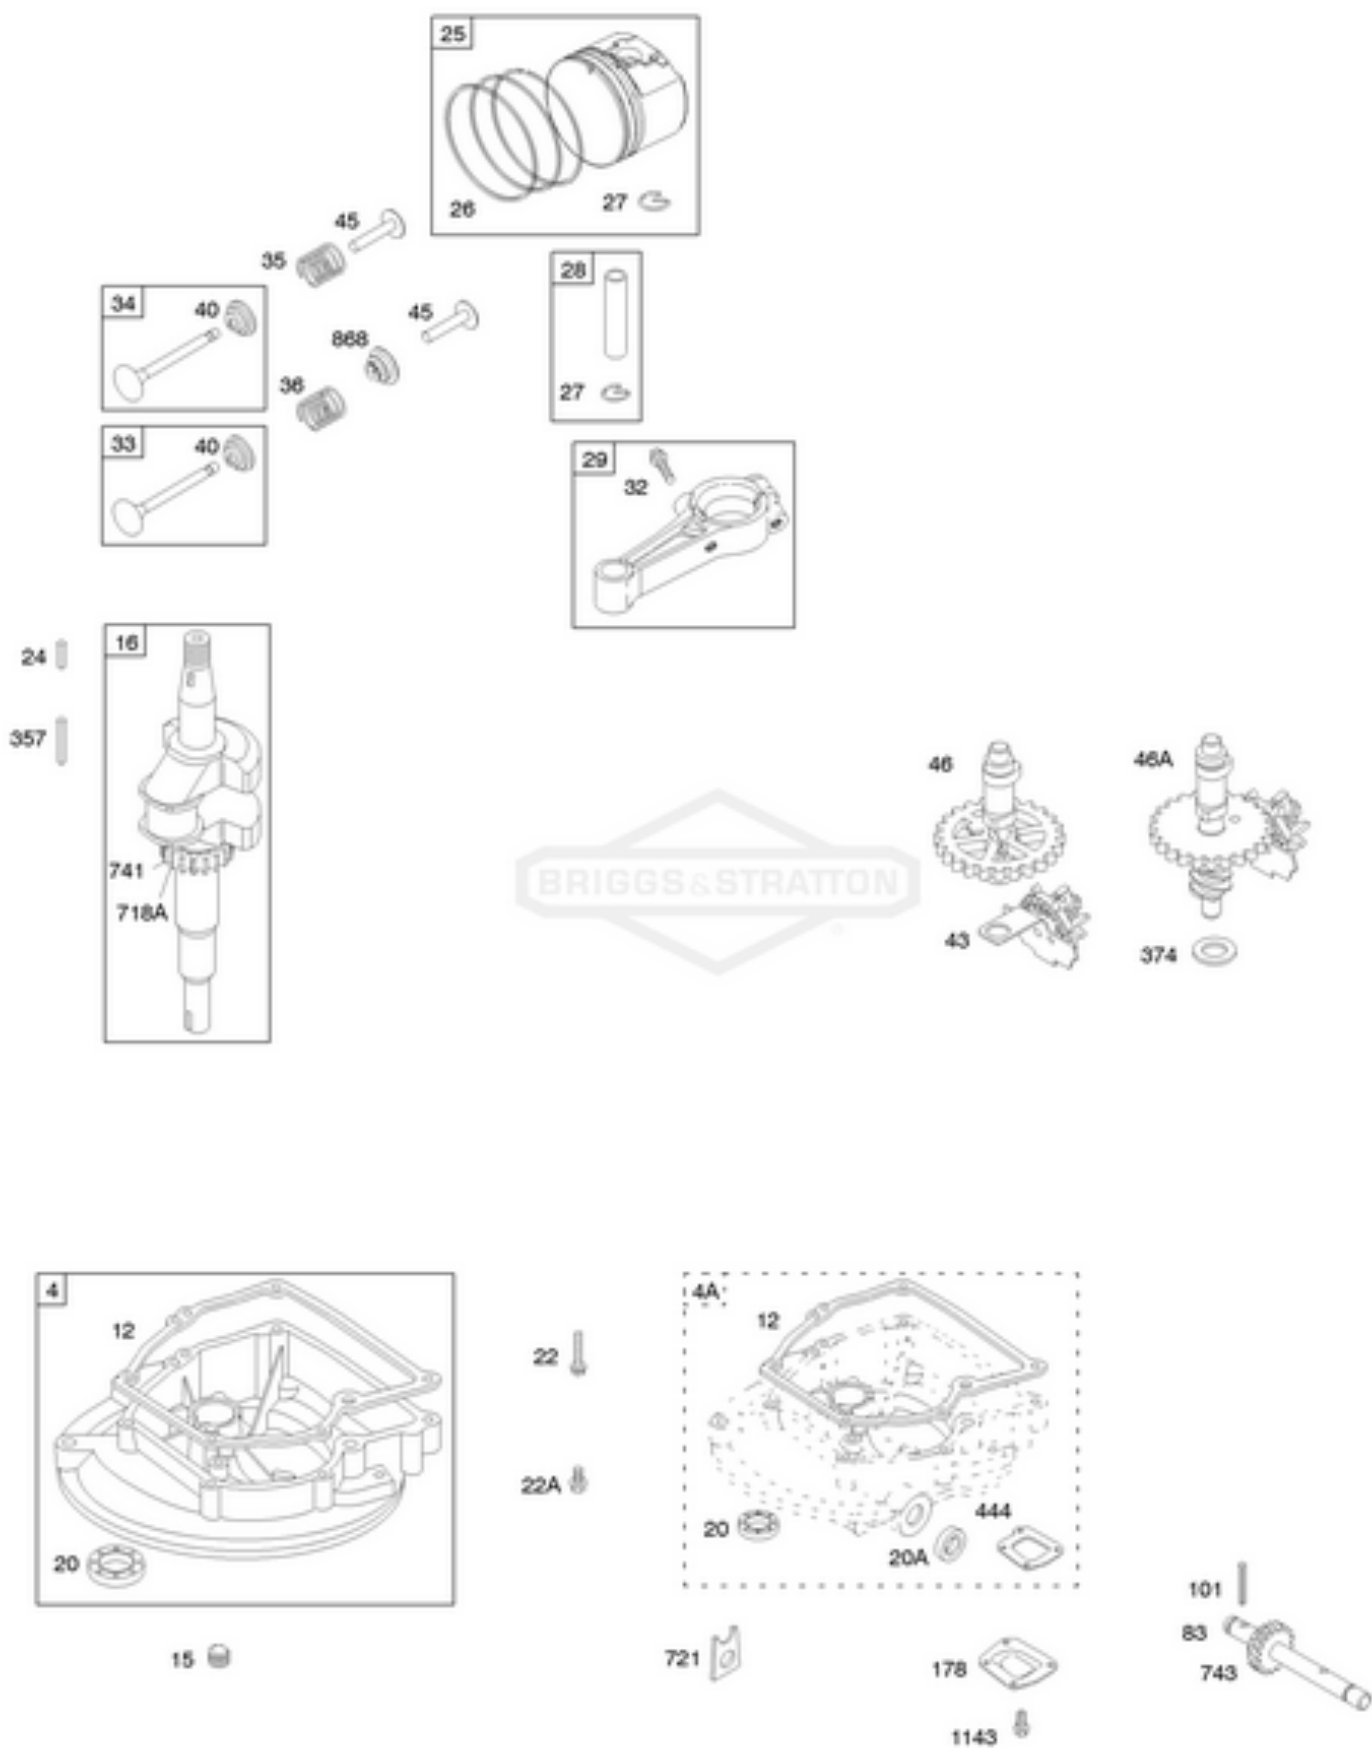

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
4	395384	SUMP, Engine		Used Before Code Date 02111300	
4	698691	SUMP, Engine		Used After Code Date 02111200	
12	270895	GASKET, Crankcase		(.005)	
12	270896	GASKET, Crankcase		(.009)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
15	691680	PLUG, Oil Drain			
16	691471	CRANKSHAFT			
20	391483S	SEAL, Oil		(PTO Side)	
22	692551	SCREW		(Crankcase Cover/Sump) (1 1/4)	
22A	691108	SCREW		(Crankcase Cover/Sump) (19/32" Long)	
24	222698S	KEY, Flywheel			
25	790908	PISTON ASSEMBLY		(Standard) Used After Code Date 04111400	
25	792532	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 04111400	
25	699657	PISTON ASSEMBLY		(Standard) Used Before Code Date 04111500	
26	498680	RING SET-STD		(Standard) Used Before Code Date 03100100	
26	498682	SET, Ring		(.020 Oversize) Used Before Code Date 03100100	
26	498683	SET, Ring		(.030 Oversize) Used Before Code Date 03100100	
26	699658	SET, Ring		(Standard) Used After Code Date 03093000 Used Before Code Date 04111500	
26	795132	SET, Ring		(Standard) Used After Code Date 04111400	
26	795134	SET, Ring		(.020 Oversize) Used After Code Date 04111400	
27	691588	LOCK, Piston Pin			
28	298909	PIN. Piston		(Standard) Used Before Code Date 03100100	
28	699659	PIN, Piston		(Standard) Used After Code Date 03093000	
28	298908	PIN, Piston		(.005 Oversize) Used Before Code Date 03100100	
29	699654	ROD-CONNECTING			
32	691664	SCREW		(Connecting Rod)	
33	296676	VALVE, Exhaust		(Grooved Stem-Includes Retainer)	
34	296677	VALVE, Intake		(Grooved stem-includes Retainer)	
35	690520	SPRING-VALVE		(Intake)	
36	690520	SPRING-VALVE		(Exhaust)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
40	692194	RETAINER, Valve			
43	691983	SLINGER, Governor/Oil		Used Before Code Date 02110500	
43	698690	SLINGER- GOVERNOR/OIL		Used After Code Date 02110400	
45	691762	TAPPET, Valve			
46	691998	CAMSHAFT			
444	691868	GASKET, Drive Gear Cover			
718A	499047	PIN, Locating		(Crankshaft)	
741	691805	GEAR, Timing			
868	697338	SEAL, Valve			
1143	691141	SCREW		(Drive Gear Cover)	

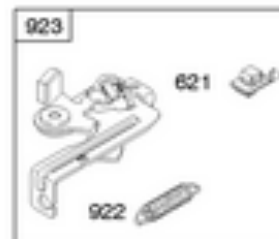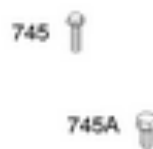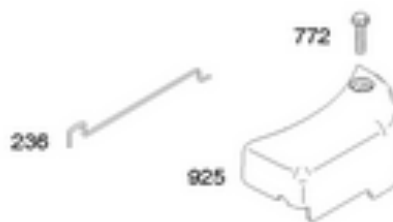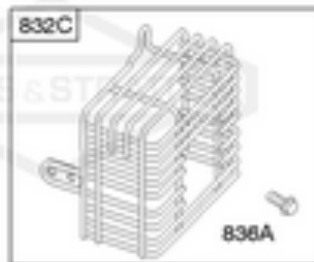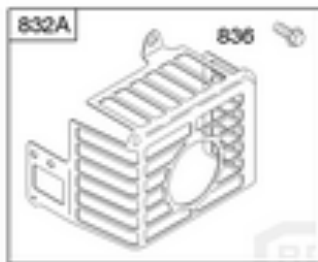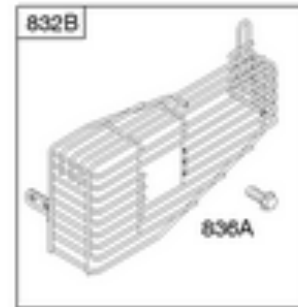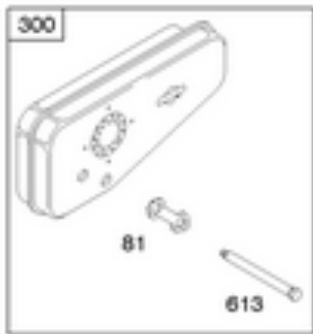

Ref #	Part #	Description	Qty	Context Note	Foot Note
81	691179	LOCK, Muffler Screw			
300	692307	MUFFLER		(Super Lo Tone)	
300A	394569S	MUFFLER		(Round Lo Tone)	
613	691413	SCREW		(Muffler)	
621	692310	SWITCH, Stop			
729	690586	CLIP, Wire			
745	691146	SCREW		(Brake) (7/8)	
745A	690859	SCREW		(Brake) (1/2)	
772	691111	SCREW		(Linkage Cover) (1 1/8)	
832	699299	GUARD, Muffler			
832A	699670	GUARD- MUFFLER			
832B	790743	GUARD, Muffler			
836	690664	SCREW		(Muffler Guard) (13/32)	
836A	790745	SCREW		(Muffler Guard) (1/2)	
836B	691125	SCREW		(Muffler Guard) (5/8) Used After Code Date 04082200	
922	692135	SPRING, Brake			
923	691487	BRAKE			
925	691349	COVER, Linkage			

1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL





1319 WARNING LABEL






WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 500°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

358 ENGINE GASKET SET

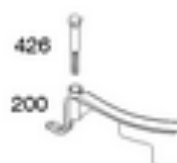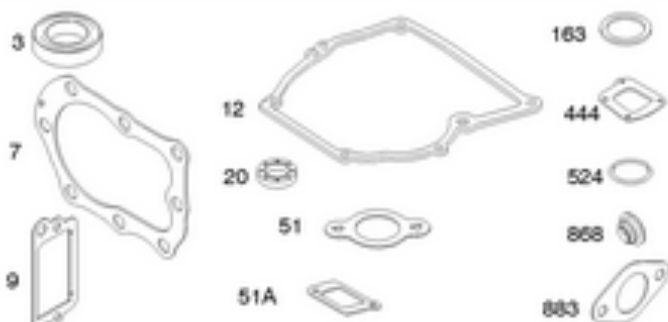

1095 VALVE GASKET SET

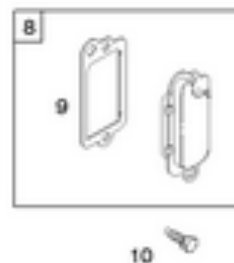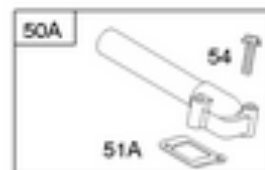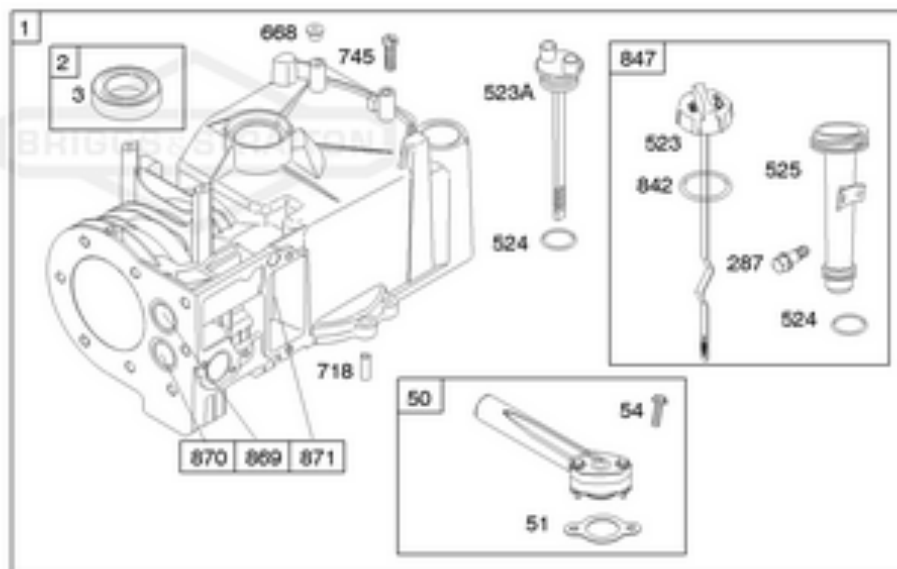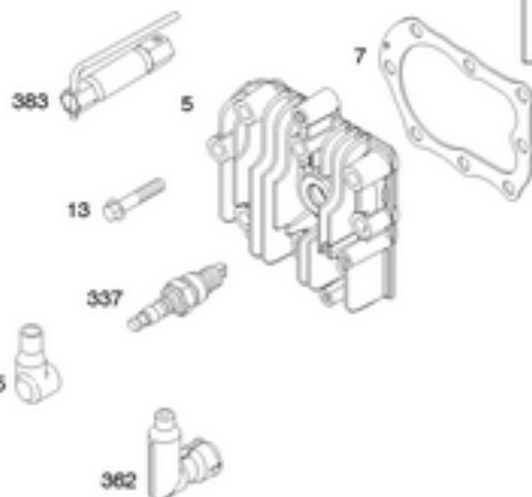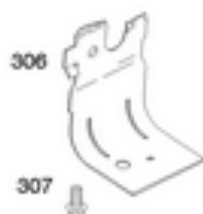

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	699653	CYLINDER ASSEMBLY			
2	399269	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL, Oil		(Magneto Side)	
5	790169	HEAD, Cylinder			
7	698717	GASKET-CYL HD			
8	791781	BREATHER ASSEMBLY			
9	695890	GASKET-BREATHER			
10	691666	SCREW		(Breather Assembly)	
11	691245	TUBE, Breather			
12	270896	GASKET, Crankcase		(.009)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
12	270895	GASKET, Crankcase		(.005)	
13	691640	SCREW		(Cylinder Head)	
20	391483S	SEAL, Oil		(PTO Side)	
50	699644	MANIFOLD, Intake		Used After Code Date 03080300	
50A	693446	MANIFOLD-INTAKE		Used Before Code Date 03080400	
51	699649	GASKET, Intake		Used After Code Date 03080300	
51A	270345S	GASKET, Intake		Used Before Code Date 03080400	
54	691111	SCREW		(Intake Manifold)	
163	271139S	GASKET, Air Cleaner		(Air Cleaner)	
200	691912	BLADE, Governor			
287	691002	SCREW		(Dipstick Tube)	
306	690400	SHIELD, Cylinder		Used Before Code Date 04071400	
307	690345	SCREW		(Cylinder Shield) Used Before Code Date 04071400	
337	802592S	PLUG, Spark		(Resistor)	
358	794209	GASKET SET, Engine			
362	793351	SHIELD-SPARK PLUG			
383	89838S	WRENCH-SPARK PLUG			
426	691107	SCREW		(Governor Blade)	
444	691868	GASKET, Drive Gear Cover			
523	692040	DIPSTICK			
523A	691913	DIPSTICK			
524	691876	SEAL, O-Ring			
525	691320	TUBE, Dipstick			
529	692189	GROMMET			
635	66538S	BOOT, Spark PLug			
668	692889	SPACER		(Cylinder)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
718	690959	PIN, Locating		(Cylinder)	
745	691146	SCREW		(Brake) (7/8)	
842	691870	SEAL, O-Ring		(Dipstick Tube)	
847	691440	DIPSTICK/TUBE ASSY			
868	697338	SEAL, Valve			
869	691701	SEAT-VALVE		(Intake) Used Before Code Date 03080400	
869	699641	SEAT, Valve		(Intake) Used After Code Date 03080300	
870	699642	SEAT, Valve		(Exhaust) Used After Code Date 03080300	
870	691702	SEAT, Valve		(Exhaust) Used Before Code Date 03080400	
871	231348	BUSHING-VALVE GUIDE		(Exhaust) Used Before Code Date 03080400	
871	699643	BUSHING, Valve Guide		(Exhaust) Used After Code Date 03080300	
871	63709	BUSHING, Valve Guide		(Intake)	
883	691880	GASKET-EXHAUST			
1058	277038	MANUAL, Operator's			
1095	498526	GASKET SET, Valve			
1319	794467	LABEL, Warning			
1330	270962	REP MAN-1 CYL L-HD			

