

1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL




1319 WARNING LABEL




REQUIRED when replacing parts with warning labels affixed.





358 ENGINE GASKET SET

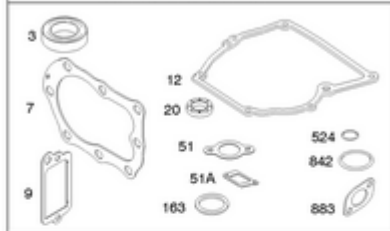

847

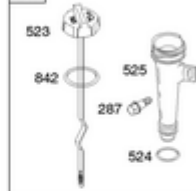


1095 VALVE GASKET SET

 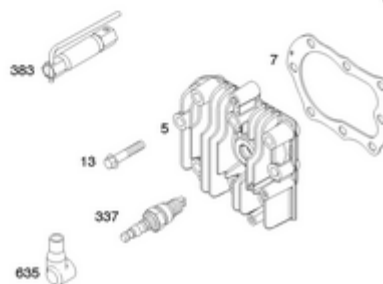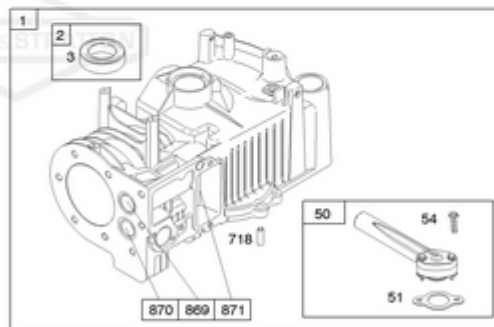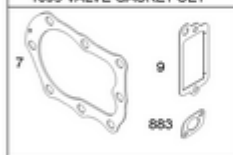

Copyright © Briggs & Stratton, LLC. All rights reserved.



Ref #	Part #	Description	Qty	Context Note	Foot Note
1	699650	CYLINDER ASSEMBLY			
2	399269	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL, Oil		(Magneto Side)	
5	790169	HEAD, Cylinder			
7	698717	GASKET-CYL HD			
8	791781	BREATHER ASSEMBLY			
9	695890	GASKET-BREATHER			
10	691666	SCREW		(Breather Assembly)	
11	691245	TUBE, Breather			
12	270896	GASKET, Crankcase		(.009)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
12	270895	GASKET, Crankcase		(.005)	
13	691640	SCREW		(Cylinder Head)	
20	391483S	SEAL, Oil		(PTO Side)	
50	699644	MANIFOLD, Intake		Used After Code Date 03080300	
50A	693446	MANIFOLD-INTAKE		Used Before Code Date 03080400	
51	699649	GASKET, Intake		Used After Code Date 03080300	
51A	270345S	GASKET, Intake		Used Before Code Date 03080400	
54	691111	SCREW		(Intake Manifold)	
163	271139S	GASKET, Air Cleaner		(Air Cleaner)	
287	691002	SCREW		(Dipstick Tube)	
306	690400	SHIELD, Cylinder		Used Before Code Date 04071400	
307	690345	SCREW		(Cylinder Shield) Used Before Code Date 04071400	
337	697451	PLUG, Spark			
358	794209	GASKET SET, Engine			
383	89838S	WRENCH, Spark Plug			
523A	691913	DIPSTICK			
524	691876	SEAL, O-Ring			
529	692189	GROMMET			
635	66538S	BOOT, Spark PLug			
668	692889	SPACER			
718	690959	PIN, Locating		(Cylinder)	
745	691146	SCREW		(Brake) (7/8)	
869	699641	SEAT, Valve		(Intake) Used After Code Date 03080300	
869	691701	SEAT-VALVE		(Intake) Used Before Code Date 03080400	
870	699642	SEAT, Valve		(Exhaust) Used After Code Date 03080300	

Ref #	Part #	Description	Qty	Context Note	Foot Note
870	691702	SEAT, Valve		(Exhaust) Used Before Code Date 03080400	
871	231348	BUSHING-VALVE GUIDE		(Exhaust) Used Before Code Date 03080400	
871	699643	BUSHING, Valve Guide		(Exhaust) Used After Code Date 03080300	
871	63709	BUSHING, Valve Guide		(Intake)	
883	691880	GASKET-EXHAUST			
1058	277038	MANUAL, Operator's			
1095	498526	GASKET SET, Valve			
1319	794467	LABEL, Warning			
1330	270962	REP MAN-1 CYL L- HD			

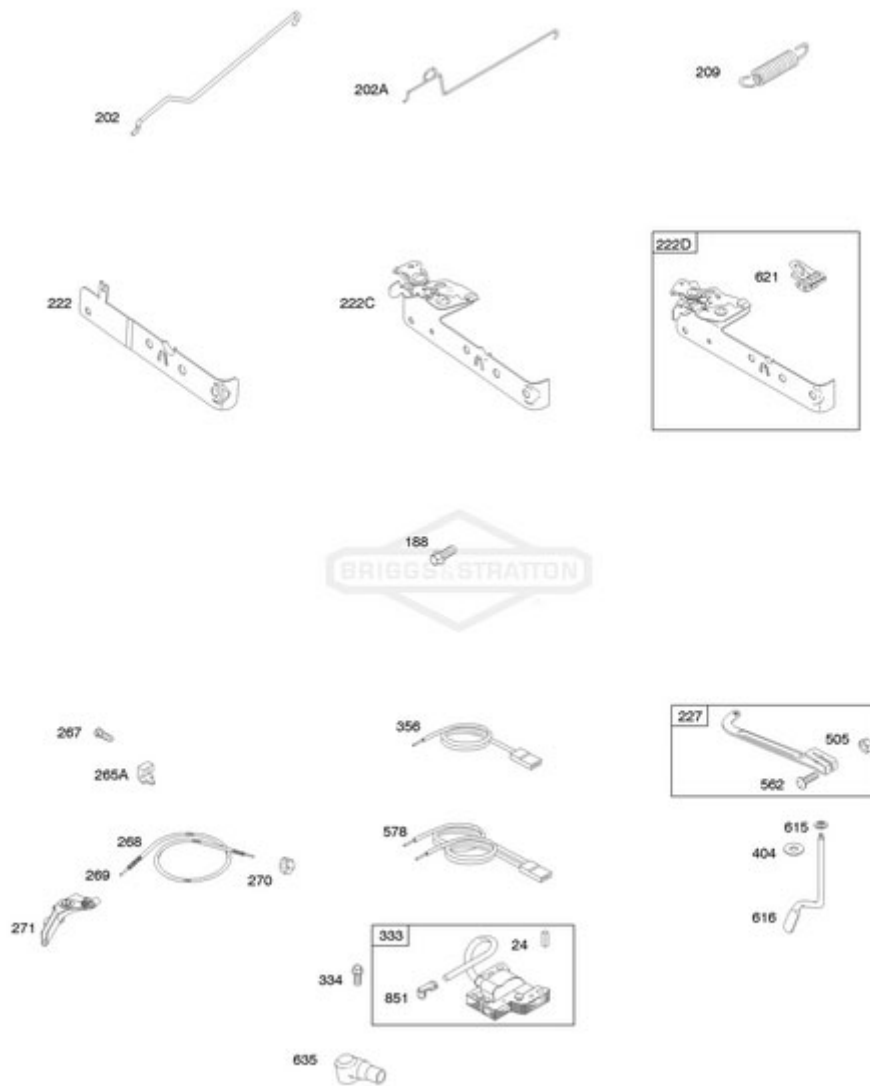


Copyright © Briggs & Stratton, LLC. All Rights Reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
24	222698S	KEY, Flywheel			
188	692198	SCREW		(Control Bracket)	
202	698835	LINK, Mechanical Governor		Used After Code Date 03021900	
202A	697407	LINK, Mechanical Governor		Used Before Code Date 03022000	
209	790001	SPRING, Governor		(Yellow)	
222	698725	BRACKET, Control			
227	697402	LEVER, Governor Control			
268	691025	CASING, Control Wire		(72" Long)(Cut To Required Length)	
269	691026	WIRE, Control		(78" Long)(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
333	793281	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356	692390	WIRE, Stop			
404	690272	WASHER		(Governor Crank)	
505	691251	NUT		(Governor Control Lever)	
562	92613	BOLT		(Governor Lever)	
615	690340	RETAINER, Governor Shaft			
616	697405	CRANK, Governor			
621	692310	SWITCH, Stop			
635	66538S	BOOT, Spark PLug			
851	493880S	TERMINAL-SPARK PLUG			

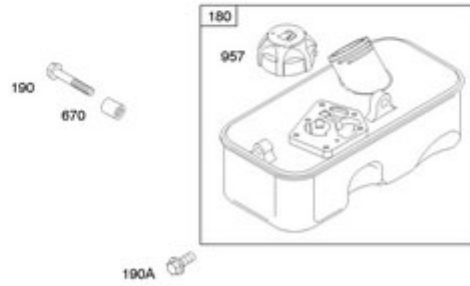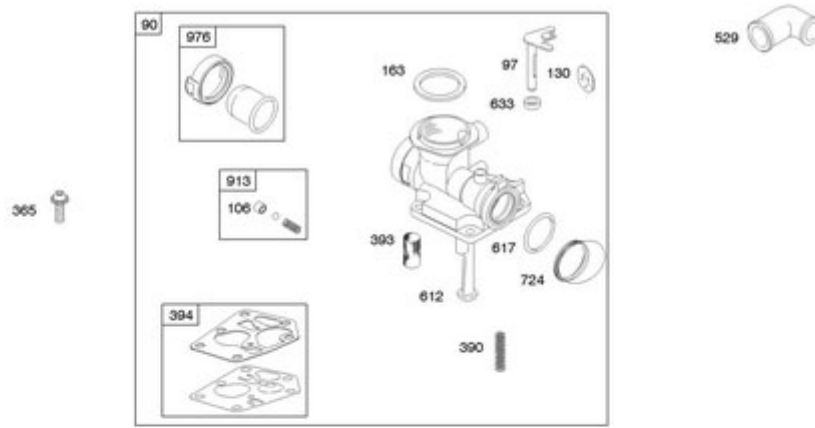

Copyright © Briggs & Stratton, LLC. All Rights Reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
90	697415	CARBURETOR			
97	697414	SHAFT, Throttle			
106	691901	SEAT, Inlet			
130	691190	VALVE, Throttle			
163	271139S	GASKET, Air Cleaner		(Air Cleaner)	
180	494406	TANK, Fuel		(Metal)	
190	691640	SCREW		(Fuel Tank) (1 3/4)	
190A	691108	SCREW		(Fuel Tank) (9/16" Long)	
365	790029	SCREW		(Carburetor)	
390	691839	SPRING-CHOKE DIAPH			
393	691837	SCREEN, Carburetor			
394	495770	GASKET, Carburetor Pump		Used Before Code Date 07080900	
394	795083	DIAPHRAGM, Carburetor		Used After Code Date 07080800	
529	692189	GROMMET			
612	496046S	TUBE-PICK UP			
617	270344S	SEAL, O-Ring		(Intake Manifold)	
633	691321	SEAL-CHOKE/THR SHAFT		(Throttle)	
670	691633	SPACER, Fuel Tank			
724	697478	RETAINER, Seal			
913	494409	SEAT, Valve			
957	497929S	CAP, Fuel Tank		(Plastic)	
976	694394	PRIMER-CARBURETOR			

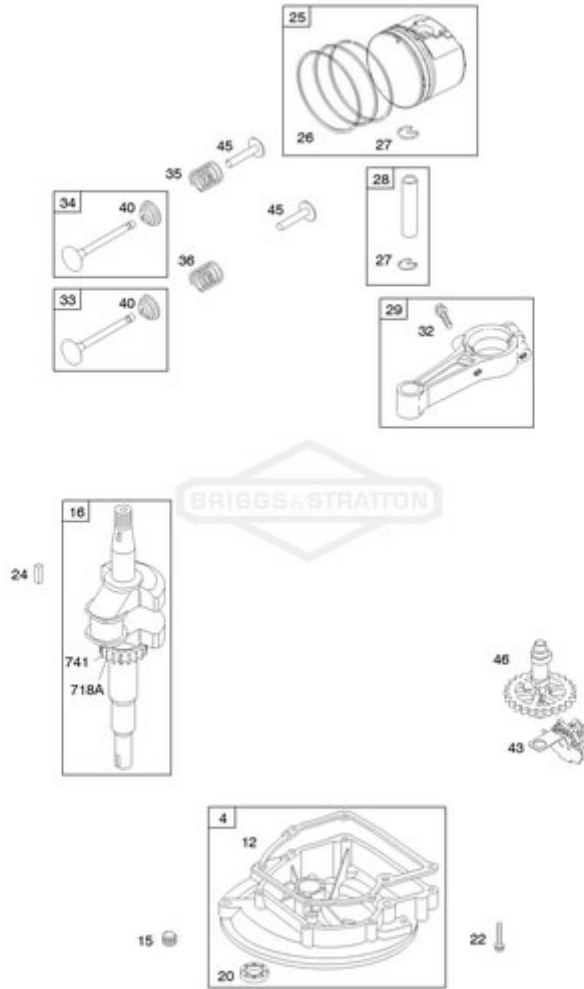

Copyright © Briggs & Stratton, LLC. All Rights Reserved.




Ref #	Part #	Description	Qty	Context Note	Foot Note
4	698691	SUMP, Engine			
12	270895	GASKET, Crankcase		(.005)	
12	270896	GASKET, Crankcase		(.009)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
15	691680	PLUG, Oil Drain			
16	691472	CRANKSHAFT			
20	391483S	SEAL, Oil		(PTO Side)	
22	692551	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	699657	PISTON ASSEMBLY		(Standard) Used After Code Date 03080300 Used Before Code Date 04111500	
25	790908	PISTON ASSEMBLY		(Standard) Used Before Code Date 03080400	
25	790908	PISTON ASSEMBLY		(Standard) Used After Code Date 04111400	
25	792532	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 04111400	
26	498682	SET, Ring		(.020 Oversize) Used Before Code Date 04111500	
26	699658	SET, Ring		(Standard) Used After Code Date 03080300 Used Before Code Date 04111500	
26	790909	SET, Ring		(Standard) Used After Code Date 04111400	
26	795134	SET, Ring		(.020 Oversize) Used After Code Date 04111400	
26	498680	RING SET-STD		(Standard) Used Before Code Date 03080400	
27	691588	LOCK, Piston Pin			
28	298909	PIN. Piston		(Standard) Used Before Code Date 03080400	
28	699659	PIN, Piston		(Standard) Used After Code Date 03080300	
29	699654	ROD- CONNECTING			
32	691664	SCREW		(Connecting Rod)	
33	296676	VALVE, Exhaust		(Grooved Stem-Includes Retainer)	
34	296677	VALVE, Intake		(Grooved stem-includes Retainer)	
35	690520	SPRING-VALVE		(Intake)	
36	690520	SPRING-VALVE		(Exhaust)	
40	692194	RETAINER, Valve			
43	697799	SLINGER, Governor/Oil			

Ref #	Part #	Description	Qty	Context Note	Foot Note
45	691762	TAPPET, Valve			
46	691998	CAMSHAFT			
718A	499047	PIN, Locating		(Crankshaft)	
741	691805	GEAR, Timing			

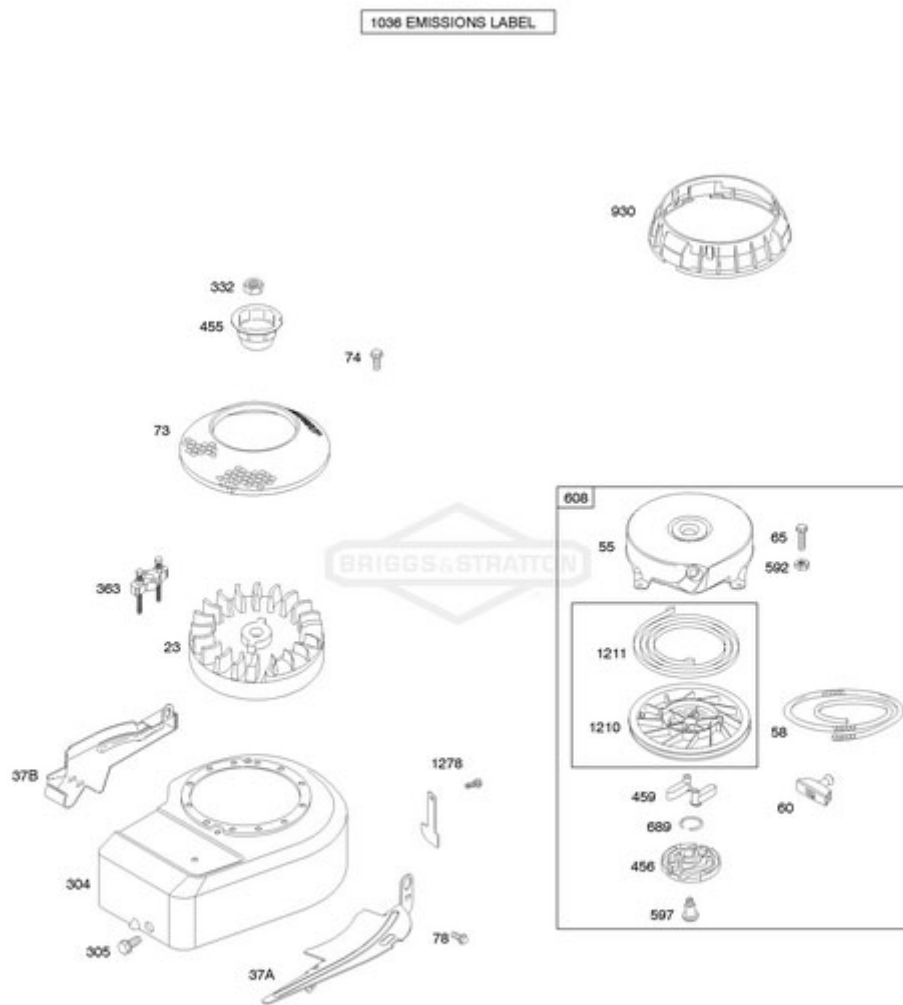

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	795549	FLYWHEEL			
37A	793748	GUARD, Flywheel		(Muffler Side)	
37B	697403	GUARD, Flywheel		(Carburetor Side)	
55	692144	HOUSING, Rewind Starter			
58	697316	ROPE, Starter		(88 5/8)	
60	691915	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
73	699850	SCREEN, Rotating			
74	690345	SCREW		(Rotating Screen)	
78	692198	SCREW		(Flywheel Guard)	
304	698046	HOUSING, Blower			
305	692198	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
363	19069	PULLER, Flywheel			
455	691236	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	499706	STARTER, Rewind			
689	691855	SPRING-FRICTION			
930	691348	GUARD, Rewind			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1210	499901	PULLEY/SPRING ASSY		(Pulley)	
1211	499901	PULLEY/SPRING ASSY		(Spring)	
1278	691002	SCREW		(Governor Nut Guard) Used Before Code Date 05121300	

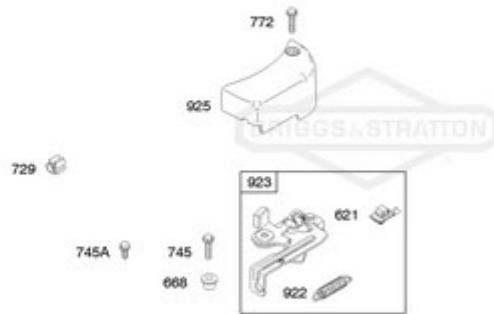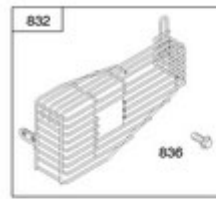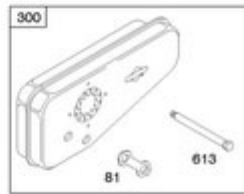

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
81	691179	LOCK, Muffler Screw			
163	271139S	GASKET, Air Cleaner		(Air Cleaner)	
300	692307	MUFFLER		(Super Lo Tone)	
534	691417	SCREW		(Air Cleaner)	
535	272235S	FILTER, Air Cleaner Foam		Used Before Code Date 02110600	
535A	698369	FILTER, Air Cleaner Foam		Used After Code Date 02110500	
536	698472	CLEANER, Air			
613	691413	SCREW		(Muffler)	
621	692310	SWITCH, Stop			
668	692889	SPACER			
729	690586	CLIP, Wire			
745	691146	SCREW		(Brake) (7/8)	
745A	690859	SCREW		(Brake) (1/2)	
772	691111	SCREW		(Linkage Cover)	
832	790743	GUARD, Muffler		(Super Lo Tone)	
836	790745	SCREW		(Muffler Guard) (1/2)	
836A	691125	SCREW		(Muffler Guard) (2/3)	
922	692135	SPRING, Brake			
923	691487	BRAKE			
925	691349	COVER, Linkage			