
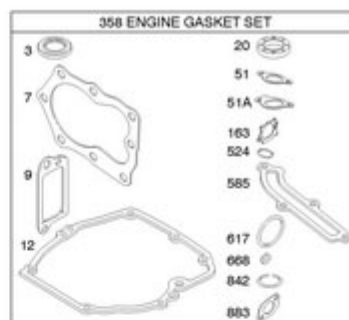
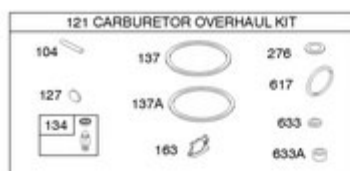
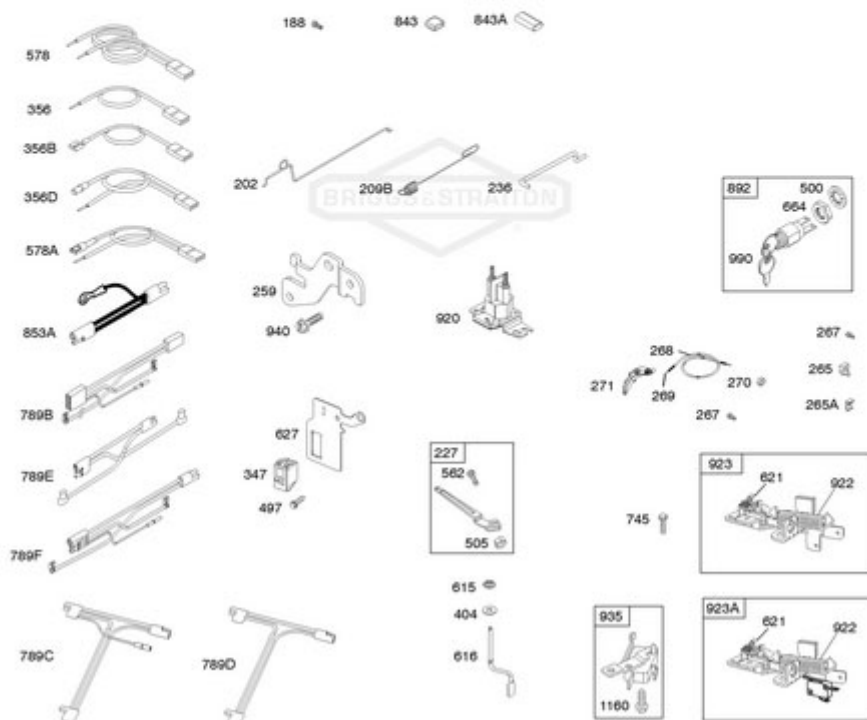


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
3	299819S	SEAL, Oil		(Magneto Side)	
7	799875	GASKET, Cylinder Head		Used After Code Date 11063000	
7	692249	GASKET, Cylinder Head		Used Before Code Date 11070100	
9	699833	GASKET- BREATHER			
12	692232	GASKET, Crankcase			
20	399781S	SEAL, Oil		(PTO Side)	
51	272199S	GASKET, Intake			
51A	794306	GASKET, Intake			
104	797622	PIN, Float Hinge			
121	498260	KIT, Carburetor Overhaul			
127	694468	PLUG, Welch		(Bowl Vent)	
134	398188	KIT-NEEDLE/ SEAT			
137	796610	GASKET, Float Bowl			
137A	693981	GASKET- FLOAT BOWL		(1/16)	
163	795629	GASKET-AIR CLEANER		(Air Cleaner)	
276	271716	WASHER- SEALING		(Main Jet)	
309	799045	MOTOR- STARTER		Used After Code Date 10112700	
309A		Motor-Starter		(For Replacement Starter Motor, Order Reference 309) Used After Code Date 07052800 Used Before Code Date 10112800	
309B		Motor-Starter		(For Replacement Starter Motor, Order Reference 309) Used Before Code Date 07052900	
358	590508	GASKET SET, Engine			
510	795093	DRIVE, Starter			
513	795100	CLUTCH- DRIVE			
524	692296	SEAL- DIPSTICK TUBE		(Dipstick Tube)	
585	691879	GASKET-BREA PASSAGE			
617	270344S	SEAL, O-Ring		(Intake Manifold)	
633	691321	SEAL-CHOKE/ THR SHAFT		(Throttle Shaft)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
633A	693867	SEAL, Choke/ Throttle Shaft			
651	691660	SCREW		(Starter Gear Cover)	
668	493823	SPACER		(Includes 2)	
697	691127	SCREW		(Starter Motor) (Drive Cap)	
742	93941	RETAINER, E Ring			
783	795099	GEAR-PINION			
783A	795096	GEAR-PINION			
784	795095	COVER, Starter Gear			
785	692352	GASKET- STARTER COVER			
842	691031	SEAL, O-Ring		(Dipstick Tube)	
853	695268	ADAPTER, Wire			
883	691881	GASKET, Exhaust			
920	691656	SOLENOID, Starter			
937	795098	SPLINE- STARTER			
937A	799420	SPLINE, Starter			
1095	590507	GASKET SET, Valve			

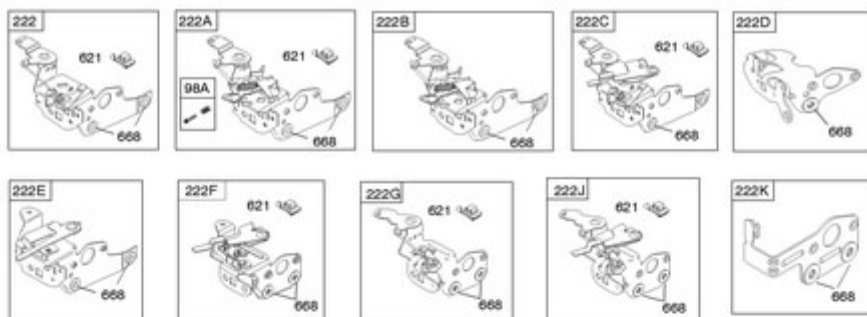

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
98A	493280	KIT-IDLE SPEED		(Idle Speed)	
188	693399	SCREW		(Control Bracket)	
202	691829	LINK, Mechanical Governor			
209B	691292	SPRING, Governor			
222	790143	BRACKET-CONTROL		(Remote/Manual Friction)	(Primer)
227	690783	LEVER-GOV CONTROL			
236	691826	LINK, Lockout			
259	691223	BRACKET, Casing Clamp			
265	690798	CLAMP, Casing			
265A	691024	CLAMP, Casing			
267	691044	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
347	691396	SWITCH, Rocker			
356	692390	WIRE, Stop			
356B	693010	WIRE, Stop			
356D	496381	WIRE, Stop			
404	690272	WASHER		(Governor Crank)	
497	690664	SCREW		(Stopswitch Bracket)	
500	691086	WASHER		(Key Switch)	
505	691251	NUT		(Governor Control Lever)	
562	691119	BOLT		(Governor Control Lever)	
578	398153	WIRE ASSEMBLY			
578A	695283	WIRE ASSEMBLY			
615	690340	RETAINER, Governor Shaft			
616	698801	CRANK-GOVERNOR			
621	692310	SWITCH, Stop			
627	792565	BRACKET-STOPSWITCH			
664	691087	NUT		(Key Switch)	
668	493823	SPACER		(Includes 2)	
745	691648	SCREW		(Brake)	
789B	792685	HARNESS, Wiring			
789C	796385	HARNESS, Wiring			
789D	796574	HARNESS, Wiring			
843	691884	SLEEVE, Lever		(Speed Control)	
843A	691895	SLEEVE, Lever		(Choke)	
853A	695897	ADAPTER, Wire			
892	690646	SWITCH, Key			
920	691656	SOLENOID, Starter			
922	692135	SPRING, Brake			
923	796136	BRAKE		(Rewind Start)	
923A	796387	BRAKE		(With Stop Switch)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
935	499421	SWITCH, Interlock		Used Before Code Date 08050100	
940	690664	SCREW		(Casing Clamp Bracket)	
990	691959	SET, Key			
1160	690345	SCREW		(Interlock Switch)	

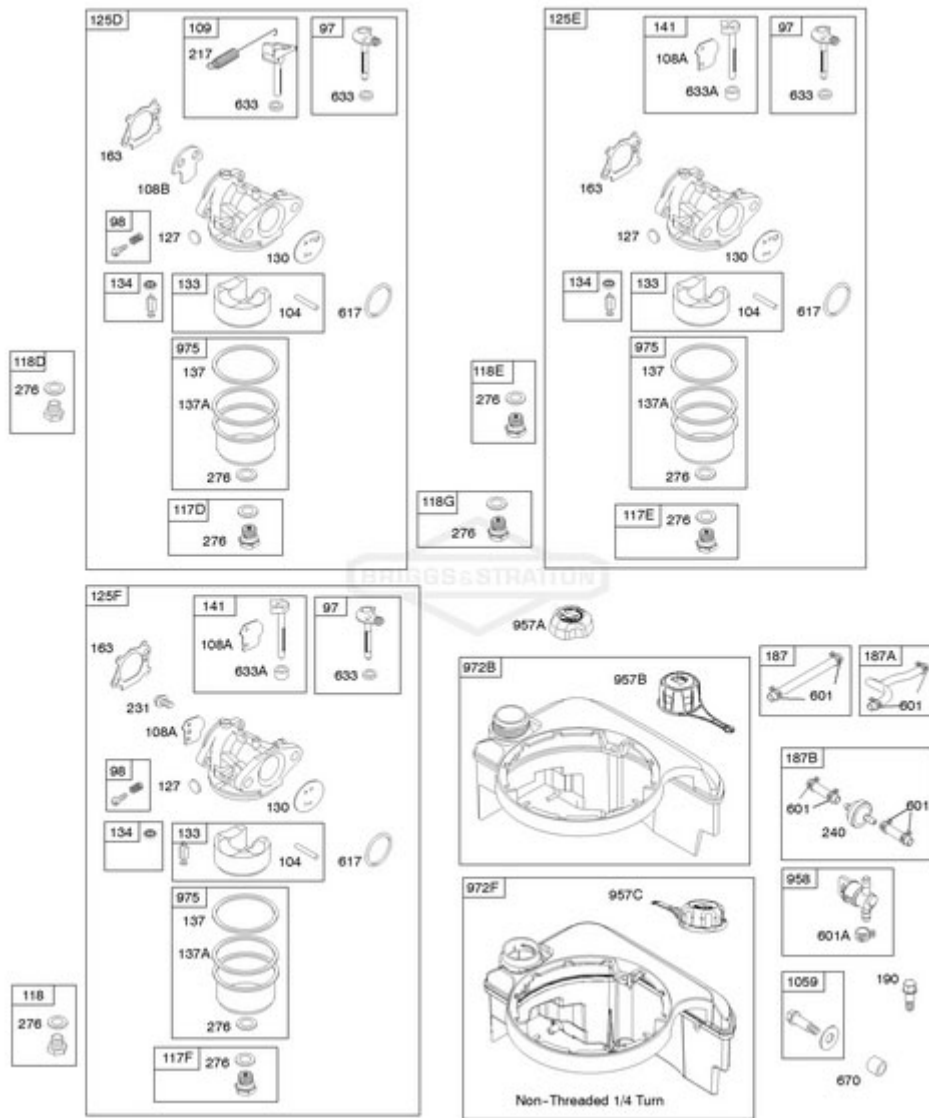

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
97	696565	SHAFT, Throttle		(Plastic)	
98	398185	KIT-IDLE SPEED		(Idle Speed) (Lmt 26, 27, 28, 31)	
104	797622	PIN, Float Hinge			
108A	795935	VALVE, Choke		Used After Code Date 08031200	
108A	790844	VALVE, Choke		Used Before Code Date 08031300	
109	494218	KIT, Choke Shaft			
117D	697355	JET, Main		(Standard) Used After Code Date 04101700	
117D	498981	JET, Main		(Standard) Used Before Code Date 04101800	
117F	590441	JET, Main		(Standard) Used Before Code Date 10111100	
117E	695042	JET, Main		(Standard) Used Before Code Date 09092900	
117E	798660	JET, Main		(Standard)	
118D	497466	JET, Main		(High Altitude) Used Before Code Date 04101800	
118D	692677	JET, Main		(High Altitude) Used After Code Date 04101700	
118G	692677	JET, Main		(High Altitude) Used Before Code Date 07020700	
118G	694250	JET, Main		(High Altitude) Used After Code Date 08061900	
118G	695042	JET, Main		(High Altitude) Used After Code Date 07020600 Used Before Code Date 08062000	
118E	798661	JET, Main		(High Altitude)	
118E	799606	JET, Main		(High Altitude)	
125E	799866	CARBURETOR		(Autochoke System) Used After Code Date 07020600	
125E	799871	CARBURETOR		(Autochoke System) Used Before Code Date 07020700	
127	694468	PLUG, Welch		(Bowl Vent)	
130	696564	VALVE, Throttle			
133	398187	FLOAT-CARBURETOR			
134	398188	KIT-NEEDLE/SEAT			
137	796610	GASKET, Float Bowl			
137A	693981	GASKET-FLOAT BOWL		(1/16)	
141	796193	KIT, Choke Shaft			
163	795629	GASKET-AIR CLEANER		(Air Cleaner)	
187	791766	LINE, Fuel		(15" Long)(Cut To Required Length)	
187A	791873	LINE-FUEL		(Formed)(Cut To Required Length)	
187B	791891	LINE-FUEL		(Includes Filter)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
190	690940	SCREW		(Fuel Tank)	
217	690354	SPRING, Choke Return			
231	691636	SCREW		(Choke Valve)	
240	298090S	FILTER, Fuel			
276	271716	WASHER- SEALING		(Main Jet)	
601	791850	CLAMP, Hose			
601A	691038	CLAMP, Hose			
617	270344S	SEAL, O-Ring		(Intake Manifold)	
633	691321	SEAL-CHOKE/THR SHAFT		(Throttle Shaft)	
633A	693867	SEAL, Choke/ Throttle Shaft			
670	692294	SPACER, Fuel Tank			
957A	692046	CAP, Fuel Tank			
957B	796577	CAP-FUEL TANK			
957C	799585	CAP, Fuel Tank			
958	698183	VALVE, Fuel Shut Off			
972B	699374	TANK, Fuel			
972F	590490	TANK, Fuel			
975	796611	BOWL, Float			
1059	692311	KIT, Screw/Washer			

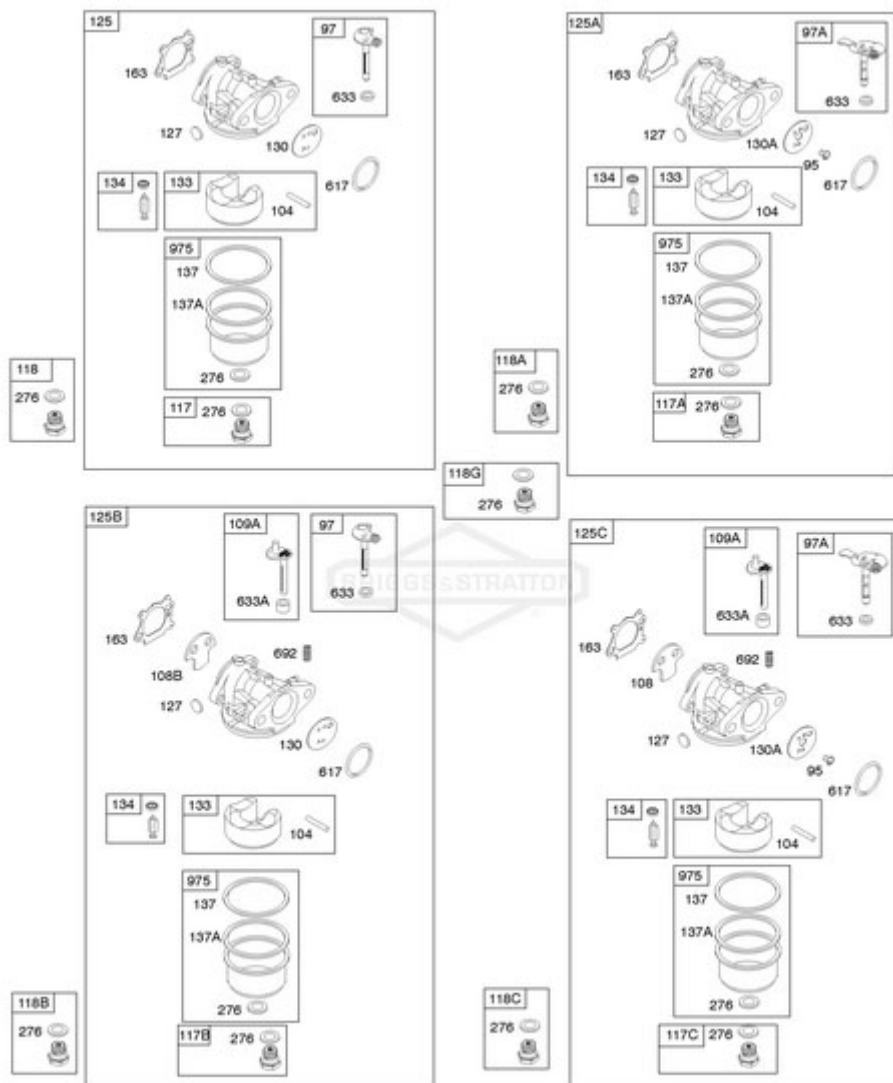

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
95	691636	SCREW		(Throttle Valve)	
97	696565	SHAFT, Throttle		(Plastic)	
97A	493267	SHAFT-THROTTLE		(Metal)	
104	797622	PIN, Float Hinge			
108	691182	VALVE-CHOKE			
109A	498593	SHAFT, Choke			
117	799604	JET, Main		(Standard)	
117A	692677	JET, Main		(Standard)	
118A	497315	JET, Main		(High Altitude)	
118B	797575	JET, Main		(High Altitude)	
118G	695042	JET, Main		(High Altitude) Used After Code Date 07020600 Used Before Code Date 08062000	
118G	694250	JET, Main		(High Altitude) Used After Code Date 08061900	
118C	497466	JET, Main		(High Altitude)	
118G	692677	JET, Main		(High Altitude) Used Before Code Date 07020700	
125A	799868	CARBURETOR		(Primer)	
127	694468	PLUG, Welch		(Bowl Vent)	
130	696564	VALVE, Throttle			
130A	691203	VALVE, Throttle			
133	398187	FLOAT- CARBURETOR			
134	398188	KIT-NEEDLE/SEAT			
137	796610	GASKET, Float Bowl			
137A	693981	GASKET-FLOAT BOWL		(1/16)	
163	795629	GASKET-AIR CLEANER		(Air Cleaner)	
276	271716	WASHER-SEALING		(Main Jet)	
617	270344S	SEAL, O-Ring		(Intake Manifold)	
633	691321	SEAL-CHOKE/THR SHAFT		(Throttle Shaft)	
633A	693867	SEAL, Choke/ Throttle Shaft			
692	590931	SPRING, Detent			
975	796611	BOWL, Float			

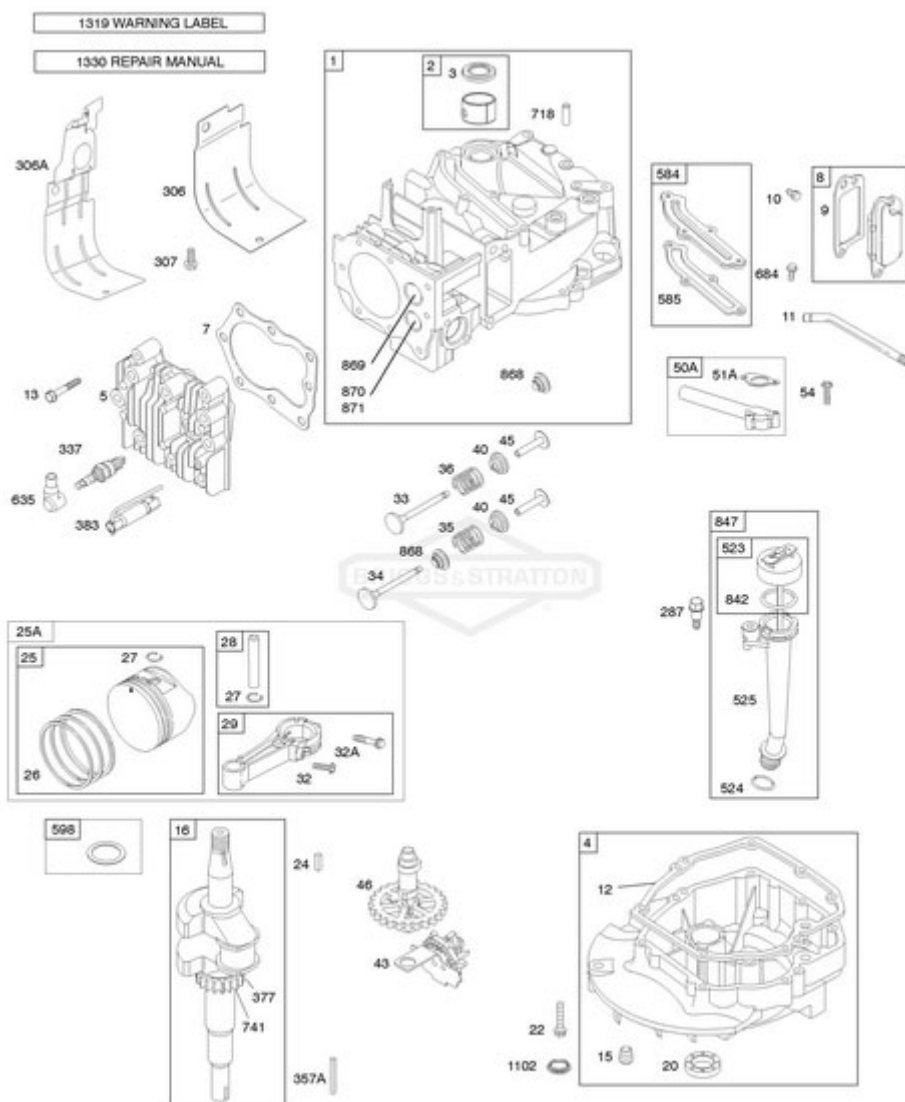


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	592645	CYLINDER ASSEMBLY			
2	796961	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL, Oil		(Magneto Side)	
4	493279	SUMP, Engine			
5	590411	HEAD, Cylinder		Used After Code Date 11063000	
5	594989	HEAD-CYLINDER		Used Before Code Date 11070100	
7	692249	GASKET, Cylinder Head		Used Before Code Date 11070100	
7	799875	GASKET, Cylinder Head		Used After Code Date 11063000	
8	590395	BREATHER ASSEMBLY			
9	699833	GASKET-BREATHER			
10	691125	SCREW		(Breather Assembly)	
11	691781	TUBE-BREATHER			
12	692232	GASKET, Crankcase			
13	690912	SCREW		(Cylinder Head) Used Before Code Date 11070100	
13	590422	SCREW		(Cylinder Head) Used After Code Date 11063000	
15	691680	PLUG, Oil Drain		(Square Socket)	
16	797017	CRANKSHAFT			
20	399781S	SEAL, Oil		(PTO Side)	
22	691092	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	799063	PISTON ASSEMBLY		(Standard) Used Before Code Date 07090400	
25	799064	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 07090300 Used Before Code Date 09041700	
25	590404	PISTON ASSEMBLY		(Standard) Used After Code Date 07090300	
25	590405	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 11063000	
25A	590406	PISTON ASSEMBLY		(Standard) Used Before Code Date 09041700	
26	795432	SET, Ring		(.020 Oversize) Used After Code Date 07090300 Used Before Code Date 09041700	
26	797304	SET, Ring		(Replacement, See Ref #25, 590404) Used After Code Date 09041600 Used Before Code Date 11070100	


Ref #	Part #	Description	Qty	Context Note	Foot Note
26	797305	SET, Ring		(.020 Oversize) Used After Code Date 09041600 Used Before Code Date 11070100	
26	590402	SET, Ring		(Standard) Used After Code Date 11063000	
26	590403	SET, Ring		(.020 Oversize) Used After Code Date 11063000	
26	791098	SET, Ring		(Standard) Used Before Code Date 07090400	
26	791324	SET, Ring		(.020 Oversize) Used Before Code Date 07090400	
26	795431	RING SET		(Standard) Used After Code Date 07090300 Used Before Code Date 09041700	
27	691866	LOCK-PISTON PIN		Used Before Code Date 09041700	
27	691588	LOCK, Piston Pin		Used After Code Date 09041600	
28	298909	PIN. Piston		(Standard) Used After Code Date 09041600	
28	499423	PIN-PISTON/STD		(Standard) Used Before Code Date 09041700	
29	499424	ROD, Connecting		(Replacement, See Ref #25A, 590406) Used After Code Date 09041600	
29	797306	ROD, Connecting		(Standard) Used After Code Date 09041600	
32	691664	SCREW		(Connecting Rod)	
32A	695759	SCREW		(Connecting Rod)	
33	590394	VALVE-EXHAUST			
34	590393	VALVE-INTAKE			
35	691270	SPRING, Valve		(Intake)	
36	691270	SPRING, Valve		(Exhaust)	
40	692194	RETAINER, Valve			
43	691997	SLINGER, Governor/Oil			
45	690548	TAPPET, Valve			
46	691449	CAMSHAFT			
50A	794305	MANIFOLD, Intake			
51A	794306	GASKET, Intake			
54	691650	SCREW		(Intake Manifold)	
287	690940	SCREW		(Dipstick Tube)	
306	690450	SHIELD, Cylinder			
306A	790836	SHIELD, Cylinder			
307	690345	SCREW		(Cylinder Shield)	
337	796112S	PLUG, Spark		(Resistor) Used Before Code Date 11070100	
337	593941	PLUG, Spark		Used After Code Date 11063000	

Ref #	Part #	Description	Qty	Context Note	Foot Note
337	697451	PLUG, Spark		(EMS) Used Before Code Date 11070100	
357A	691483	KEY, Drive Pulley			
377	690979	KEY, Woodruff			
383	89838S	WRENCH, Spark Plug			
523	499621	DIPSTICK			
524	692296	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
525	495265	TUBE, Dipstick			
584	697734	COVER-BREA PASSAGE			
585	691879	GASKET-BREA PASSAGE			
598	592587	SHIM, End Play		(Crankshaft or Camshaft Bearing) (0.012)	
635	66538S	BOOT, Spark PLug			
684	690345	SCREW		(Breather Passage Cover)	
718	690959	PIN, Locating			
741	797521	GEAR, Timing		(Metal) Used After Code Date 08021700	
741	691830	GEAR-TIMING		(Uses Woodruff Key)	
741	790345	GEAR, Timing		(Use Without Woodruff Key) Used Before Code Date 07100100	
741	794388	GEAR, Timing		(Use Without Woodruff Key) Used After Code Date 07093000 Used Before Code Date 08021800	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	692047	DIPSTICK/TUBE ASSY			
868	590410	SEAL, Valve		Used After Code Date 11063000	
868	697338	SEAL, Valve		Used Before Code Date 11070100	
869	691155	SEAT, Valve		(Intake)	
870	690380	SEAT, Valve		(Exhaust)	
871	262001	BUSHING-VALVE GUIDE		(Exhaust) Used Before Code Date 11070100	
871	590409	BUSHING, Valve Guide		Used After Code Date 11063000	
871	63709	BUSHING, Valve Guide		(Intake) Used Before Code Date 11070100	
1102	691255	PILOT, Guide			
1319	794467	LABEL, Warning			
1330	270962	REP MAN-1 CYL L-HD			

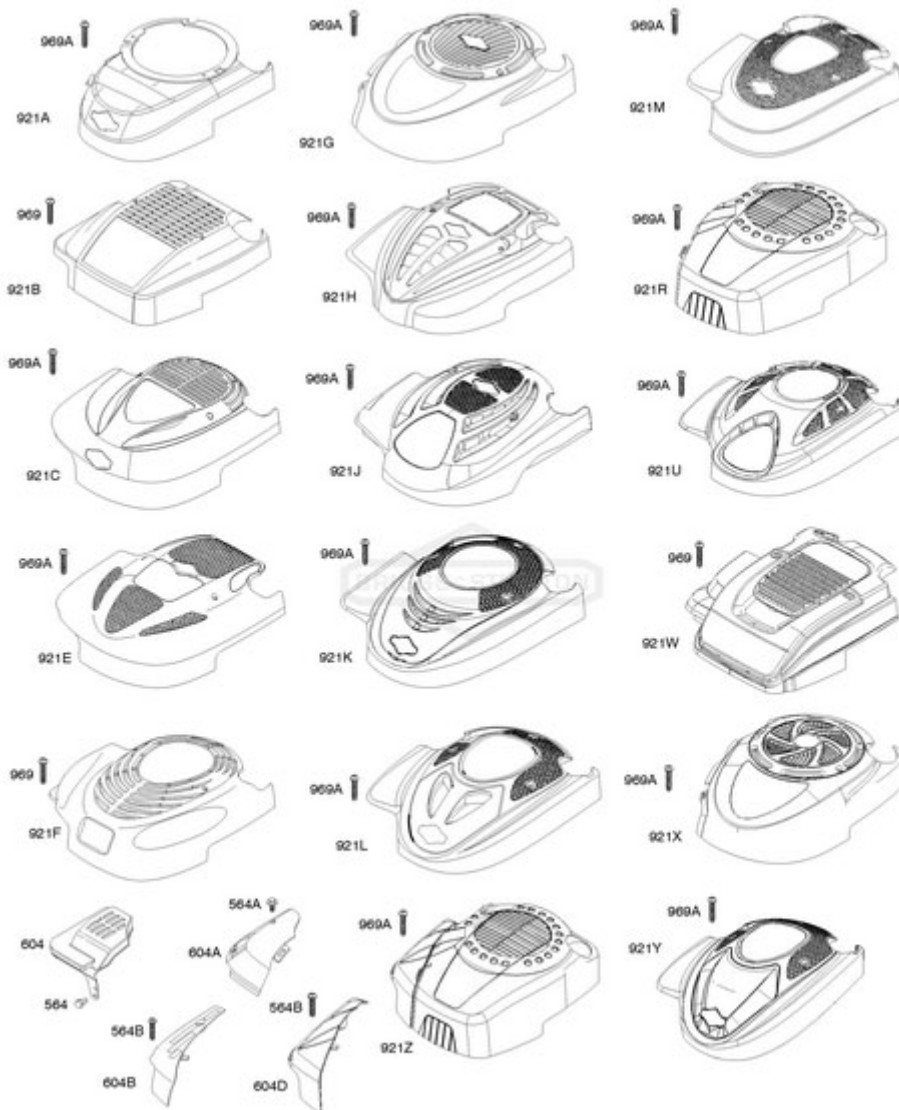


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
564	690664	SCREW		(Control Cover)	
564A	691142	SCREW		(Control Cover)	
564B	698589	SCREW		(Control Cover)	
604	691757	COVER-CONTROL			
604A	691344	COVER, Control			
604B	790703	COVER, Control			
604D	793770	COVER, Control			
921A	695886	COVER-BLOWER HSG			
921B	692931	HOUSING, Blower			
921Z	592290	HOUSING, Blower			
921C	695889	HOUSING, Blower			
921E	696262	HOUSING, Blower			
921F	697343	HOUSING, Blower			
921K	699984	HOUSING, Blower			
921J	790036	HOUSING, Blower			
921H	790037	HOUSING, Blower			
921L	791026	HOUSING, Blower			
921M	792652	HOUSING, Blower			
921R	793771	HOUSING, Blower			
921U	794355	HOUSING, Blower			
921G	795064	HOUSING, Blower			
921X	796706	HOUSING, Blower		Used After Code Date 09010800	
921W	796921	HOUSING, Blower		Used After Code Date 09010800	
921Y	798277	HOUSING, Blower			
969	690700	SCREW		(Blower Housing)	
969A	691138	SCREW		(Blower Housing)	

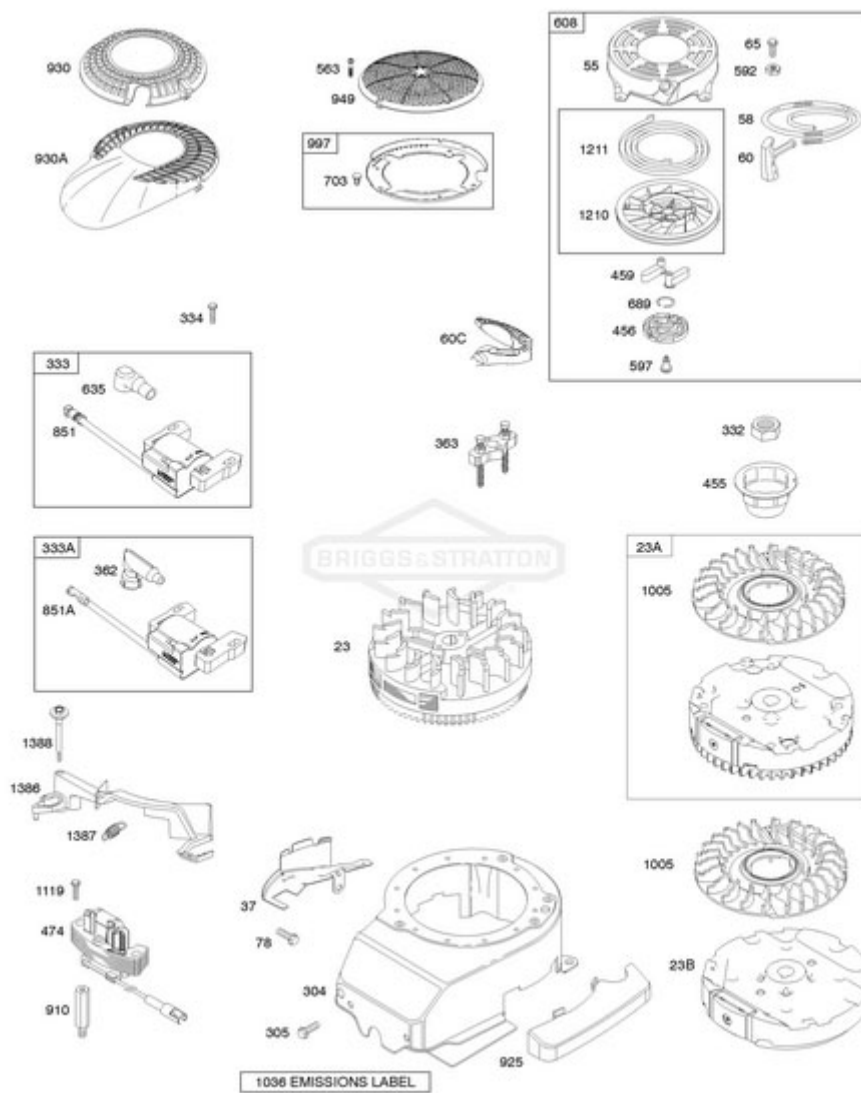

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	691987	FLYWHEEL			
37	793756	GUARD-FLYWHEEL			
55	691421	HOUSING, Rewind Starter			
58	697316	ROPE, Starter		(Cut To Required Length)	
60	281434S	GRIP, Starter Rope			
60C	799716	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
78	691108	SCREW		(Flywheel Guard)	
304	790826	HOUSING, Blower			
305	691108	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
333A	590455	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
362	793351	SHIELD-SPARK PLUG			
363	19069	PULLER, Flywheel			
455	791960	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
474	691991	ALTERNATOR			
563	691138	SCREW		(Debris Screen Guard)	
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	497680	STARTER, Rewind			
635	66538S	BOOT, Spark PLug			
689	691855	SPRING-FRICTION			
703	696309	CLIP			
851	493880S	TERMINAL-SPARK PLUG			
851A	692424	TERMINAL, Spark Plug			
910	691094	STUD		(Alternator)	
925	795403	COVER-LINKAGE			
930	691919	GUARD, Rewind			
930A	691345	GUARD, Rewind			
949	696306	GUARD, Debris Screen			
997	696310	SHIELD, Debris			
1005	691346	FAN, Flywheel			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1119	692979	SCREW		(Alternator)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
1210	498144	PULLEY/SPRING ASSY		(Pulley)	
1211	498144	PULLEY/SPRING ASSY		(Spring)	
1386	790848	VANE, Air		(Autochoke System)	
1387	790849	SPRING, Air Vane			
1388	790850	SCREW		(Air Vane) (Auto Choke System)	

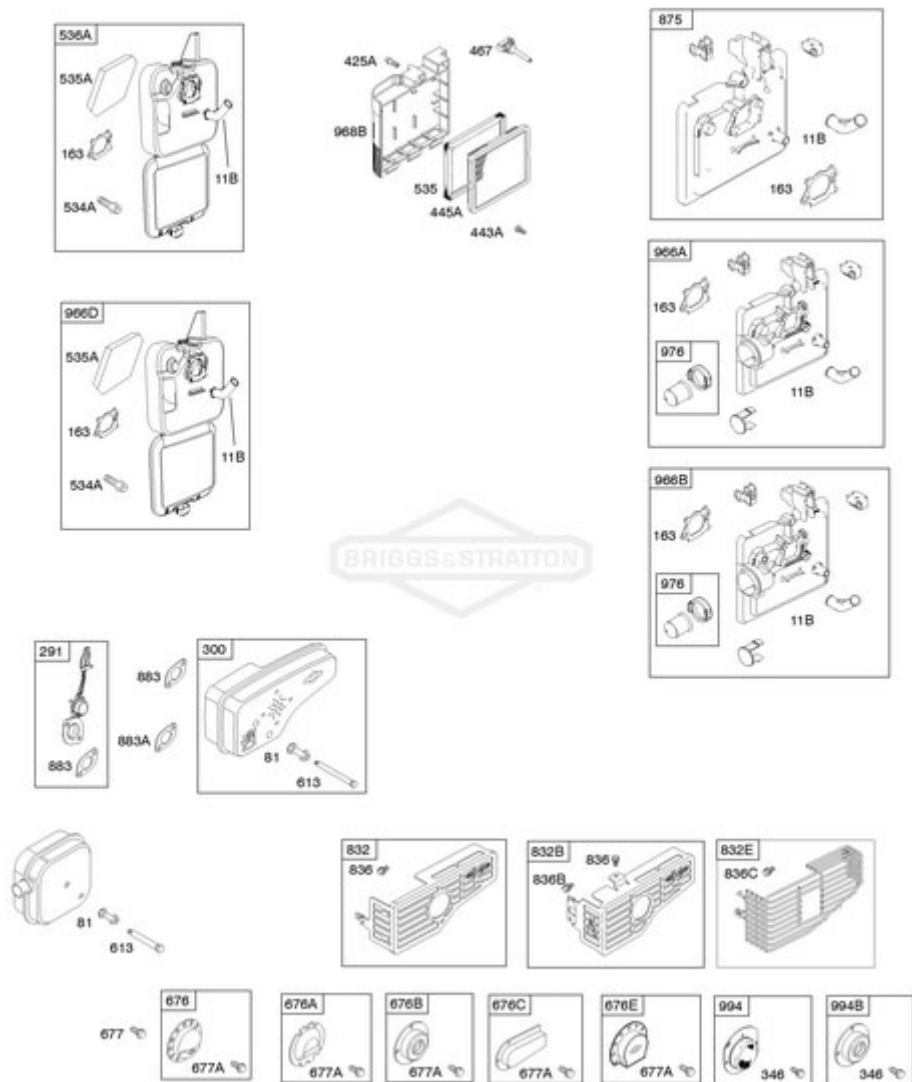

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11B	691923	TUBE, Breather			
81	691740	LOCK, Muffler Screw			
163	795629	GASKET-AIR CLEANER		(Air Cleaner)	
291	593208	THERMOSTAT			
300	790828	MUFFLER		Used Before Code Date 13122300	
346	690661	SCREW		(Spark Arrestor)	
425A	690670	SCREW		(Air Cleaner Cover)	
443A	692523	SCREW		(Air Cleaner Primer Base)	
445A	491588S	FILTER, A/C Cartridge			
467	790842	KNOB, Air Cleaner Cover			
534A	798294	SCREW		(Air Cleaner)	
535	493537S	FILTER, Air Cleaner Foam			
536A	798293	CLEANER, Air			
613	691340	SCREW		(Muffler) (1/4-20 x 2.75 Inches Total Length, 2.25 Inch Shoulder Length)	
613	790833	SCREW		(Muffler) (1/4-20 x 2.75 Inches Total Length, 2.08 Inch Shoulder Length)	
676	396548	DEFLECTOR, Muffler			
676A	393756	DEFLECTOR, Muffler		(Side Outlet)	
676B	397931	DEFLECTOR, Muffler			
676E	393760	DEFLECTOR, Muffler			
676C	493871	DEFLECTOR, Muffler			
677	690661	SCREW		(Muffler Deflector) (Thread Forming)	
677A	593440	SCREW		(Muffler Deflector) (Self-Drilling & Tapping)	
832	593875	GUARD, Muffler			
832B	497683	GUARD, Muffler			
832E	793568	MUFFLER			
836	690664	SCREW		(Muffler Guard)	
836B	691147	SCREW		(Muffler Guard)	
836C	790745	SCREW		(Muffler Guard)	
883	691881	GASKET, Exhaust			
883A	793497	GASKET, Exhaust			
966B	795259	BASE-AIR CLEANER PRIM		(Primer)	
968B	692298	COVER, Air Cleaner			
976	694395	PRIMER, Carburetor			

Ref #	Part #	Description	Qty	Context Note	Foot Note
994	398067	ARRESTOR-SPARK			
994B	792245	ARRESTOR, Spark			