



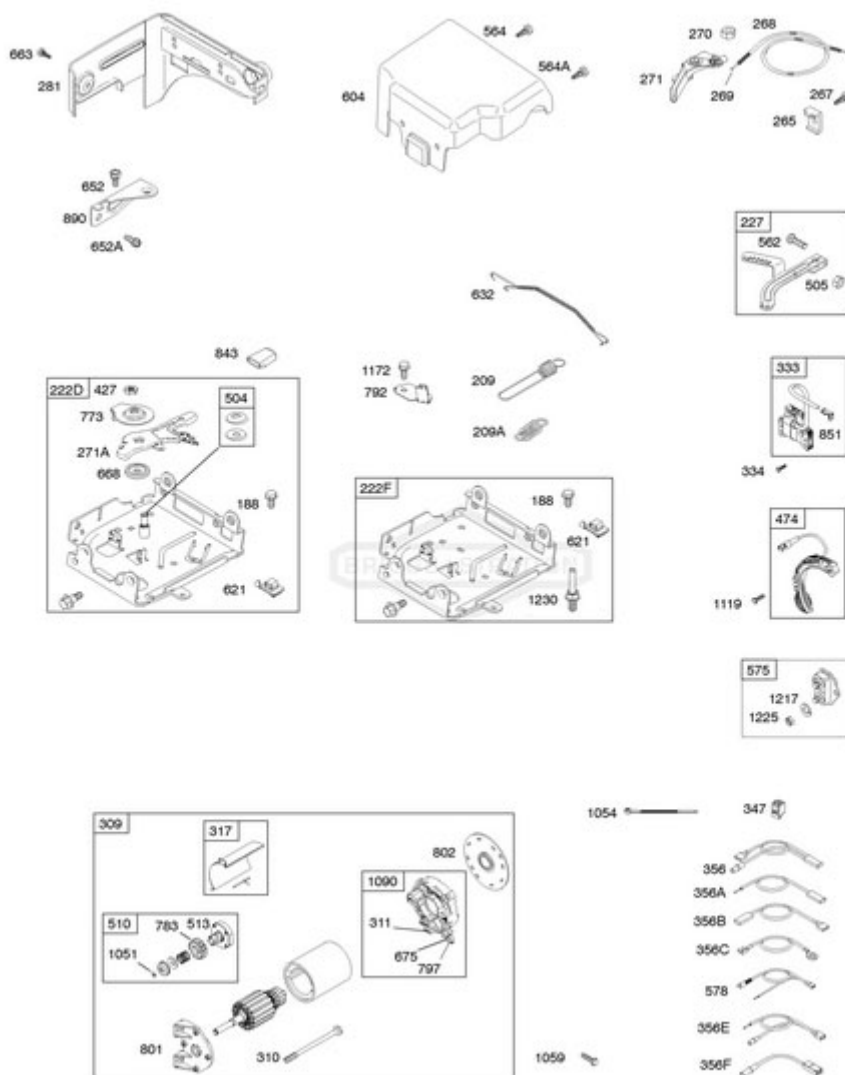

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	699479	SCREW		(Control Bracket)	
209	693710	SPRING, Governor			
222D	793107	BRACKET, Control			
222F	793100	BRACKET, Control			
227	794367	LEVER-GOVERNOR CONTRO			
265	691024	CLAMP, Casing			
267	699492	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
271A	694256	LEVER, Control			
281	793122	PANEL, Control			
309	694504	MOTOR, Starter			
310	690323	SCREW		(Starter Motor)	
311	497608	SET, Brush			
317	695494	COVER, Starter			
333	796964	ARMATURE, Magneto			
334	699477	SCREW		(Magneto Armature)	
347	697854	SWITCH, Rocker			
356	693651	WIRE, Stop			
356A	692390	WIRE, Stop			
356C	695630	WIRE-STOP			
356E	695814	WIRE, Stop			
356F	697397	WIRE, Stop			
356B	692602	WIRE-STOP			
427	798458	NUT		(Control Bracket) (Metric)	
427	694255	NUT		(Control Bracket) (SAE)	
474	793640	ALTERNATOR			
504	695383	SET, Friction Washer			
505	691251	NUT		(Governor Control Lever)	
510	499308	DRIVE-STARTER			
513	692024	CLUTCH-DRIVE			
562	691119	BOLT		(Governor Control Lever)	
564	699491	SCREW		(Control Cover)	
564A	699206	SCREW		(Control Cover)	
575	692303	SWITCH-STARTING			
578	695283	WIRE ASSEMBLY			
604	697326	COVER-CONTROL			
621	692310	SWITCH, Stop			


Ref #	Part #	Description	Qty	Context Note	Foot Note
632	693408	SPRING/LINK, Mechanical Governor			
652	699755	SCREW		(Support Bracket)	
652A	699481	SCREW		(Support Bracket)	
663	699206	SCREW		(Control Panel)	
668	694257	SPACER			
675	691261	WASHER		(Brush Retainer)	
773	694258	RETAINER		(Control Bracket)	
783	692353	GEAR-PINION			
792	694259	BRACKET, Fixed Speed			
797	691029	NUT		(Brush Retainer)	
801	694482	CAP-DRIVE			
802	691286	CAP-END			
843	695588	SLEEVE, Lever			
851	493880S	TERMINAL-SPARK PLUG			
890	694933	BRACKET, Support			
1051	691265	RING, Retaining			
1054	280275	TIE, Cable			
1059	793567	KIT-SCREW/WASHER			
1090	691293	RETAINER-BRUSH			
1119	699772	SCREW		(Alternator)	
1172	699230	SCREW		(Fixed Speed Bracket)	
1217	691075	WASHER		(Starting Switch)	
1225	696198	NUT		(Starting Switch)	
1230	699847	STUD		(Control Bracket)	

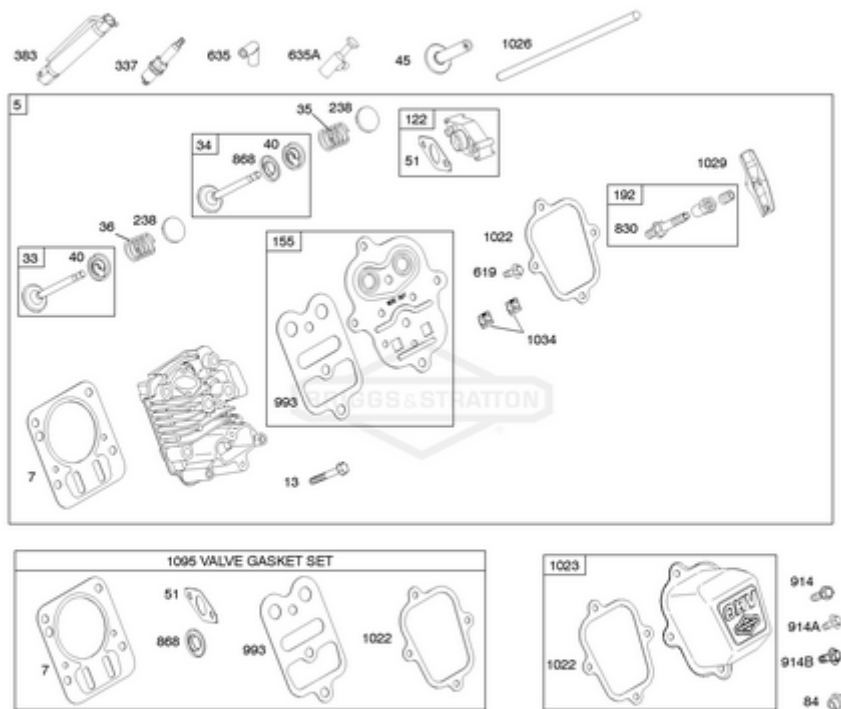

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
5	797439	HEAD, Cylinder		(SAE)	
7	698210	GASKET, Cylinder Head			
13	699482	SCREW		(Cylinder Head)	
33	499642	VALVE, Exhaust			
34	795443	VALVE, Intake			
35	691304	SPRING, Valve		(Intake)	
36	691304	SPRING, Valve		(Exhaust)	
40	692194	RETAINER, Valve			
45	690977	TAPPET, Valve			
51	692555	GASKET, Intake		(2 Required)	
84	691121	PLUG-BREATHER			
122	795208	SPACER, Carburetor		(Grey/Coffee)	
122	795643	SPACER, Carburetor		(Black)	
155	698214	PLATE, Cylinder Head		(SAE) Used Before Code Date 09061800	
155	797442	PLATE, Cylinder Head		(Metric) Used After Code Date 09061700	
192	797440	ADJUSTER, Rocker Arm		(Metric) Used After Code Date 09061700	
192	694543	ADJUSTER-ROCKER ARM		(SAE) Used Before Code Date 09061800	
238	691300	CAP, Valve			
337	491055S	PLUG-SPARK		(Resistor)	
337	691043	PLUG, Spark		(EMS)	
383	19576S	WRENCH, Spark Plug			
619	699481	SCREW		(Cylinder Head Plate)	
635	692076	BOOT, Spark Plug			
635A	798619	BOOT-SPARK PLUG			
830	694544	STUD-ROCKER ARM		(Rocker Arm) (SAE) Used Before Code Date 09061800	
830	797441	STUD, Rocker Arm		(Rocker Arm) (Metric) Used After Code Date 09061700	
868	795440	SEAL-VALVE			
914	699481	SCREW		(Rocker Cover) (Bottom)	
914A	797444	SCREW		(Rocker Cover) (Quantity 1 Top Or Center) Used After Code Date 09061700	
914A	692557	SCREW		(Rocker Cover) (Top) Used Before Code Date 09061800	
914B	697551	SCREW		(Rocker Cover) (Center) Used Before Code Date 09061800	






Ref #	Part #	Description	Qty	Context Note	Foot Note
993	694088	GASKET-CYL HD PLATE			
1022	691890	GASKET-ROCKER COVER			
1023	499924	COVER, Rocker			
1026	790287	ROD, Push			
1029	691230	ARM, Rocker		(SAE) Used Before Code Date 09061800	
1029	797443	ARM, Rocker		(Metric) Used After Code Date 09061700	
1034	691343	GUIDE-PUSH ROD			
1095	791798	GASKET SET, Valve			

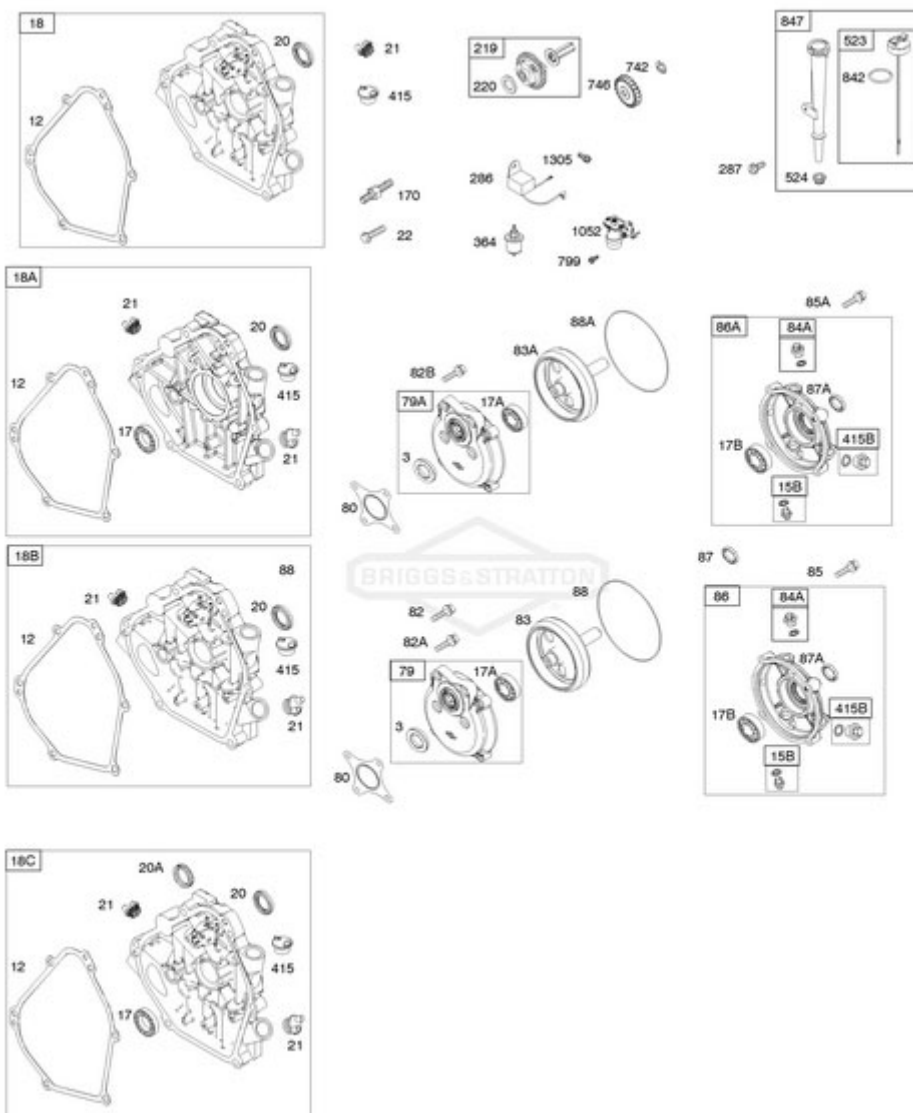

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
3	299819S	SEAL-OIL		(Magneto Side)	
12	699485	GASKET-CRANKCASE			
15B	792750	PLUG, Oil Drain			
17	798538	BEARING-BALL		(PTO Side)	
17A	690824	BEARING-BALL		(PTO Side)	
17B	99158	BEARING-BALL			
18C	699677	COVER, Crankcase			
20A	691952	SEAL, Oil		(PTO Side) (Auxiliary PTO)	
21	281658S	CAP-OIL FILL			
22	799318	SCREW		(Crankcase Cover/Sump)	
79	694511	CASE, Gear Reduction		Used Before Code Date 06051700	
79A	792746	CASE, Gear Reduction		Used After Code Date 06051600	
80	792755	GASKET, Gear Case			
82	690369	SCREW		(Gear Reduction Case) Used Before Code Date 06051700	
82A	790197	SCREW		(Gear Reduction Case) Used Before Code Date 06051700	
82B	792753	SCREW		(Gear Reduction Case) Used After Code Date 06051600	
83	690374	SHAFT, Auxiliary Drive		Used Before Code Date 06051700	
83A	792756	SHAFT, Auxiliary Drive		Used After Code Date 06051600	
84A	792759	PLUG, Breather			
85	692551	SCREW		(Gear Cover) Used Before Code Date 06051700	
85A	690711	SCREW		(Gear Cover) Used After Code Date 06051600	
86	690608	COVER, Gear		Used Before Code Date 06051700	
86A	792748	COVER-GEAR		Used After Code Date 06051600 Used Before Code Date 08010200	
86A	795647	COVER, Gear		Used After Code Date 08010100	
87	691582	SEAL, Gear Reduction		Used Before Code Date 06051700	
87A	792752	SEAL, Gear Reduction		Used After Code Date 06051600	
88	691600	GASKET, Gear Cover/Housing			
88A	792760	GASKET, Gear Cover/Housing			
170	699818	STUD		(Crankcase Cover/Sump)	
219	693578	GEAR, Governor			
220	691724	WASHER		(Governor Gear)	
286	794185	MODULE, Oil Sensor			
287	699234	SCREW		(Dipstick Tube)	
364	695693	TERMINAL, Oil Plug			
415	693463	PLUG		(Crankcase Cover/Sump)	
415B	792749	PLUG			


Ref #	Part #	Description	Qty	Context Note	Foot Note
523	693618	DIPSTICK			
524	281370S	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
742	692564	RETAINER, E Ring			
746	790278	GEAR-IDLER			
799	699202	SCREW		(Oil Sensor)	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	693617	DIPSTICK/TUBE ASSEMBLY			
1052	790141	SENSOR, Oil			
1305	699691	SCREW		(Oil Sensor Module)	

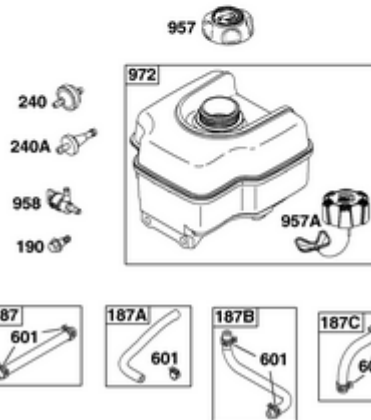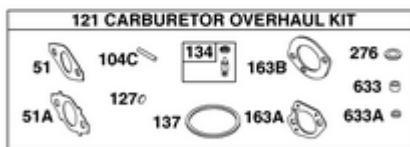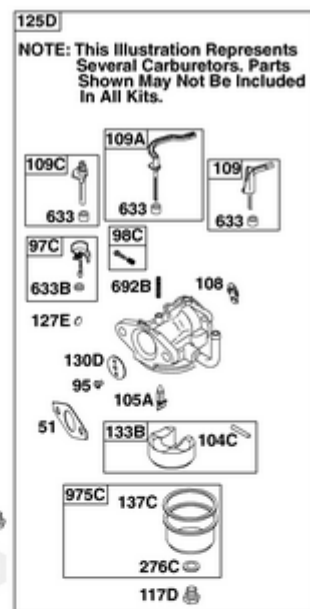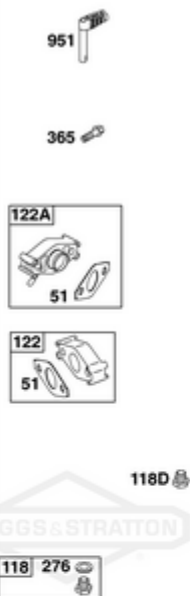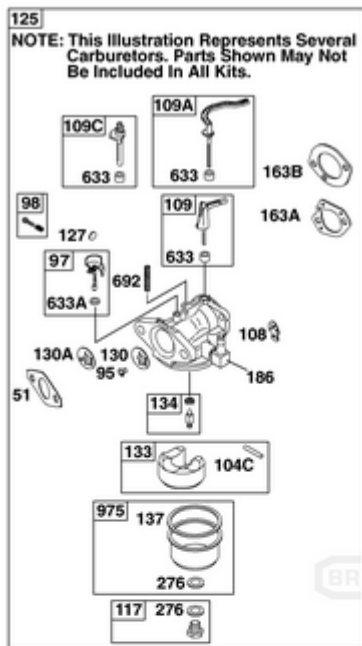

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692555	GASKET, Intake		(2 Required)	
51A	791718	GASKET, Intake			
95	691636	SCREW		(Throttle Valve)	
97	690024	SHAFT, Throttle			
97C	797628	SHAFT, Throttle			
98	398185	KIT-IDLE SPEED		(Idle Speed) (Lmt 26, 27, 28, 31)	
98C	797156	KIT, Idle Speed			
104C	797622	PIN-FLOAT HINGE			
105A	797139	VALVE, Float Needle			
108	692567	VALVE-CHOKE			
109	690023	SHAFT, Choke			
109A	693628	SHAFT, Choke			
109C	790624	SHAFT, Choke			
117	498978	JET, Main		(Standard)	
117D	798661	JET, Main		(Standard)	
118	498975	JET, Main		(High Altitude)	
118D	798660	JET, Main		(High Altitude)	
121	792006	KIT, Carburetor Overhaul			
121D	797634	KIT, Carburetor Overhaul			
122	795643	SPACER, Carburetor		(Black)	
122	795208	SPACER, Carburetor		(Grey/Coffee)	
125D	798653	CARBURETOR			
127	691739	PLUG-WELCH		(5/16 Diameter)	
127E	797633	PLUG, Welch			
130	691181	VALVE-THROTTLE			
130D	797630	VALVE, Throttle			
133	398187	FLOAT-CARBURETOR			
133B	797136	FLOAT, Carburetor			
134	398188	KIT-NEEDLE/SEAT			
137	693981	GASKET-FLOAT BOWL			
137C	797625	GASKET, Float Bowl			
163A	792870	GASKET, Air Cleaner		(High Mount)	
163B	696024	GASKET, Air Cleaner		(Flat Panel Air Cleaner)	
186	692317	CONNECTOR-HOSE			
187	791766	LINE, Fuel		(Cut To Required Length)	
187A	791867	LINE, Fuel		(Molded)	
187B	791874	LINE, Fuel		(Molded)	
187C	791866	LINE-FUEL		(Molded)	
190	699220	SCREW		(Fuel Tank)	
240	298090S	FILTER, Fuel			
240A	694485	FILTER, Fuel			
276	271716	WASHER-SEALING			
276C	797632	WASHER, Sealing			
365	699484	SCREW		(Carburetor)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
601	791850	CLAMP-HOSE			
633	693867	SEAL, Choke/Throttle Shaft			
633A	691321	SEAL-CHOKE/THR SHAFT		(Throttle Shaft)	
633B	797629	SEAL, Choke/Throttle Shaft			
692	690572	SPRING, Detent		(Choke)	
692B	797624	SPRING, Detent			
951	790630	LEVER, Choke			
957	795027	CAP, Fuel Tank		(Text Free)	
957	792647	CAP, Fuel Tank		(Fresh Start)	
957A	799719	CAP, Fuel Tank		(Carbon In Cap)	
958	698180	VALVE-FUEL SHUT OFF			
972	799863	TANK, Fuel			
975	796611	BOWL, Float			
975C	797631	BOWL, Float			

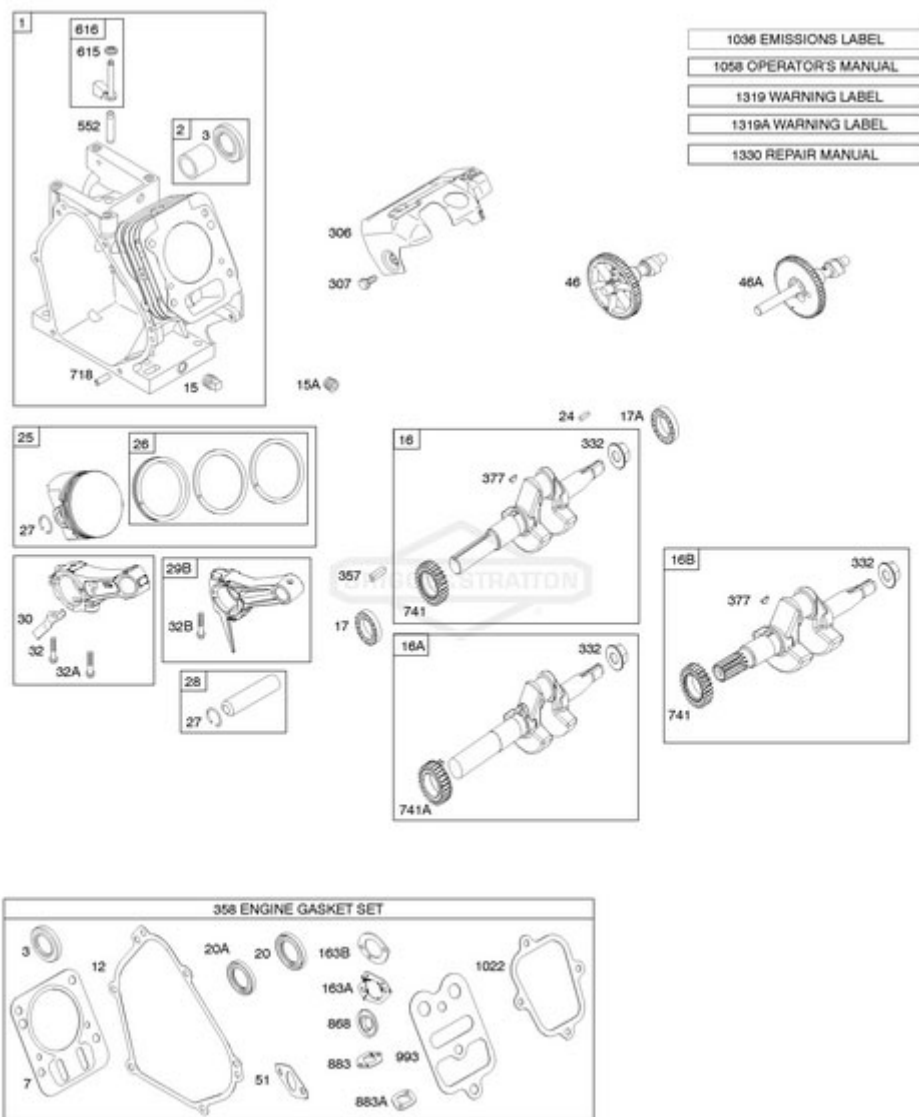



Ref #	Part #	Description	Qty	Context Note	Foot Note
1	699510	CYLINDER ASSEMBLY			
2	796961	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL-OIL		(Magneto Side)	
7	698210	GASKET, Cylinder Head			
12	699485	GASKET-CRANKCASE			
15	691686	PLUG-OIL DRAIN		(Square Head)	
15A	691682	PLUG-OIL DRAIN		(Flush)	
16	797070	CRANKSHAFT			
16A	593495	CRANKSHAFT	Used After Code Date 13050500		
17	798538	BEARING-BALL		(PTO Side)	
17A	690824	BEARING-BALL		(PTO Side)	
20A	691952	SEAL, Oil		(PTO Side) (Auxiliary PTO)	
24	796335	KEY, Flywheel			
25	799064	PISTON ASSEMBLY		(.020 Oversize)	
25	795429	PISTON ASSEMBLY		(Standard)	
26	791324	SET, Ring	(.020 Oversize) Used After Code Date 05060600		
26	692786	SET, Ring	(.020 Oversize) Used Before Code Date 05060700		
26	791969	SET, Ring	(Standard) Used After Code Date 05060600		
26	499631	SET, Ring	(Standard) Used Before Code Date 05060700		
27	691866	LOCK-PISTON PIN			
28	499423	PIN-PISTON/STD		(Standard)	
29B	798813	ROD, Connecting			
30	791584	DIPPER-CONN ROD			
32	691664	SCREW		(Connecting Rod)	
32A	695759	SCREW		(Connecting Rod)	
32B	797437	SCREW		(Connecting Rod)	
46A	695285	CAMSHAFT			
51	692555	GASKET, Intake		(2 Required)	
163A	792870	GASKET, Air Cleaner		(High Mount)	
163B	696024	GASKET, Air Cleaner		(Flat Panel Air Cleaner)	
306	795334	SHIELD-CYLINDER			
307	699483	SCREW		(Cylinder Shield)	
309	694504	MOTOR, Starter			
332	591988	NUT		(Flywheel)	
357	798869	KEY, Drive Pulley		(Metric)	
357	692191	KEY, Drive Pulley		(SAE)	
358	791797	GASKET SET, Engine			
377	690979	KEY, Woodruff			

Ref #	Part #	Description	Qty	Context Note	Foot Note
552	692346	BUSHING, Governor Crank			
615	692576	RETAINER, Governor Shaft			
616	692547	CRANK, Governor			
718	690959	PIN, Locating			
741	695087	GEAR-TIMING		(Metal)	
741A	593499	GEAR, Timing		(Nylon)	
868	795440	SEAL-VALVE			
883	691893	GASKET-EXHAUST			
883A	692237	GASKET-EXHAUST			
993	694088	GASKET-CYL HD PLATE			
1022	691890	GASKET-ROCKER COVER			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1058	277040	MANUAL, Operator's			
1319	794467	LABEL, Warning			
1319A	797669	LABEL, Warning			
1330	272147	MANUAL, Repair			

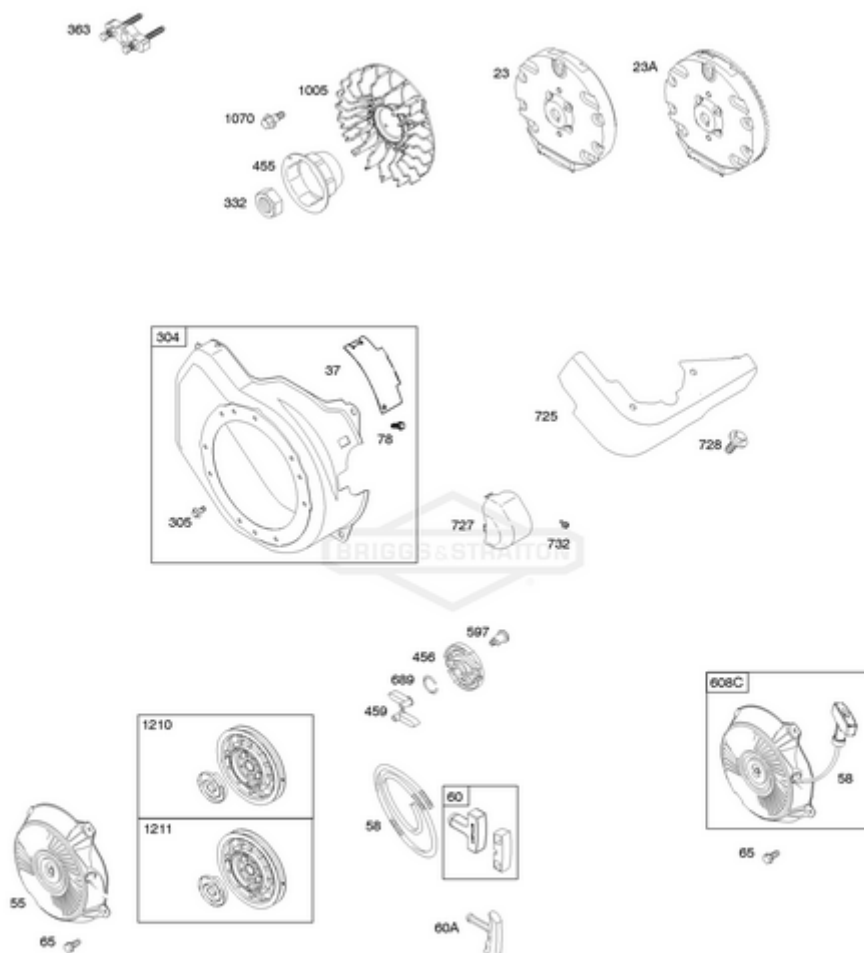

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	699488	FLYWHEEL			
37	699661	GUARD, Flywheel			
55	791848	HOUSING, Rewind Starter		Used After Code Date 08030200	
55	691422	HOUSING, Rewind Starter		(Rewind Starter Parts Used With 3MM Diameter Starter Rope) Used Before Code Date 08030300	
58	693389	ROPE, Starter		(Cut To Required Length) Used After Code Date 08030200	
58	66574	ROPE, Starter		(Rewind Starter Parts Used With 5MM Diameter Starter Rope) Used Before Code Date 08030300	
60	490652	GRIP-STARTER ROPE		(2 Piece)	
60A	281434S	GRIP, Starter Rope		(2 Piece)	
65	699228	SCREW		(Rewind Starter) (SAE)	
65	699851	SCREW		(Rewind Starter) (Metric)	
78	699205	SCREW		(Flywheel Guard)	
304	699598	HOUSING, Blower			
305	699481	SCREW		(Blower Housing)	
332	591988	NUT		(Flywheel)	
363	19203	PULLER, Flywheel			
455	591302	CUP-FLYWHEEL			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
597	691696	SCREW		(Pawl Friction Plate)	
608C	591301	STARTER, Rewind			
689	691855	SPRING-FRICTION		(Rewind Starter)	
725	792874	SHIELD, Heat			
727	698039	COVER-STARTER DRIVE			
728	699632	SCREW		(Heat Shield)	
732	699200	SCREW		(Starter Drive Cover)	
1005	692592	FAN, Flywheel			
1070	699201	SCREW		(Flywheel Fan)	
1210	791849	PULLEY/SPRING ASSEMBLY		(Pulley) Used After Code Date 08030200	
1210	498144	PULLEY/SPRING ASSY		(Pulley) Used Before Code Date 08030300	
1211	791849	PULLEY/SPRING ASSEMBLY		(Spring) Used After Code Date 08030200	
1211	498144	PULLEY/SPRING ASSY		(Spring) Used Before Code Date 08030300	

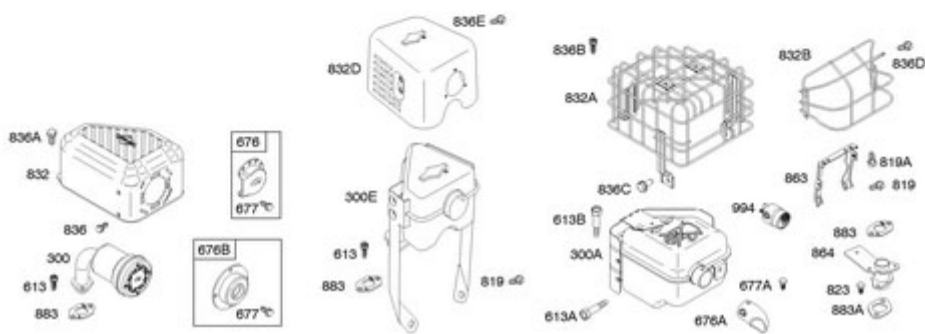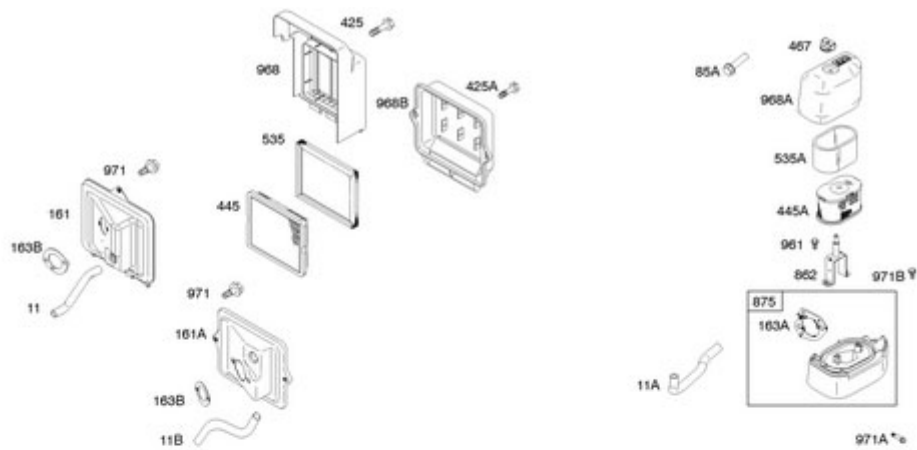

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	692600	TUBE, Breather		(Flat Panel Air Cleaner)	
11A	693647	TUBE, Breather		(High Mount Air Cleaner)	
11B	790632	TUBE, Breather		(Ultra Low Mount Air Cleaner)	
85A	690711	SCREW		(Gear Cover) Used After Code Date 06051600	
161	699207	BASE-AIR CLEANER		(Flat Panel Air Cleaner)	
161A	790631	BASE, Air Cleaner		(Ultra Low Mount Air Cleaner)	
163A	792870	GASKET, Air Cleaner		(High Mount)	
163B	696024	GASKET, Air Cleaner		(Flat Panel Air Cleaner)	
300	693593	MUFFLER			
300A	797433	MUFFLER			
300E	791595	MUFFLER			
425	699208	SCREW		(Air Cleaner Cover)	
425A	699492	SCREW		(Air Cleaner Cover)	
445	491588S	FILTER-A/C CARTRIDGE		(Flat Panel)	
445A	697029	FILTER-A/C CARTRIDGE		(High Mount)	
467	691668	KNOB, Air Cleaner Cover			
535	493537S	FILTER, Air Cleaner Foam		(Flat Panel)	
535A	273356S	FILTER-A/C FOAM		(High Mount)	
613	791972	SCREW		(Muffler)	
613A	699481	SCREW		(Muffler)	
613B	697812	SCREW		(Muffler) (SAE)	
613B	799081	SCREW		(Muffler) (Metric)	
676	796956	DEFLECTOR, Muffler			
676A	697816	DEFLECTOR, Muffler			
676B	395700	DEFLECTOR, Muffler		(Direct Outlet)	
677	690661	SCREW		(Muffler Deflector) (SAE)	
677	699203	SCREW		(Muffler Deflector) (Metric)	
677A	699776	SCREW		(Muffler Deflector)	
819	699233	SCREW		(Muffler Bracket)	
819A	699230	SCREW		(Muffler Bracket)	
823	791972	SCREW		(Muffler Adapter)	
832	693583	GUARD, Muffler			
832A	697818	GUARD, Muffler			
832B	696516	MUFFLER			
832D	796240	GUARD, Muffler			
836	699203	SCREW		(Muffler Guard)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
836A	699632	SCREW		(Muffler Guard)	
836C	699234	SCREW		(Muffler Guard)	
836D	699204	SCREW		(Muffler Guard)	
836E	699755	SCREW		(Muffler Guard)	
836B	791972	SCREW		(Muffler Guard)	
862	693462	STRAP/STUD, Air Cleaner Mounting			
863	699229	BRACKET, Muffler			
864	699232	ADAPTER, Muffler			
875	591306	BASE, Air Cleaner		(High Mount) Used After Code Date 11123100	
875	697030	BASE, Air Cleaner		(High Mount) Used Before Code Date 12010100	
883	691893	GASKET-EXHAUST			
883A	692237	GASKET-EXHAUST			
961	698304	SCREW		(Air Cleaner Bracket)	
968	692584	COVER, Air Cleaner		(Flat Panel)	
968A	693460	COVER, Air Cleaner		(High Mount)	
968B	791082	COVER-AIR CLEANER		(Ultra Low Mount Air Cleaner)	
971	690370	SCREW		(Air Cleaner Base to Carburetor/Throttle Body) (SAE)	
971	798649	SCREW		(Air Cleaner Base to Carburetor/Throttle Body) (Metric)	
971A	690349	SCREW		(Air Cleaner Base to Carburetor/Throttle Body) Used Before Code Date 12010100	
971A	591307	SCREW		(Air Cleaner Base to Carburetor/Throttle Body) Used After Code Date 11123100	
971B	699234	SCREW		(Air Cleaner Base to Carburetor/Throttle Body)	
994	790153	ARRESTOR, Spark			