



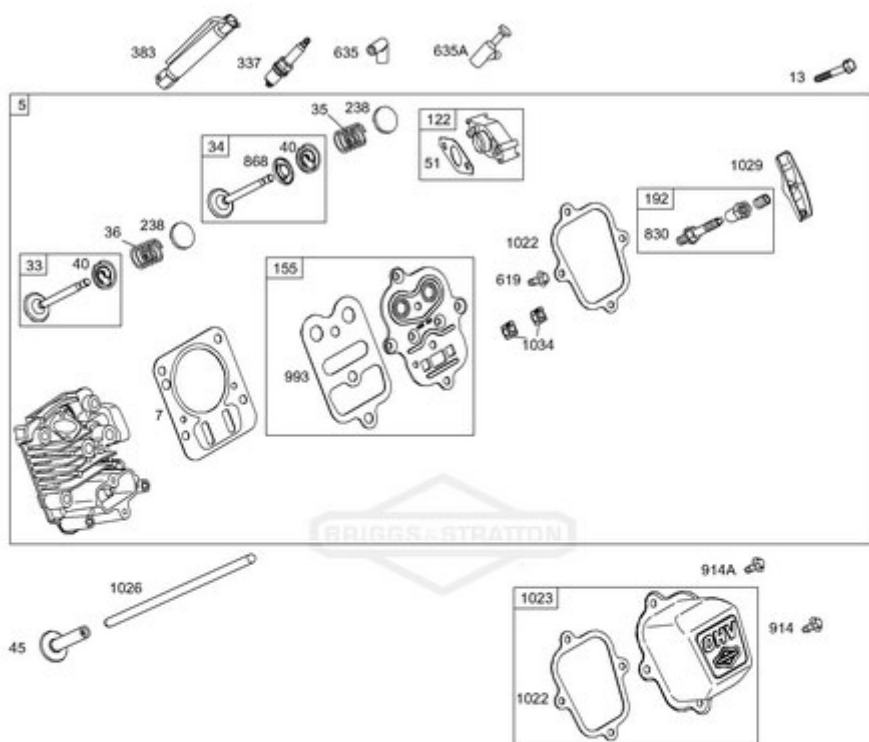


Copyright © Briggs & Stratton, LLC. All Rights Reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
5	699486	HEAD, Cylinder			
7	695166	GASKET, Cylinder Head			
13	691137	SCREW		(Cylinder Head)	
33	499642	VALVE, Exhaust			
34	499641	VALVE, Intake			
35	691304	SPRING, Valve		(Intake)	
36	691304	SPRING, Valve		(Exhaust)	
40	692194	RETAINER, Valve			
45	690977	TAPPET, Valve			
51	692555	GASKET, Intake		(2 Required)	
122	693749	SPACER, Carburetor			
155	696268	KIT, Cylinder Head/Plate Gasket			
192	694543	ADJUSTER-ROCKER ARM			
238	691300	CAP, Valve			
337	691043	PLUG, Spark			
383	19374S	WRENCH, Spark Plug			
619	691108	SCREW		(Cylinder Head Plate)	
635	692076	BOOT, Spark Plug			
635A	692927	BOOT, Spark Plug			
830	694544	STUD-ROCKER ARM		(Rocker Arm)	
868	692044	SEAL, Valve			
914	692198	SCREW		(Rocker Cover) (7/16)	
914A	692557	SCREW		(Rocker Cover) (3/8)	
993	694088	GASKET, Cylinder Head Plate			
1022	691890	GASKET-ROCKER COVER			
1023	499924	COVER, Rocker			
1026	693517	ROD-PUSH			
1029	691230	ARM, Rocker			
1034	691343	GUIDE, Push Rod			
1095	695289	GASKET SET, Valve			

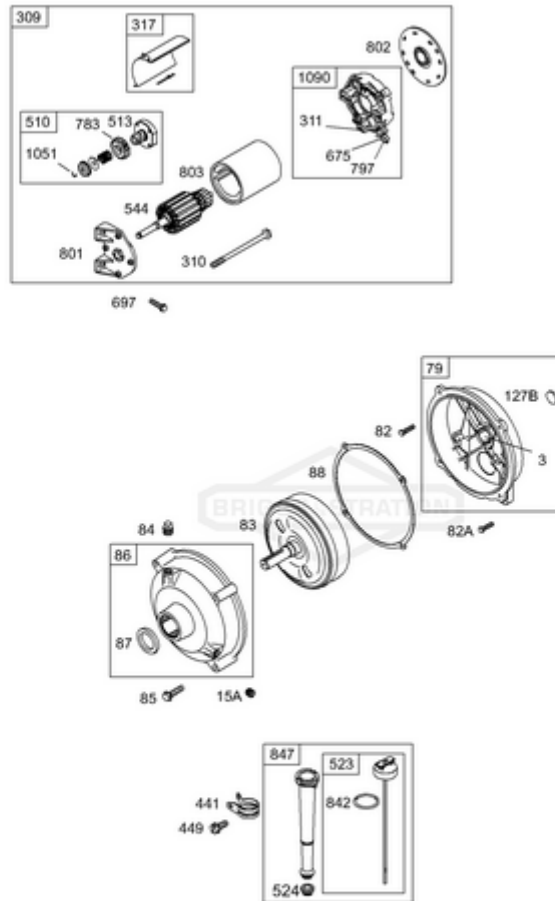

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
3	299819S	SEAL, Oil		(Magneto Side)	
15A	691682	PLUG-OIL DRAIN		(Flush)	
79	694511	CASE, Gear Reduction			
82	690369	SCREW		(Gear Reduction Case) (7/8)	
82A	691122	SCREW		(Gear Reduction Case) (1-1/2)	
83	690374	SHAFT, Auxiliary Drive			
84	691121	PLUG-BREATHER		(Gear Reduction)	
85	692551	SCREW		(Gear Cover to Gear Reduction Case)	
86	690608	COVER, Gear			
87	691582	SEAL, Gear Reduction		(Gear Reduction)	
88	691600	GASKET, Gear Cover/ Housing			
309	694504	MOTOR, Starter			
310	690323	SCREW		(Starter Motor)	
311	497608	SET, Brush			
317	695494	COVER, Starter			
441	694262	BRACKET, Oil Fill			
449	691693	SCREW		(Oil Fill Bracket)	
510	499308	DRIVE-STARTER			
513	692024	CLUTCH, Drive			
523	693618	DIPSTICK			
524	281370S	SEAL, Dipstick Tube		(Dipstick Tube)	
544	692966	ARMATURE, Starter			
675	691261	WASHER		(Brush Retainer)	
697	690372	SCREW		(Drive Cap)	
783	692353	GEAR-PINION			
797	691029	NUT		(Brush Retainer)	
801	694482	CAP-DRIVE			
802	691286	CAP, End			
803	693757	HOUSING, Starter		(3 5/8 Housing)	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	693617	DIPSTICK/TUBE ASSEMBLY			
1051	691265	RING, Retaining			
1090	691293	RETAINER, Brush			

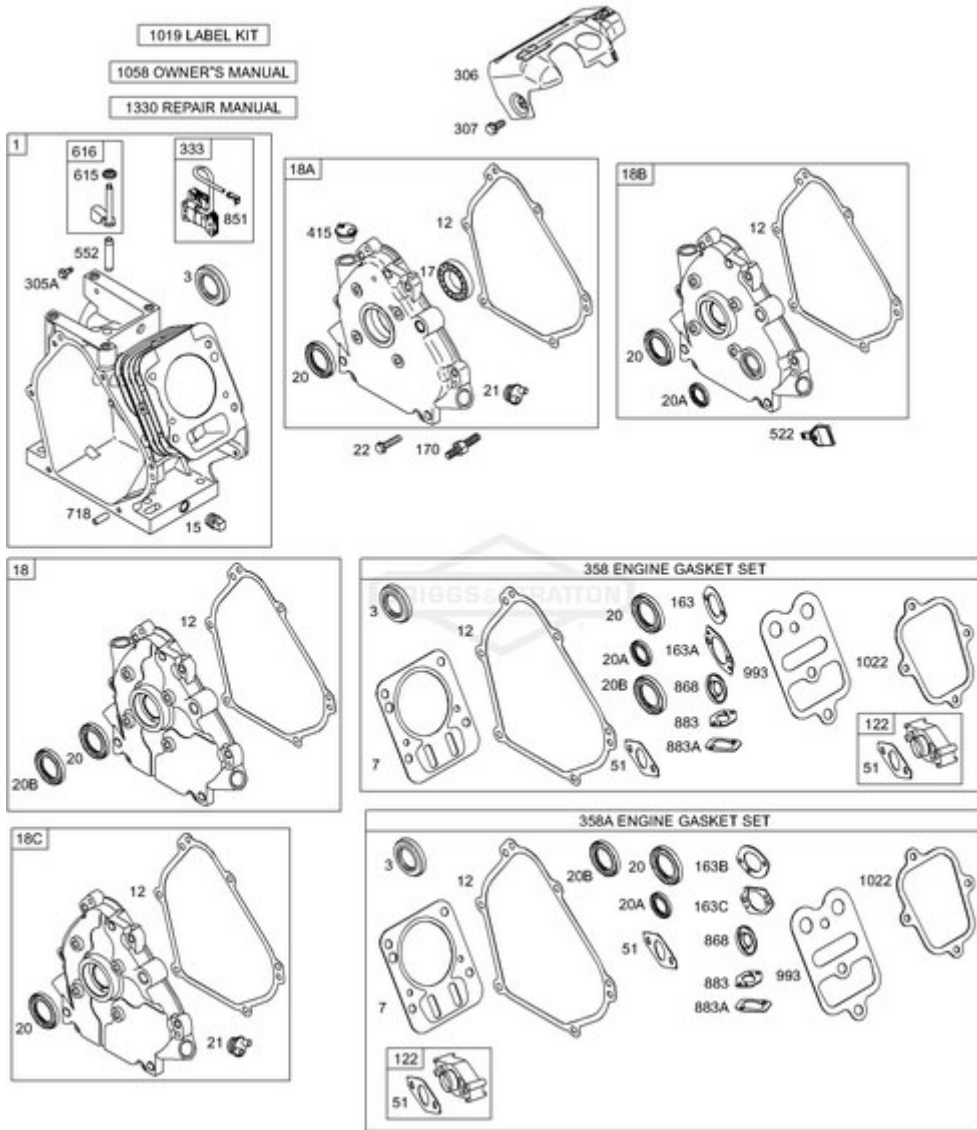

Copyright © Briggs & Stratton, LLC. All Rights Reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	693811	CYLINDER ASSEMBLY		Used Before Code Date 02011500	
1	698223	CYLINDER ASSEMBLY		Used After Code Date 02011400 Used Before Code Date 02101700	
1	698485	CYLINDER ASSEMBLY		Used After Code Date 02101600	
3	299819S	SEAL, Oil		(Magneto Side)	
7	695166	GASKET, Cylinder Head			
12	692549	GASKET, Crankcase			
15	691686	PLUG-OIL DRAIN		(1/4" Standard)	
17	692517	BEARING, Ball			
18B	694833	COVER, Crankcase			
20A	691952	SEAL, Oil		(PTO Side) (Auxiliary PTO)	
21	281658S	CAP, Oil Fill			
22	692551	SCREW		(Crankcase Cover/Sump)	
51	692555	GASKET, Intake		(2 Required)	
122	693749	SPACER, Carburetor			
163	272948S	GASKET, Air Cleaner		(Flat Panel)(Low Vent)	
163A	693458	GASKET, Air Cleaner		(High Mount)(Low Vent)	
163B	696024	GASKET, Air Cleaner		(Flat Panel)(High Vent)	
163C	696979	GASKET, Air Cleaner		(High Mount)(High Vent)	
170	691120	STUD		(Crankcase Cover/Sump)	
305A	691140	SCREW		(Blower Housing)	
306	693610	SHIELD, Cylinder			
307	690345	SCREW		(Cylinder Shield)	
333	695711	ARMATURE, Magneto			
358	698216	GASKET SET, Engine			
358A	697000	GASKET SET, Engine		(High Vent)	
415	693463	PLUG		(Nylon)	
522	696938	PLUG, Dipstick/Fill			
552	692346	BUSHING, Governor Crank			
615	692576	RETAINER, Governor Shaft			
616	692547	CRANK, Governor			
718	690959	PIN, Locating			
851	493880S	TERMINAL-SPARK PLUG			
868	692044	SEAL, Valve			
883	691893	GASKET-EXHAUST		(Between Adapter And Cylinder)	
883A	692237	GASKET-EXHAUST			


Ref #	Part #	Description	Qty	Context Note	Foot Note
993	694088	GASKET, Cylinder Head Plate			
1019	694852	KIT, Label			
1022	691890	GASKET-ROCKER COVER			
1058	275092	MANUAL, Operator's			
1330	272147	MANUAL, Repair			

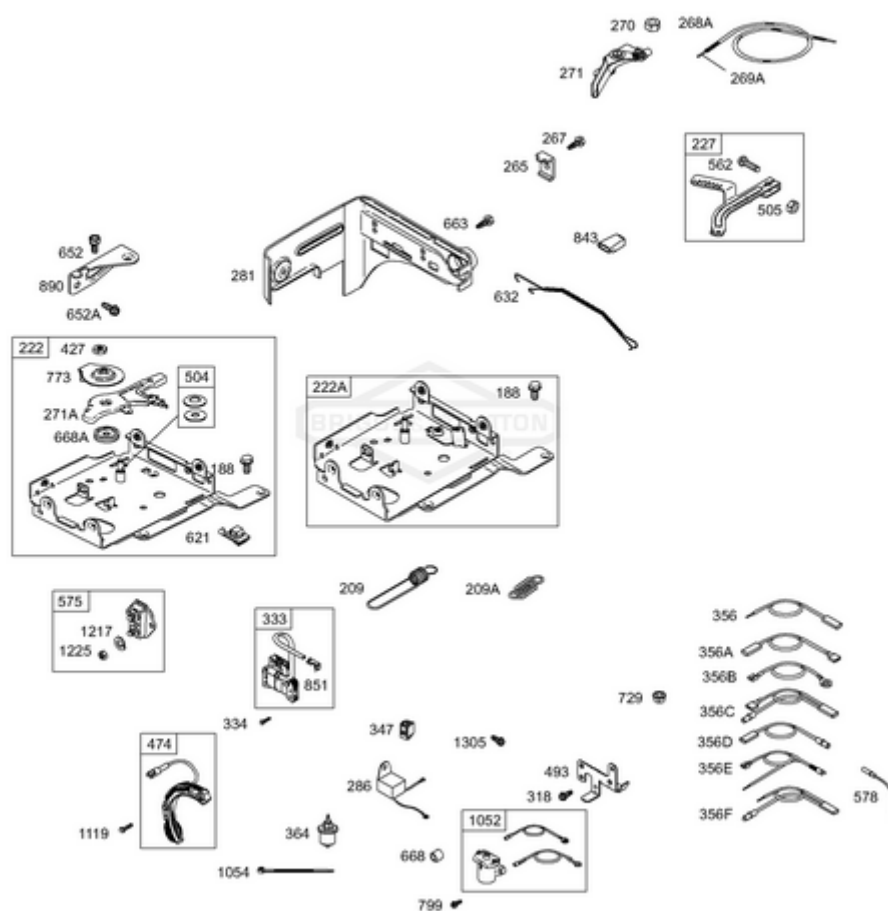

Copyright © Bridge & Stratus, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
188	690877	SCREW		(Control Bracket)	
209	692571	SPRING, Governor			
209A	691278	SPRING, Governor			
222	694253	BRACKET, Control			
227	692573	LEVER, Governor Control			
265	691024	CLAMP, Casing			
267	692577	SCREW		(Casing Clamp)	
268A	691072	CASING, Control Wire		(Cut To Required Length)	
269A	691589	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
271A	694256	LEVER, Control			
281	694252	PANEL, Control			
286	698611	MODULE, Oil Sensor		Used After Code Date 03010500	
286	698316	MODULE, Oil Sensor		(Electric Start) Used Before Code Date 03010600	
286	698317	MODULE, Oil Sensor		Used Before Code Date 03010600	
318	695446	SCREW		(Mounting Bracket) Used Before Code Date 01073000	
333	695711	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
347	697854	SWITCH, Rocker			
356	692390	WIRE, Stop			
364	695693	TERMINAL, Oil Plug			
427	694255	NUT		(Control Bracket)	
474	694457	ALTERNATOR			
493	693599	BRACKET, Mounting		Used Before Code Date 01073000	
504	694254	SET, Friction Washer			
505	691251	NUT		(Governor Control Lever)	
562	691119	BOLT		(Governor Control Lever)	
575	692303	SWITCH-STARTING			
578	692306	WIRE ASSEMBLY			
621	692310	SWITCH, Stop			
632	693408	SPRING/LINK, Mechanical Governor			
652	691108	SCREW		(Support Bracket)	
652A	695629	SCREW		(Support Bracket)	
663	694593	SCREW		(Control Panel)	
668	693604	SPACER		(Oil Sensor) Used Before Code Date 01073000	
668A	694257	SPACER		(Control Bracket)	
729	694371	CLIP, Wire			
773	694258	RETAINER		(Control Bracket)	
799	693609	SCREW		(Oil Sensor)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
851	493880S	TERMINAL-SPARK PLUG			
890	694933	BRACKET, Support			
1052	698674	SENSOR, Oil			
1054	280275	TIE, Cable			
1119	691183	SCREW		(Alternator)	
1217	691075	WASHER		(Starting Switch)	
1225	696198	NUT		(Starting Switch)	
1305	691140	SCREW		(Oil Sensor Module)	

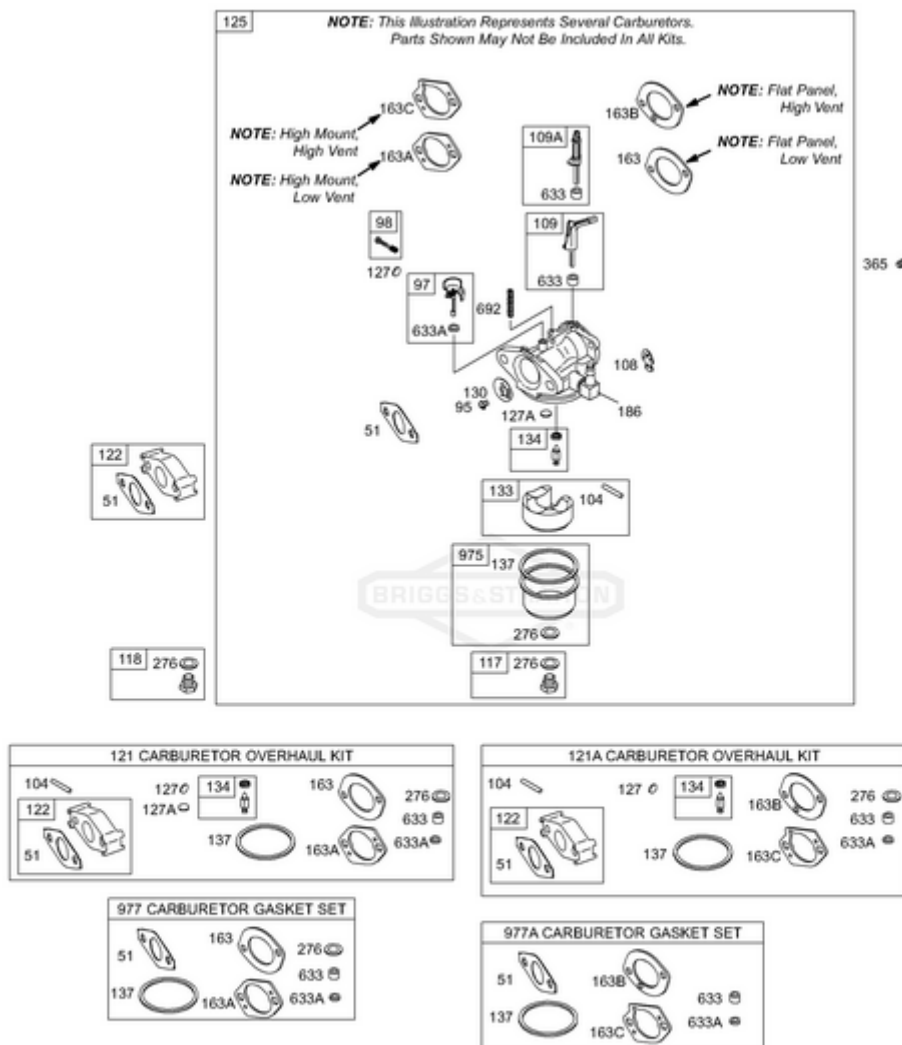



Copyright © Briggs & Stratton, LLC. All Rights Reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692555	GASKET, Intake		(2 Required)	
95	691636	SCREW		(Throttle Valve)	
97	690024	SHAFT, Throttle			
98	398185	KIT-IDLE SPEED		(Idle Speed) (Lmt 26, 27, 28, 31)	
104	691242	PIN, Float Hinge			
108	692567	VALVE-CHOKE			
109	690023	SHAFT, Choke			
117	498978	JET, Main		(Standard) (Used On Carburetors 696981 And 697028)	
118	497466	JET, Main		(High Altitude)	
121	695157	KIT, Carburetor Overhaul			
121A	696998	KIT, Carburetor Overhaul			
122	693749	SPACER, Carburetor			
125	696981	CARBURETOR			
127	691739	PLUG-WELCH			
130	691181	VALVE-THROTTLE			
133	398187	FLOAT- CARBURETOR			
134	398188	KIT-NEEDLE/SEAT			
137	693981	GASKET-FLOAT BOWL			
163	272948S	GASKET, Air Cleaner		(Flat Panel)(Low Vent)	
163A	693458	GASKET, Air Cleaner		(High Mount)(Low Vent)	
163B	696024	GASKET, Air Cleaner		(Flat Panel)(High Vent)	
163C	696979	GASKET, Air Cleaner		(High Mount)(High Vent)	
186	692317	CONNECTOR-HOSE			
276	271716	WASHER-SEALING			
365	692568	SCREW		(Carburetor)	
633	693867	SEAL, Choke/Throttle Shaft			
633A	691321	SEAL, Choke/Throttle Shaft		(Throttle Shaft)	
692	690572	SPRING, Detent		(Carburetor)	
975	493640	BOWL, Float			
977	695156	SET, Carburetor Gasket			
977A	697001	SET, Carburetor Gasket		(High Vent)	

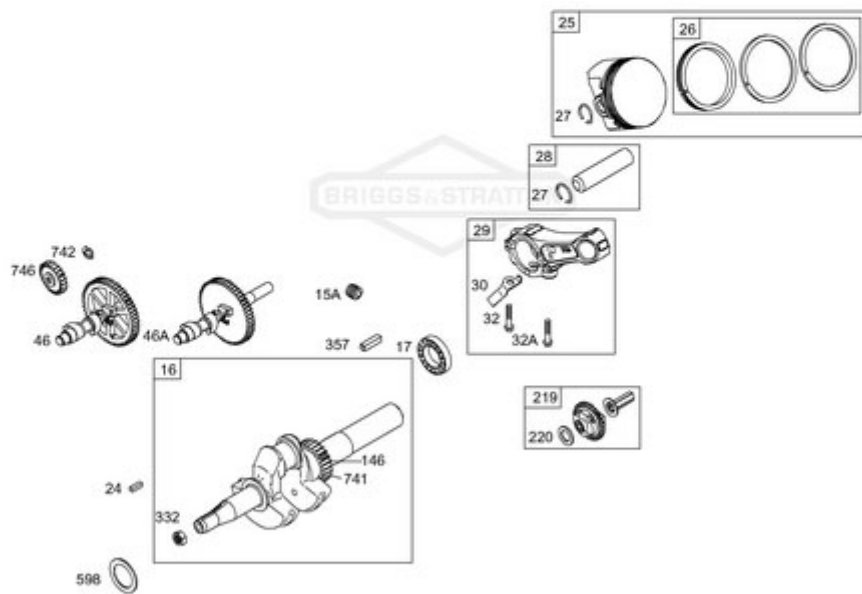


Copyright © Briggs & Stratton, LLC. All Rights Reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
15A	691682	PLUG-OIL DRAIN		(Flush)	
16	699445	CRANKSHAFT		Used After Code Date 03060800	
16	693887	CRANKSHAFT		Used Before Code Date 03060900	
17	692517	BEARING, Ball			
24	222698S	KEY, Flywheel			
25	694167	PISTON ASSEMBLY		(.010 Oversize)	
25	694168	PISTON ASSEMBLY		(.020 Oversize)	
25	694169	PISTON ASSEMBLY		(.030 Oversize)	
25	690021	PISTON ASSEMBLY		(Standard)	
26	692785	SET, Ring		(.010 Oversize)	
26	692786	SET, Ring		(.020 Oversize)	
26	692787	SET, Ring		(.030 Oversize)	
26	499631	SET, Ring		(Standard)	
27	691866	LOCK-PISTON PIN			
28	499423	PIN-PISTON/STD		(Standard)	
29	690124	ROD, Connecting			
30	692562	DIPPER, Connecting Rod			
32	691664	SCREW		(Connecting Rod)	
32A	695759	SCREW		(Connecting Rod) Used After Code Date 00042200	
46A	694831	CAMSHAFT			
146	690979	KEY, Woodruff			
219	693578	GEAR, Governor			
220	691724	WASHER		(Governor Gear)	
332	690662	NUT		(Flywheel) Used Before Code Date 03060900	
332	699359	NUT		(Flywheel) Used After Code Date 03060800	
357	691483	KEY, Drive Pulley			
598	220624	SHIM, End Play		(Crankshaft)	
741	695087	GEAR, Timing			
742	692564	RETAINER, E Ring		(Idler Gear)	
746	692566	GEAR, Idler			

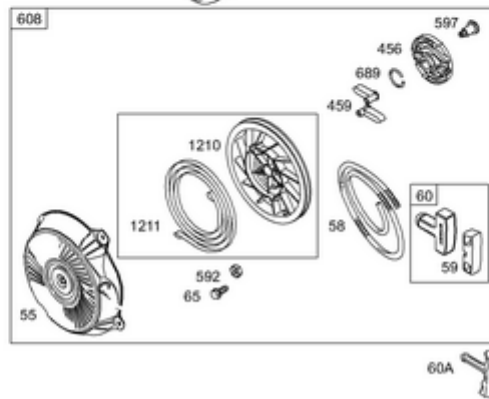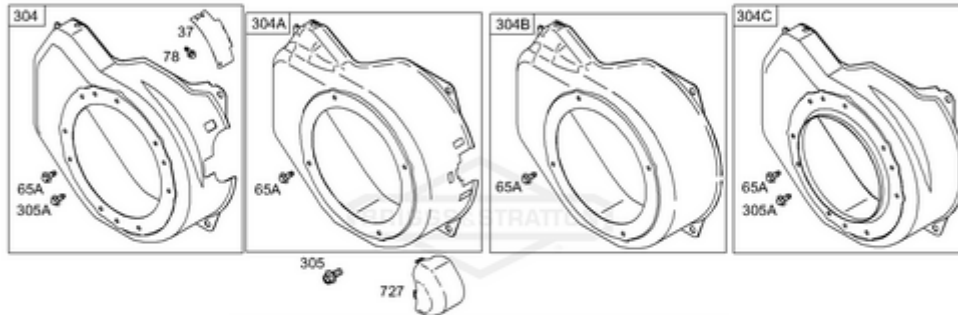

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
23	694902	FLYWHEEL		(Electric Start)	
23A	695298	FLYWHEEL		(Electric Start)(Minus Magnets)	
23B	692987	FLYWHEEL			
37	695725	GUARD, Flywheel			
55	691422	HOUSING, Rewind Starter			
58	693389	ROPE, Starter		(Cut To Required Length)	
59	805957	INSERT, Grip			
60	715257	GRIP, Starter Rope		(2 Piece)	
65	690837	SCREW		(Rewind Starter)	
65A	692608	SCREW		(Rewind Starter)	
78	695724	SCREW		(Flywheel Guard)	
304	697912	HOUSING, Blower		(Electric Start) Used After Code Date 03030200	
304B	699070	HOUSING, Blower		(Rewind Starter) Used After Code Date 03030200	
304B	697909	HOUSING, Blower		Used Before Code Date 03030300	
305	690960	SCREW		(Blower Housing)	
305A	691140	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel) Used Before Code Date 03060900	
332	699359	NUT		(Flywheel) Used After Code Date 03060800	
363	19069	PULLER, Flywheel			
455	692591	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	693394	STARTER, Rewind			
689	691855	SPRING-FRICTION		(Rewind Starter)	
727	694467	COVER, Starter Drive			
1005	692592	FAN, Flywheel			
1036	696766	LABEL, Emissions			
1070	692590	SCREW		(Flywheel Fan)	
1210	498144	PULLEY/SPRING ASSY		(Pulley)	
1211	498144	PULLEY/SPRING ASSY		(Spring)	

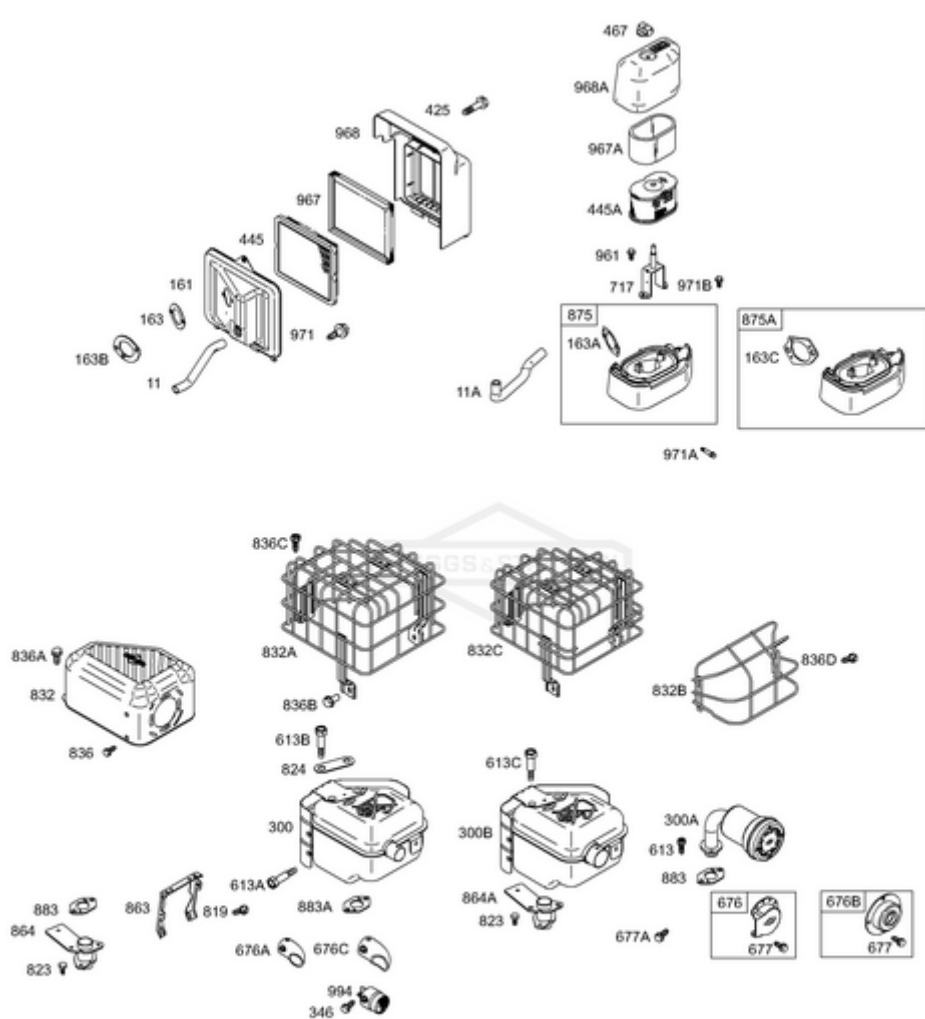

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	692600	TUBE, Breather		(Flat Panel Air Cleaner)	
11A	693647	TUBE, Breather		(High Mount Air Cleaner)	
161	692579	BASE, Air Cleaner		(Metal) (Low Vent)	
161	696063	BASE, Air Cleaner		(Metal) (High Vent)	
163	272948S	GASKET, Air Cleaner		(Flat Panel)(Low Vent)	
163A	693458	GASKET, Air Cleaner		(High Mount)(Low Vent)	
163B	696024	GASKET, Air Cleaner		(Flat Panel)(High Vent)	
163C	696979	GASKET, Air Cleaner		(High Mount)(High Vent)	
300	694429	MUFFLER		Used Before Code Date 02031800	
300B	697813	MUFFLER			
346	691627	SCREW		(Spark Arrestor)	
425	692583	SCREW		(Air Cleaner Cover)	
445	491588S	FILTER, A/C Cartridge			
445A	697029	FILTER-A/C CARTRIDGE			
467	691668	KNOB, Air Cleaner Cover			
613A	694460	SCREW		(Muffler) Used Before Code Date 02031800	
613C	697812	SCREW		(Muffler) Used After Code Date 02031700	
676A	696029	DEFLECTOR, Muffler		Used Before Code Date 02031800	
676C	697816	DEFLECTOR, Muffler		(Direct Out) Used After Code Date 02031700	
677A	691627	SCREW		(Muffler Deflector)	
717	693462	STRAP/STUD, Air Cleaner Mounting			
819	691685	SCREW		(Muffler Bracket)	
823	691665	SCREW		(Muffler Adapter)	
824	696017	GASKET, Heat Shield			
832	693583	GUARD, Muffler			
832A	694459	MUFFLER			
832B	696516	MUFFLER			
832C	697818	GUARD, Muffler			
836	690661	SCREW		(Muffler Guard)	
836A	693624	SCREW		(Muffler Guard)	
836B	691003	SCREW		(Muffler Guard)	
836C	691665	SCREW		(Muffler Guard)	
836D	696519	SCREW		(Muffler Guard)	
863	692596	BRACKET, Muffler			
864	694430	ADAPTER, Muffler		Used Before Code Date 02031800	
864A	697814	ADAPTER, Muffler		Used After Code Date 02031700	
875	693459	BASE, Air Cleaner		(Plastic)	
875A	697030	BASE, Air Cleaner		(Plastic) (High Vent)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
883	691893	GASKET-EXHAUST		(Between Adapter And Cylinder)	
883A	692237	GASKET-EXHAUST			
961	693598	SCREW		(Air Cleaner Bracket)	
967	493537S	FILTER, Air Cleaner Foam		(Flat Panel Air Cleaner)	
967A	273356S	FILTER-A/C FOAM			
968	692584	COVER, Air Cleaner			
968A	693460	COVER, Air Cleaner		(High Mount Air Cleaner)	
971	690370	SCREW		(Air Cleaner Base to Carburetor)	
971A	690349	SCREW		(Air Cleaner Base to Carburetor)	
971B	691693	SCREW		(Air Cleaner Base to Carburetor) (High Mount)	
994	690813	ARRESTOR, Spark		Used Before Code Date 02031800	
994	697817	ARRESTOR, Spark		Used After Code Date 02031700	

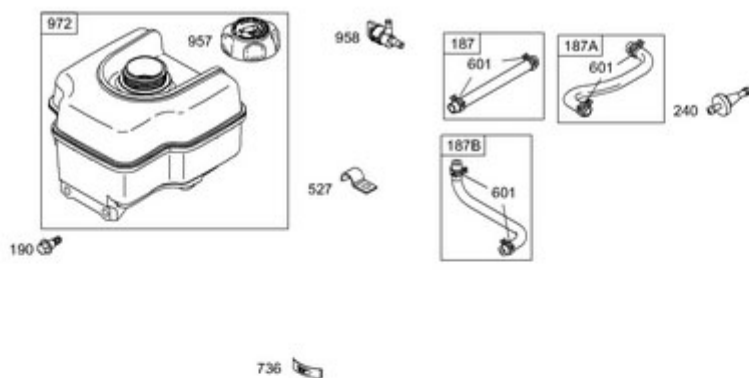

Copyright © Briggs & Stratton, LLC. All Rights Reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
187	691050	LINE, Fuel		(Cut To Required Length)	
187A	692601	LINE, Fuel		(Molded)(Use With Filter And Fuel Shut Off Valve)	
187B	693401	LINE, Fuel		(Molded)	
190	692127	SCREW		(Fuel Tank)	
240	694485	FILTER, Fuel			
527	690394	CLAMP, Hose			
601	95162S	CLAMP, Hose			
736	693560	NUT			
957	694261	CAP, Fuel Tank		(Plastic)	
958	692586	VALVE, Fuel Shut Off		(Plastic)	
972	694260	TANK, Fuel		(Plastic) (4 Quart)	