
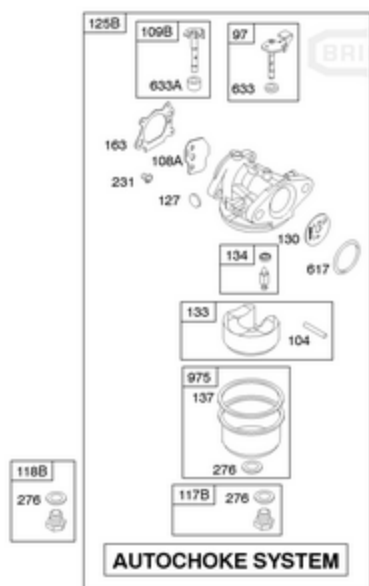
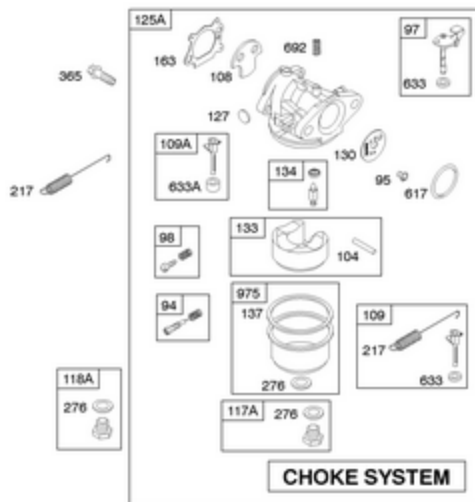
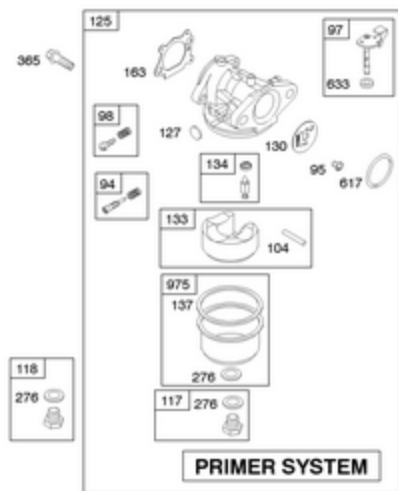


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
94	493765	KIT-IDLE MIXTURE		(Used On Carb. I.d. No. M24)	
95	691636	SCREW		(Throttle Valve)	
97	493267	SHAFT-THROTTLE		(Metal)	
97	696565	SHAFT, Throttle		(Plastic)	
98	398185	KIT-IDLE SPEED		(Idle Speed) (Lmt 26, 27, 28, 31)	
104	691242	PIN, Float Hinge			
108	691182	VALVE-CHOKE			
108A	795935	VALVE, Choke		Used After Code Date 08031200	
108A	790844	VALVE, Choke		Used Before Code Date 08031300	
109	494218	KIT, Choke Shaft			
109A	498593	SHAFT, Choke			
109B	790843	SHAFT, Choke		Used Before Code Date 08031300	
109B	795936	SHAFT, Choke		Used After Code Date 08031200	
117	494870	JET, Main		(Standard)	
117A	498978	JET, Main		(Standard)	
117B	697355	JET, Main		(Standard)	
118	498975	JET, Main		(High Altitude)	
118A	498975S	JET, Main		(High Altitude)	
118B	692677	JET, Main		(High Altitude)	
121	498260	KIT, Carburetor Overhaul			
125	498170	CARBURETOR		(Primer)	
125B	790845	CARBURETOR		(Autochoke System)	
127	694468	PLUG, Welch		(Bowl Vent)	
130	696564	VALVE, Throttle		(Used With Plastic Throttle Shaft) Used After Code Date 01040800	
130	691203	VALVE, Throttle			
133	398187	FLOAT- CARBURETOR			
134	398188	KIT-NEEDLE/SEAT			
137	693981	GASKET-FLOAT BOWL		(1/16)	
137	796610	GASKET, Float Bowl			
163	272653S	GASKET, Air Cleaner		(Air Cleaner)	
217	690354	SPRING, Choke Return			
231	691636	SCREW		(Choke Valve)	
276	271716	WASHER-SEALING			
365	691688	SCREW		(Carburetor/Throttle Body)	
617	270344S	SEAL, O-Ring		(Intake Manifold)	
633	691321	SEAL-CHOKE/THR SHAFT		(Throttle Shaft)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
633A	693867	SEAL, Choke/Throttle Shaft			
692	690572	SPRING, Detent			
975	493640	BOWL, Float			
977	498261	SET, Carburetor Gasket			

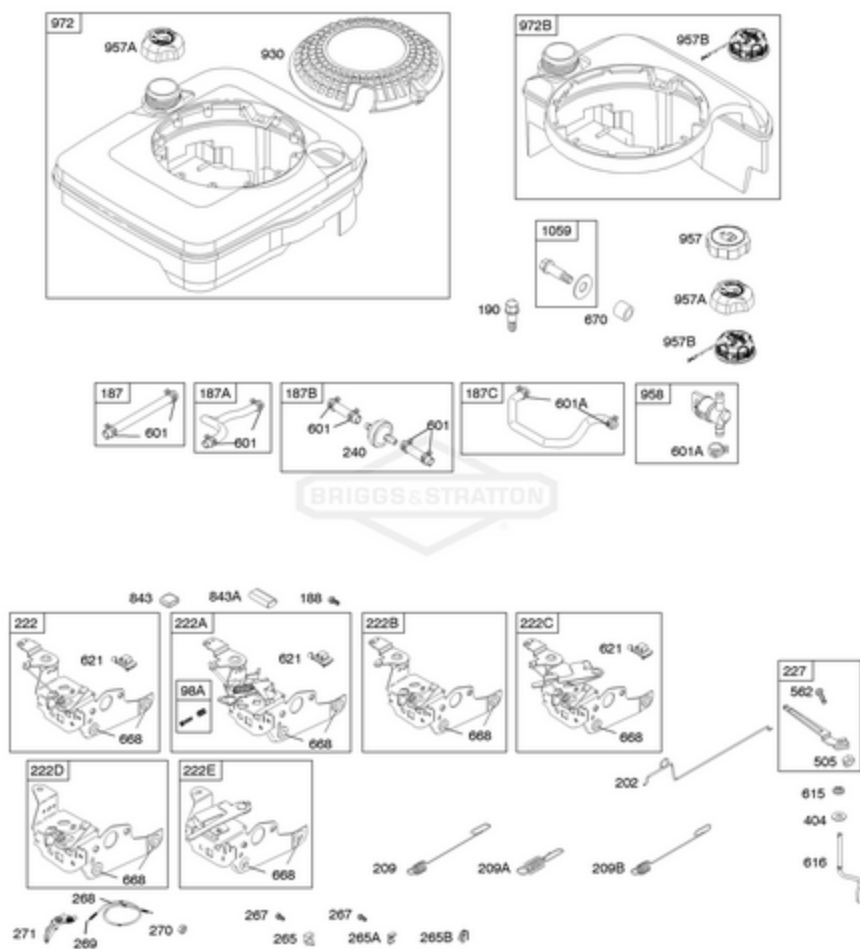

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
98A	493280	KIT-IDLE SPEED		(Idle Speed)	
187	791766	LINE, Fuel		(Cut To Required Length)	
187A	791873	LINE-FUEL		(Molded)	
187C	791875	LINE, Fuel		(Molded)	
187B	791891	LINE-FUEL		(Includes Filter)	
188	690877	SCREW		(Control Bracket)	
190	690940	SCREW		(Fuel Tank)	
202	691829	LINK, Mechanical Governor			
209B	691852	SPRING, Governor			
222	790143	BRACKET-CONTROL		(Remote/Manual Friction)(Primer)	
222A	692021	BRACKET, Control		(Remote Choke & Choke-A-Matic)	
222C	692150	BRACKET, Control		(Variable Speed)(5 Position Manual Choke)	
222D	692467	BRACKET, Control		(Fixed Speed)	
222E	692982	BRACKET, Control		(Manual Friction, 5 Position Manual Choke)	
222B	693006	BRACKET, Control		(Fixed Speed Auto Primer Control)	
227	690783	LEVER-GOV CONTROL			
240	298090S	FILTER, Fuel			
265	690798	CLAMP, Casing			
265A	691024	CLAMP, Casing			
265B	692179	CLAMP-CASING			
267	691044	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
404	690272	WASHER		(Governor Crank)	
505	691251	NUT		(Governor Control Lever)	
562	92613	BOLT		(Governor Lever)	
601	791850	CLAMP, Hose			
601A	691038	CLAMP, Hose			
615	690340	RETAINER, Governor Shaft			
616	698801	CRANK-GOVERNOR			
621	692310	SWITCH, Stop			
668	493823	SPACER		(Includes 2)	
670	692294	SPACER, Fuel Tank			
843	691884	SLEEVE, Lever		(Speed Control)	
843A	691895	SLEEVE, Lever		(Choke)	
930	691919	GUARD, Rewind		(Round)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
957	397974S	CAP, Fuel Tank			
957A	692046	CAP, Fuel Tank			
957B	699985	CAP, Fuel Tank			
958	698183	VALVE, Fuel Shut Off			
972	699392	TANK, FUEL			
972B	699374	TANK, Fuel			
1059	692311	KIT, Screw/Washer			
1059	696293	KIT, Screw/Washer		(Touch N Mow)	

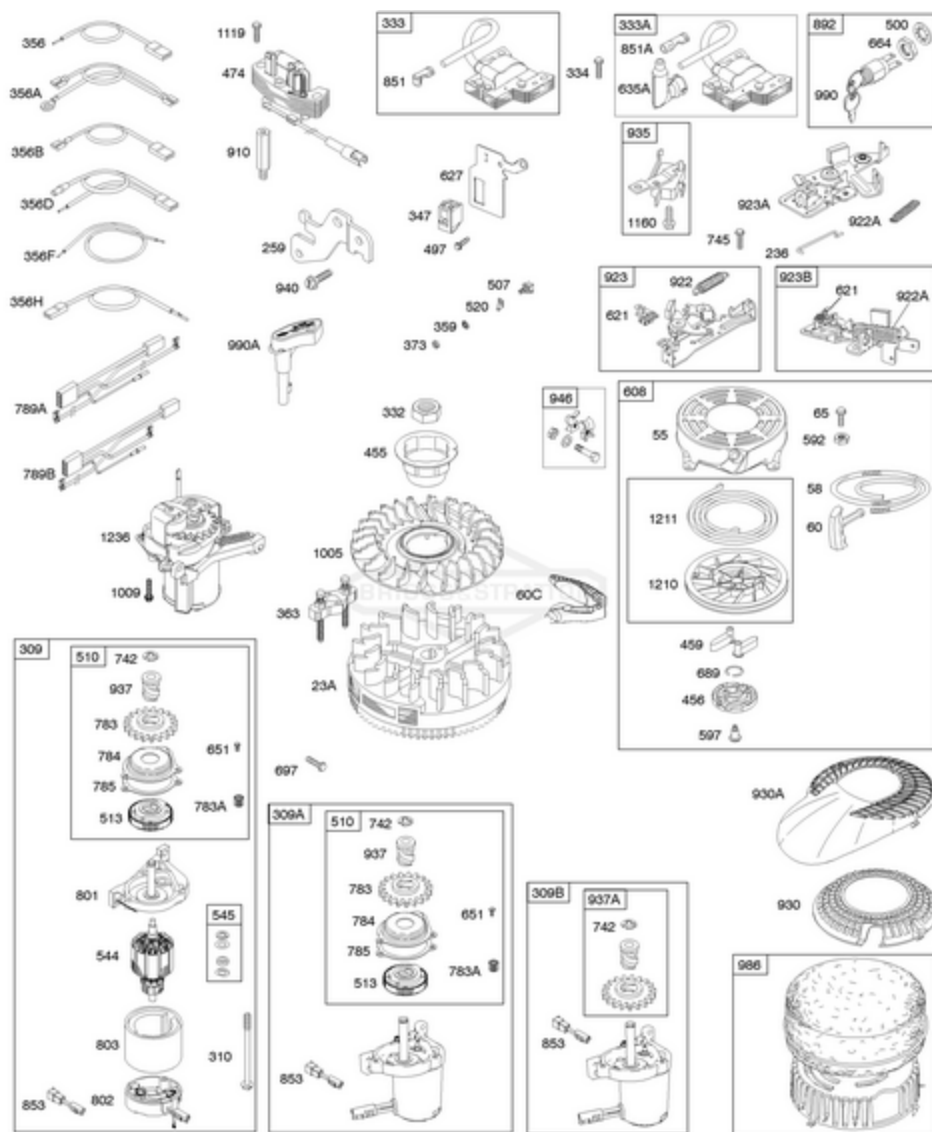


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23A	691987	FLYWHEEL			
55	691421	HOUSING, Rewind Starter			
58	280399S	ROPE-STARTER		(Cut To Required Length)	
60	281434S	GRIP, Starter Rope			
60C	799716	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
236	691826	LINK, Lockout			
259	691223	BRACKET, Casing Clamp		(Control Wire Casing)	
309	695550	MOTOR, Starter		Used Before Code Date 07052900	
309A	795092	MOTOR, Starter		Used After Code Date 07052800 Used Before Code Date 10112800	
309B	799045	MOTOR-STARTER		Used After Code Date 10112700	
310	692327	SCREW		(Starter Motor)	
332	690662	NUT		(Flywheel)	
333	802574	ARMATURE, Magneto			
333A	793353	ARMATURE, Magneto		(Snap In Spark Plug Boot)	
333A	792640	ARMATURE, Magneto		(Screw On Spark Plug Boot)	
334	691061	SCREW		(Magneto Armature)	
347	691396	SWITCH, Rocker			
356	692390	WIRE, Stop			
356A	690650	WIRE, Stop			
356D	496381	WIRE, Stop			
356F	494250	WIRE, Stop			
356H	690791	WIRE, Stop			
356B	693010	WIRE, Stop			
359	691077	WASHER		(Ground Terminal)	
363	19069	PULLER, Flywheel			
373	691612	NUT		(Ground Terminal)	
455	791960	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
474	691991	ALTERNATOR			
497	690664	SCREW		(Stopswitch Bracket)	
500	691086	WASHER		(Key Switch)	
507	691972	INSULATOR			
510	795093	DRIVE, Starter			

Ref #	Part #	Description	Qty	Context Note	Foot Note
513	692358	CLUTCH, Drive			
520	691084	TERMINAL, Ground			
544	690786	ARMATURE, Starter			
545	492919	WASHER		(Starter Motor)	
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	497680	STARTER, Rewind			
621	692310	SWITCH, Stop			
627	692872	BRACKET, Stopswitch			
635A	792597	BOOT, Spark Plug		(Screw On Style)	
635A	793351	SHIELD-SPARK PLUG		(Snap In Style)	
651	691660	SCREW		(Starter Gear Cover)	
664	691087	NUT		(Key Switch)	
689	691855	SPRING-FRICTION			
697	691127	SCREW		(Starter Motor) (Drive Cap)	
742	93941	RETAINER, E Ring			
745	691648	SCREW		(Brake)	
783	691918	GEAR, Pinion			
783A	691269	GEAR, Pinion			
784	795095	COVER, Starter Gear			
785	692352	GASKET-STARTER COVER			
789A	691372	HARNESS, Wiring		Used Before Code Date 00040700	
789B	696547	HARNESS, Wiring			
801	690782	CAP, Drive			
802	695267	CAP, End		Used After Code Date 00040600	
802	695975	HOUSING, Starter		Used Before Code Date 00040700	
803	695975	HOUSING, Starter		Used Before Code Date 00040700	
803	695266	HOUSING, Starter		Used After Code Date 00040600	
851	493880S	TERMINAL-SPARK PLUG			
851A	692424	TERMINAL, Spark Plug			
853	695268	ADAPTER, Wire			
892	690646	SWITCH, Key			
910	691094	STUD		(Alternator)	
922	691831	SPRING-BRAKE			
922A	692135	SPRING, Brake			
923A	695891	BRAKE		Used Before Code Date 08050100	
923B	796136	BRAKE		Used After Code Date 08043000	

Ref #	Part #	Description	Qty	Context Note	Foot Note
930	691919	GUARD, Rewind		(Round)	
930A	691345	GUARD, Rewind		(Tear Drop)	
935	499421	SWITCH, Interlock		Used Before Code Date 08050100	
937	691325	SPLINE, Starter			
937A	799420	SPLINE, Starter			
940	690664	SCREW		(Casing Clamp Bracket)	
946	691738	STOP, Rope			
986	693514	FILTER, Debris Foam			
990	691959	SET, Key			
990A	695951	SET, Key		(Touch N Mow)	
1005	691346	FAN, Flywheel			
1009	696255	SCREW		(USE REFERENCE 697 ONLY)	
1119	691648	SCREW		(Alternator)	
1160	690345	SCREW		(Interlock Switch)	
1210	498144	PULLEY/SPRING ASSY		(Pulley)	
1211	498144	PULLEY/SPRING ASSY		(Spring)	
1236	695959	STARTER, Mechanical		(Touch N Mow)(Do Not Service Individual Parts, Only As A Whole)	

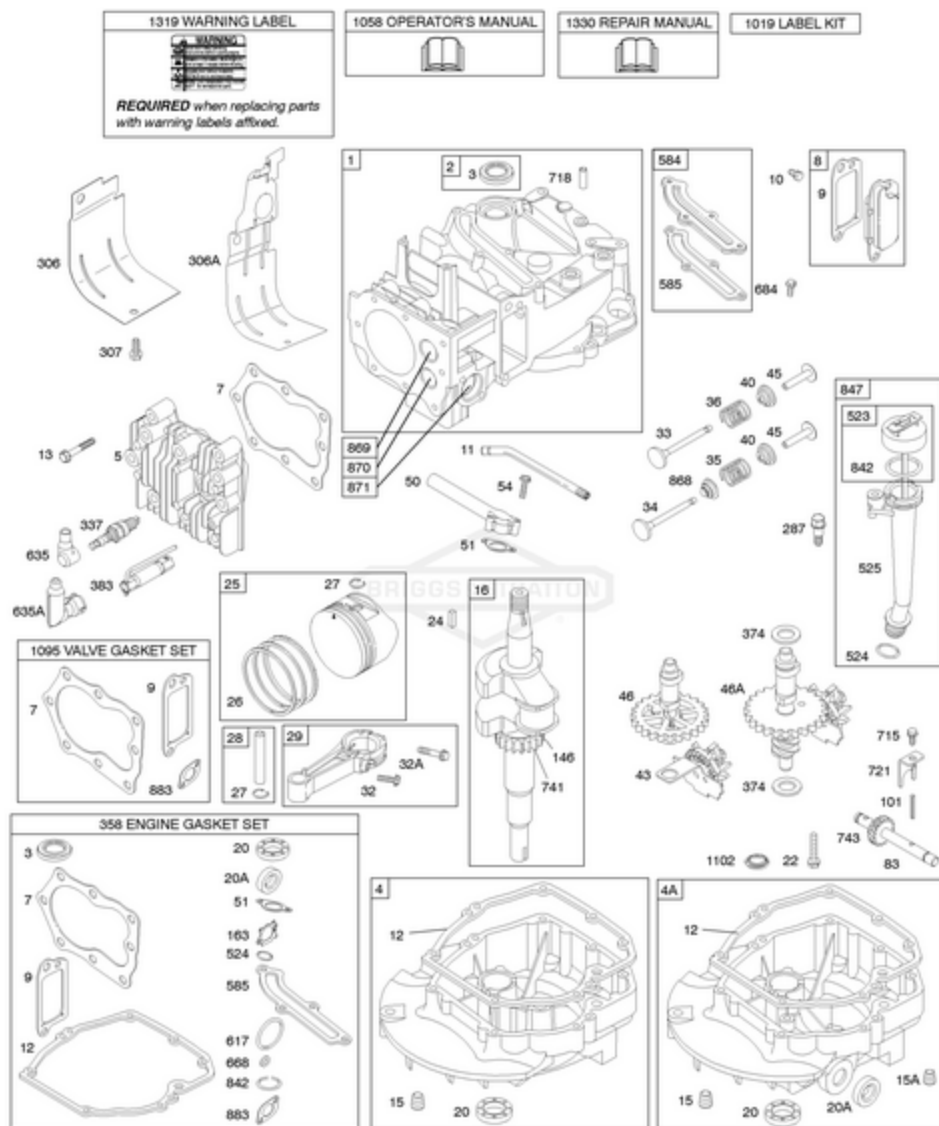

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
1	590401	CYLINDER ASSEMBLY		Used After Code Date 11063000	
1	697322	CYLINDER ASSEMBLY		Used Before Code Date 11070100	
2	399269	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL, Oil		(Magneto Side)	
4	493279	SUMP, Engine			
4A	493365	SUMP, Engine		(Auxiliary PTO)	
5	691160	HEAD, Cylinder		Used Before Code Date 11070100	
5	590411	HEAD, Cylinder		Used After Code Date 11063000	
7	799875	GASKET, Cylinder Head		Used After Code Date 11063000	
7	692249	GASKET, Cylinder Head		Used Before Code Date 11070100	
8	590395	BREATHER ASSEMBLY		Used After Code Date 11063000	
8	495786	BREATHER ASSEMBLY		Used Before Code Date 11070100	
9	699472	GASKET, Breather		Used After Code Date 11063000	
9	699833	GASKET-BREATHER		Used Before Code Date 11070100	
10	94650	SCREW		(Breather Assembly)	
11	691781	TUBE-BREATHER			
12	692232	GASKET, Crankcase			
13	590422	SCREW		(Cylinder Head) Used After Code Date 11063000	
13	690912	SCREW		(Cylinder Head) Used Before Code Date 11070100	
15	691680	PLUG, Oil Drain		(Square Socket)	
15A	691093	PLUG, Oil Drain		(Hex Socket)	
16	691452	CRANKSHAFT		Used After Code Date 97011200	
20	399781S	SEAL, Oil		(PTO Side)	
20A	691952	SEAL, Oil		(PTO Side) (Auxiliary PTO)	
22	691092	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	493386	PISTON ASSEMBLY		(.020 Oversize) Used Before Code Date 97011300	
25	493387	PISTON ASSEMBLY		(.030 Oversize) Used Before Code Date 97011300	
25	590404	PISTON ASSEMBLY		(Standard) Used After Code Date 11063000	

Ref #	Part #	Description	Qty	Context Note	Foot Note
25	590405	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 11063000	
25	791097	PISTON ASSEMBLY		(Standard) Used After Code Date 97011200 Used Before Code Date 07090400	
25	791326	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 97011200 Used Before Code Date 07090400	
25	795429	PISTON ASSEMBLY		(Standard) Used After Code Date 07090300 Used Before Code Date 09041700	
25	795430	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 07090300 Used Before Code Date 09041700	
25	797302	PISTON ASSEMBLY		(Standard) Used After Code Date 09041600 Used Before Code Date 11070100	
25	797303	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 09041600 Used Before Code Date 11070100	
25	493262	PISTON ASSEMBLY		(Standard) Used Before Code Date 97011300	
26	493389	SET, Ring		(.020 Oversize) Used Before Code Date 97011300	
26	493390	SET, Ring		(.030 Oversize) Used Before Code Date 97011300	
26	499425	SET, Ring		(Standard) Used After Code Date 97011200 Used Before Code Date 04031500	
26	499427	SET, Ring		(.020 Oversize) Used After Code Date 97011200 Used Before Code Date 04102200	
26	590402	SET, Ring		(Standard) Used After Code Date 11063000	
26	590403	SET, Ring		(.020 Oversize) Used After Code Date 11063000	
26	791098	SET, Ring		(Standard) Used After Code Date 04031400 Used Before Code Date 07090400	
26	791324	SET, Ring		(.020 Oversize) Used After Code Date 04102100 Used Before Code Date 07090400	
26	795431	RING SET		(Standard) Used After Code Date 07090300 Used Before Code Date 09041700	
26	795432	SET, Ring		(.020 Oversize) Used After Code Date 07090300 Used Before Code Date 09041700	
26	797304	SET, Ring		(Standard) Used After Code Date 09041600 Used Before Code Date 11070100	
26	797305	SET, Ring		(.020 Oversize) Used After Code Date 09041600 Used Before Code Date 11070100	

Ref #	Part #	Description	Qty	Context Note	Foot Note
26	493261	SET, Ring		(Standard) Used Before Code Date 97011300	
27	691588	LOCK, Piston Pin		Used After Code Date 09041600	
27	691866	LOCK-PISTON PIN		Used After Code Date 97011200 Used Before Code Date 09041700	
27	691588	LOCK, Piston Pin		Used Before Code Date 97011300	
28	298908	PIN, Piston		(.005 Oversize) Used Before Code Date 97011300	
28	298909	PIN. Piston		(Standard) Used Before Code Date 97011300	
28	298909	PIN. Piston		(Standard) Used After Code Date 09041600	
28	499423	PIN-PISTON/STD		(Standard) Used After Code Date 97011200 Used Before Code Date 09041700	
29	490566	ROD, Connecting		(Standard) Used Before Code Date 97011300	
29	499424	ROD, Connecting		(Standard) Used After Code Date 97011200 Used Before Code Date 09041700	
29	797306	ROD, Connecting		(Standard) Used After Code Date 09041600	
32	691664	SCREW		(Connecting Rod)	
32A	695759	SCREW		(Connecting Rod) Used After Code Date 00042200	
33	590394	VALVE-EXHAUST		Used After Code Date 11063000	
33	262651S	VALVE, Exhaust		Used Before Code Date 11070100	
34	590393	VALVE-INTAKE		Used After Code Date 11063000	
34	262652S	VALVE, Intake		Used Before Code Date 11070100	
35	691270	SPRING, Valve		(Intake)	
36	691270	SPRING, Valve		(Exhaust)	
40	692194	RETAINER, Valve			
43	691997	SLINGER, Governor/Oil			
45	690548	TAPPET, Valve			
46	492830	CAMSHAFT		Used Before Code Date 96060300	
46	691449	CAMSHAFT		Used After Code Date 96060200	
50	497465	MANIFOLD, Intake			
51	272199S	GASKET, Intake			
54	691650	SCREW		(Intake Manifold)	
101	691623	PIN, Shaft			
146	690979	KEY, Woodruff			
163	272653S	GASKET, Air Cleaner		(Air Cleaner)	
287	690940	SCREW		(Dipstick Tube)	
306	690450	SHIELD, Cylinder			



Ref #	Part #	Description	Qty	Context Note	Foot Note
306A	790836	SHIELD, Cylinder			
307	690345	SCREW		(Cylinder Shield)	
337	697451	PLUG, Spark		(EMS) Used Before Code Date 11070100	
337	799876	PLUG, Spark		Used After Code Date 11063000	
337	802592S	PLUG, Spark		(Resistor) Used Before Code Date 11070100	
358	590508	GASKET SET, Engine		Used After Code Date 11063000	
358	497316	GASKET SET, Engine		Used Before Code Date 11070100	
374	691074	WASHER		(Camshaft)	
383	89838S	WRENCH-SPARK PLUG			
523	499621	DIPSTICK			
524	692296	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
525	495265	TUBE, Dipstick			
584	697734	COVER-BREA PASSAGE			
585	691879	GASKET-BREA PASSAGE			
617	270344S	SEAL, O-Ring		(Intake Manifold)	
635	66538S	BOOT, Spark PLug			
635A	793351	SHIELD-SPARK PLUG		(Snap In Style)	
635A	792597	BOOT, Spark Plug		(Screw On Style)	
668	493823	SPACER		(Includes 2)	
684	690345	SCREW		(Breather Passage Cover)	
715	691147	SCREW		(Stop Shaft)	
718	690959	PIN, Locating			
721	690449	STOP, Shaft			
741	794388	GEAR, Timing		(Use Without Woodruff Key) Used After Code Date 07093000 Used Before Code Date 08021800	
741	795755	GEAR, Timing		(Plastic) Used After Code Date 08021700	
741	797521	GEAR, Timing		(Metal) Used After Code Date 08021700	
741	691830	GEAR-TIMING		(Uses Woodruff Key)	
741	790345	GEAR, Timing		(Use Without Woodruff Key) Used Before Code Date 07100100	
743	691772	GEAR, Drive		(Counterclockwise)	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	692047	DIPSTICK/TUBE ASSY			

Ref #	Part #	Description	Qty	Context Note	Foot Note
868	697338	SEAL, Valve		Used Before Code Date 11070100	
868	590410	SEAL, Valve		Used After Code Date 11063000	
869	691155	SEAT, Valve		(Intake)	
870	690380	SEAT, Valve		(Exhaust)	
871	262001	BUSHING-VALVE GUIDE		(Exhaust) Used Before Code Date 11070100	
871	590409	BUSHING, Valve Guide		Used After Code Date 11063000	
871	63709	BUSHING, Valve Guide		(Intake) Used Before Code Date 11070100	
883	691881	GASKET, Exhaust			
1019	790231	KIT, Label		(Touch N Mow)	
1019	494256	KIT, Label			
1058	277039TRI	MANUAL, Operator's		Used Before Code Date 11070100	
1058	380567TRI	MANUAL, Operator's		Used After Code Date 11063000	
1095	498528	GASKET SET, Valve			
1319	794467	LABEL, Warning			
1330	270962	REP MAN-1 CYL L-HD			

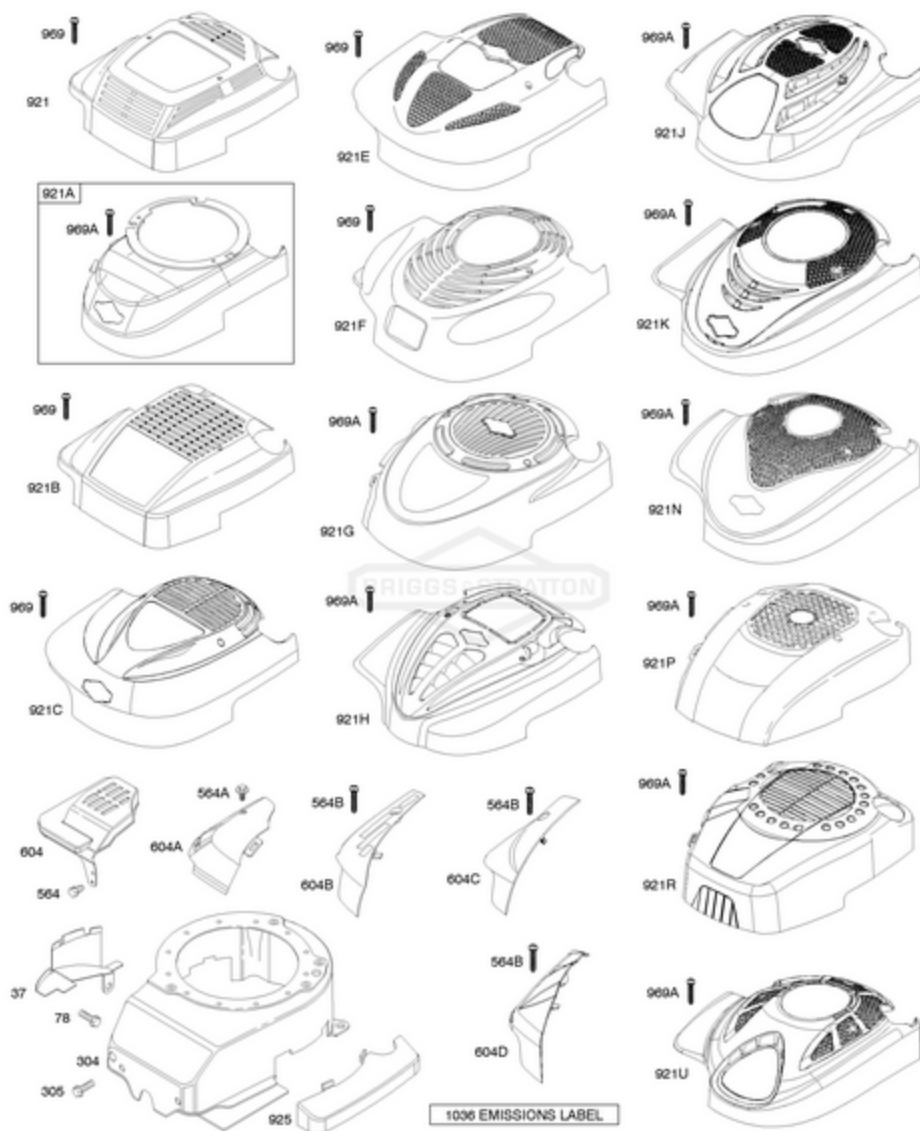

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
37	694086	GUARD, Flywheel			
78	691108	SCREW		(Flywheel Guard)	
304	695892	HOUSING, Blower			
305	691108	SCREW		(Blower Housing)	
564	690664	SCREW		(Control Cover)	
564	691132	SCREW		(Control Cover)	
564A	691142	SCREW		(Control Cover)	
564B	698589	SCREW		(Control Cover)	
604	691757	COVER-CONTROL			
604A	691344	COVER, Control			
604B	790703	COVER, Control			
604C	792418	COVER, Control			
604D	793770	COVER, Control			
921	497233	COVER-BLOWER HSG			
921A	695886	COVER-BLOWER HSG			
921U	794355	HOUSING, Blower			
921C	695889	HOUSING, Blower			
921E	696262	HOUSING, Blower			
921F	697343	HOUSING, Blower			
921K	699984	HOUSING, Blower			
921J	790036	HOUSING, Blower			
921H	790037	HOUSING, Blower			
921G	790701	HOUSING, Blower			
921N	792675	HOUSING, Blower			
921P	792687	HOUSING, Blower			
921R	793771	HOUSING, Blower			
925	690595	COVER, Linkage		Used Before Code Date 07072300	
925	795403	COVER-LINKAGE		Used After Code Date 07072200	
969	690700	SCREW		(Blower Housing)	
969A	691138	SCREW		(Blower Housing)	
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	

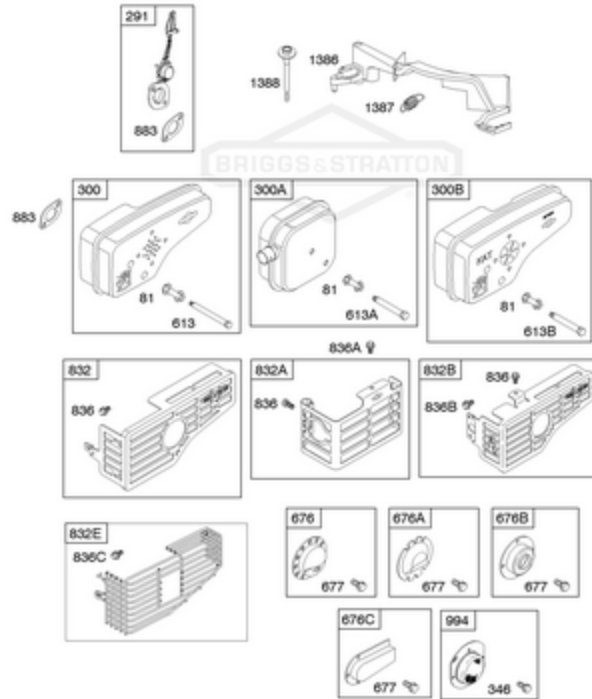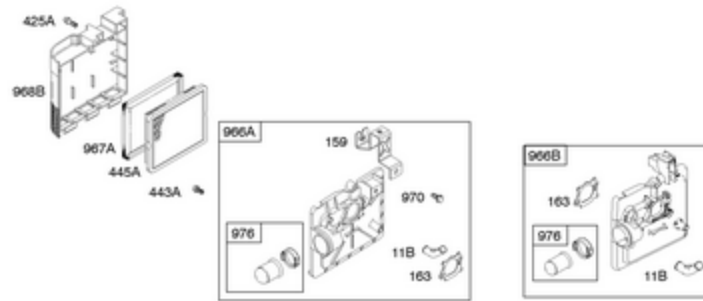

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11B	691923	TUBE, Breather			
81	691740	LOCK, Muffler Screw			
159	691753	BRACKET, Air Cleaner Primer			
163	272653S	GASKET, Air Cleaner		(Air Cleaner)	
291	790830	THERMOSTAT			
300	692038	MUFFLER		(Super Lo Tone)	
300A	494343S	MUFFLER		(Square Lo Tone)	
300B	497681	MUFFLER		(Catalyst)	
346	690661	SCREW		(Spark Arrestor)	
425A	690670	SCREW		(Air Cleaner Cover)	
443A	692523	SCREW		(Air Cleaner Primer Base)	
445A	491588S	FILTER, A/C Cartridge			
613	691340	SCREW		(Muffler)	
613A	691653	SCREW		(Muffler)	
613B	691114	SCREW		(Muffler)	
676	396548	DEFLECTOR, Muffler		(Louvered)	
676A	393756	DEFLECTOR, Muffler		(Side Outlet)	
676B	397931	DEFLECTOR, Muffler		(Direct Out)	
676C	493871	DEFLECTOR, Muffler		(Side Out)(Extended)	
677	690661	SCREW		(Muffler Deflector)	
832	590486	GUARD, Muffler		Used After Code Date 11063000	
832	499034	GUARD, Muffler		Used Before Code Date 11070100	
832A	691424	MUFFLER			
832E	793568	MUFFLER			
832B	497683	GUARD, Muffler			
836	690664	SCREW		(Muffler Guard)	
836A	690661	SCREW		(Muffler Guard)	
836B	691147	SCREW		(Muffler Guard)	
836C	790745	SCREW		(Muffler Guard)	
883	691881	GASKET, Exhaust			
966A	496116	BASE, Air Cleaner		(Primer)	
966B	792040	BASE, Air Cleaner		(Primer)	
967A	493537S	FILTER, Air Cleaner Foam			
968B	692298	COVER, Air Cleaner			
970	691669	SCREW		(Air Cleaner Primer Bracket)	
976	694395	PRIMER, Carburetor			
994	398067	ARRESTOR-SPARK			
1386	790848	VANE, Air		(Autochoke System)	
1387	790849	SPRING, Air Vane			
1388	790850	SCREW		(Air Vane) (Auto Choke System)	