
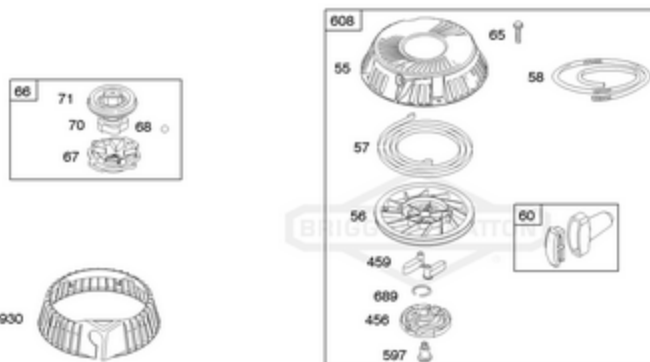
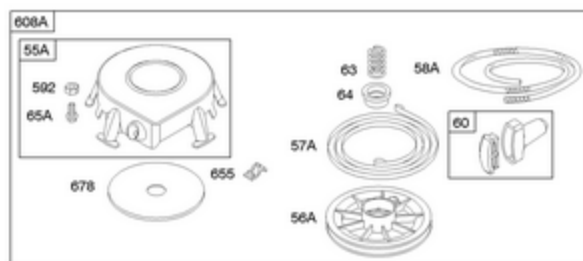


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	693557	FLYWHEEL		(Steel Ring Gear)	
23B	693555	FLYWHEEL		(Rewind Starter)	
55	695130	HOUSING, Rewind Starter			
55A	393576	HOUSING, Rewind Starter			
56	695129	PULLEY, Starter			
56A	295871	PULLEY, Starter		(63 Rope)	
57	695131	SPRING, Rewind Starter			
57A	490179	SPRING-REWIND STR			
58	695132	ROPE, Starter		(59" Long)	
58A	695002	ROPE, Starter		(99)(Cut to Required Length)	
60	490652	GRIP-STARTER ROPE			
63	690547	SPRING, Ratchet			
64	691920	ADAPTER, Ratchet Spring			
65	697725	SCREW		(Rewind Starter)	
65A	690837	SCREW		(Rewind Starter)	
66	399671	CLUTCH-STARTER			
67	394897	HOUSING, Clutch			
68	691604	BALL, Clutch			
70	691945	RATCHET-CLUTCH			
71	691359	COVER, Ratchet			
165	693148	NUT		(Ring Gear)	
363	19203	PULLER, Flywheel			
456	695128	PLATE, Pawl Friction			
459	281505S	PAWL-RATCHET			
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	695058	STARTER, Rewind		Used After Code Date 99102400	
608A	390391	STARTER, Rewind		Used Before Code Date 99102500	
655	691734	ANCHOR-REWIND SPRING			
678	490817	SPACER-REWIND		(Rewind)	
689	691855	SPRING-FRICTION			
695	693109	SCREW		(Ring Gear)	
726		Gear-Ring			
726A	696537	GEAR, Ring		(Aluminum)(Services Plastic Ring Gear Only)	
783	693713	GEAR, Pinion		(DC)(10-16 AMP)	
783A	695708	GEAR-PINION			
930	691904	GUARD, Rewind			


Ref #	Part #	Description	Qty	Context Note	Foot Note
1051	691265	RING, Retaining			

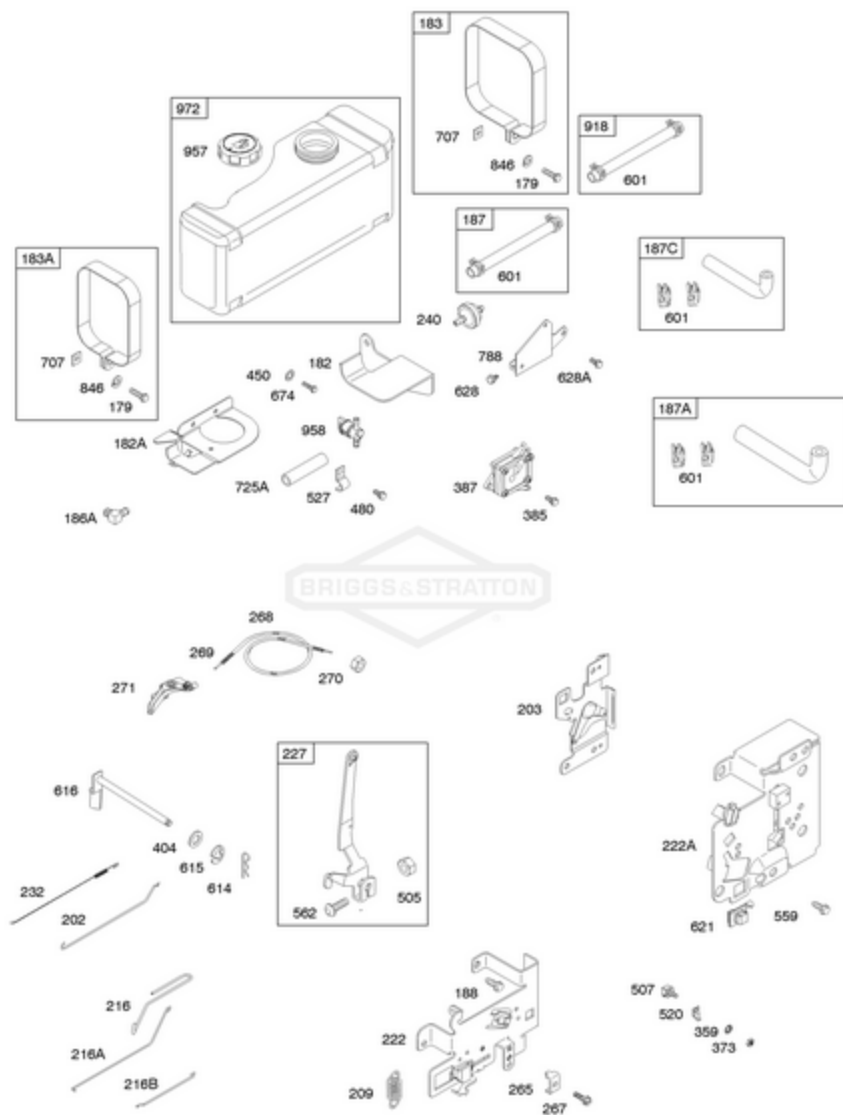

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
179	692331	SCREW		(Fuel Tank Strap)	
182	690443	BRACKET-FUEL TANK		(Right Hand)	
182A	692535	BRACKET-FUEL TANK		(Left Hand)	
183	698459	STRAP-FUEL TANK		(Right Hand)	
183A	692030	STRAP-FUEL TANK		(Left Hand)	
186A	691609	CONNECTOR, Hose			
187	791766	LINE, Fuel		(Cut To Required Length)	
187A	791806	LINE, Fuel		(Formed)(21)(Cut To Required Length)	
187C	697907	LINE, Fuel		(Formed)(Cut To Required Length)	
188	691693	SCREW		(Control Bracket)	
202	691841	LINK, Mechanical Governor			
203	691381	CRANK, Bell			
209	690480	SPRING, Governor		(Red)	
216	691840	LINK, Choke			
216A	690574	LINK, Choke			
216B	691281	LINK, Choke			
222	694042	BRACKET, Control			
222A	692002	BRACKET, Control			
227	691374	LEVER, Governor Control			
232	691842	SPRING, Governor Link			
240	298090S	FILTER, Fuel		(Red)	
240	394358S	FILTER-FUEL		(White)	
265	691024	CLAMP, Casing			
267	690804	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
359	691077	WASHER		(Ground Terminal)	
373	691612	NUT		(Ground Terminal)	
385	692198	SCREW		(Fuel Pump)	
387	808656	PUMP, Fuel			
404	691691	WASHER		(Governor Crank)	
450	690259	WASHER		(Fuel Tank Bracket)	
480	690664	SCREW		(Tube Clamp)	
505	691251	NUT		(Governor Control Lever)	
507	691972	INSULATOR			

Ref #	Part #	Description	Qty	Context Note	Foot Note
520	691084	TERMINAL, Ground			
527	690394	CLAMP, Hose			
559	690661	SCREW		(Remote Choke Stop)	
562	691119	BOLT		(Governor Control Lever)	
601	791850	CLAMP, Hose			
614	691620	PIN, Cotter			
615	93307	RETAINER, Governor Shaft			
616	692012	CRANK-GOVERNOR			
621	692310	SWITCH, Stop			
628	690661	SCREW		(Fuel Pump Bracket) (13/32" Long)	
628A	692198	SCREW		(Fuel Pump Bracket) (2 5/16)	
674	691058	SCREW		(Fuel Tank Bracket)	
707	690279	NUT		(Fuel Tank Strap)	
725A	690403	SHIELD, Heat		(Fuel Line)	
788	690458	BRACKET, Fuel Pump			
846	690371	WASHER		(Fuel Tank Strap)	
918	393815	HOSE, Vacuum		(Cylinder To Impulse Pump)(Cut To Required Length)	
957	493988S	CAP, Fuel Tank		(Plastic)	
958	698183	VALVE, Fuel Shut Off			
972	390225	TANK, Fuel		(3 Quart Tank)	

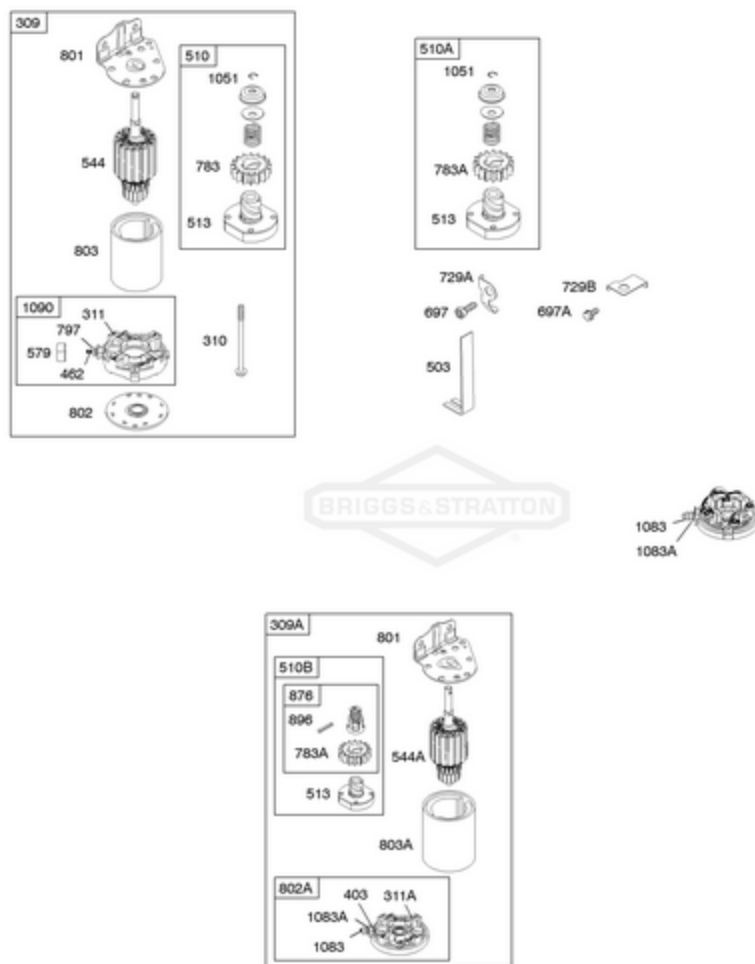


NOTE: For Replacement Starter Motor, See Reference 309.

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
309	497595	MOTOR-STARTER		(3 5/8) (Plastic Ring Gear)	
309	499521	MOTOR, Starter		(4 3/8 Housing)	
309	693551	MOTOR, Starter		(3 5/8 Housing Length For Steel Ring Gear Only)	
309	693552	MOTOR, Starter		(4 3/8 Housing Length For Steel Ring Gear Only)	
309A		Motor-Starter		(For Replacement Starter Motor, See Reference 309, Previous Page)	
310	690323	SCREW		(Starter Motor)	
310	691263	BOLT		(Starter Motor) (4 3/8 Housing)	
311	497608	SET, Brush			
311A	395538	SET, Brush		(3 5/8 Housing)	
403	690288	WASHER		(End Cap)	
462	691261	WASHER		(Starter Cable)	
503	691532	STRAP-STARTER			
510	693699	DRIVE, Starter		(Used With Steel Ring Gear)	
510A	696541	DRIVE, Starter		(Used With Aluminum And Plastic Ring Gears)	
510B	696540	DRIVE, Starter			
513	692024	CLUTCH-DRIVE			
544	692034	ARMATURE, Starter		(3 5/8 Housing)	
544A	490309	ARMATURE, Starter		(4 3/8 Housing)	
544A	390837	ARMATURE, Starter		(3 5/8 Housing)	
579	691029	NUT		(Starter Cable)	
697	690372	SCREW		(Starter Motor) (Drive Cap)	
697A	691058	SCREW		(Starter Motor) (Drive Cap)	
729A	691224	CLIP, Wire			
729B	224723	CLIP, Wire			
783	693713	GEAR, Pinion		(DC)(10-16 AMP)	
783A	695708	GEAR-PINION			
797	693167	NUT		(Brush Retainer)	
801	691283	CAP-DRIVE			
802	691286	CAP-END			
802A	395537	CAP, End		(3 5/8 Housing)	
803		Housing-Starter		(3 5/8" Housing Length)(Service with Corresponding Reference 309)	
803	XX	Housing-Starter		(4 3/8" Housing Length)(Service with Corresponding Reference 309)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
803A	398159	HOUSING, Starter		(3 5/8 Housing)	
803A	494205	HOUSING, Starter		(4 3/8 Housing)	
876	696539	KIT, Pinion Spring			
896	691641	PIN, Drive Retainer			
1051	691265	RING, Retaining			
1083	691626	NUT		(End Cap)	
1083A	690958	NUT		(End Cap) (Serrated)	
1090	691293	RETAINER- BRUSH			

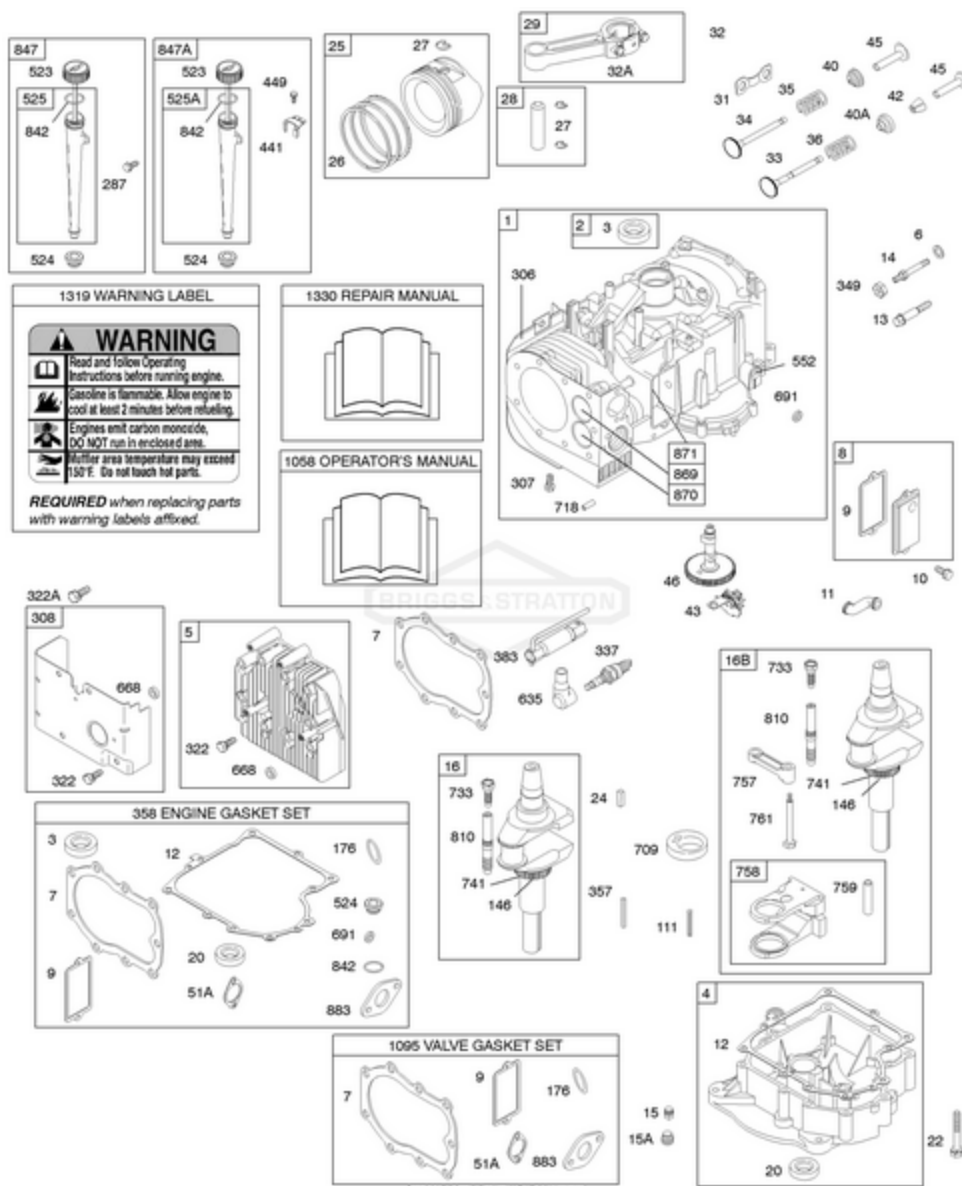

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	496413	CYLINDER ASSEMBLY			
2	399265	KIT, Bushing/Seal		(Magneto Side)	
3	391086S	SEAL, Oil		(Magneto Side)	
4	494238	SUMP, Engine			
5	494240	HEAD, Cylinder			
6	691261	WASHER		(Cylinder Head)	
7	271866S	GASKET, Cylinder Head			
8	495735	BREATHER ASSEMBLY			
9	27803S	GASKET, Breather			
10	691666	SCREW		(Breather Assembly)	
11	692253	TUBE, Breather			
12	692406	GASKET, Crankcase		(.005)	
12	692226	GASKET, Crankcase		(.015)(Standard)	
12	692405	GASKET, Crankcase		(.009)	
13	690904	SCREW		(Cylinder Head)	
14	691690	STUD		(Cylinder Head) (Used In Positions 5 And 6)	
15	690946	PLUG, Oil Drain			
15A	691680	PLUG, Oil Drain			
16	693944	CRANKSHAFT		Used After Code Date 95080200	
16B	693653	CRANKSHAFT		Used Before Code Date 95080100	
20	291675S	SEAL, Oil		(PTO Side)	
22	692125	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	499284	PISTON ASSEMBLY		(Standard) Used Before Code Date 01060700	
25	499292	PISTON ASSEMBLY		(.020 Oversize) Used Before Code Date 01060700	
25	696397	PISTON ASSEMBLY		(Standard) Used After Code Date 01060600	
25	696399	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 01060600	
25	696400	PISTON ASSEMBLY		(.030 Oversize) Used After Code Date 01060600	
26	392331	SET, Ring		(Standard)(Chrome) Used Before Code Date 01060700	
26	499996	SET, Ring		(Standard) Used Before Code Date 01060700	
26	499998	SET, Ring		(.020 Oversize) Used Before Code Date 01060700	
26	696403	SET, Ring		(Standard) Used After Code Date 01060600	

Ref #	Part #	Description	Qty	Context Note	Foot Note
26	696405	SET, Ring		(.020 Oversize) Used After Code Date 01060600	
27	691299	LOCK, Piston Pin		Used After Code Date 95101500	
27	691792	LOCK, Piston Pin		Used Before Code Date 95101600	
28	299691	PIN, Piston		(Standard) Used Before Code Date 95101600	
28	498319	PIN, Piston		(Standard) Used After Code Date 95101500	
28	498320	PIN, Piston		(.005 Oversize) Used After Code Date 95101500	
29	494504S	ROD, Connecting		(Standard)	
29	495490	ROD, Connecting		(.020 Undersize)	
31	222299	LOCK, Rod Screw			
32	690356	SCREW		(Connecting Rod) (1 7/8)	
32A	690348	SCREW		(Connecting Rod) (1 5/8)	
33	262246S	VALVE, Exhaust			
34	262247S	VALVE, Intake			
35	691605	SPRING, Valve		(Intake)	
36	691597	SPRING, Valve		(Exhaust)	
40	690656	RETAINER, Valve		(Intake)	
40A	691939	RETAINER-VALVE		(Exhaust)	
42	494553	KEEPER, Valve		(Exhaust)	
43	691968	SLINGER, Governor/Oil			
45	691811	TAPPET, Valve			
46	697668	CAMSHAFT			
51A	272554S	GASKET, Intake			
111	691679	PIN, Retainer			
146	691639	KEY, Woodruff			
176	691917	SEAL, O-Ring		(Air Cleaner Base)	
287	691002	SCREW		(Dipstick Tube)	
306	698477	SHIELD-CYLINDER			
307	691003	SCREW		(Cylinder Shield)	
308	698476	COVER, Cylinder Head			
322	692198	SCREW		(Cylinder Head Cover)	
322A	691681	SCREW		(Cylinder Head Cover)	
337	802592S	PLUG, Spark		(Resistor)	
349	691105	LOCKNUT		(Cylinder Head Cover)	
357	691483	KEY, Drive Pulley			
358	494241	GASKET SET, Engine			
383	89838S	WRENCH-SPARK PLUG			
441	224390	BRACKET, Oil Fill			


Ref #	Part #	Description	Qty	Context Note	Foot Note
449	691678	SCREW		(Oil Fill Bracket)	
523	692014	DIPSTICK			
524	281370S	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
525	691398	TUBE, Dipstick			
525A	495768	TUBE, Dipstick			
552	491986	BUSHING, Governor Crank		(1/4 I.D.)	
635	66538S	BOOT, Spark PLug			
668	690510	SPACER			
691	692407	SEAL-GOVERNOR SHAFT			
709	262243	ECCENTRIC			
718	690959	PIN, Locating			
733	698139	SCREW		(Crankshaft Extension)	
741	691284	GEAR, Timing			
757	691714	LINK, Counterweight		(Used After Code Date 78100411)	
758	692423	COUNTERWEIGHT			
759	691239	PIN, Counterweight			
761	691096	SCREW		(Counterweight)	
810	691779	EXTENSION, Crankshaft			
842	691870	SEAL, O-Ring		(Dipstick Tube)	
847	496415	DIPSTICK/TUBE ASSEMBLY			
847A	490474	DIPSTICK/TUBE ASSEMBLY			
869	691802	SEAT, Valve		(Intake)	
870	691844	SEAT-VALVE		(Exhaust)	
871	261961	BUSHING, Valve Guide		(Exhaust)	
871	231218	BUSHING, Valve Guide		(Brass)	
883	692236	GASKET, Exhaust			
1058	274787	MANUAL, Operator's			
1095	498539	GASKET SET, Valve			
1319	794467	LABEL, Warning			
1330	270962	REP MAN-1 CYL L-HD			

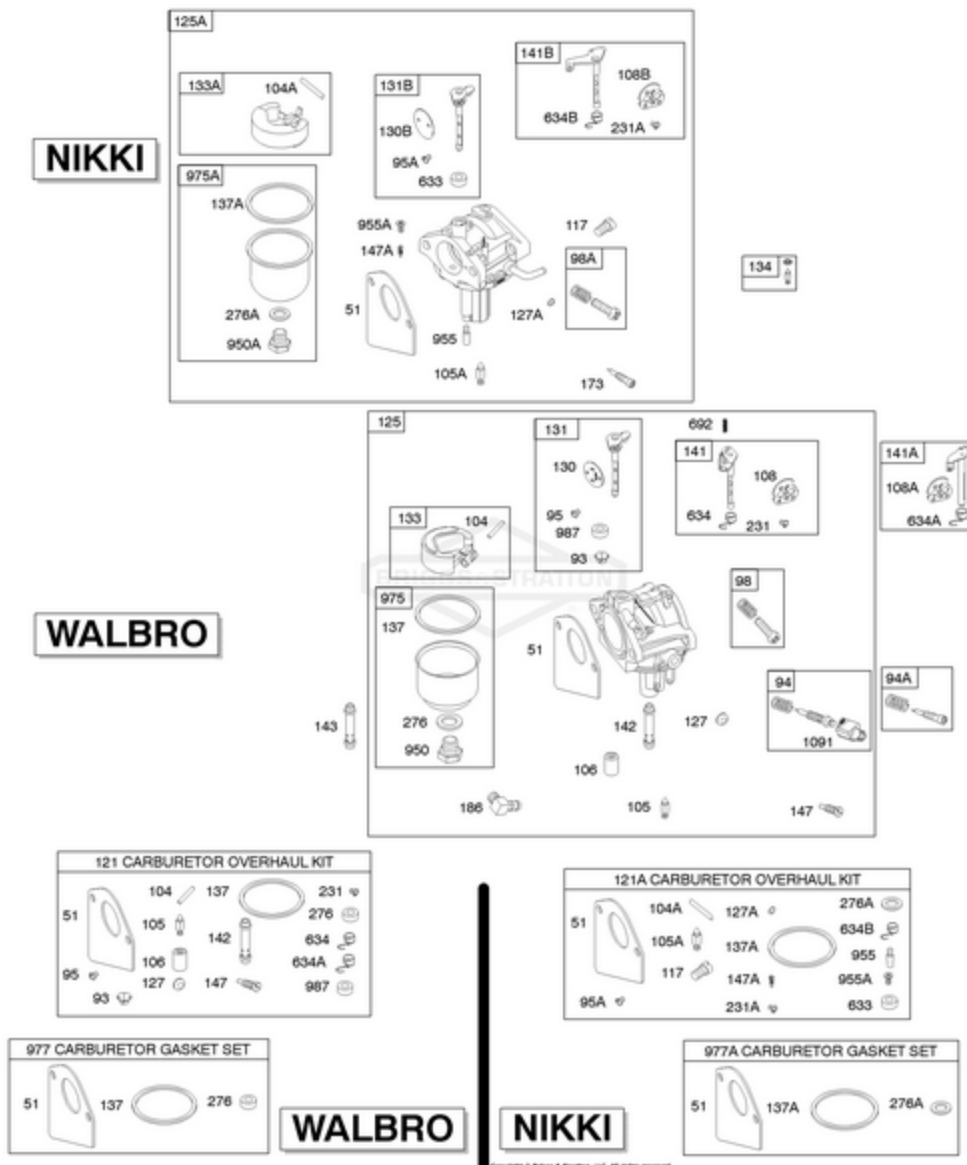

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692284	GASKET, Intake			
93	690602	BUSHING, Throttle Shaft			
94	498030	KIT, Idle Mixture		(Lmt 153154,155,156)	
94A	494383	KIT, Idle Mixture		(Lmt 71,101,102,113,114,116)	
95	691636	SCREW		(Throttle Valve)	
95A	690718	SCREW		(Throttle Valve)	
98	495800	KIT, Idle Speed		(Idle Speed) (Lmt 54, 55, 91)	
98A	694907	KIT, Idle Speed			
104	690525	PIN, Float Hinge			
104A	694918	PIN, Float Hinge			
105	231855S	VALVE-FLOAT NEEDLE			
105A	696136	VALVE, Float Needle			
106	691780	SEAT, Inlet		(Pump Feed Carburetor) Used After Code Date 92071900	
106	690577	SEAT, Inlet		(Gravity Feed Carburetor) Used After Code Date 92071900	
106	691901	SEAT, Inlet		(Gravity Feed Carburetor) Used Before Code Date 92072000	
108	690467	VALVE, Choke			
108A	692344	VALVE, Choke			
108B	694923	VALVE, Choke			
117	690880	JET, Main		(Standard)	
121	497535	KIT, Carburetor Overhaul		(LMT 1, 2, 3, 7, 37, 77, 157, 161)	
121	499220	KIT, Carburetor Overhaul		(LMT 92, 93, 94, 95, 96, 108, 111, 162, 165, 169)	
121	499231	KIT, Carburetor Overhaul		(LMT 97, 99, 133, 135, 136, 157, 158, 159, 160, 166, 168)	
121	697884	KIT, Carburetor Overhaul		(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	
121	497481	KIT, Carburetor Overhaul		(LMT 63, 65, 66)	
121A	694930	KIT, Carburetor Overhaul		(Nikki Carburetor)	
125	498027	CARBURETOR		(Walbro) (Gravity Feed)	
125	499158	CARBURETOR		(Walbro)(Pump Feed)	
125	698171	CARBURETOR		(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	
125A	699831	CARBURETOR		(Nikki Carburetor)	
127	695005	PLUG, Welch			

Ref #	Part #	Description	Qty	Context Note	Foot Note
127	694524	PLUG, Welch		(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	
127A	694916	PLUG, Welch			
130	690468	VALVE, Throttle		(LMT 111, 169)	
130B	691750	VALVE, Throttle			
131	790901	KIT, Throttle Shaft		(LMT 111, 169)	
131B	694909	KIT, Throttle Shaft		(Nikki Carburetor)	
133	494381	FLOAT, Carburetor			
133A	694914	FLOAT, Carburetor			
134	494788	KIT, Needle/Seat		(LMT 5, 6)	
137	281165S	GASKET-FLOAT BOWL			
137A	694920	GASKET, Float Bowl			
141	790905	KIT, Choke Shaft		(Manual Choke)	
141A	790902	KIT, Choke Shaft		(Choke A Matic)	
141B	694913	KIT, Choke Shaft			
142	697592	NOZZLE, Carburetor		(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	
142	497568	NOZZLE, Carburetor		(LMT 97, 99, 100)	
142	497860	NOZZLE, Carburetor		(LMT 63, 65, 66, 108, 111, 133, 135, 136)	
142	498545	NOZZLE, Carburetor		(LMT 108, 111)	
142	499037	NOZZLE, Carburetor		(LMT 162, 165, 169)	
142	499039	NOZZLE, Carburetor		(LMT 166, 167, 168)	
142	691425	NOZZLE, Carburetor		(LMT 5, 6)	
142	691434	NOZZLE, Carburetor		(LMT 92, 93, 94, 96)	
143	498258	NOZZLE, Carburetor		(High Altitude) (LMT 63, 65, 66, 108, 111, 133, 135, 136)	
143	499040	NOZZLE, Carburetor		(High Altitude) (LMT 166, 167, 168)	
143	497567	NOZZLE, Carburetor		(High Altitude) (LMT 5, 6)	
143	497737	NOZZLE, Carburetor		(High Altitude) (LMT 92, 93, 94, 96)	
143	497970	NOZZLE, Carburetor		(High Altitude) (LMT 97, 99, 100)	
147	497472	JET, Pilot		(LMT 1, 2, 3, 4, 5, 7, 37, 38, 39, 40, 41, 77, 78, 79, 80, 81)	
147A	694927	JET, Pilot			
173	694926	VALVE, Idle Mixture			
186	692317	CONNECTOR-HOSE			
231	691636	SCREW		(Choke Valve)	
231A	690718	SCREW		(Choke Valve)	
276	692255	WASHER, Sealing			
276A	690997	WASHER, Sealing			


Ref #	Part #	Description	Qty	Context Note	Foot Note
633	695414	SEAL, Choke/Throttle Shaft			
634	690801	SPRING/SEAL ASSEMBLY			
634A	690802	SPRING/SEAL ASSEMBLY			
634B	694912	SPRING/SEAL ASSEMBLY			
692	690572	SPRING, Detent			
950	691657	SCREW		(Float Bowl)	
950A	694919	SCREW		(Float Bowl)	
955	694924	PLUG, Carburetor		(Idle Chamber)	
955A	694921	PLUG, Carburetor		(Pilot Jet)	
975	495933	BOWL, Float		(Float Bowl)	
975A	694908	BOWL, Float			
977	690192	SET, Carburetor Gasket			
977A	694931	SET, Carburetor Gasket			
987	691326	SEAL, Choke/Throttle Shaft			
1091	691333	CAP, Limiter			

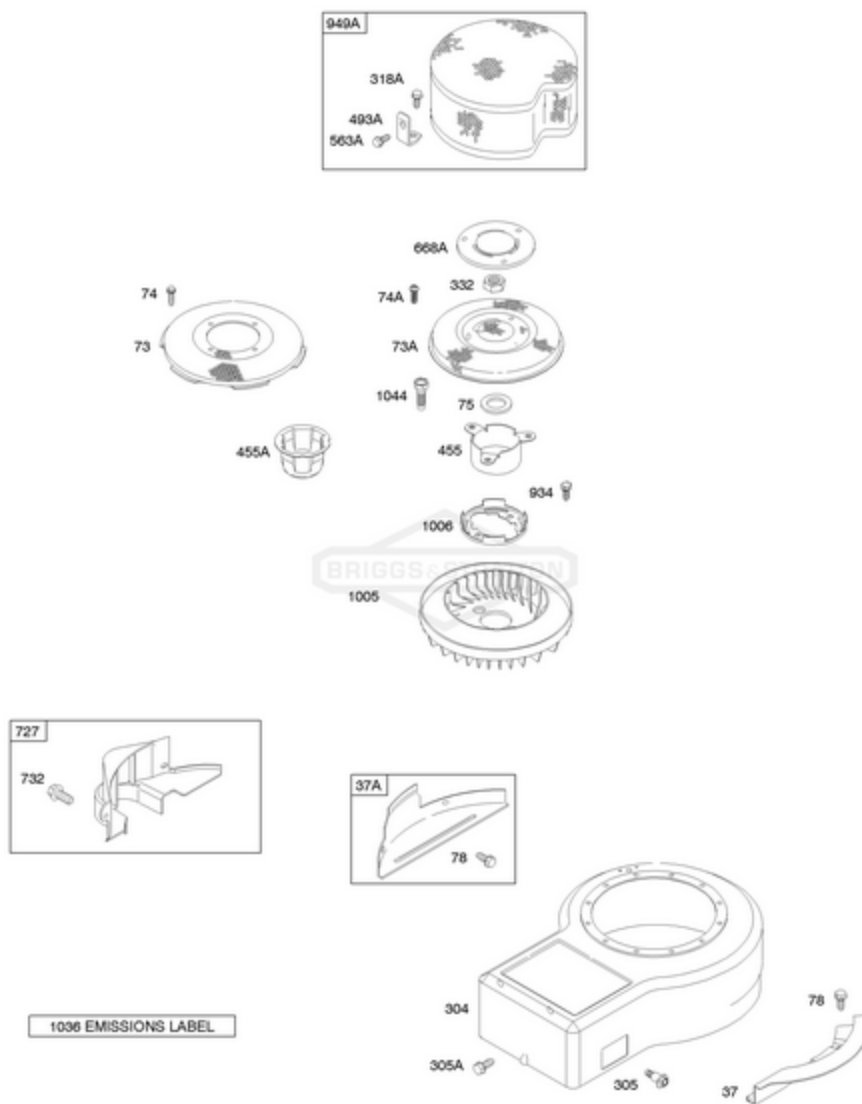

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
37	690456	GUARD, Flywheel			
73	691191	SCREEN-ROTATING			
73A	691748	SCREEN-ROTATING			
74	690345	SCREW		(Rotating Screen)	
74A	691655	SCREW		(Rotating Screen)	
75	690582	WASHER		(Flywheel)	
78	690661	SCREW		(Flywheel Guard)	
304	494268	HOUSING, Blower		(Red) Used Before Code Date 93071900	
305	692198	SCREW		(Blower Housing)	
305A	692127	SCREW		(Blower Housing)	
318A	691082	SCREW		(Mounting Bracket)	
332	690662	NUT		(Flywheel)	
455	691173	CUP, Flywheel			
455A	695113	CUP, Flywheel			
493A	692825	BRACKET-MOUNTING			
563A	690370	SCREW		(Debris Screen Guard)	
668A	691323	SPACER			
727	490324	COVER, Starter Drive		(Includes Mounting Hardware)	
732	691002	SCREW		(Starter Drive Cover)	
934	691058	SCREW		(Fan Retainer)	
949A	397530	GUARD, Debris Screen		(Rewind Starter)	
1005	691905	FAN, Flywheel		Used Before Code Date 99102500	
1005	794436	FAN, Flywheel		Used After Code Date 99102400	
1006	690452	RETAINER, Fan			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1044	698139	SCREW		(Flywheel)	

DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10/16 AMP
474 877A 1059 	474A 877 1059 	474B 877B 1059 	474C 877C 1059 
578 	878 	878A 	

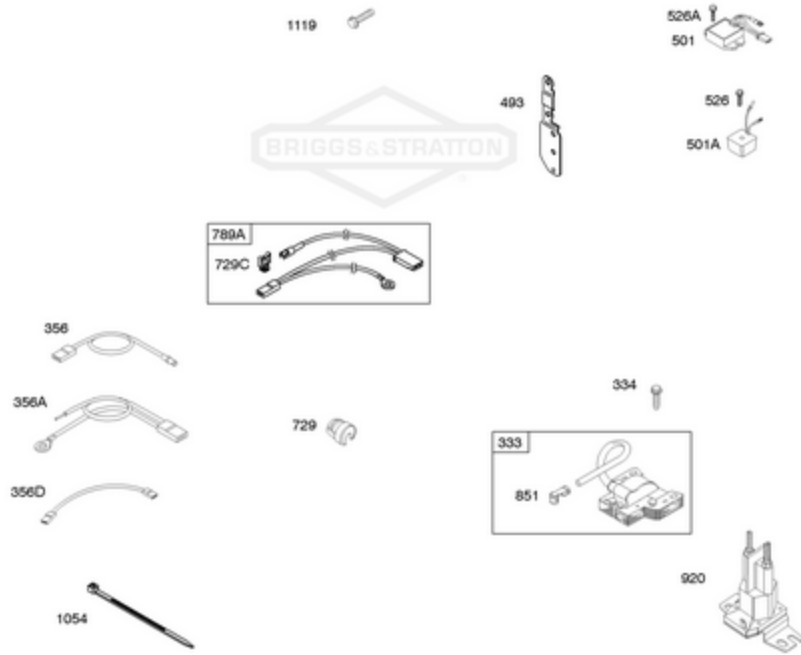

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
333	492341	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356	690807	WIRE, Stop			
356A	398808	WIRE-STOP		(Cut To Required Length)	
356D	690799	WIRE, Stop			
474	696578	ALTERNATOR		(DC Only)	
474A	696459	ALTERNATOR		(Dual Circuit)	
474B	696457	ALTERNATOR		(Tri Circuit)	
474C	696458	ALTERNATOR		(10-16 AMP.)	
493	694475	BRACKET, Mounting			
501	691185	REGULATOR		(16 Amp Regulated)	
501A	691188	REGULATOR		(9 Amp Regulated)	
526	690326	SCREW		(Regulator)	
526A	692198	SCREW		(Regulator)	
578	692306	WIRE ASSEMBLY			
729	690596	CLIP, Wire			
729C	691335	CLIP, Wire			
789A	692037	HARNESS-WIRING			
851	493880S	TERMINAL-SPARK PLUG			
877	393456	WIRE/CONNECTOR, Alternator		(Dual Circuit)	
877A	393814	WIRE/CONNECTOR, Alternator		(10 Amp Regulated)	
877B	393537	WIRE/CONNECTOR, Alternator		(Tri Circuit) (9 Amp)	
877C	399916	WIRE/CONN-ALTERNATOR			
878	398661	HARNESS, Wiring			
878A	691955	HARNESS, Alternator			
920	691656	SOLENOID, Starter			
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer		(Alternator)	
1119	691183	SCREW		(Alternator)	

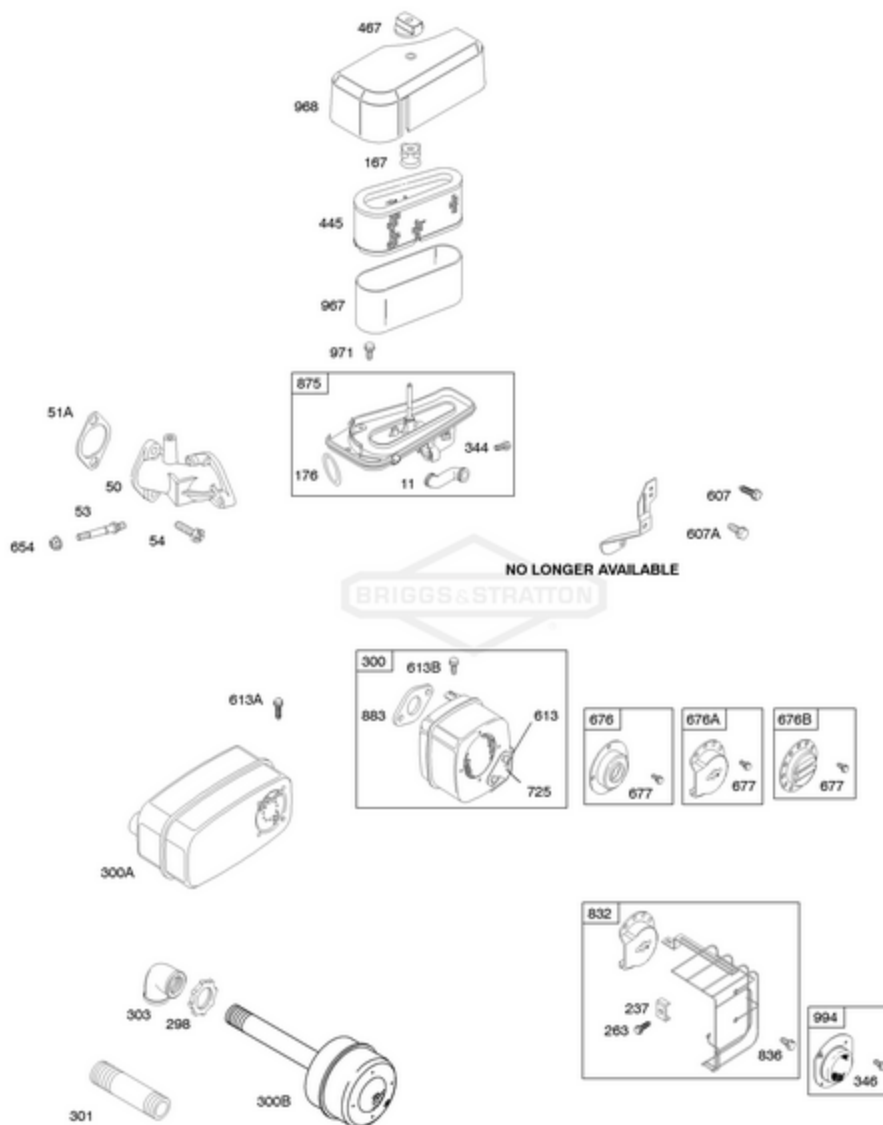

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	692253	TUBE, Breather			
50	691711	MANIFOLD, Intake			
51A	272554S	GASKET, Intake			
53	690227	STUD		(Carburetor)	
54	690953	SCREW		(Intake Manifold)	
167	692297	SEAL-A/C NUT			
176	691917	SEAL, O-Ring		(Air Cleaner Base)	
237	690409	RETAINER, Muffler Guard			
263	691083	SCREW		(Muffler Guard Retainer)	
298	691808	LOCKNUT		(Muffler and Elbow)	
300	691874	MUFFLER			
300A	498984S	MUFFLER			
300B	391569S	MUFFLER			
301	93768	PIPE, Exhaust		(5 1/4)	
303	690281	MANIFOLD, Exhaust			
344	693675	SCREW		(Cable Clamp)	
346	690661	SCREW		(Spark Arrestor)	
445	496894S	FILTER-A/C CARTRIDGE			
467	691668	KNOB, Air Cleaner Cover			
607	690703	SCREW		(Air Cleaner Brace)	
607A	691693	SCREW		(Air Cleaner Brace)	
613	691416	SCREW		(Muffler)	
613A	691693	SCREW		(Muffler)	
613B	692198	SCREW		(Muffler)	
654	690958	NUT		(Carburetor)	
676	396903	DEFLECTOR, Muffler			
676A	393761	DEFLECTOR, Muffler		(Side Outlet)	
676B	397630	DEFLECTOR, Muffler		(Louvered Outlet)	
677	690661	SCREW		(Muffler Deflector)	
725	690420	SHIELD, Heat		(Muffler)	
832	692361	GUARD- MUFFLER			
836	690367	SCREW		(Muffler Guard)	
875	696129	BASE, Air Cleaner			
883	692236	GASKET, Exhaust			

Ref #	Part #	Description	Qty	Context Note	Foot Note
967	272403S	FILTER-PRE CLEANER			
968	691916	COVER, Air Cleaner			
971	691108	SCREW		(Air Cleaner Base to Carburetor/Throttle Body) Used After Code Date 98091300	
971	692198	SCREW		(Air Cleaner Base to Carburetor/Throttle Body) Used Before Code Date 98091400	
994	392390	ARRESTOR, Spark			