

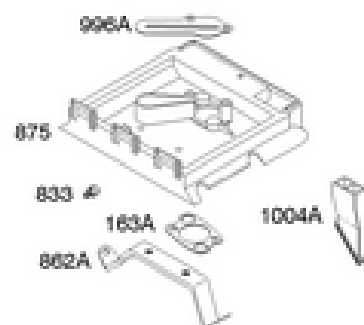
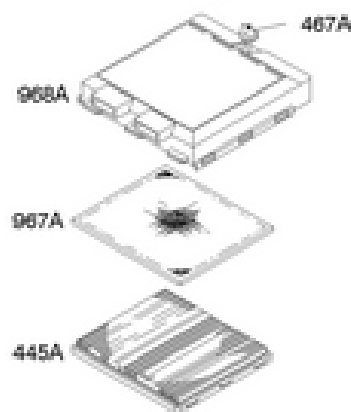


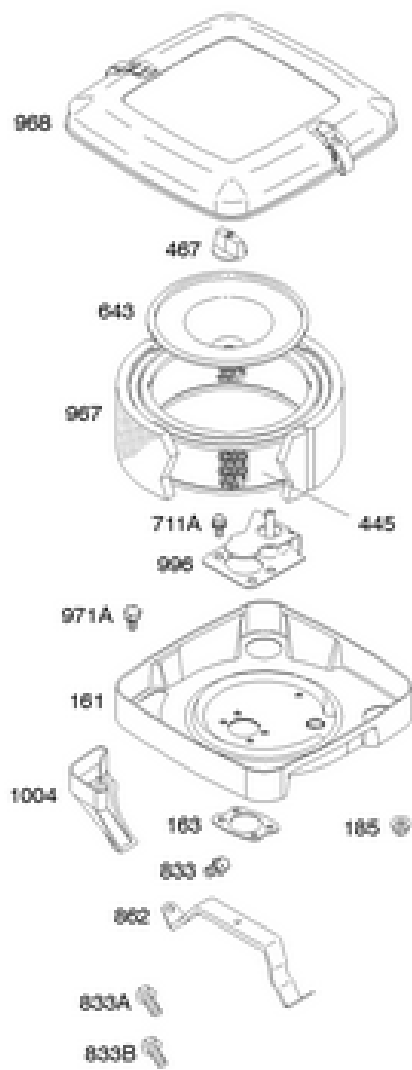

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
161	691561	BASE, Air Cleaner		(Metal)	
163	692081	GASKET, Air Cleaner		(Used With Metal Air Cleaner Base)	
163A	692052	GASKET, Air Cleaner		(Used With Plastic Air Cleaner Base)	
185	690939	NUT		(Air Cleaner Base)	
445	394018S	FILTER, A/C Cartridge		(Round)	
445A	805113	FILTER, A/C Cartridge		(Rectangular)	
467	691985	KNOB, Air Cleaner Cover			
467A	690895	KNOB, Air Cleaner Cover			
643	692079	RETAINER, Air Filter			
711A	807084	SCREW		(Carburetor Shield)	
833	690872	SCREW		(Air Cleaner Mounting Strap/Stud) Used After Code Date 97103100	
833A	841233	SCREW		(Air Cleaner Mounting Strap/Stud)	
833B	690699	SCREW		(Air Cleaner Mounting Strap/Stud)	
862	692542	STRAP/STUD, Air Cleaner Mounting			
862A	690896	STRAP/STUD, Air Cleaner Mounting			
875	690894	BASE, Air Cleaner		(Plastic)	
967	272490S	FILTER, Pre Cleaner		(Round)	
967A	805267S	FILTER, Pre Cleaner		(Rectangular)	
968	699959	COVER-AIR CLEANER		(Used With Metal Air Cleaner Base)	
968A	690694	COVER, Air Cleaner		(Used With Plastic Air Cleaner Base)	
971A	690699	SCREW		(Air Cleaner Base) (Remote Choke)	
996	691577	SHIELD, Carburetor			
996A	690696	SHIELD, Carburetor			
1004	690743	DUCT, Air		(Used With Metal Air Cleaner Base)	
1004A	692538	DUCT, Air		(Used With Plastic Air Cleaner Base)	

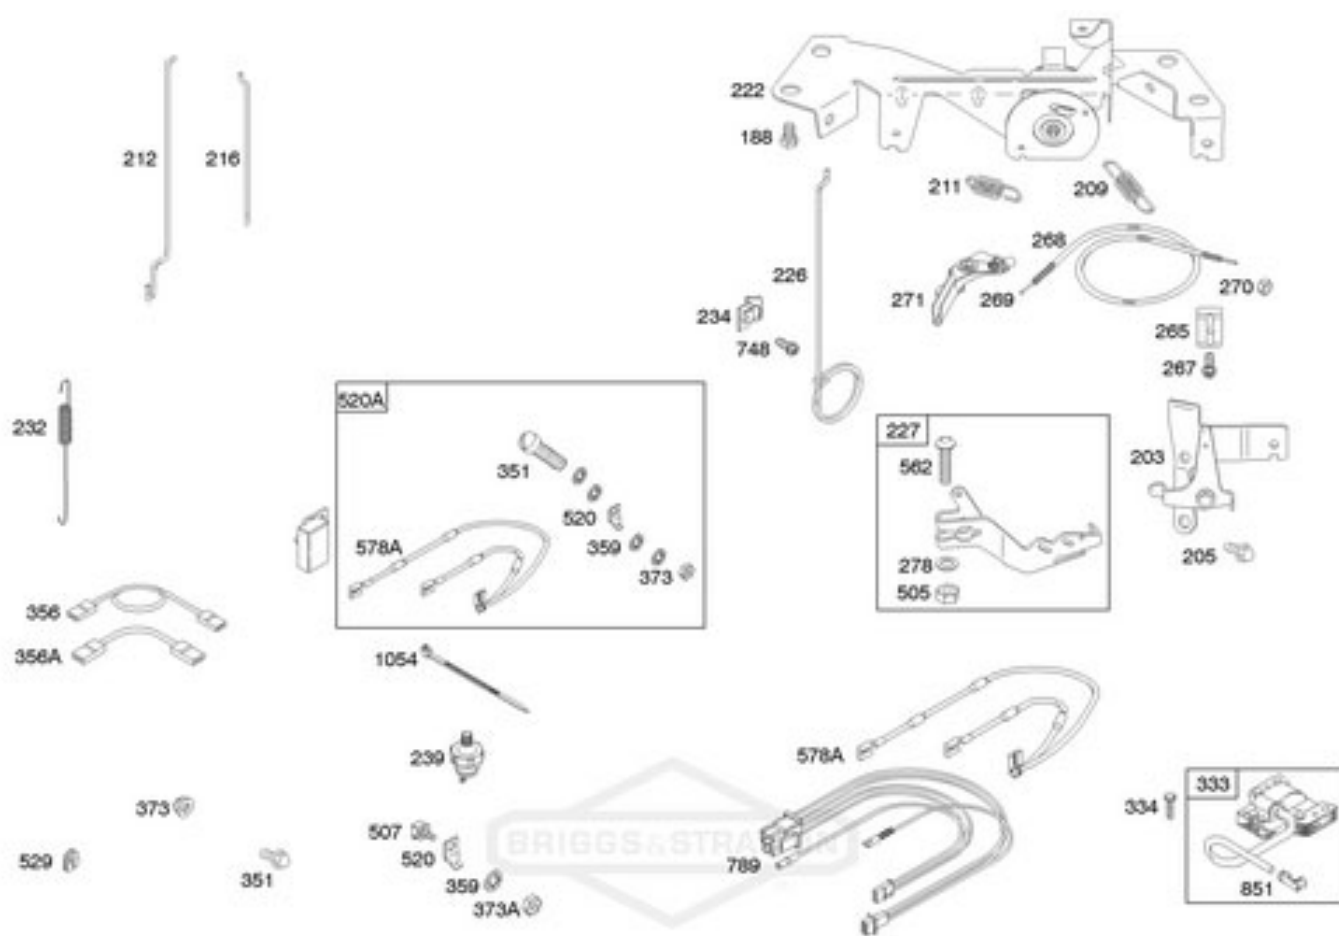


DC ONLY		DUAL CIRCUIT		TRI CIRCUIT		5 - 9 AMP		10 - 16 AMP	
474A	1059	474B	1059	474C	1059	474C	1059	474D	1059
877A		877		877B		877B		877C	
578		878		878A		578		578	
NOTE: All stators use a No. 1119 mounting screw.						526A	501A	526	501

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	692056	SCREW		(Control Bracket)	
203	690923	CRANK, Bell			
205	692083	SCREW		(Bell Crank)	
209	692072	SPRING, Governor		(Purple)	
211	692069	SPRING, Governed Idle			
212	690712	LINK, Throttle			
216	690705	LINK, Choke			
222	808454	BRACKET, Control			
226	692075	ROD, Choke			
227	690236	LEVER, Governor Control			
232	692073	SPRING, Governor Link			
234	691723	CLIP, Control Rod			
239	690233	SWITCH, Oil Pressure		(Oil GARD)	
265	691024	CLAMP, Casing			
267	692083	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
278	842122	WASHER		(Governor Control Lever)	
333	492341	ARMATURE, Magneto			
334	692066	SCREW		(Magneto Armature)	
351	692083	SCREW		(Ground Terminal)	
356	807593	WIRE, Stop		(Cylinder 2)	
356A	807594	WIRE, Stop		(Cylinder 1)	
359	691077	WASHER		(Ground Terminal)	
373	691612	NUT		(Ground Terminal)	
373A	690713	NUT		(Ground Terminal)	
474A	696578	ALTERNATOR		(DC Only)	
474C	696457	ALTERNATOR		(Tri Circuit)	
474D	696458	ALTERNATOR		(Regulated)	
501	493219	REGULATOR		(Double Connector Output)	
501	691185	REGULATOR		(3 Wire)(16 Amp)	
501A	794360	REGULATOR			
505	690238	NUT		(Governor Lever)	
507	691972	INSULATOR			
520	691084	TERMINAL, Ground		(Brass)	
520A	809077	TERMINAL, Ground		(Ignition Shutoff)	
526	692067	SCREW		(Regulator) Used Before Code Date 90021000	
526A	690717	SCREW		(Regulator) (5 To 9 Amp Regulated) Used After Code Date 90021100	
526A	810084	SCREW		(Regulator) Used Before Code Date 90021000	

Ref #	Part #	Description	Qty	Context Note	Foot Note
529	690744	GROMMET			
562	690239	BOLT		(Governor Control Lever)	
578	692306	WIRE ASSEMBLY			
578A	692319	WIRE ASSEMBLY		(With Diodes)	
748	692083	SCREW		(Control Rod Clip)	
851	493880S	TERMINAL-SPARK PLUG			
877	393537	WIRE/CONNECTOR, Alternator		(Tri Circuit)	
877A	393814	WIRE/CONNECTOR, Alternator		(DC Only)	
877B	399916	WIRE/CONN- ALTERNATOR			
877C	393456	WIRE/CONNECTOR, Alternator		(Dual Circuit)	
878	691955	HARNESS, Alternator			
878A	398661	HARNESS, Wiring			
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer			
1119	691552	SCREW		(Alternator)	

1036 EMISSIONS LABEL



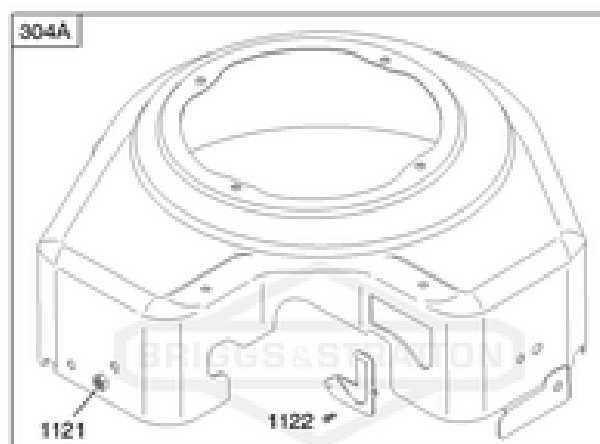


- 729 
- 729B 
- 729A 




- 305 
- 305A 
- 305B 

Ref #	Part #	Description	Qty	Context Note	Foot Note
304A	808055	HOUSING, Blower		(Red)	
304A	808408	HOUSING, Blower		(Black)	
305	692056	SCREW		(Blower Housing)	
305A	692062	SCREW		(Blower Housing)	
305B	841233	SCREW		(Blower Housing)	
729	805827	CLIP, Wire		(Black)(Spring Steel)	
729A	805965	CLIP, Wire		(Black)(Vinyl Covered Zinc)	
729B	690586	CLIP, Wire		(Snap In)(Nylon)	
739	690451	CLIP		(Debris)	
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1121	810056	NUT		(Fuel Pump Bracket)	
1122	93410	SCREW		(Blower Housing Adapter)	

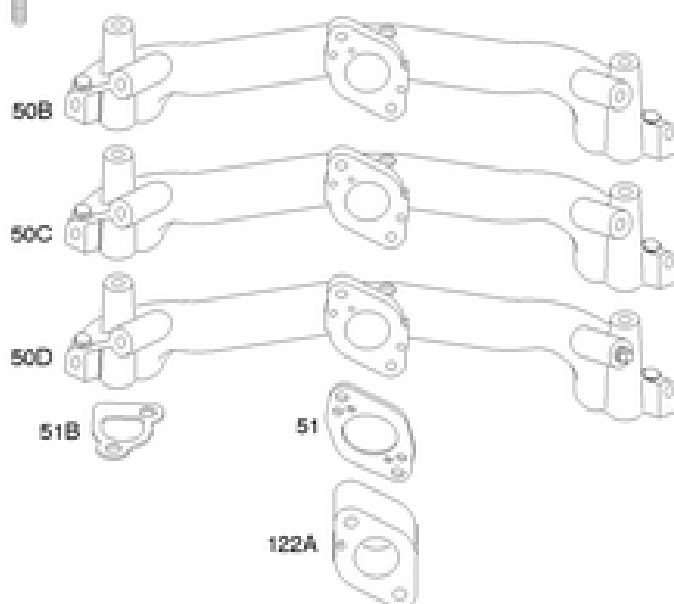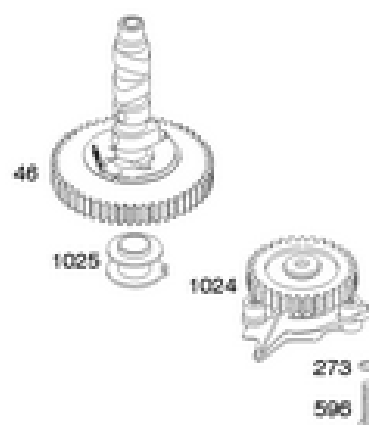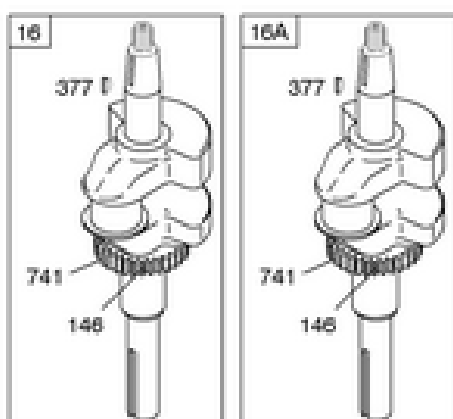

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
16	807586	CRANKSHAFT		Used Before Code Date 97050100	
16	692159	CRANKSHAFT		Used After Code Date 97043000	
46	691557	CAMSHAFT			
50B	690754	MANIFOLD, Intake			
51	691694	GASKET, Intake		(Manifold/Carburetor Spacer)	
51B	692035	GASKET, Intake		(Manifold/Heads)	
54	690676	SCREW		(Intake Manifold)	
122A	690692	SPACER, Carburetor		Used Before Code Date 92061700	
122A	690753	SPACER, Carburetor		Used After Code Date 92061600	
146	691639	KEY, Woodruff			
273	690681	SEAL, O-Ring		(Oil Pump)	
357	691483	KEY, Drive Pulley			
377	808095	KEY, Flywheel			
596	691492	SCREW		(Oil Pump)	
598	807625	SHIM, End Play		(Crankshaft or Camshaft Bearing)	
741	691530	GEAR, Timing			
1024	843954	SUMP-ENGINE			
1025	690689	SPOOL, Governor			
1130	690746	STUD		(Intake Manifold)	

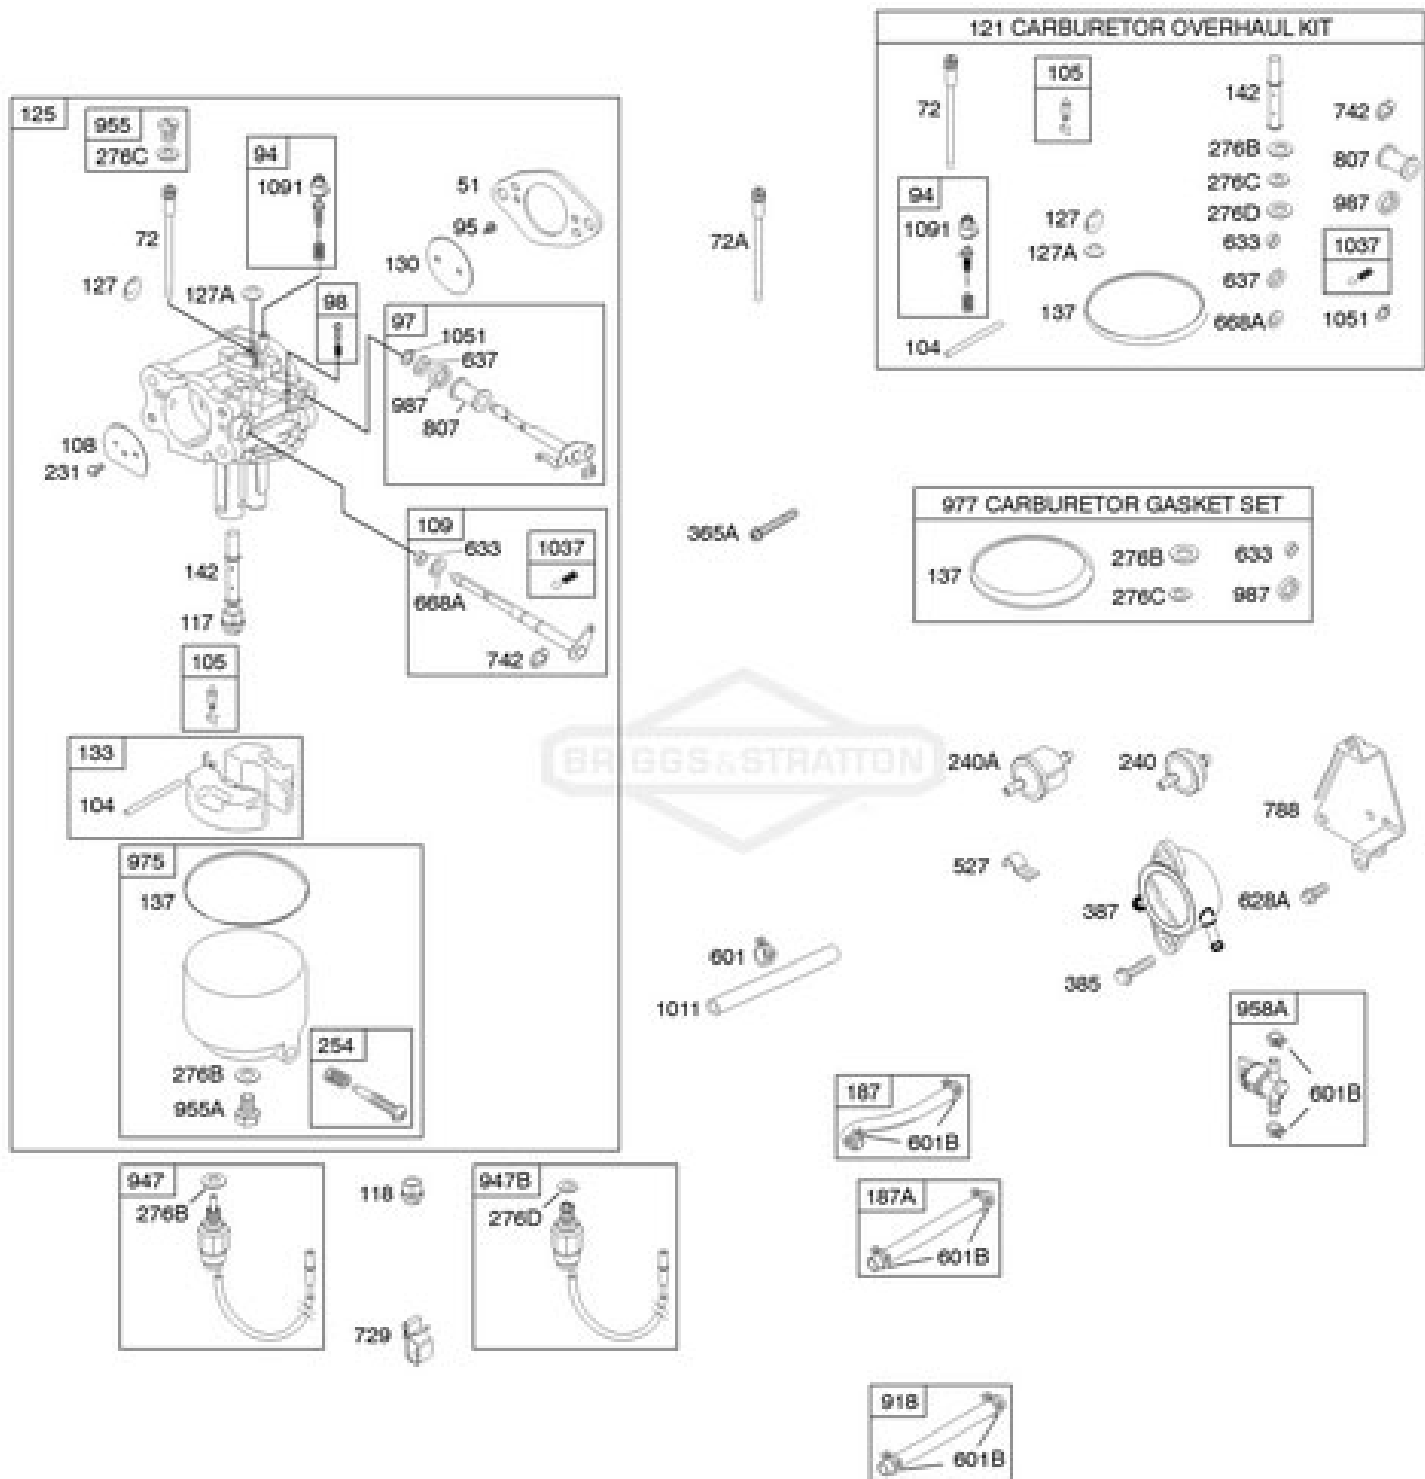




Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	691694	GASKET, Intake		(Manifold/Carburetor Spacer)	
72	806480	TUBE, JET		Used Before Code Date 92040700	
72	690755	TUBE, Jet		Used After Code Date 92040600 Used Before Code Date 98062700	
72	806488	TUBE, Jet		Used After Code Date 98062600	
72A	694069	TUBE, Jet		(High Altitude) Used After Code Date 98062600	
94	808258	VALVE, Idle Mixture		Used After Code Date 95092700	
94	807707	VALVE, Idle Mixture		Used Before Code Date 95092800	
95	690728	SCREW		(Throttle Valve)	
97	808323	SHAFT, Throttle			
98	807705	KIT, Idle Speed		(Idle Speed)	
104	690739	PIN, Float Hinge			
105	807706	VALVE, Float Needle			
108	690729	VALVE, Choke			
109	807711	SHAFT, Choke			
117	806487	JET, Main		(Standard) Used After Code Date 98062600	
118	806634	JET, Main		(High Altitude) Used After Code Date 98062600	
121	842890	KIT, Carburetor Overhaul		Used After Code Date 92040600 Used Before Code Date 94102800	
121	842891	KIT, Carburetor Overhaul		Used After Code Date 98062600	
121	807708	KIT, Carburetor Overhaul		Used Before Code Date 92040700	
121	807962	KIT, Carburetor Overhaul		Used After Code Date 94102700 Used Before Code Date 98062700	
125	808728	CARBURETOR		Used After Code Date 92040600	
125	807639	CARBURETOR		Used Before Code Date 92040700	
127	690731	PLUG, Welch		(6.9mm Diameter)	
127A	690730	PLUG, Welch		(9mm Diameter)	
130	690732	VALVE, Throttle			
133	807710	FLOAT, Carburetor			
137	806481	GASKET, Float Bowl			
142	806635	NOZZLE, Carburetor		(Standard) Used After Code Date 98062600	
142	807712	NOZZLE, Carburetor		(Standard) (Includes Standard Main Jet) Used Before Code Date 94102800	
142	807960	NOZZLE, Carburetor		(Standard) (Includes Standard Main Jet) Used After Code Date 94102700 Used Before Code Date 98062700	
187	791745	LINE-FUEL		(Cut To Required Length)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
187A	791766	LINE, Fuel		(Cut To Required Length)	
231	690728	SCREW		(Choke Valve)	
240	394358S	FILTER-FUEL		(White, 75 Microns)	
240A	84001895	FILTER, FUEL		(Includes Paper Element With A 40 Micron Rating)	
254	807713	DRAIN, Carburetor Bowl			
276B	806476	WASHER, Sealing		(Float Bowl)	
276D	692343	WASHER, Sealing		(Float Bowl)	
276C	806477	WASHER, Sealing		(Carburetor Plug)	
365A	690695	SCREW		(Carburetor)	
385	807084	SCREW		(Fuel Pump)	
387	808656	PUMP, Fuel			
527	690423	CLAMP, Tube			
601	691638	CLAMP, Hose		(Silver)	
601B	691038	CLAMP, Hose		(Black)	
601B	791850	CLAMP, Hose		(Silver)	
628A	692062	SCREW		(Fuel Pump Bracket)	
633	690738	SEAL, Choke/Throttle Shaft			
637	690735	WASHER		(Throttle Shaft)	
668A	691500	SPACER		(Knurled Insert)	
729	805827	CLIP, Wire		(Black)(Spring Steel)	
742	805578	RETAINER, E Ring		(Choke Shaft)	
788	691559	BRACKET, Fuel Pump			
807	690733	SPACER		(Throttle)	
918	791880	LINE, Fuel		(Cut To Required Length)	
947	806472	SOLENOID, Fuel		Used After Code Date 98062600	
947B	807744	SOLENOID, Fuel		Used Before Code Date 98062700	
955	807714	PLUG, Carburetor			
955A	691511	PLUG, Carburetor			
958A	698183	VALVE, Fuel Shut Off		(Plastic)	
975	807715	BOWL, Float			
977	807716	SET, Carburetor Gasket		Used Before Code Date 92040700	
977	808325	SET, Carburetor Gasket		Used After Code Date 92040600	
987	690734	SEAL, Choke/Throttle Shaft		Used Before Code Date 92040700	

Ref #	Part #	Description	Qty	Context Note	Foot Note
987	691548	SEAL, Choke/Throttle Shaft		Used After Code Date 92040600	
1011	692929	TUBE-VENT		(Cut To Required Length)	
1037	807717	BALL, Choke Locator			
1051	690736	RING, Retaining			
1091	691515	CAP-LIMITER			

437

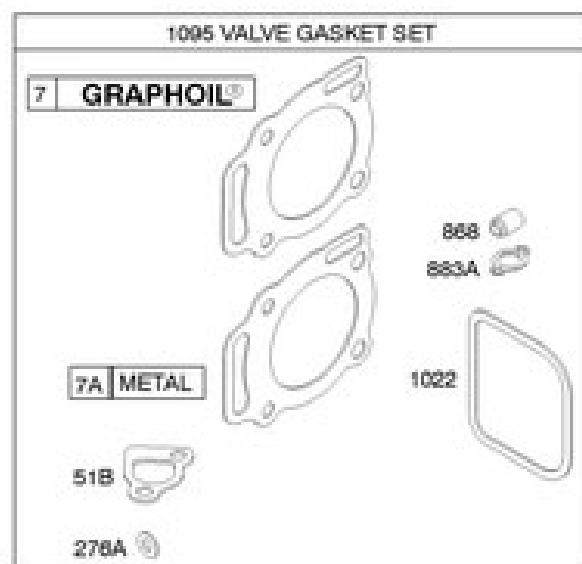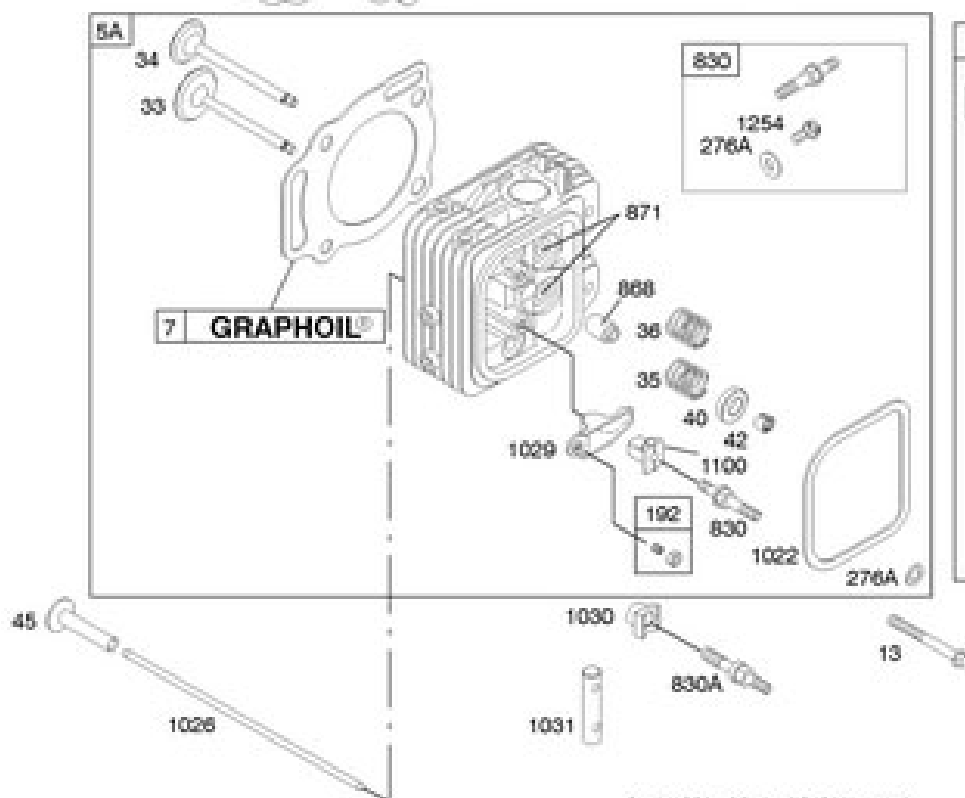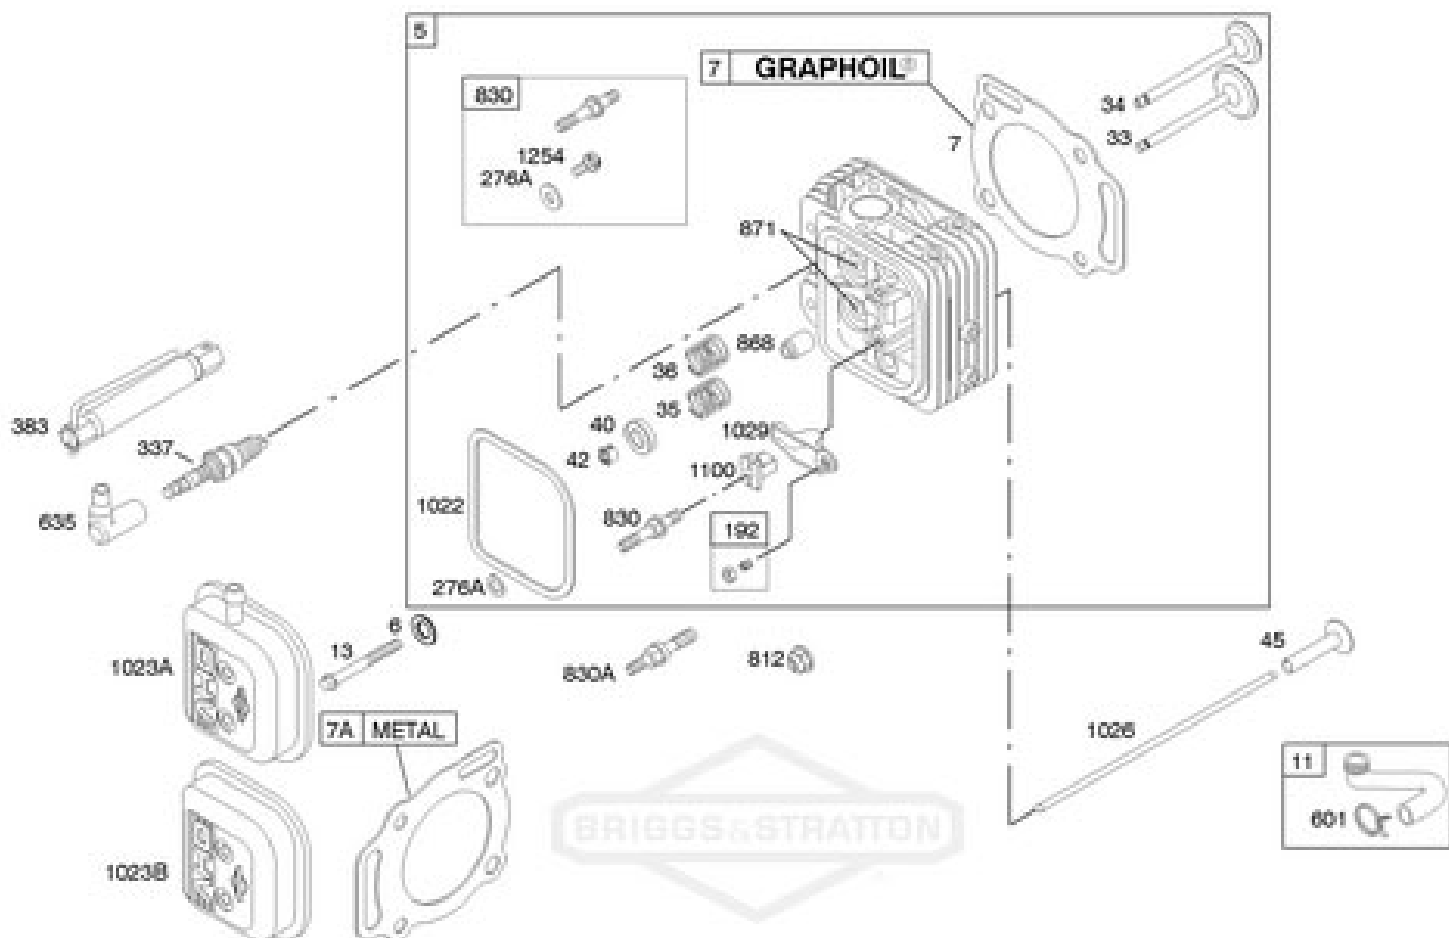


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
5	809200	HEAD, Cylinder		(Cylinder 1)	
5A	809201	HEAD, Cylinder		(Cylinder 2)	
6	805193	WASHER		(Cylinder Head) Used Before Code Date 94050100	
7	806085S	GASKET, Cylinder Head		(Graphoil) Used After Code Date 96033100	
7A	807986	GASKET, Cylinder Head		(Metal) Used Before Code Date 96040100	
11	806083S	TUBE, Breather			
13	692059	SCREW		(Cylinder Head) (86mm)	
33	807681	VALVE, Exhaust			
34	807680	VALVE, Intake			
35	692084	SPRING, Valve		(Intake)	
36	692084	SPRING, Valve		(Exhaust)	
40	692058	RETAINER, Valve			
42	807683	KEEPER, Valve			
45	690977	TAPPET, Valve			
51B	692035	GASKET, Intake		(Manifold/Heads)	
192	807623	ADJUSTER, Rocker Arm			
276A	691766	WASHER, Sealing		(Rocker Cover) Used Before Code Date 01120300	
276A	807085	WASHER, Sealing		(Rocker Cover) Used After Code Date 01120200	
337	792015	PLUG, Spark			
383	19374S	WRENCH, Spark Plug			
437	691902	SCREW		(Exhaust Manifold)	
601	691638	CLAMP, Hose		(Silver)	
635	692076	BOOT, Spark Plug			
812	692055	NUT		(Rocker Cover) Used Before Code Date 01120300	
830	809157	STUD, Rocker Arm		(Rocker Arm) Used After Code Date 96033100	
830A	691497	STUD, Rocker Arm		(Rocker Arm) Used Before Code Date 96040100	
868	691963	SEAL, Valve			
871	692057	BUSHING, Valve Guide			
883A	691613	GASKET, Exhaust			
1022	806039S	GASKET, Rocker Cover			
1023A	691558	COVER, Rocker		(Cylinder 1) (With Fuel Pump)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
1023B	691494	COVER, Rocker			
1026	691836	ROD, Push		(Intake)(Steel)	
1026	691758	ROD, Push		(Exhaust)(Aluminum)	
1029	807323	ARM, Rocker			
1030	691496	SUPPORT, Rocker Arm			
1031	690693	SHAFT, Rocker Arm			
1095	808392	GASKET SET, Valve		Used Before Code Date 01120300	
1095	842723	GASKET SET, Valve		Used After Code Date 01120200	
1100	791959	PIVOT, Rocker Arm			
1254	807084	SCREW		(Rocker Arm Stud) (Used on Stud For Rocker Cover) Used After Code Date 01120200	

697

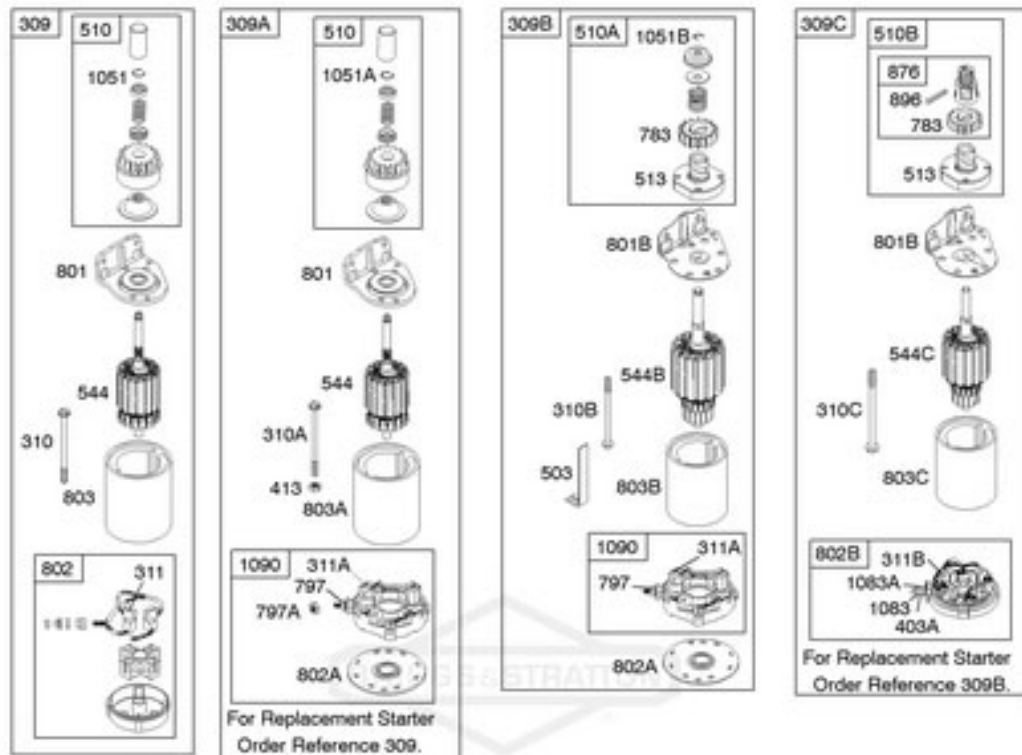








Ref #	Part #	Description	Qty	Context Note	Foot Note
309	691564	MOTOR-STARTER		(Steel Ring Gear Only)	
309A		Motor-Starter		(Services Steel Ring Gear Only)(For Replacement Starter Motor, SeeReference 309)	
309B	499521	MOTOR, Starter			
309C		MOTOR, Starter		(Replacement Starter Motor, Order Reference 309B)	
310	496880	SCREW		(Starter Motor)	
310A	690323	SCREW		(Starter Motor)	
310C	691263	BOLT		(Starter Motor) (5-3/8) (4 3/8 Housing)	
311	496887	SET, Brush			
311A	497608	SET, Brush			
311B	490311	SET, Brush		(4 9/16 Housing)	
403A	690288	WASHER		(End Cap)	
413	693587	NUT		(Starter Motor)	
503	691532	STRAP-STARTER			
510	496881	DRIVE, Starter			
510A	696541	DRIVE, Starter			
510B	696540	DRIVE, Starter			
513	692024	CLUTCH-DRIVE			
544		MOTOR, Starter		(Service With 691564 Starter Motor Only)	
544B		Armature-Starter		(Serviced By 499521 Starter Motor Only)	
544C	490309	ARMATURE, Starter		(4 1/2 And 4 3/8 Housing)	
697	692062	SCREW		(Drive Cap)	
783	695708	GEAR-PINION		(Services Aluminum Ring Gear Only)	
797	693167	NUT		(Brush Retainer)	
797A	691029	NUT		(Brush Retainer)	
801	808778	CAP, Drive			
801B	691283	CAP-DRIVE			
802	496813	RETAINER, Brush			
802A	691286	CAP-END			
802B		Cap-End		(Serviced By 499521 Starter Motor Only)	
803	690854	HOUSING, Starter		(Air Cleaner Base)	
803A	693547	HOUSING, Starter			
803B		Housing-Starter		(Serviced By 499521 Starter Motor Only)	
803C	398892	HOUSING, Starter		(4 9/16 Housing)	
803C	494205	HOUSING, Starter		(4 3/8 Housing)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
876	696539	KIT, Pinion Spring			
896	691641	PIN, Drive Retainer			
1051	690736	RING, Retaining			
1051A	691124	RING, Retaining		(Starter Pinion)	
1051B	691265	RING, Retaining			
1083	691626	NUT		(End Cap)	
1083A	690958	NUT		(End Cap)	
1090	691293	RETAINER- BRUSH			

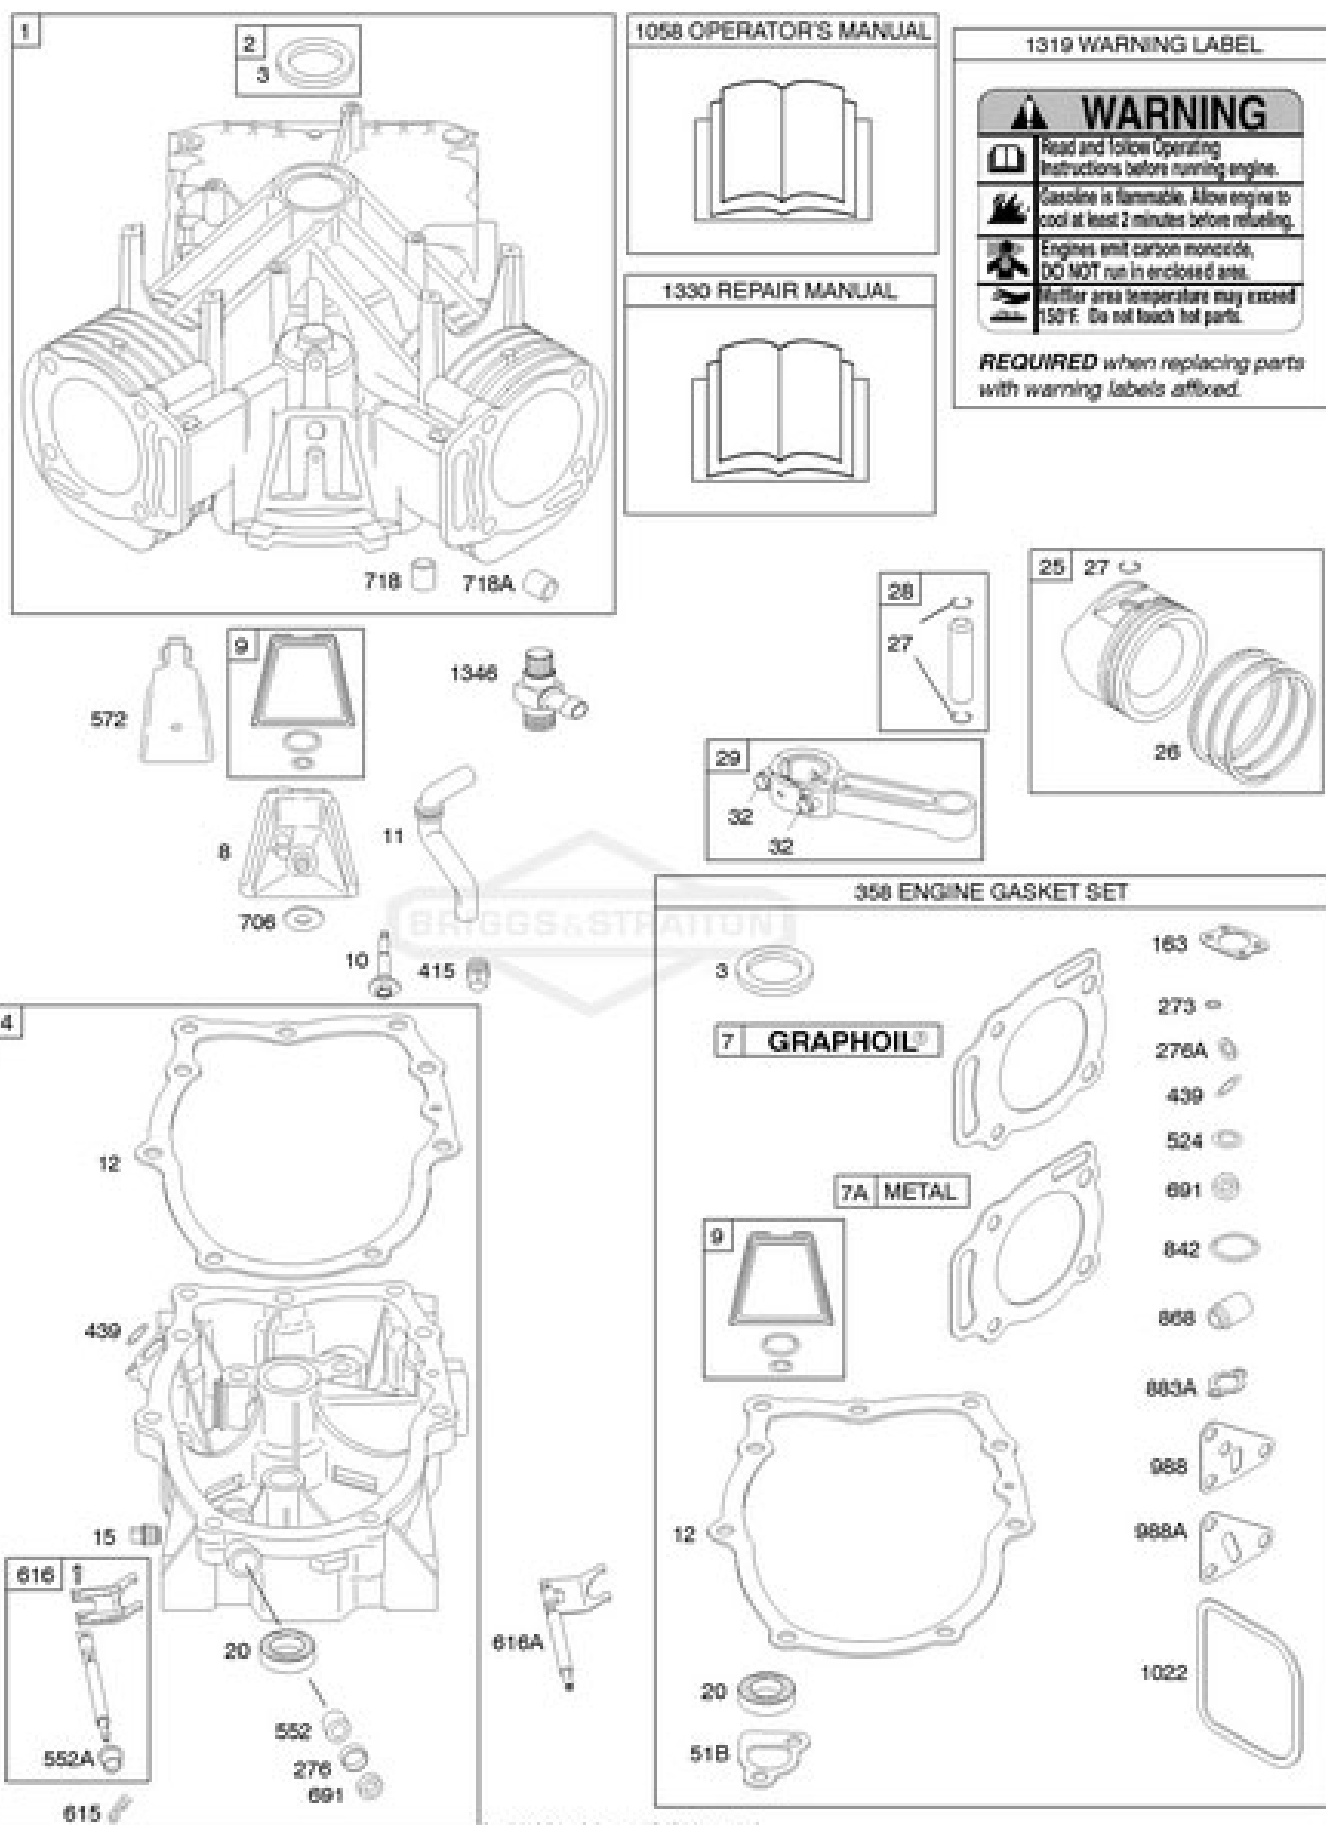






Ref #	Part #	Description	Qty	Context Note	Foot Note
1	692543	CYLINDER ASSY		Used After Code Date 97043000	
1	807511	CYLINDER ASSEMBLY		Used Before Code Date 97050100	
2	807687	KIT, Bushing/Seal		(Magneto Side) Used Before Code Date 97050100	
2	808534	KIT, Bushing/Seal		(Magneto Side) Used After Code Date 97043000	
3	805101S	SEAL, Oil		(Magneto Side)	
4	843954	SUMP-ENGINE		(With Oil Pump)	
7	806085S	GASKET, Cylinder Head		(Graphoil) Used After Code Date 96033100	
7A	807986	GASKET, Cylinder Head		(Metal) Used Before Code Date 96040100	
8	808988	BREATHER ASSY			
9	809094	GASKET, Breather			
10	805194	SCREW		(Breather Assembly) Used Before Code Date 90111500	
10	690751	SCREW		(Breather Assembly) Used After Code Date 90111400	
11	806083S	TUBE, Breather			
12	846487	GASKET, Crankcase			
15	690946	PLUG, Oil Drain			
20	805049S	SEAL, Oil		(PTO Side)	
22	807362	SCREW		(Crankcase Cover/Sump)	
25	843958	PISTON ASSEMBLY		(.020 Oversize)	
25	807619	PISTON ASSEMBLY		(Standard)	
26	807620	SET, Ring		(Standard)	
26	807810	SET, Ring		(.020 Oversize)	
27	690683	LOCK, Piston Pin			
28	807621	PIN, Piston		(Standard)	
29	807900S	ROD, Connecting		(Standard)	
29	807803	ROD, Connecting		(.020 Undersize)	
32	690698	SCREW		(Connecting Rod)	
51B	692035	GASKET, Intake		(Manifold/Heads)	
163	692081	GASKET, Air Cleaner		(Used With Metal Air Cleaner Base)	
273	690681	SEAL, O-Ring		(Oil Pump)	
276	690704	WASHER		(Crankcase Cover/Sump)	
276A	807085	WASHER, Sealing		(Rocker Cover) Used After Code Date 01120200	
276A	691766	WASHER, Sealing		(Rocker Cover) Used Before Code Date 01120300	
358	808390	GASKET SET, Engine		Used Before Code Date 01120300	
358	842722	GASKET SET, Engine		Used After Code Date 01120200	
415	794903	PLUG		(Square Head)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
439	692154	O-RING, Oil Gallery		(Crankcase Cover/Sump) or (Cylinder Assembly)	
524	692053	SEAL, O-Ring		(Dipstick Tube)	
552	690701	BUSHING, Governor Crank			
552A	806686	BUSHING, Governor Crank			
572	690686	BAFFLE-BREATHING			
615	691550	PIN, Cotter			
616	806685	CRANK, Governor			
616A	690899	CRANK, Governor		Used Before Code Date 99072100	
691	690680	SEAL, Governor Shaft			
706	805484	WASHER		(Breather Assembly) Used Before Code Date 90111500	
718	806469	PIN-LOCATING			
718A	805102	PIN, Locating		Used Before Code Date 90091100	
842	691870	SEAL, O-Ring		(Dipstick Tube)	
868	691963	SEAL, Valve			
883A	691613	GASKET, Exhaust			
988	692063	GASKET, Oil Adapter			
988A	690687	GASKET, Oil Adapter			
1022	806039S	GASKET, Rocker Cover			
1058	277107	MANUAL, Operator's			
1135	806497	WASHER		(Crankcase Cover/Sump)	
1319	794467	LABEL, Warning			
1330	272144	MANUAL, Repair			
1346	492031	VALVE, Oil Drain Shut Off			

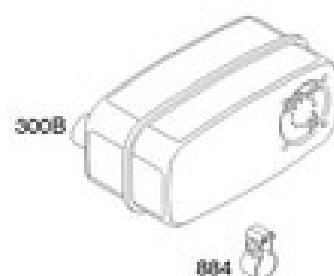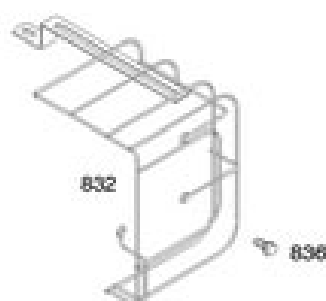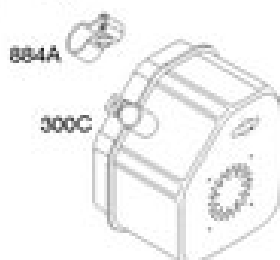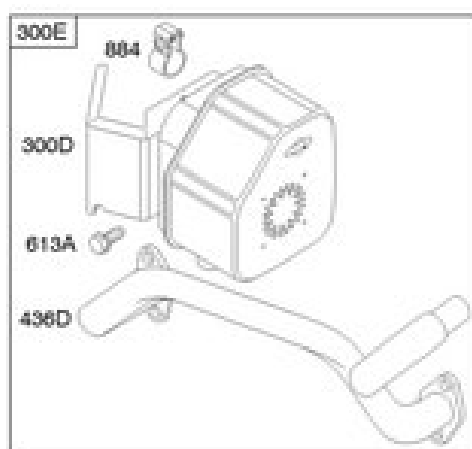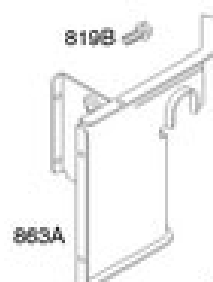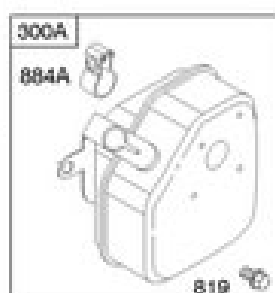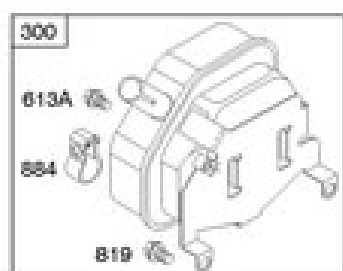


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
300		Muffler		(For Replacement Muffler, Order 692099)	
300A	807742	MUFFLER			
300B	498984S	MUFFLER			
300C	692099	MUFFLER			
300D	807953	MUFFLER			
300E	807969	MUFFLER			
346	690661	SCREW		(Spark Arrestor)	
436	692061	MANIFOLD, Exhaust		(Cylinder 2)(Side Outlet)(Used With Customer Supplied Muffler)	
436B	691502	MANIFOLD, Exhaust		(Cylinder 1)(Side Outlet)(Used With Customer Supplied Muffler)	
436D	805778	MANIFOLD, Exhaust		(Wide Area Walker)	
613	690297	SCREW		(Muffler)	
613A	691902	SCREW		(Muffler)	
676	795036	DEFLECTOR, Muffler		(Side Out)	
676A	795038	DEFLECTOR, Muffler		(Dual Louvered)	
676B	396903	DEFLECTOR, Muffler		(Direct Out)	
677	690661	SCREW		(Muffler Deflector)	
819	692056	SCREW		(Muffler Bracket)	
819A	692067	SCREW		(Muffler Bracket)	
819D	692062	SCREW		(Muffler Bracket)	
819B	692198	SCREW		(Muffler Bracket)	
832	692361	GUARD-MUFFLER			
836	691982	SCREW		(Muffler Guard)	
863	691513	BRACKET, Muffler			
863A	224359	BRACKET, Muffler			
882	692074	FLANGE, Exhaust			
883A	691613	GASKET, Exhaust			
884	690898	CLAMP, Muffler		(1 9/64 Inside Diameter)	
884A	691956	CLAMP, Muffler		(1 1/4 Inside Diameter)	
994	794945	ARRESTOR, Spark			

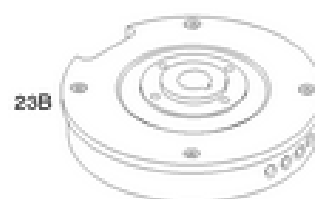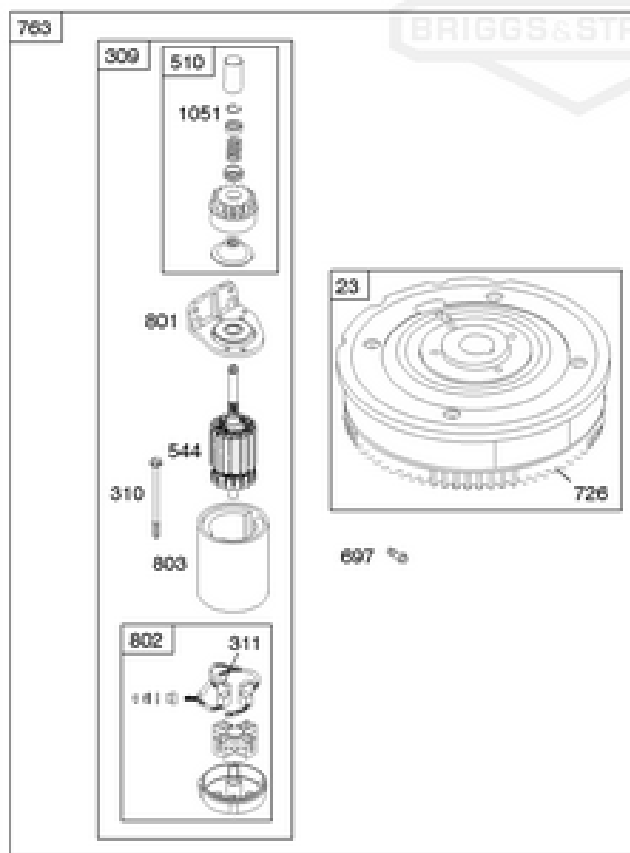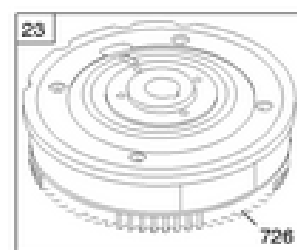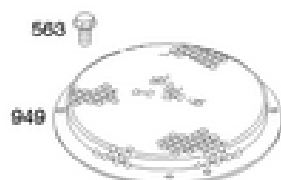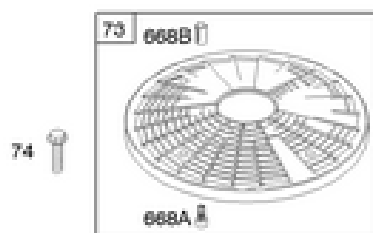



Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	808766	FLYWHEEL		(Steel Ring Gear)	
23B	690889	FLYWHEEL		(Rewind Starter)	
73	494439	SCREEN, Rotating			
74	691647	SCREW		(Rotating Screen)	
75	691490	WASHER		(Flywheel)	
309	691564	MOTOR-STARTER		(Steel Ring Gear Only)	
310	496880	SCREW		(Starter Motor)	
311	496887	SET, Brush			
332	690887	NUT		(Flywheel)	
363	19203	PULLER, Flywheel			
510	496881	DRIVE, Starter			
544		MOTOR, Starter		(Service With 691564 Starter Motor Only)	
563	691982	SCREW		(Debris Screen Guard)	
668A	691500	SPACER		(Knurled Insert)	
668B	690737	BUSHING, Choke Shaft			
668B	691215	SPACER		(Rotating Screen)	
697	692062	SCREW		(Drive Cap)	
726		Gear-Ring		(Steel)(See Reference 23 for Service)	
801	808778	CAP, Drive			
802	496813	RETAINER, Brush			
803	690854	HOUSING, Starter		(Air Cleaner Base)	
949	690475	GUARD, Debris Screen			
1051	690736	RING, Retaining			

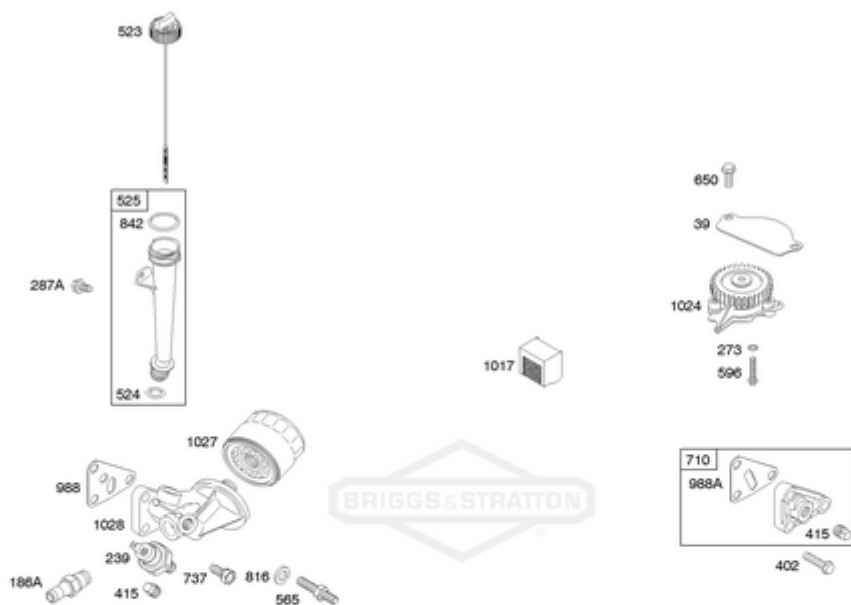


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
39	690745	COVER, Gear			
186A	691764	CONNECTOR-HOSE		(Pulse Line)	
239	690233	SWITCH, Oil Pressure		(Oil GARD)	
273	690681	SEAL, O-Ring		(Oil Pump)	
287A	807084	SCREW		(Dipstick Tube)	
402	690679	SCREW		(Oil Filter Cover)	
415	794903	PLUG		(Square Head)	
523	692101	DIPSTICK			
524	692053	SEAL, O-Ring		(Dipstick Tube)	
525	692093	TUBE, Dipstick			
565	690682	STUD		(Oil Filter Adapter)	
596	691492	SCREW		(Oil Pump)	
650	691982	SCREW		(Oil Deflector)	
710	807689	COVER, Oil Filter			
737	690679	SCREW		(Oil Filter Adapter)	
816	690706	WASHER		(Oil Filter Adapter)	
842	691870	SEAL, O-Ring		(Dipstick Tube)	
988	692063	GASKET, Oil Adapter			
988A	690687	GASKET, Oil Adapter			
1017	690878	SCREEN, Oil Pump			
1024	843954	SUMP-ENGINE			
1027	842921	FILTER, Oil			
1027	491056	FILTER-OIL		(3 1/4)	
1028	808235	ADAPTER, Oil Filter			

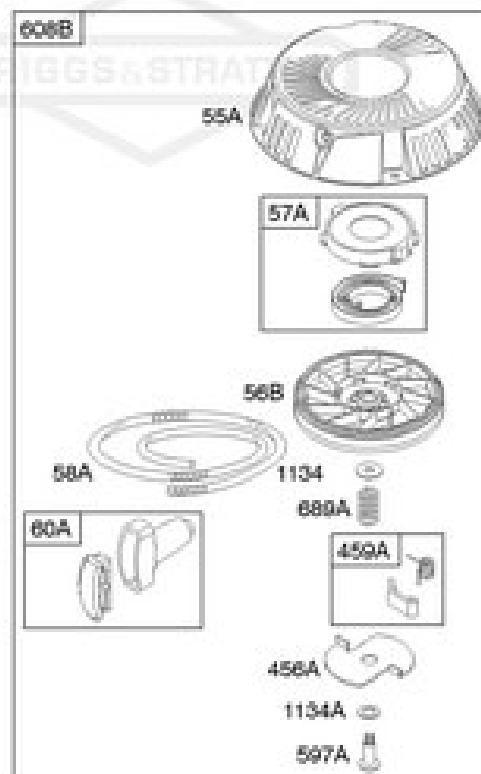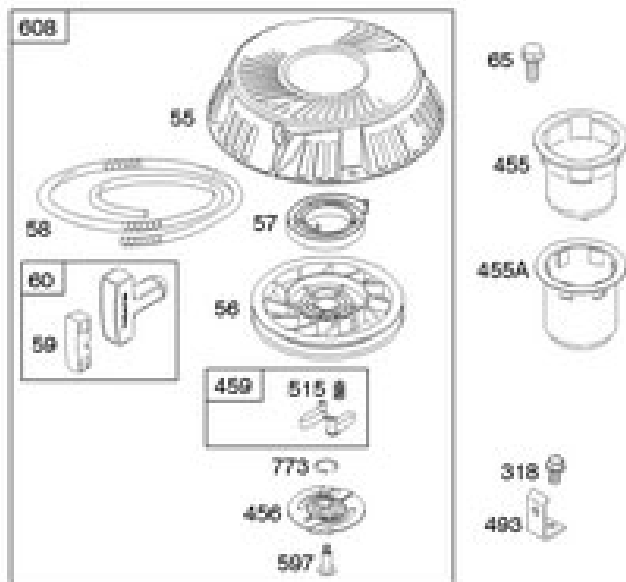

Ref #	Part #	Description	Qty	Context Note	Foot Note
55	691568	HOUSING, Rewind Starter			
55A	492193	HOUSING, Rewind Starter			
56	692085	PULLEY, Rope Starter			
56B	280918	PULLEY, Rope Starter			
57	692086	SPRING, Rewind Starter			
57A	492194	SPRING, Rewind Starter			
58	66574	ROPE, Starter		(Cut To Required Length)	
58A	695002	ROPE, Starter		(Cut To Required Length)	
59	805957	INSERT, Grip			
60	808167	GRIP, Starter Rope			
60A	490652	GRIP-STARTER ROPE			
65	691982	SCREW		(Rewind Starter)	
318	841233	SCREW		(Mounting Bracket)	
455	691517	CUP, Flywheel			
455A	805153	CUP, Flywheel			
456	691529	PLATE, Pawl Friction			
456A	224228	PLATE, Pawl Friction			
459	808166	PAWL, Ratchet			
459A	492431	PAWL, Ratchet			
493	691503	BRACKET, Mounting		(Rewind Starter)	
515	691528	SPRING, Pawl			
597	690876	SCREW		(Pawl Friction Plate)	
597A	94463	SCREW		(Pawl Friction Plate)	
608	692102	STARTER, Rewind		Used After Code Date 93072500	
608B	808152	STARTER, Rewind		Used Before Code Date 93072600	
689A	262564	SPRING, Friction			
773	690875	RETAINER		(Pawl Friction Plate)	
1134	94464	WASHER		(Pawl Friction Plate)	
1134A	94462	WASHER		(Pawl Friction Plate)	

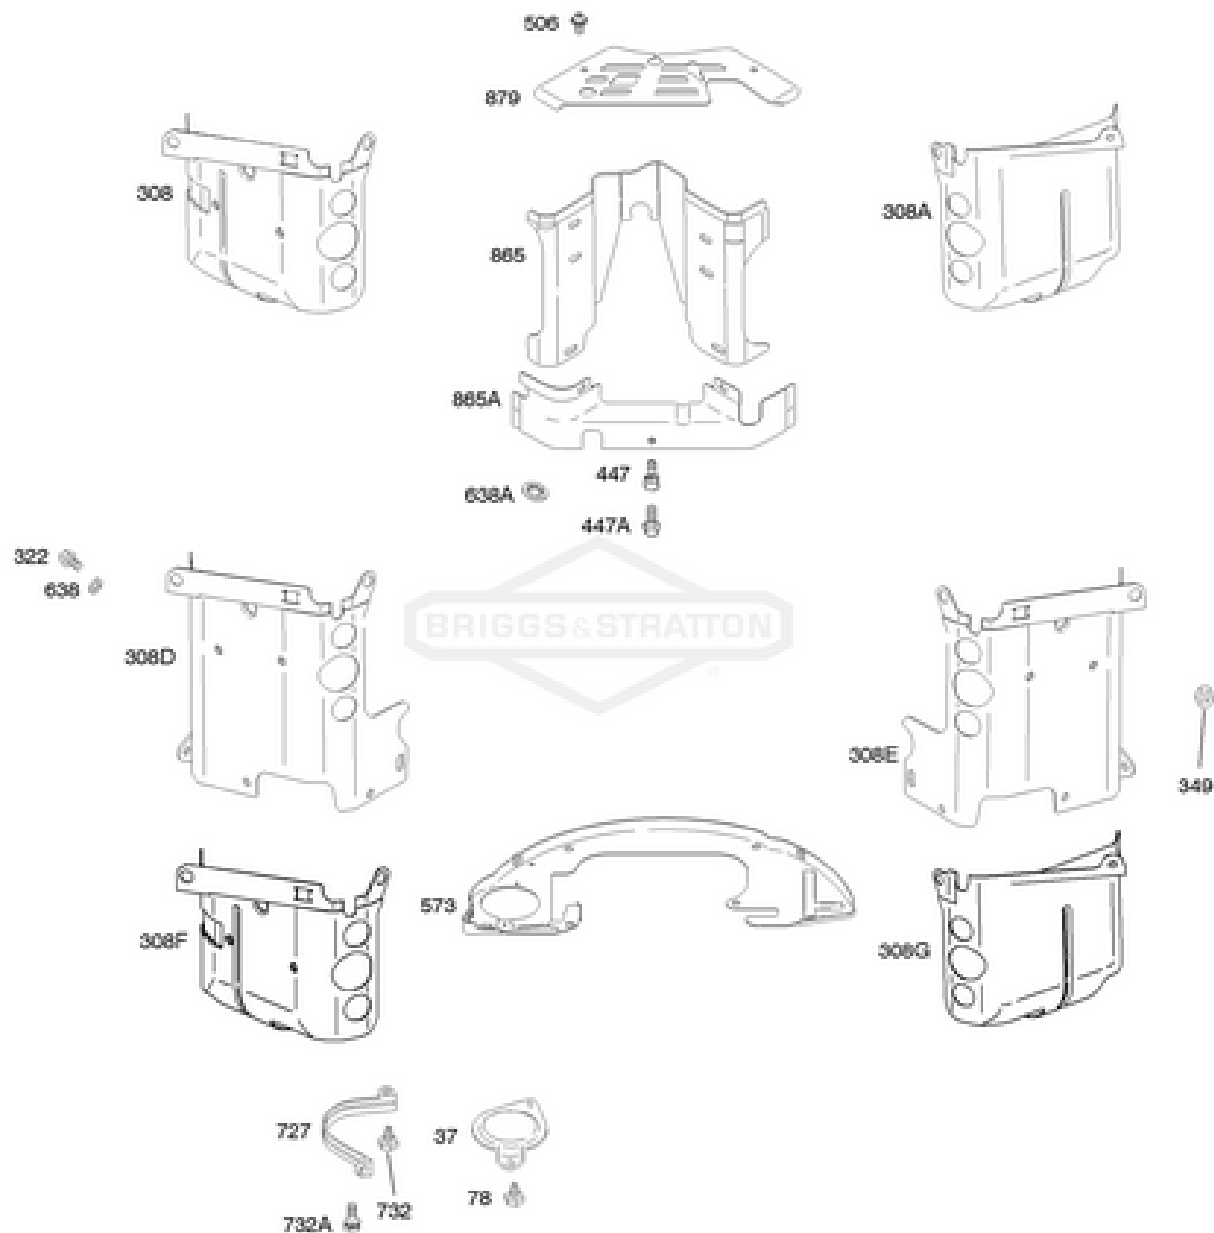

Ref #	Part #	Description	Qty	Context Note	Foot Note
37	841309	GUARD-FLYWHEEL			
78	690688	SCREW		(Flywheel Guard)	
308	807656	COVER, Cylinder Head		(Cylinder 1) Used Before Code Date 90111700	
308	841232	COVER, Cylinder Head		(Cylinder 1) Used After Code Date 90111600	
308A	841182	GUIDE-AIR		(Cylinder 2) Used After Code Date 90111600	
308A	807657	GUIDE, AIR		(Cylinder 2) Used Before Code Date 90111700	
308G	841182	GUIDE-AIR		(Cylinder 2) Used Before Code Date 03110100	
308F	841182	GUIDE-AIR		(Cylinder 2) Used After Code Date 03103100	
308E	841316	GUIDE-AIR		(Cylinder 2)	
308D	841317	GUIDE-AIR		(Cylinder 1)	
322	692067	SCREW		(Cylinder Head Cover)	
349	690238	NUT		(Cylinder Head Cover)	
447	841233	SCREW		(Air Guide Cover)	
447A	807163	SCREW		(Air Guide Cover)	
506	690677	SCREW		(Carburetor Cover)	
573	841310	PLATE-BACK			
638	690706	WASHER		(Cylinder Head Cover)	
638A	691551	WASHER		(Cylinder Head Cover) Used Before Code Date 03110100	
727	841313	COVER, Starter Drive		(Black)	
732	690688	SCREW		(Starter Drive Cover)	
732A	841233	SCREW		(Starter Drive Cover)	
865	841312	COVER, Air Guide		(Black)	
865A	841319	COVER-AIR GUIDE		(Aluminum)	
879	842829	COVER, Carburetor/EFI			