 
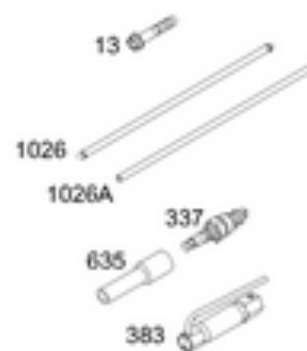 
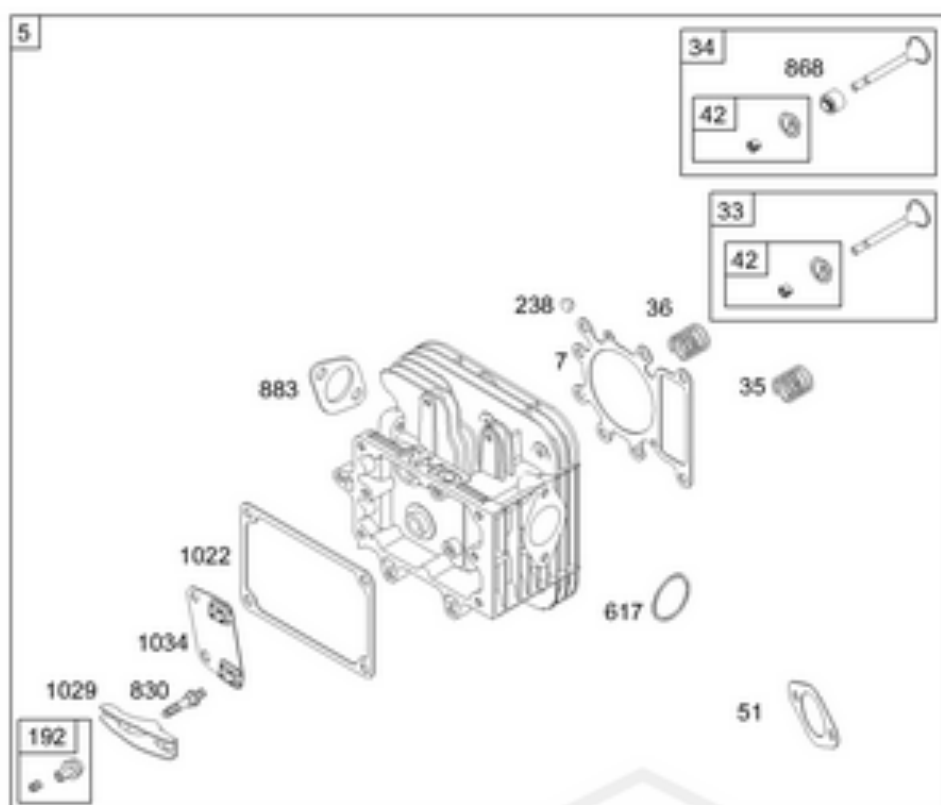 
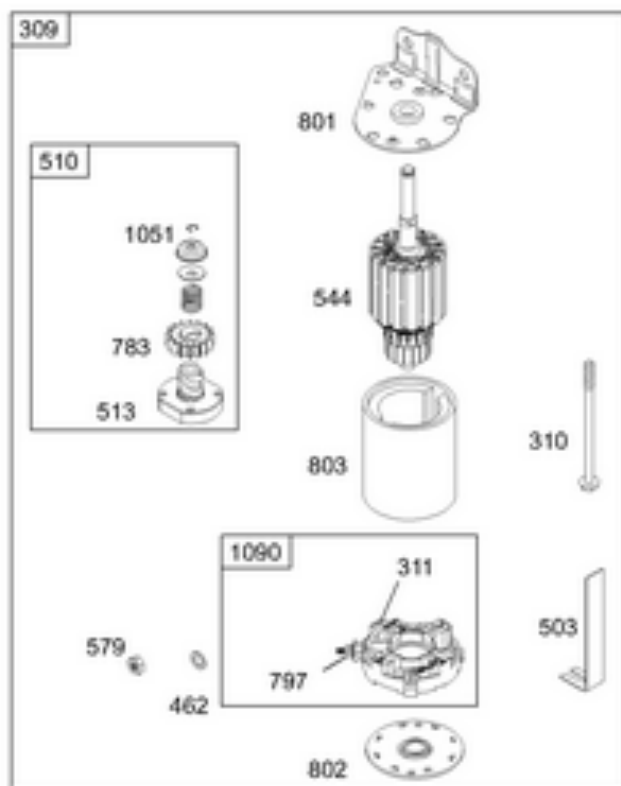 
 


Ref #	Part #	Description	Qty	Context Note	Foot Note
5	698148	HEAD, Cylinder			
7	699168	GASKET, Cylinder Head			
13	690360	SCREW		(Cylinder Head)	
33	695760	VALVE, Exhaust			
34	695761	VALVE, Intake			
35	691279	SPRING, Valve		(Intake)	
36	691279	SPRING, Valve		(Exhaust)	
42	499586	KEEPER, Valve			
50	690193	MANIFOLD, Intake			
51	692137	GASKET-INTAKE			
53	690227	STUD		(Carburetor)	
54	691148	SCREW		(Intake Manifold)	
192	691986	ADJUSTER, ROCKER ARM			
238	691843	CAP, Valve			
337	491055S	PLUG-SPARK			
383	89838S	WRENCH-SPARK PLUG			
415	690283	PLUG, Oil		(Used in Engine Sump as Oil Pressure Switch Plug and Intake Manifold as Vacuum Plug)	
617	692138	SEAL, O-Ring		(Intake Manifold)	
635	691909	BOOT, Spark Plug			
830	691095	STUD-ROCKER ARM			
868	690968	SEAL, Valve			
883	692236	GASKET, Exhaust			
914	691108	SCREW		(Rocker Cover)	
1022	272475S	GASKET, Rocker Cover			
1023A	692492	COVER, Rocker			
1026	692003	ROD, Push		(Intake)	
1026A	692011	ROD, Push		(Exhaust)	
1029	691751	ARM, Rocker			
1034	690822	GUIDE, Push Rod			
1095	690190	GASKET SET, Valve			


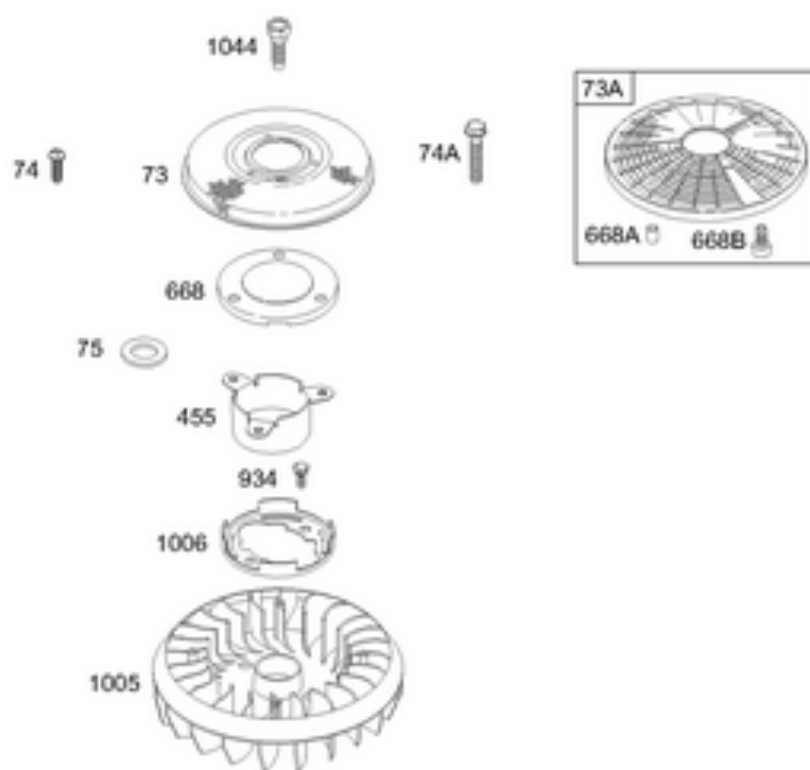


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	693557	FLYWHEEL		(Steel Ring Gear)	
73A	494439	SCREEN, Rotating		(Nylon)	
74A	698425	SCREW		(Rotating Screen)	
75	690582	WASHER		(Flywheel)	
309	693551	MOTOR, Starter			
310	690323	SCREW		(Starter Motor)	
311	497608	SET, Brush			
363	19203	PULLER, Flywheel			
455	691173	CUP, Flywheel			
462	691261	WASHER		(Starter Cable)	
503	691532	STRAP-STARTER			
510	693699	DRIVE, Starter		(Used With Steel Ring Gear)	
513	692024	CLUTCH-DRIVE			
544	692034	ARMATURE, Starter		(3 5/8 Housing)	
579	691029	NUT		(Starter Cable)	
668A	691215	SPACER			
668B	691500	SPACER		Used Before Code Date 00040300	
697	690372	SCREW		(Drive Cap)	
726		Gear-Ring		(Steel)(See Reference 23 for Service)	
729A	691224	CLIP, Wire			
783	693713	GEAR, Pinion			
797	693167	NUT		(Brush Retainer)	
801	691283	CAP-DRIVE			
802	691286	CAP-END			
803	693757	HOUSING, Starter		(3 5/8 Housing)	
934	690372	SCREW		(Fan Retainer)	
1005	697853	FAN, Flywheel		Used After Code Date 02050800	
1006	690452	RETAINER, Fan			
1044	698139	SCREW		(Flywheel)	
1051	691265	RING, Retaining			
1090	691293	RETAINER-BRUSH			

1058 OPERATOR'S MANUAL

 
 
1330 REPAIR MANUAL

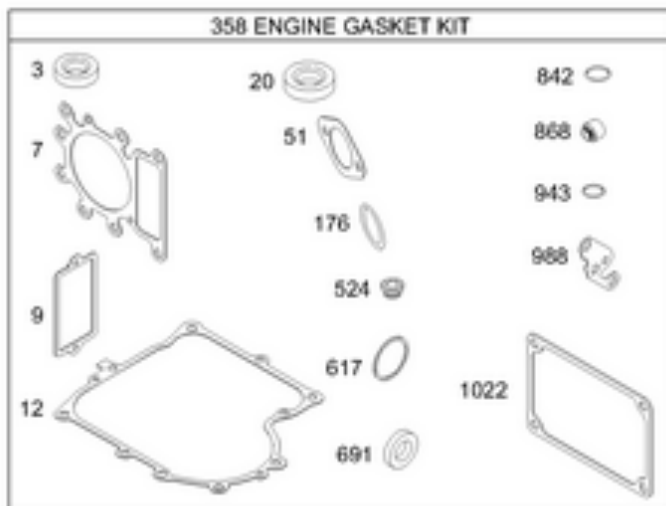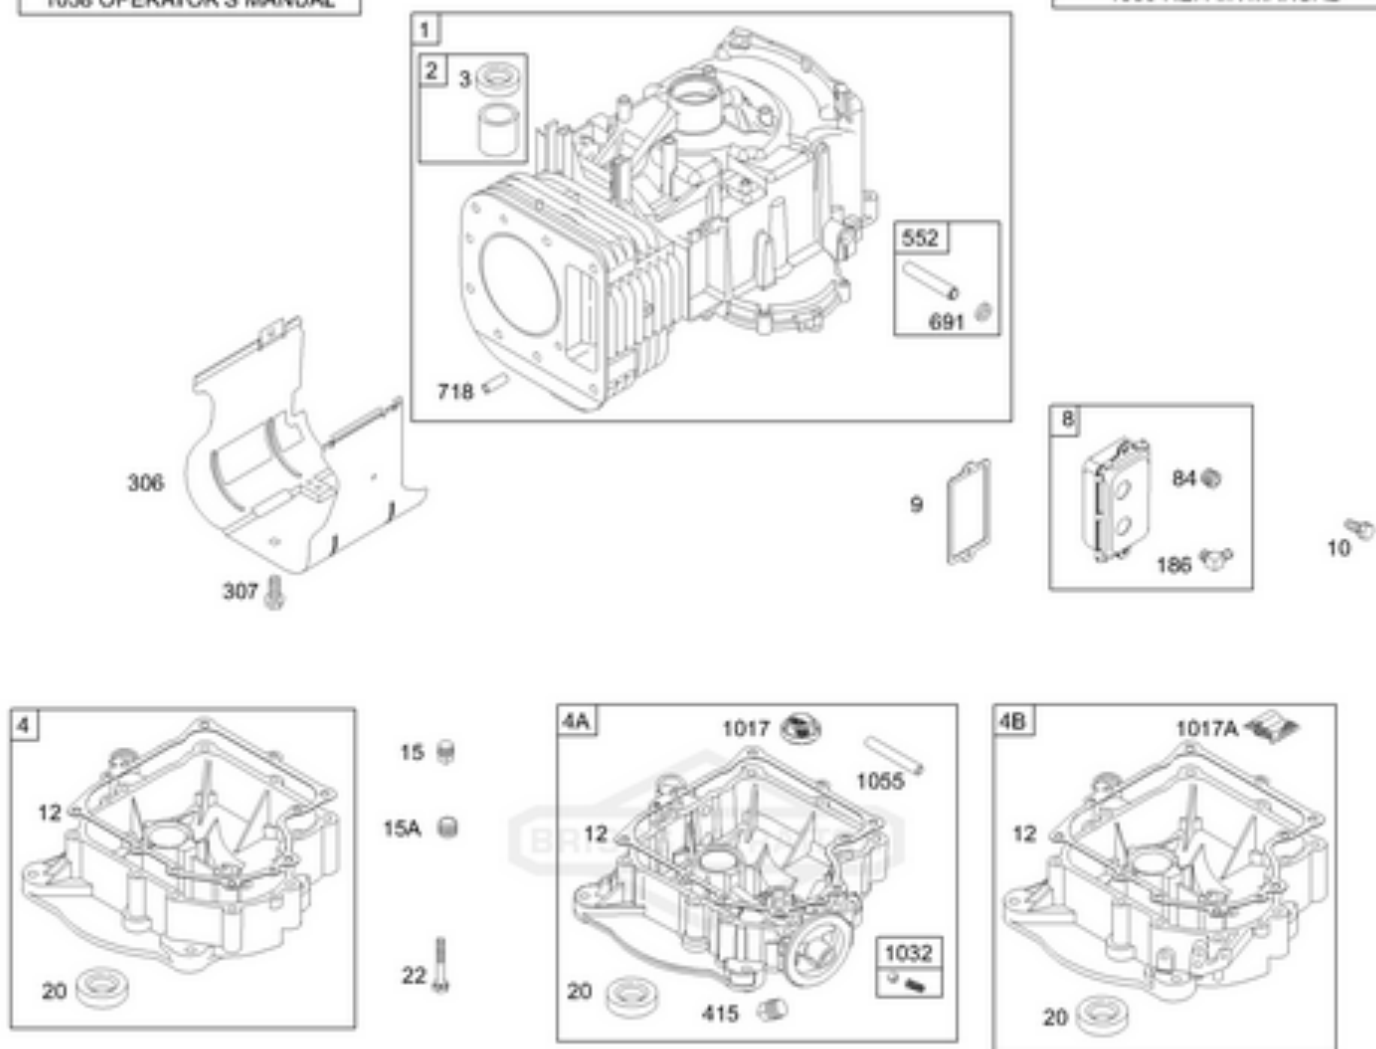





Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	690156	CYLINDER ASSEMBLY			
2	399265	KIT, Bushing/Seal		(Magneto Side)	
3	391086S	SEAL, Oil		(Magneto Side)	
4A	693582	SUMP, Engine		Used After Code Date 98063000	
4B	496742	SUMP, Engine		Used Before Code Date 98070100	
7	699168	GASKET, Cylinder Head			
8	696126	BREATHER ASSEMBLY			
9	27803S	GASKET, Breather			
10	691666	SCREW		(Breather Assembly)	
12	692406	GASKET, Crankcase		(.005)	
12	692405	GASKET, Crankcase		(.009)	
12	692226	GASKET, Crankcase		(.015)(Standard)	
15	690946	PLUG, Oil Drain		(Standard)	
15A	691680	PLUG, Oil Drain		(Flush)	
20	291675S	SEAL, Oil		(PTO Side)	
22	692125	SCREW		(Crankcase Cover/Sump)	
51	692137	GASKET-INTAKE			
84	690343	PLUG, Oil Drain			
176	691917	SEAL, O-Ring		(Air Cleaner Base)	
186	691609	CONNECTOR, Hose		(Breather Assembly)	
306	698454	SHIELD- CYLINDER			
307	691003	SCREW		(Cylinder Shield)	
358	690189	GASKET SET, Engine			
415	690283	PLUG, Oil		(Used in Engine Sump as Oil Pressure Switch Plug and Intake Manifold as Vacuum Plug)	
524	281370S	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
552	491986	BUSHING, Governor Crank		(1/4 I.D.)	
617	692138	SEAL, O-Ring		(Intake Manifold)	
691	692407	SEAL-GOVERNOR SHAFT			
718	690959	PIN, Locating			

Ref #	Part #	Description	Qty	Context Note	Foot Note
842	691870	SEAL, O-Ring		(Dipstick Tube)	
868	690968	SEAL, Valve			
943	690589	SEAL, O-Ring		(Oil Pump Cover) Used After Code Date 98063000	
988	691317	GASKET, Oil Adapter			
1017	690770	SCREEN, Oil Pump		Used After Code Date 98063000	
1017A	691216	SCREEN, Oil Pump		Used Before Code Date 98070100	
1022	272475S	GASKET, Rocker Cover			
1055	690528	TUBE, Oil Pump			
1058	275935	MANUAL, Operator's			
1330	272147	MANUAL, Repair			

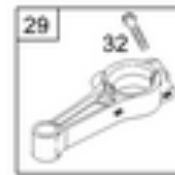 
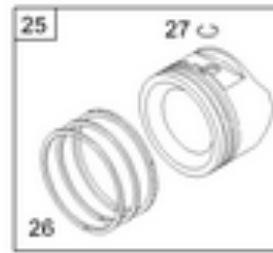 


24

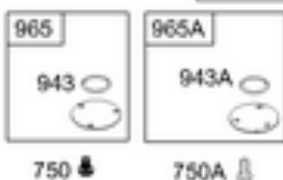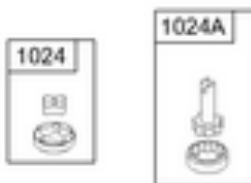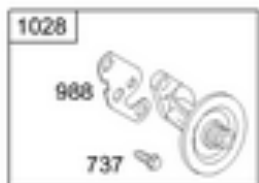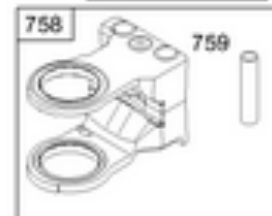    

Ref #	Part #	Description	Qty	Context Note	Foot Note
16	690136	CRANKSHAFT			
24	222698S	KEY, Flywheel			
25	692273	PISTON ASSEMBLY		(.020 Oversize)	
25	692271	PISTON ASSEMBLY		(Standard)	
25	692274	PISTON ASSEMBLY		(.030 Oversize)	
26	690168	SET, Ring		(.030 Oversize)	
26	690162	SET, Ring		(Standard)	
26	690164	SET, Ring		(.010 Oversize)	
26	690166	SET, Ring		(.020 Oversize)	
27	691299	LOCK, Piston Pin			
28	498320	PIN, Piston		(.005 Oversize)	
28	498319	PIN, Piston		(Standard)	
29	692420	ROD, Connecting		(.020 Undersize)	
29	692419	ROD, Connecting		(Standard)	
32	692852	SCREW		(Connecting Rod)	
43	691968	SLINGER, Governor/Oil			
45	690564	TAPPET, Valve			
46	698492	CAMSHAFT		Used After Code Date 02111700	
46	790340	CAMSHAFT		Used Before Code Date 02111800	
146	691639	KEY, Woodruff			
287	691002	SCREW		(Dipstick Tube)	
523	692014	DIPSTICK			
524	281370S	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
525	691398	TUBE, Dipstick			
737	691118	SCREW		(Oil Filter Adapter)	
741	691284	GEAR, Timing			
750	691033	SCREW		(Oil Pump Cover) Used After Code Date 98063000	
750A	691108	SCREW		(Oil Pump Cover) Used Before Code Date 98070100	
757	691714	LINK, Counterweight		(Used After Code Date 78100411)	
758	692423	COUNTERWEIGHT			
759	691239	PIN, Counterweight			
761	691096	SCREW		(Counterweight)	
842	691870	SEAL, O-Ring		(Dipstick Tube)	
847	496415	DIPSTICK/TUBE ASSEMBLY			
943	690589	SEAL, O-Ring		(Oil Pump Cover) Used After Code Date 98063000	
943A	690604	SEAL, O-Ring		(Oil Pump Cover) Used Before Code Date 98070100	
965	499613	COVER, Oil Pump		Used After Code Date 98063000	

Ref #	Part #	Description	Qty	Context Note	Foot Note
965A	496745	COVER, Oil Pump		Used Before Code Date 98070100	
988	691317	GASKET, Oil Adapter			
1024	499054	PUMP, Oil		Used After Code Date 98063000	
1024A	493884	PUMP-OIL		Used Before Code Date 98070100	
1027	492932S	FILTER, Oil			
1028	496744	ADAPTER, Oil Filter			
1035	693784	SHAFT, Pump			

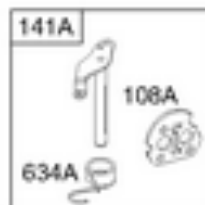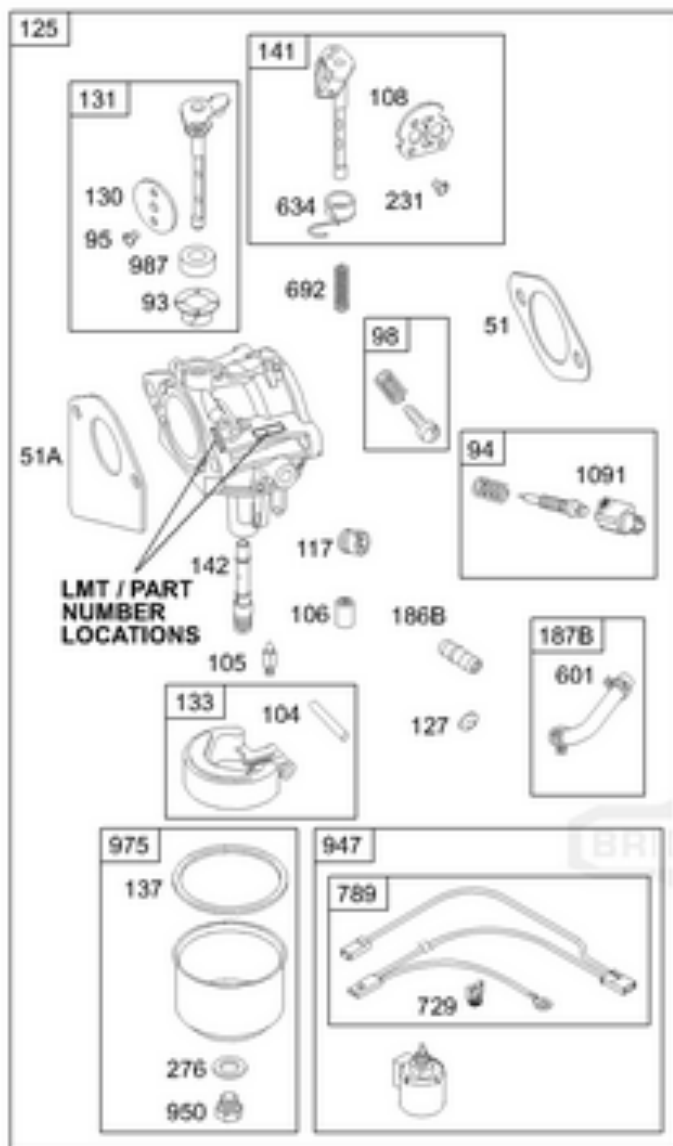  
WALBRO

118B



118

186A

 947B

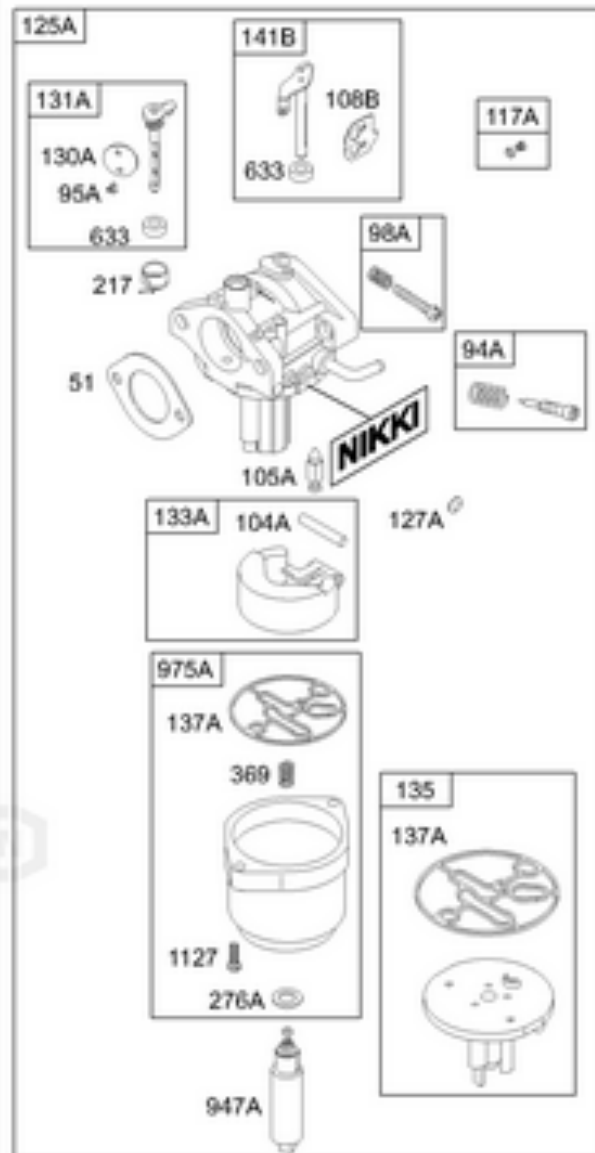NIKKI

  118A

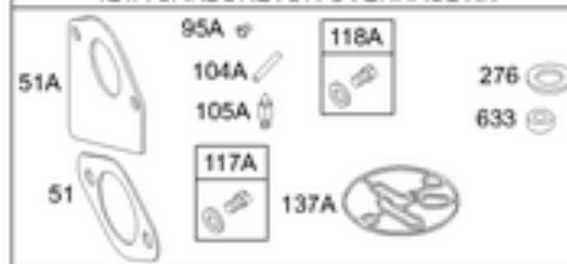
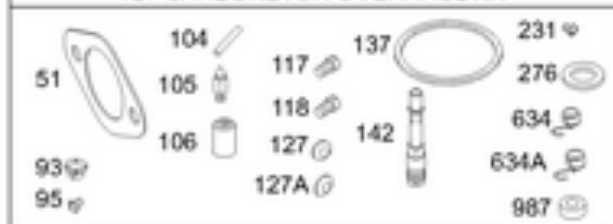
121A CARBURETOR OVERHAUL KIT**977A CARBURETOR GASKET SET****121 CARBURETOR OVERHAUL KIT****977 CARBURETOR GASKET SET**

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692137	GASKET-INTAKE			
51A	692284	GASKET, Intake			
93	690602	BUSHING, Throttle Shaft			
94	498030	KIT, Idle Mixture		(Lmt 153154,155,156)	
94A	695425	KIT, Idle Mixture			
95	691636	SCREW		(Throttle Valve)	
95A	690718	SCREW		(Throttle Valve)	
98	495800	KIT, Idle Speed		(Idle Speed) (Lmt 54, 55, 91)	
98A	695408	KIT, Idle Speed			
104	690525	PIN, Float Hinge			
104A	694918	PIN, Float Hinge			
105	231855S	VALVE-FLOAT NEEDLE			
105A	694922	VALVE, Float Needle			
106	690577	SEAT, Inlet		(LMT 154, 155 and Carburetors 697481 And 697482)	
106	691780	SEAT, Inlet		(LMT 153, 156, 697480, 697483)	
108	690464	VALVE, Choke		(LMT 153, 156, 697480, 697483)	
108A	692344	VALVE, Choke		(LMT 154, 155 and Carburetors 697481 And 697482)	
108B	695419	VALVE, Choke			
117	692408	JET, Main		(Standard)	
117A	695415	JET, Main		(Standard)	
118	692411	JET, Main		(High Altitude)	
118A	695416	JET, Main		(High Altitude)	
121	690191	KIT, Carburetor Overhaul			
121A	695427	KIT, Carburetor Overhaul			
125	698782	CARBURETOR		(LMT 153, 156, 697480, 697483)	
125	698620	CARBURETOR		(LMT 154, 155 and Carburetors 697481 And 697482)	
125A		Carburetor		(Nikki Carburetor, Service With Walbro Carburetor)	
127	695005	PLUG, Welch			
127A	690727	PLUG, Welch			
130	691750	VALVE, Throttle			
130A	695418	VALVE, Throttle			
131	494379	KIT, Throttle Shaft			
131A	695421	KIT, Throttle Shaft			
133	494381	FLOAT, Carburetor			



Ref #	Part #	Description	Qty	Context Note	Foot Note
133A	694914	FLOAT, Carburetor			
135	696142	TUBE, Fuel Transfer			
137	281165S	GASKET-FLOAT BOWL			
137A	695426	GASKET, Float Bowl			
141	495097	KIT, Choke Shaft		(Manual Choke) (LMT 154, 155 and Carburetors 697481 And 697482)	
141A	495931	KIT, Choke Shaft		(Choke-A-Matic) (LMT 153, 156, 697480, 697483)	
141B	695420	KIT, Choke Shaft			
142	692412	NOZZLE, Carburetor		(Standard)	
186A	692317	CONNECTOR-HOSE		(Carburetor)	
186B	698174	CONNECTOR, Hose		(Carburetor)	
217	695409	SPRING, Choke Return			
231	691636	SCREW		(Choke Valve)	
276	692255	WASHER, Sealing			
276A	695410	WASHER, Sealing			
369	695422	SPRING, Float Bowl			
601	95162S	CLAMP, Hose			
633	695414	SEAL, Choke/Throttle Shaft			
634	690801	SPRING/SEAL ASSEMBLY		(LMT 153, 156, 697480, 697483)	
634A	690802	SPRING/SEAL ASSEMBLY		(LMT 154, 155 and Carburetors 697481 And 697482)	
692	690572	SPRING, Detent			
729	691335	CLIP, Wire			
947	692734	SOLENOID, Fuel			
947A	695423	SOLENOID, Fuel			
950	691657	SCREW		(Float Bowl)	
975	495933	BOWL, Float		(Float Bowl)	
975A	695417	BOWL, Float			
977	690192	SET, Carburetor Gasket			
977A	695428	SET, Carburetor Gasket			
987	691326	SEAL, Choke/Throttle Shaft			
1091	691333	CAP, Limiter			
1127	695407	SCREW		(Float Bowl)	

1019 LABEL KIT

  1036 EMISSIONS LABEL

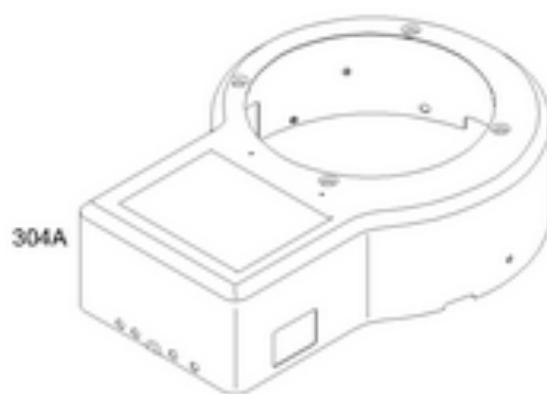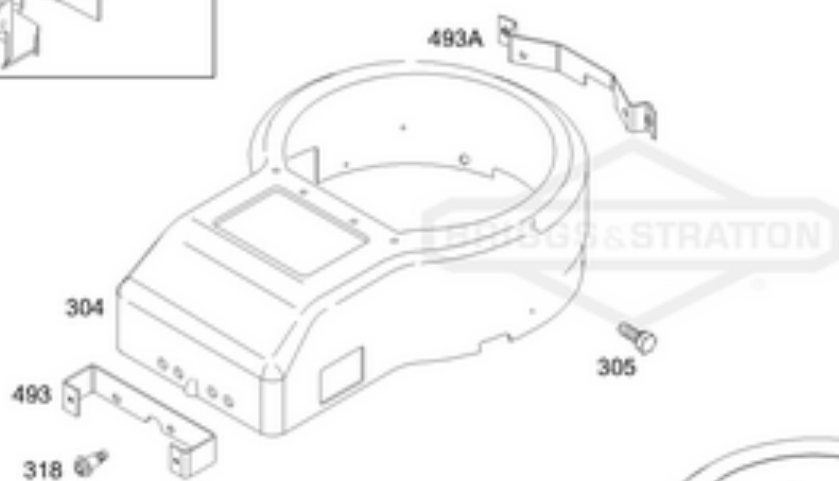





Ref #	Part #	Description	Qty	Context Note	Foot Note
37	690456	GUARD, Flywheel			
78	697561	SCREW		(Flywheel Guard)	
304B	691399	HOUSING, Blower		(RED)(LARGE FAN)	
305	691108	SCREW		(Blower Housing)	
318	692127	SCREW		(Mounting Bracket)	
493	690493	BRACKET-MOUNTING		(Blower Housing Front)	
493A	690494	BRACKET, Mounting		(Blower Housing Rear)	
727	490324	COVER, Starter Drive		(Includes Mounting Hardware)	
732	691002	SCREW		(Starter Drive Cover)	
921B	692679	HOUSING, Blower		(Black)	
921B	692493	HOUSING, Blower		(Red)	
969	691108	SCREW		(Blower Housing Cover)	
969A	690365	SCREW		(Blower Housing)	
1019	690180	KIT, Label			
1036	692468	LABEL-EMISSIONS		Used Before Code Date 99010100	
1036	694332	LABEL, Emissions		Used After Code Date 98123100	Used Before Code Date 99100100
1036	694997	LABEL, Emissions		Used After Code Date 99093000	Used Before Code Date 00070100
1036	695700	LABEL, Emissions		Used After Code Date 00063000	

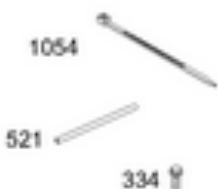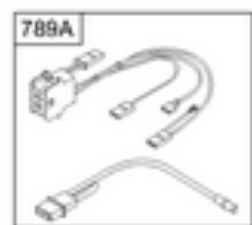  

DUAL CIRCUIT	TRI CIRCUIT	10 – 16 AMP
474B	474C	474D
877  1059 	877B  1059 	877C  1059 
878 	878A 	578 

NOTE: All stators use a Reference 1119 mounting screw.

   
 
NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

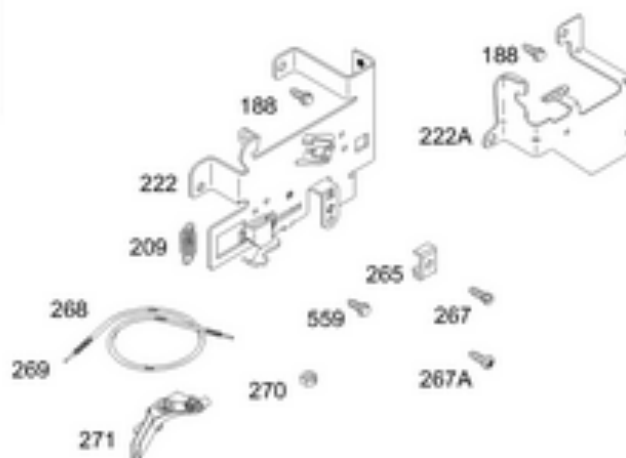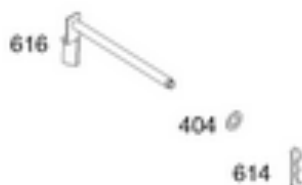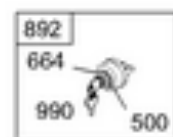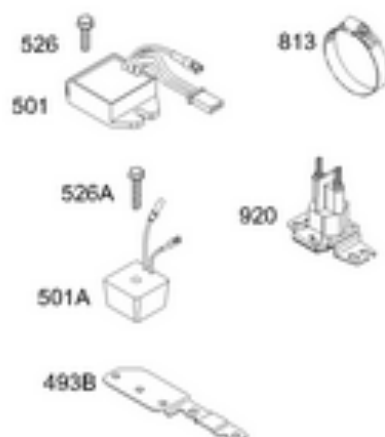

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	691693	SCREW		(Control Bracket)	
202	691841	LINK, Mechanical Governor			
209	692208	SPRING, Governor		(Green)	
216	691840	LINK, Choke			
222	694042	BRACKET, Control			
227	691374	LEVER, Governor Control			
232	691842	SPRING, Governor Link			
265	691024	CLAMP, Casing			
267A	695134	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
333	492341	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
404	691691	WASHER		(Governor Crank)	
474B	696459	ALTERNATOR		(DC CIRCUIT)	
493B	694475	BRACKET, Mounting		(Alternator)	
500	691086	WASHER		(Key Switch)	
501	691185	REGULATOR		(16 Amp Regulated)	
501A	691188	REGULATOR		(9 Amp Regulated)	
505	691251	NUT		(Governor Control Lever)	
521	690581	SHIELD, Cable			
526	692598	SCREW		(Regulator)	
526A	694476	SCREW		(Regulator)	
559	693675	SCREW		(Remote Choke Stop)	
562	691119	BOLT		(Governor Control Lever)	
578	692306	WIRE ASSEMBLY			
614	691620	PIN, Cotter			
616	692012	CRANK-GOVERNOR			
664	691087	NUT		(Key Switch)	
789A	698329	HARNESS, Wiring			
813	690635	CLAMP		Used Before Code Date 99070600	
851	692424	TERMINAL, Spark Plug			
877	393456	WIRE/CONNECTOR, Alternator		(Dual Circuit)	
877B	393537	WIRE/CONNECTOR, Alternator		(Tri Circuit)	
877C	399916	WIRE/CONN-ALTERNATOR		(10 and 16 Amp Regulated)	
878	691237	HARNESS, Alternator		(Dual Circuit)	
878A	691955	HARNESS, Alternator		(Tri Circuit)	
892	692318	SWITCH, Key			
990	691959	KEY SET			

Ref #	Part #	Description	Qty	Context Note	Foot Note
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer			
1119	691183	SCREW		(Alternator)	

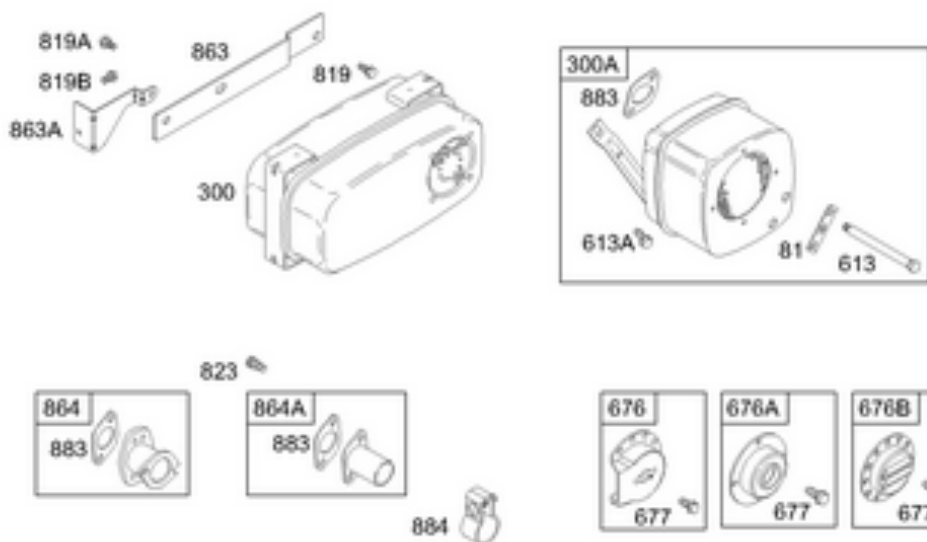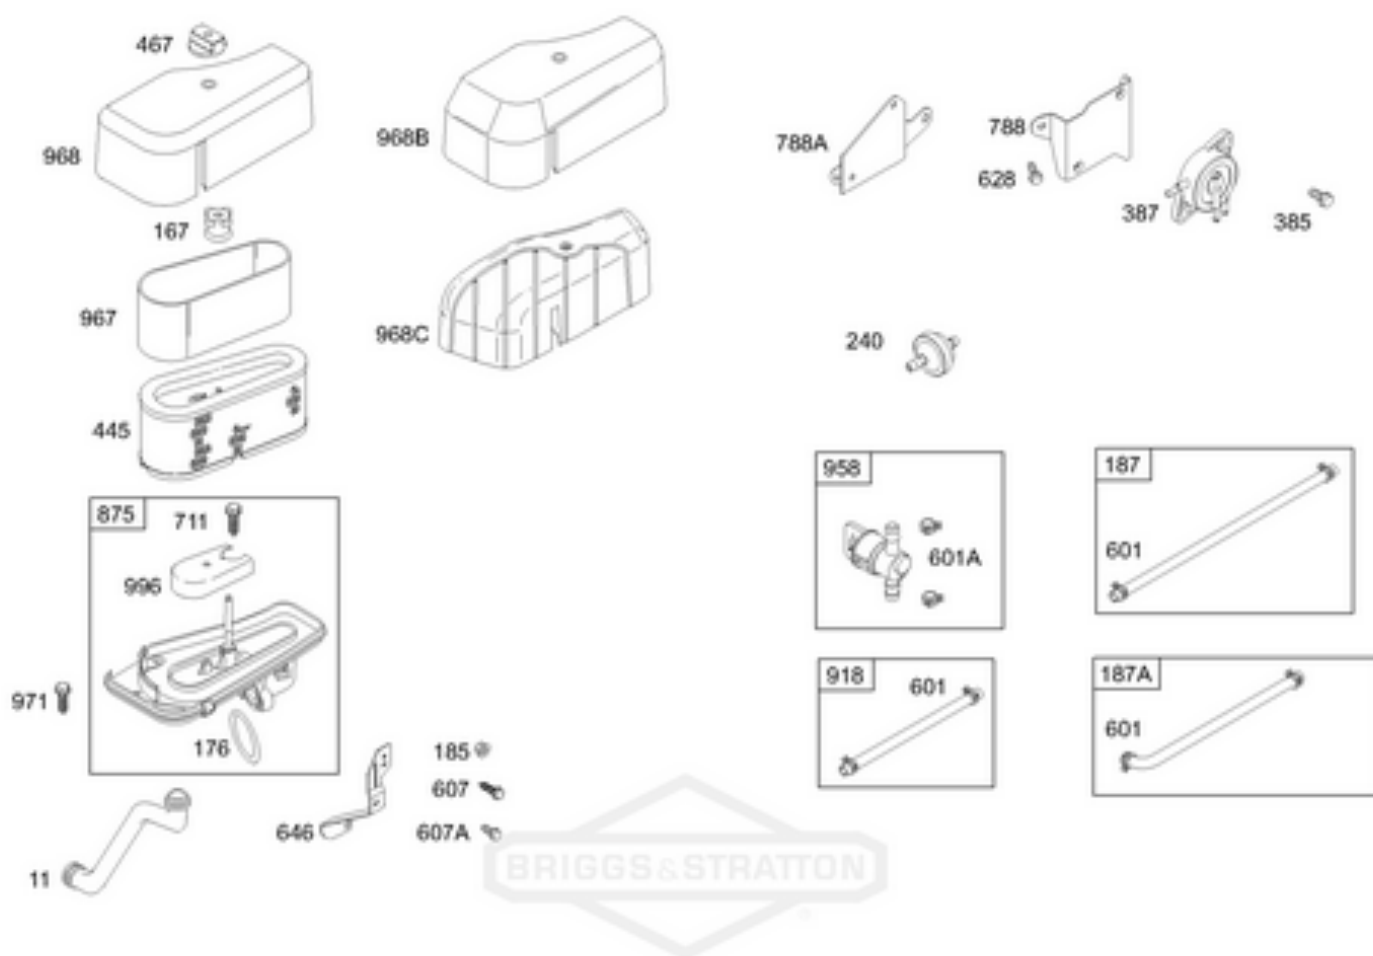  

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	691328	TUBE, Breather			
167	692297	SEAL-A/C NUT			
176	691917	SEAL, O-Ring		(Air Cleaner Base)	
185	690958	NUT		(Air Cleaner Base)	
187	691050	LINE, Fuel		(Cut To Required Length)	
240	298090S	FILTER, Fuel		(Red)	
240	394358S	FILTER-FUEL		(White)	
300	690850	MUFFLER			
300A	496022S	MUFFLER			
385	691108	SCREW		(Fuel Pump)	
387	808656	PUMP, Fuel			
445	496894S	FILTER-A/C CARTRIDGE			
467	691668	KNOB, Air Cleaner Cover			
601	95162S	CLAMP, Hose			
601A	691038	CLAMP, Hose			
607	690703	SCREW		(Air Cleaner Brace)	
607A	691693	SCREW		(Air Cleaner Brace)	
613	691416	SCREW		(Muffler)	
613A	691678	SCREW		(Muffler)	
628	690661	SCREW		(Fuel Pump Bracket)	
646	690460	BRACE, Air Cleanr			
676	393761	DEFLECTOR, Muffler		(Side Outlet)	
676A	396903	DEFLECTOR, Muffler		(Direct Out)	
676B	397630	DEFLECTOR, Muffler		(Louvered Outlet) (Louvered)	
677	690661	SCREW		(Muffler Deflector)	
711	690703	SCREW		(Carburetor Shield)	
788	692133	BRACKET, Fuel Pump			
819	690297	SCREW		(Muffler Bracket)	
819A	691678	SCREW		(Muffler Bracket)	
819B	691676	SCREW		(Muffler Bracket)	
823	698941	SCREW		(Muffler Adapter)	
863	691204	BRACKET, Muffler			
863A	691205	BRACKET, Muffler			
864	697346	ADAPTER, Muffler			
864A	496750	ADAPTER, Muffler			
875	696129	BASE, Air Cleaner		(Plastic)	
883	692236	GASKET, Exhaust			
884	690853	CLAMP, Muffler			
967	272403S	FILTER-PRE CLEANER			
968B	691332	COVER, Air Cleaner			
968C	692502	COVER, Air Cleaner			

Ref #	Part #	Description	Qty	Context Note	Foot Note
971	692129	SCREW		(Air Cleaner Base to Carburetor)	
996	690678	SHIELD, Carburetor			