



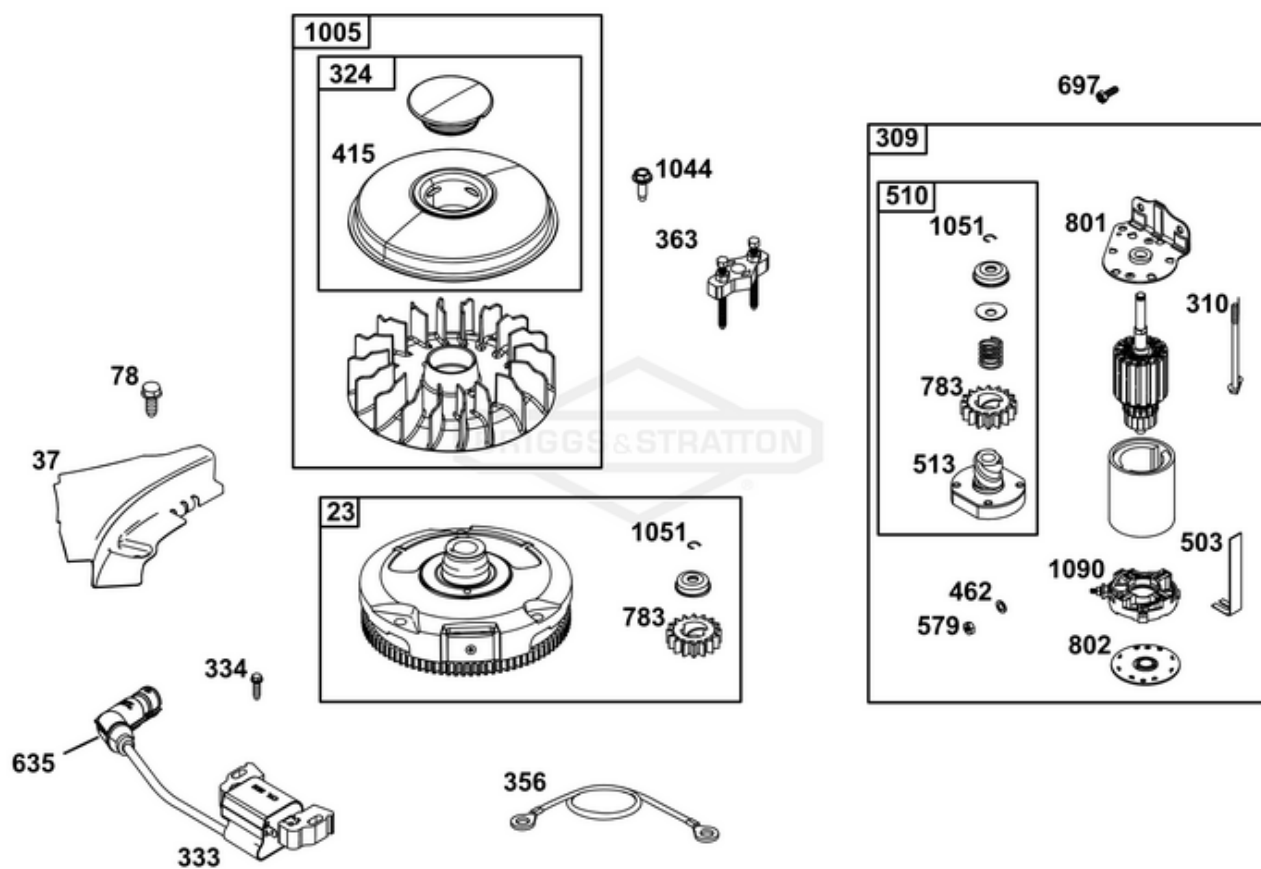

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
23	591758	FLYWHEEL	1		
37	697352	GUARD, Flywheel	1		
78	691693	SCREW	6	(Flywheel Guard)	
309	593934	MOTOR, Starter	1		
310	690323	SCREW	2		
324	593933	SCREEN/CUP ASSEMBLY	1		
333	595304	ARMATURE, Magneto	1		
334	691061	SCREW	2	(Magneto Armature)	
356	697089	WIRE, Stop	1		
363	19203	PULLER, Flywheel	1		
415	794129	COVER, Flywheel	1		
462	691261	WASHER	1		
503	691532	STRAP, Starter	2		
510	693699	DRIVE, Starter	1		
513	692024	CLUTCH, Drive	1		
579	691029	NUT	1		
635		BOOT, Spark Plug	1	(Part information located in Cylinder Head Group.)	
697	791680	SCREW	2	(Starter Motor) (Drive Cap)	
783	593935	GEAR, Pinion	1		
801	691283	CAP, Drive	1		
802	691286	CAP, End	1		
1005	796083	FAN, Flywheel	1		
1044	698139	SCREW	1	(Flywheel)	
1051	691265	RING, Retaining	1		
1090	691293	RETAINER, Brush	1		

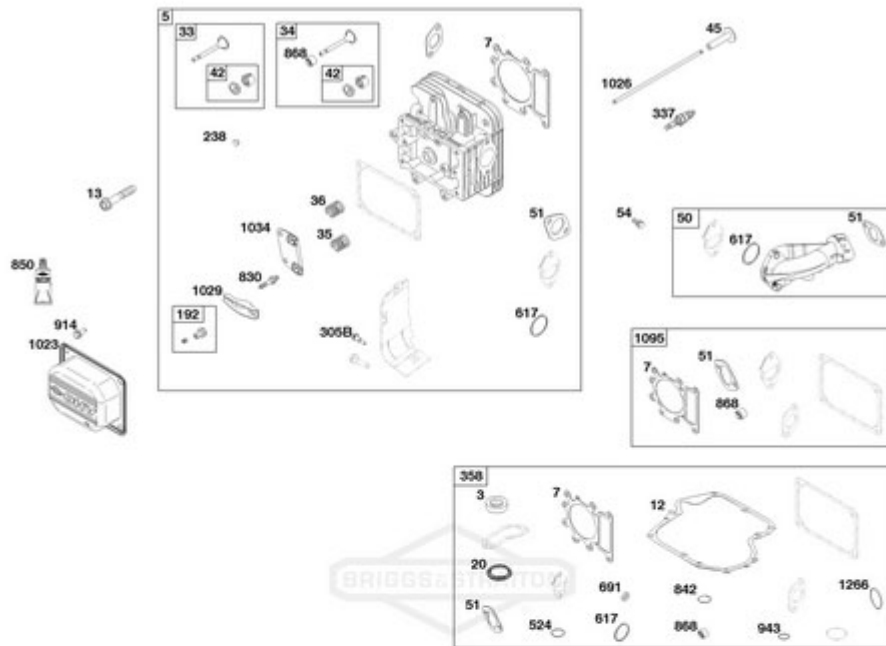

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
3		SEAL, Oil	1	(Part information located in Cylinder Group.)	
5	796026	HEAD-CYLINDER	1		
7	796584	GASKET, Cylinder Head	1		
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
13	592244	SCREW	8	(Cylinder Head)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
33	792868	VALVE, Exhaust	1		
34	791935	VALVE, Intake	1		
35	691279	SPRING, Valve	1	(Intake)	
36	691279	SPRING, Valve	1	(Exhaust)	
42	499586	KEEPER, Valve	2		
45	690564	TAPPET, Valve	2		
50	592842	MANIFOLD-INTAKE	1		
51	692137	GASKET-INTAKE	1		
54	691148	SCREW	2	(Intake Manifold)	
192	691986	ADJUSTER, Rocker Arm	2		
238	691843	CAP, Valve	2		
305B		SCREW	2	(Part information located in Blower Housing and Air Cleaner Group.)	
337	491055S	PLUG, Spark	1		
337	84007216	PLUG, SPARK	1	(China Only)	
358	796181	GASKET SET, Engine	1	(Part information located in Cylinder Group.)	
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
617	692138	SEAL, O-Ring	1	(Intake Manifold)	
691		SEAL, Governor Shaft	1	(Part information located in Cylinder Group.)	
830	691095	STUD, Rocker Arm	2		
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850		SEALANT, Liquid	5	(Part information located in Cylinder Group.)	
868	690968	SEAL, Valve	1		
914	691108	SCREW	4	(Rocker Cover)	
943		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
1023	797421	COVER-ROCKER	1		
1026	692003	ROD, Push	1		
1029	691751	ARM, Rocker	2		
1034	690822	GUIDE, Push Rod	1		
1095	796189	GASKET SET, Valve		(Service Kits may include extra parts not specific to this engine.)	
1266		SEAL, O-Ring	1	(Part information located in Blower Housing and Air Cleaner Group.)	

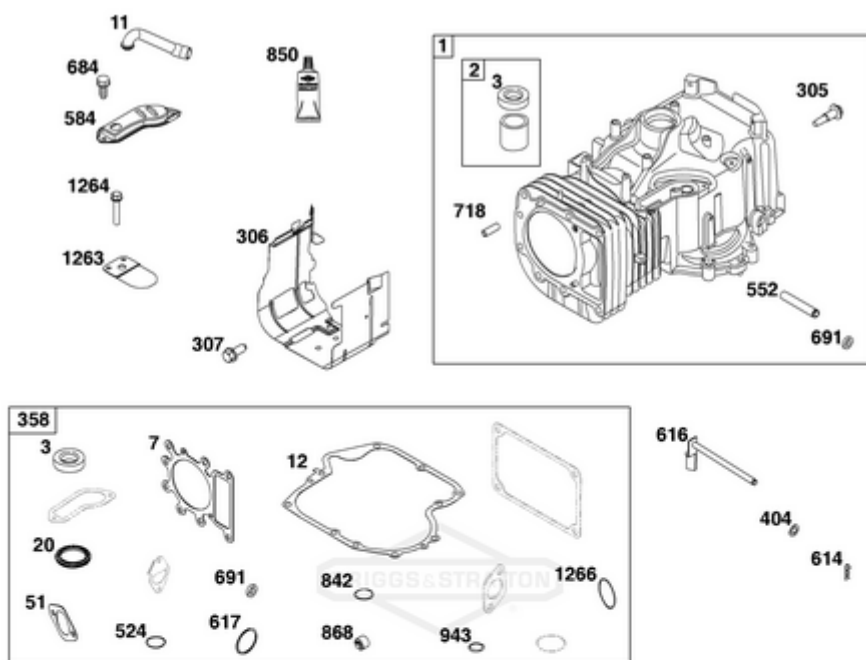


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	796010	CYLINDER ASSEMBLY	1		
2	797673	KIT, Bushing/Seal	1	(Magneto Side)	
3	391086S	SEAL, Oil	1	(Magneto Side)	
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
11	794683	TUBE, Breather	1		
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
51		GASKET, Intake	1	(Part information located in Cylinder Head Group.)	
305		SCREW	2	(Part information located in Blower Housing and Air Cleaner Group.)	
306	592777	SHIELD, Cylinder	1		
307	691693	SCREW	6	(Cylinder Shield)	
358	796181	GASKET SET, Engine		(Service Kits may include extra parts not specific to this engine.)	
404	691691	WASHER	2	(Governor Crank)	
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
552	697144	BUSHING, Governor Crank	1		
584	794682	COVER, Breather Passage	1		
614	691620	PIN, Cotter	1		
616	692012	CRANK, Governor	1		
617		SEAL, O-Ring	1	(Part information located in Cylinder Head Group.)	
684	697157	SCREW	2	(Breather Passage Cover)	
691	692407	SEAL, Governor Shaft	1		
718	690959	PIN, Locating	2		
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850	100106	SEALANT, Liquid	5		
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
943		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
1263	697124	REED, Breather	1		
1264	697104	SCREW	1	(Breather Reed)	
1266		SEAL, O-Ring	1	(Part information located in Blower Housing and Air Cleaner Group.)	

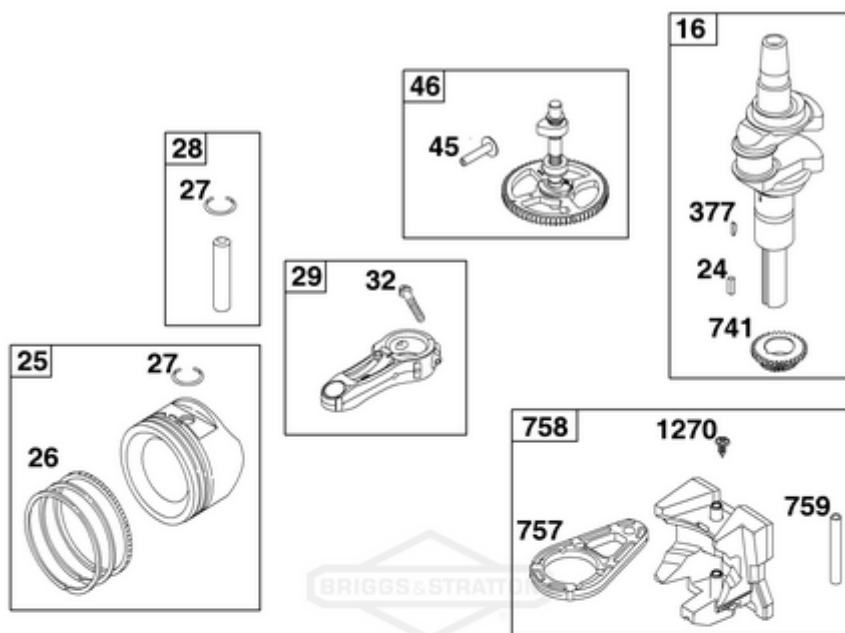


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
16	596006	CRANKSHAFT	1		
24	591757	KEY, Flywheel	1		
25	594435	PISTON ASSEMBLY	1	(Standard)	
25	594436	PISTON ASSEMBLY	1	(.020 Oversize)	
26	594437	RING SET	1	(Standard)	
26	594438	SET, Ring	1	(.020 Oversize)	
27	698469	LOCK, Piston Pin	10		
28	594439	PIN, Piston	1		
29	794122	ROD, Connecting	1		
32	791118	SCREW	2	(Connecting Rod)	
45	690564	TAPPET, Valve	2	(Part information located in Cylinder Head Group.)	
46	793880	CAMSHAFT	1		
377	691639	KEY, Woodruff	1		
741	697128	GEAR, Timing	1		
757	793242	LINK, Counterweight	2		
758	594443	COUNTERWEIGHT	1		
759	697392	PIN, Counterweight	2		
1270	793243	PLUG, AVS Counterweight	1		

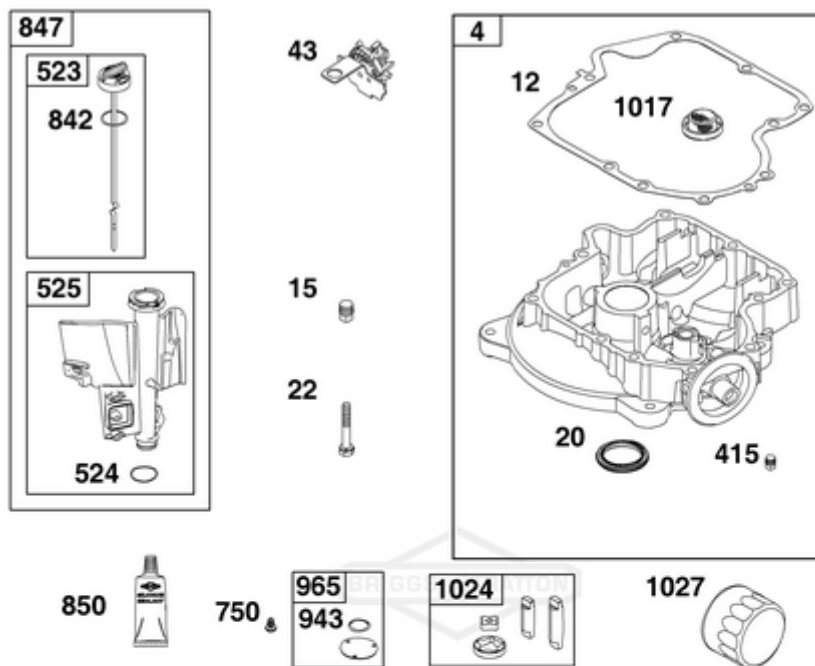


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
4	592849	SUMP, Engine	1		
12	697110	GASKET, Crankcase	1		
15	690946	PLUG, Oil Drain	1		
20	795387	SEAL, Oil	1	(PTO Side)	
22	692125	SCREW	1	(Crankcase Cover/Sump)	
43	691968	SLINGER, Governor/Oil	1		
415	794903	PLUG	1		
523	699908	DIPSTICK	1		
524	691032	SEAL, O-Ring	1	(Dipstick Tube)	
525	697085	TUBE, Dipstick	1		
750	790832	SCREW	3	(Oil Pump Cover)	
842	691031	SEAL, O-Ring	1	(Dipstick Cap)	
847	790443	DIPSTICK/TUBE ASSEMBLY	1		
850	100106	SEALANT, Liquid	1		
943	690589	SEAL, O-Ring	1	(Oil Pump Cover)	
965	499613	COVER, Oil Pump	1		
1017	796981	SCREEN, Oil Pump	1		
1024	794644	PUMP-OIL	1		
1027	492932S	FILTER, Oil	1		

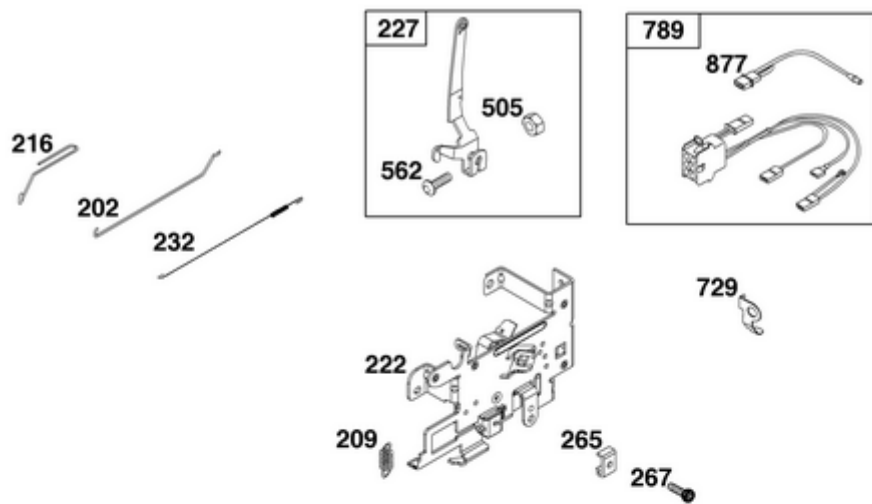


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
202	691841	LINK, Mechanical Governor	1		
209	792602	SPRING, Governor	1		
216	691840	LINK, Choke	1		
222	597325	BRACKET, Control	1		
227	691374	LEVER, Governor Control	1		
232	691842	SPRING, Governor Link	1		
265	691024	CLAMP, Casing	1		
267	794904	SCREW	1	(Casing Clamp)	
505	691251	NUT	1	(Governor Control Lever)	
562	691119	BOLT	1	(Governor Control Lever)	
729	691224	CLIP, Wire	1		
789	698329	HARNESS, Wiring	1		
877	790544	WIRE/CONNECTOR, Alternator	1		

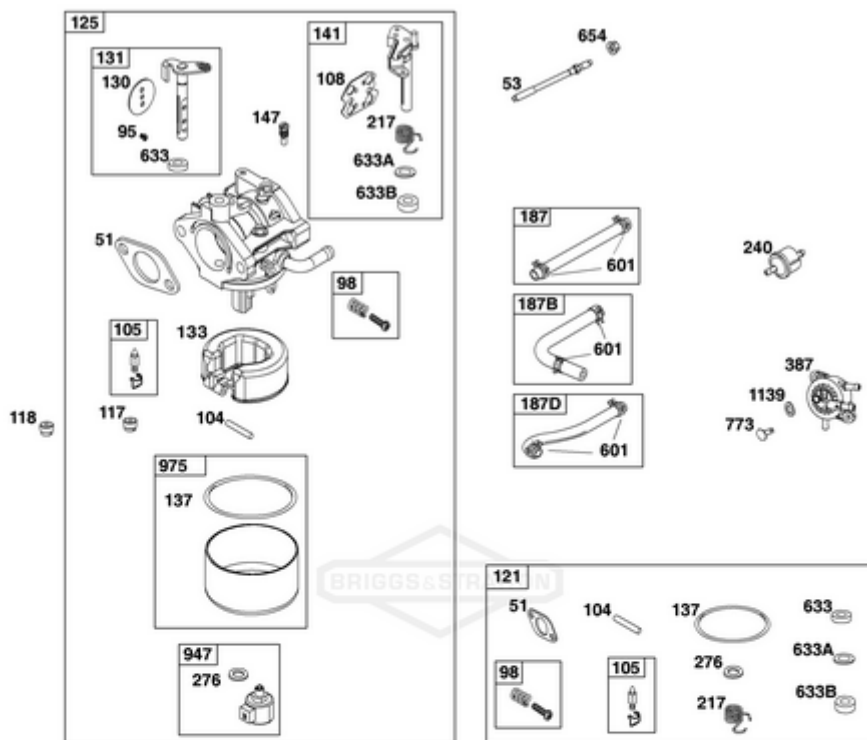


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
51		GASKET, Intake	1	(Part information located in Cylinder Head Group.)	
53	591260	STUD	2	(Carburetor)	
95	593897	SCREW	2	(Throttle Valve)	
98	847139	KIT, Idle Speed	1		
104	594860	PIN, Float Hinge	1		
105	594868	VALVE, Float Needle	1		
108	594863	VALVE, Choke	1		
117	594869	JET, Main	1	(Standard)	
118	595070	JET, Main	1	(High Altitude)	
121	594886	KIT, Carburetor Overhaul	1	(Service Kits may include extra parts not specific to this engine.)	
125	594593	CARBURETOR	1		
130	594857	VALVE, Throttle	1		
131	594855	KIT, Throttle Shaft	1		
133	594859	FLOAT, Carburetor	1		
137	594861	GASKET, Float Bowl	1		
141	594862	KIT, Choke Shaft	1		
147	594870	JET, Pilot	1		
187	791766	LINE, Fuel	1		
187B	791805	LINE, Fuel	1		
187D	791744	LINE, Fuel	1		
217	594864	SPRING, Choke Return	1		
240	84001895	FILTER, Fuel	1		
276	846640	WASHER, Sealing	1		
387	597338	PUMP, Fuel	1		
601	791850	CLAMP, Hose	6		
633	797629	SEAL, Choke/Throttle Shaft	1		
633A	594865	SEAL, Choke/Throttle Shaft	1		
633B	594866	SEAL, Choke/Throttle Shaft	1		
654	690958	NUT	2	(Carburetor)	
773	796448	RETAINER	2		
947	846639	SOLENOID, Fuel	1		
975	594867	BOWL, Float	1		
1139	796449	WASHER	2	(Fuel Pump Bracket)	

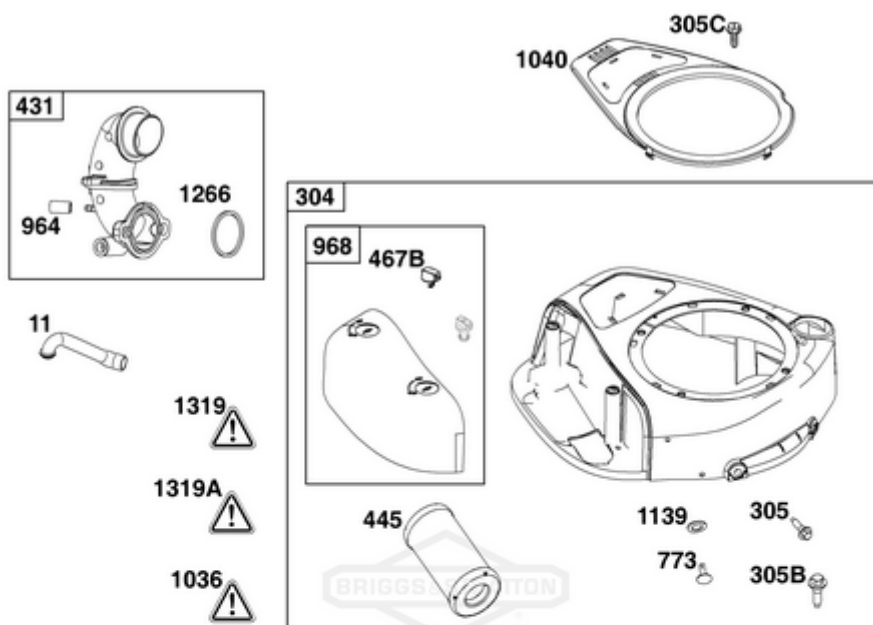

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	794683	TUBE, Breather	1		
304	591642	HOUSING, Blower	1		
305	596718	SCREW	2	(Blower Housing)	
305B	799370	SCREW	2	(Blower Housing)	
305C	795891	SCREW	1	(Blower Housing)	
431	797901	ELBOW, Intake	1		
445	796031	FILTER, A/C Cartridge	1		
467B	597244	KNOB, Air Cleaner Cover	2		
773	796448	RETAINER	2	(Part information located in Fuel Supply Group.)	
964	799159	CAP, Connector	1		
968	591647	COVER, Air Cleaner	1		
1036		LABEL, Emissions	1	(Available from a Briggs & Stratton Authorized Dealer)	
1040	699852	PLATE, Trim	1		
1139	796449	WASHER	2	(Part information located in Fuel Supply Group.)	
1266	691917	SEAL, O-Ring	1	(Intake Elbow)	
1319	794467	LABEL, Warning	1	(REQUIRED When Replacing Parts With Warning Labels Affixed)	
1319A	797669	LABEL, Warning	1	(REQUIRED When Replacing Parts With Warning Labels Affixed)	

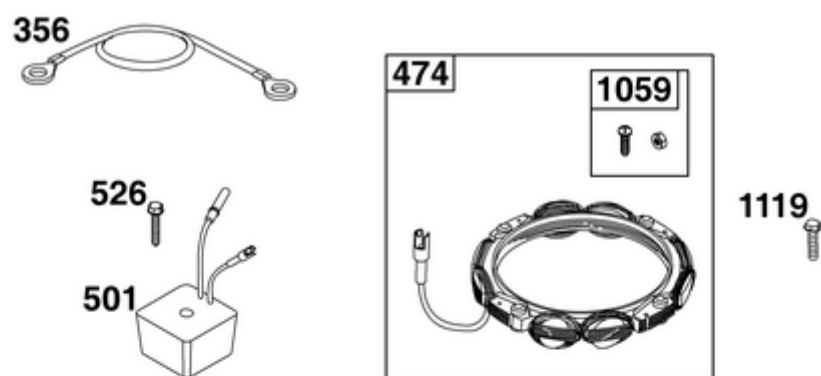

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
356		WIRE, Stop	1	(Part information located in Flywheel/ Ignition/Starter Group.)	
474	592829	ALTERNATOR	1		
501	794360	REGULATOR	1		
526	697088	SCREW	1		
1059	698516	KIT, Screw/ Washer	1		
1119	691183	SCREW	4	(Alternator)	