

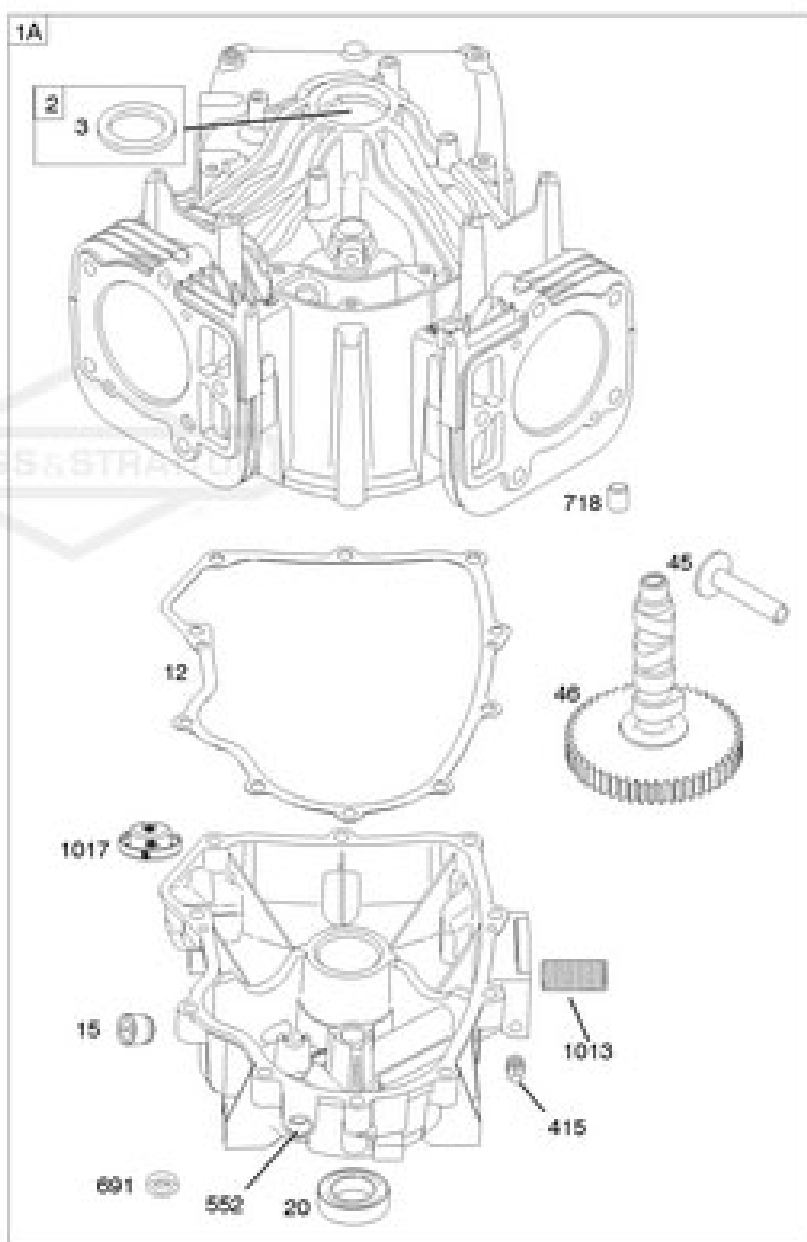
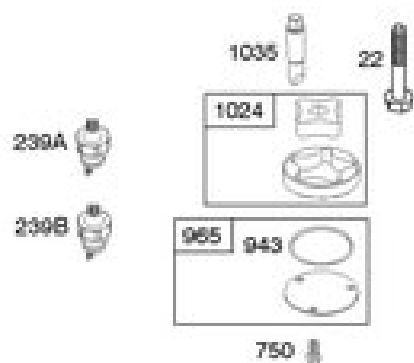
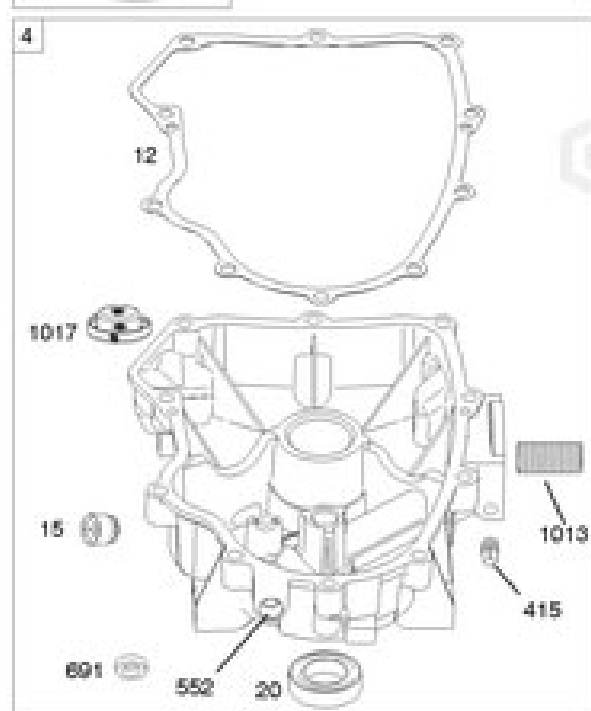


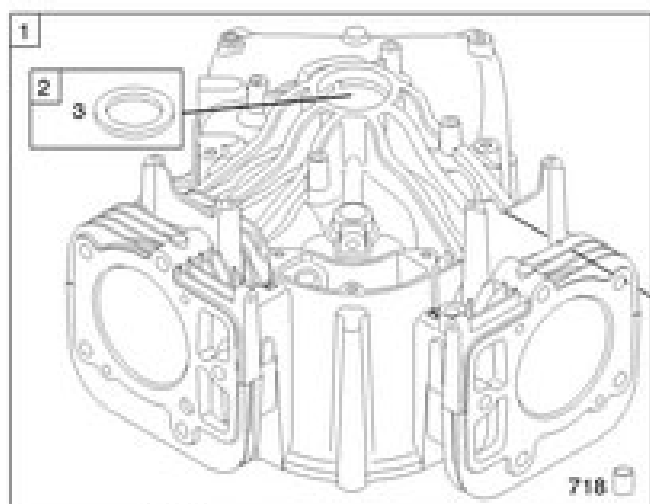


Ref #	Part #	Description	Qty	Context Note	Foot Note
1	699753	CYLINDER ASSEMBLY		Used After Code Date 03082800	
1A		Cylinder Assembly		(No Longer Available-Contact A Briggs & Stratton Authorized Dealer for Replacement Short Block) Used Before Code Date 03082900	
2	499585	KIT, Bushing/Seal		(Magneto Side)	
3	391086S	SEAL, Oil		(Magneto Side)	
4	699747	SUMP, Engine		Used After Code Date 03082800	
4	690069	SUMP, Engine		Used Before Code Date 03082900	
8	792185	BREATHER ASSEMBLY			
9	690937	GASKET, Breather			
10	691108	SCREW		(Breather Assembly)	
11	792184	TUBE- BREATHER			
12	697227	GASKET, Crankcase			
15	691680	PLUG-OIL DRAIN			
20	690947	SEAL, Oil		(PTO Side)	
22	694966	SCREW		(Crankcase Cover/Sump)	
45	690977	TAPPET, Valve			
46		Camshaft		(No Longer Available-Contact A Briggs & Stratton Authorized Dealer for Replacement Short Block) Used Before Code Date 03082900	
46	790562	CAMSHAFT		Used After Code Date 03082800	
239A	792028	SWITCH, Oil Pressure		(Normally Closed)	
250	690957	RETAINER, Breather			
252	690956	COLLECTOR, Oil			
318	807130	SCREW		(Mounting Bracket)	
415	690283	PLUG, Oil		(1/8 Standard)	
552	690552	BUSHING-GOV CRANK			
691	790574	SEAL- GOVERNOR SHAFT			
718	690959	PIN, Locating			
750	696999	SCREW		(Oil Pump Cover)	
943	690589	SEAL, O-Ring		(Oil Pump Cover)	
965	499613	COVER, Oil Pump			

Ref #	Part #	Description	Qty	Context Note	Foot Note
1013	690954	NIPPLE, Oil Filter			
1017	690770	SCREEN, Oil Pump			
1024	499054	PUMP, Oil			
1027A	696854	FILTER-OIL			
1035	691042	SHAFT, Pump			

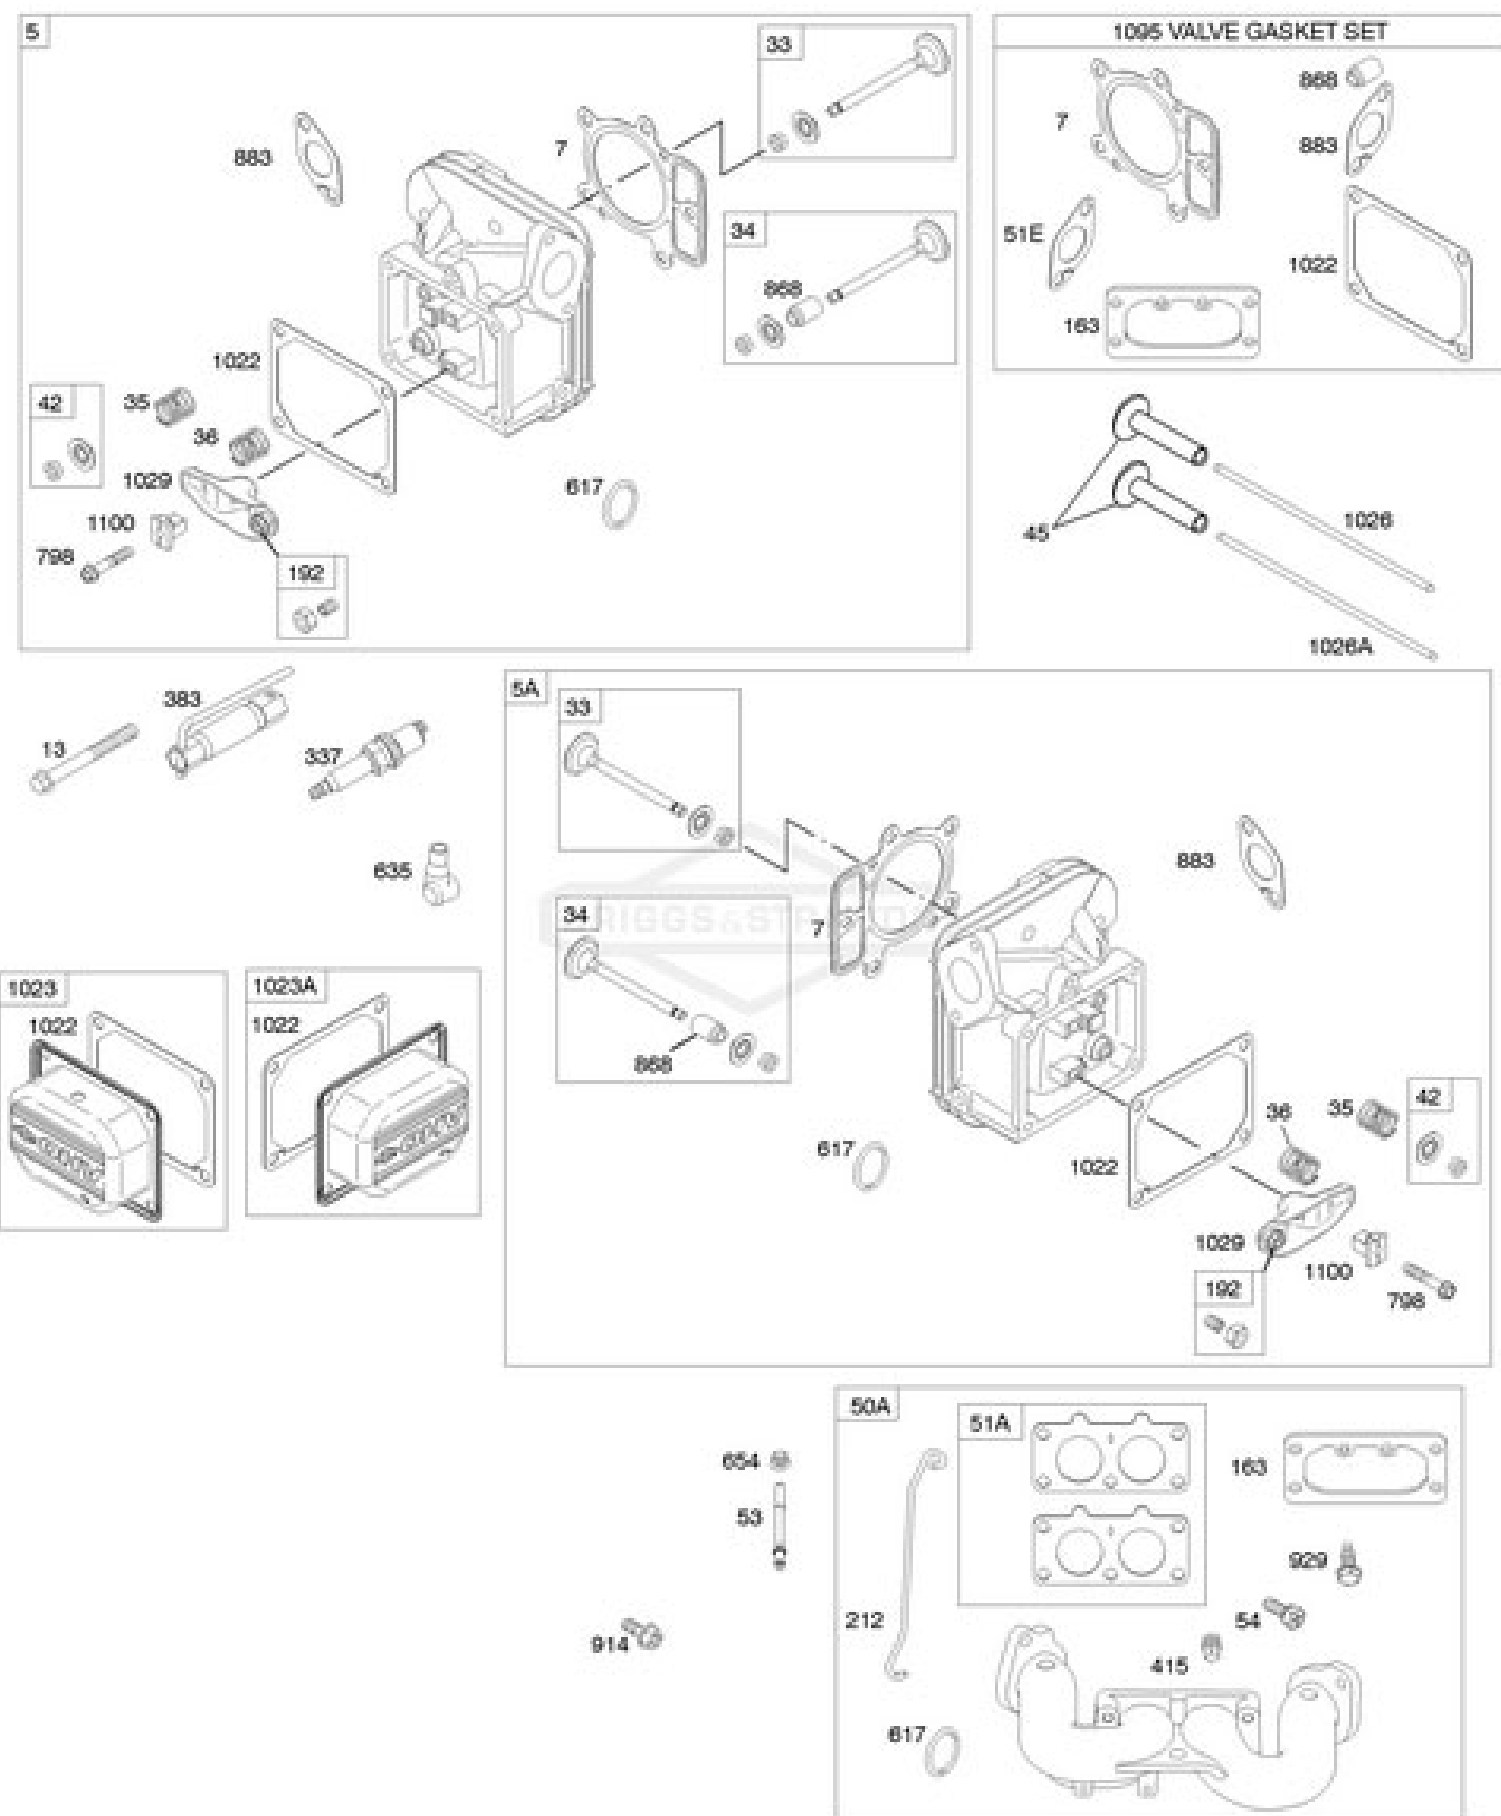

Copyright © Briggs & Stratton, LLC. All rights reserved.





Ref #	Part #	Description	Qty	Context Note	Foot Note
5	697580	HEAD, Cylinder		(Cylinder 1)	
5A	792300	HEAD, Cylinder		(Cylinder 2)	
7	693997	GASKET, Cylinder Head			
13	791130	SCREW		(Cylinder Head)	
33	697576	VALVE, Exhaust			
34	697464	VALVE, Intake			
35	694865	SPRING, Valve		(Intake)	
36	694865	SPRING, Valve		(Exhaust)	
42	499586	KEEPER, Valve			
45	690977	TAPPET, Valve			
50A	695241	MANIFOLD, Intake		(Plastic)	
51A	791677	GASKET, Intake			
51E	690949	GASKET, Intake			
53	690951	STUD		(Carburetor)	
54	699816	SCREW		(Intake Manifold)	
163	691001	GASKET, Air Cleaner			
192	690083	ADJUSTER, Rocker Arm			
212	695238	LINK, Throttle		(Used With Plastic Intake Manifold)	
337	491055S	PLUG-SPARK			
383	19374S	WRENCH, Spark Plug			
415	690283	PLUG, Oil		(1/8 Standard)	
617	697891	SEAL, O-Ring		(Intake Manifold)	
635	66538S	BOOT, Spark PLug			
654	690958	NUT		(Carburetor)	
798	697890	SCREW		(Rocker Arm)	
868	690968	SEAL, Valve			
883	690970	GASKET, Exhaust			
914	691127	SCREW		(Rocker Cover)	
929	695239	SCREW		(Choke Control Bracket) (Used With Plastic Intake Manifold)	
1022	690971	GASKET, Rocker Cover			
1023	499599	COVER, Rocker		(Cylinder 1)	
1023A	499600	COVER, Rocker		(Cylinder 2)	
1026	690981	ROD, Push		(Steel)	
1026A	690982	ROD, Push		(Aluminum)	
1029	690972	ARM, Rocker			
1095	694013	GASKET SET, Valve			
1100	791959	PIVOT, Rocker Arm			

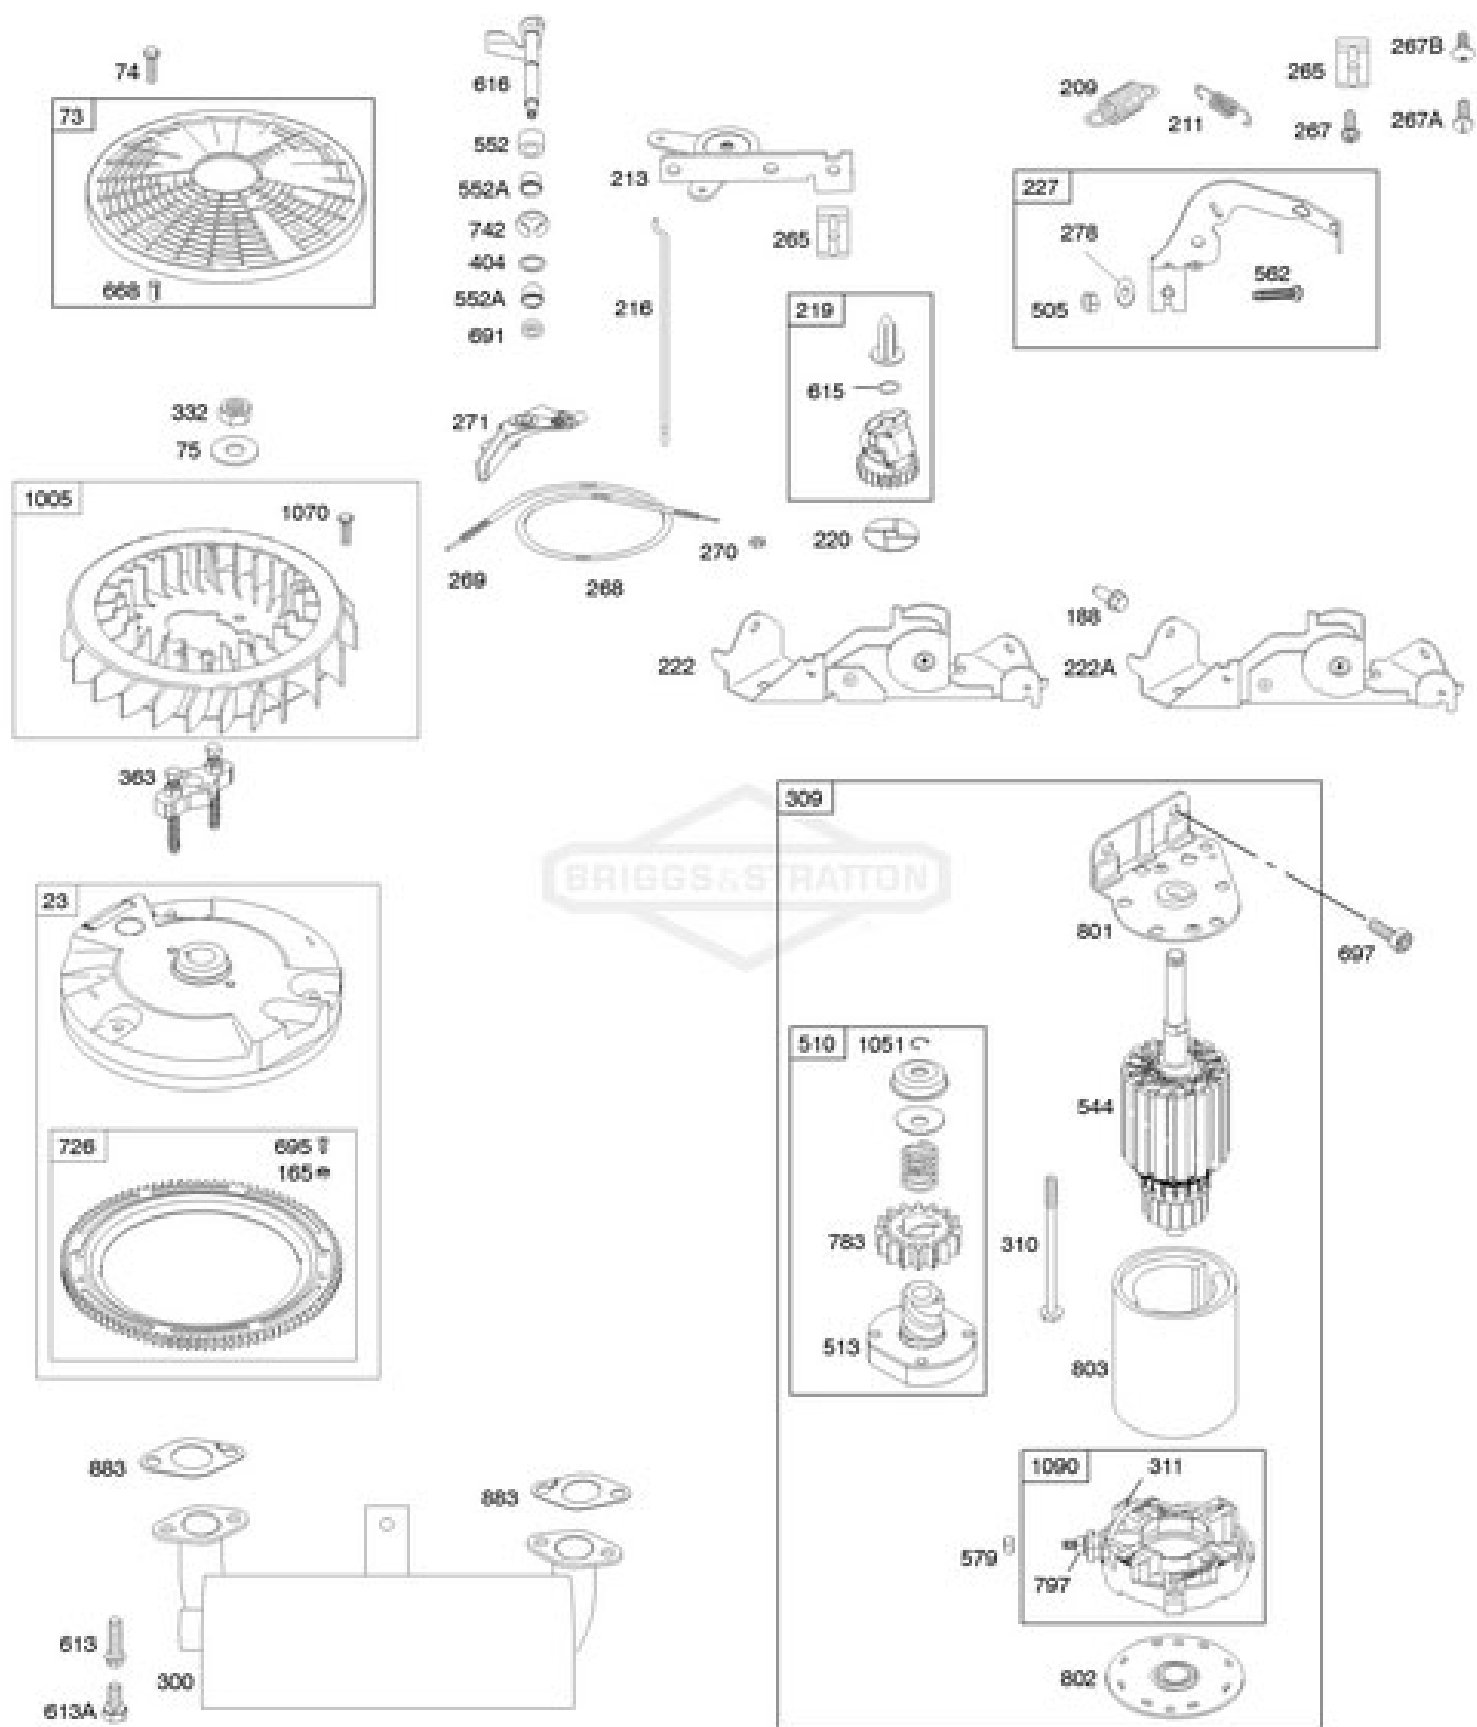

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	691053	FLYWHEEL			
73	494439	SCREEN, Rotating			
74	698425	SCREW		(Rotating Screen)	
75	691056	WASHER		(Flywheel)	
165	693148	NUT		(Ring Gear)	
188	691108	SCREW		(Control Bracket)	
209	697674	SPRING, Governor		(Brown)	
211	691019	SPRING, Governed Idle			
213	691021	BRACKET, Choke Control			
216	691022	LINK, Choke			
219	698231	GEAR, Governor			
220	690412	WASHER		(Governor Gear)	
222	698761	BRACKET, Control			
227	792492	LEVER, Governor Control			
265	691024	CLAMP, Casing			
267	691044	SCREW		(Casing Clamp)	
267A	695134	SCREW		(Casing Clamp) (Pan Head)	
267B	697820	SCREW		(Casing Clamp) (6-Lobe Truss Head)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
278	792651	WASHER		(Governor Lever)	
309	499521	MOTOR, Starter			
310	691263	BOLT		(Starter Motor) (4 3/8 Housing)	
311	497608	SET, Brush			
332	691059	NUT		(Flywheel)	
363	19203	PULLER, Flywheel			
404	690442	WASHER		(Governor Crank)	
505	691029	NUT		(Governor Control Lever)	
510	696541	DRIVE, Starter			
513	692024	CLUTCH-DRIVE			
544		Armature-Starter		(Serviced By 499521 Starter Motor Only)	
552	690552	BUSHING-GOV CRANK			
552A	690553	BUSHING, Governor Crank			
562	690311	BOLT		(Governor Control Lever)	
579	691029	NUT		(Starter Cable)	
615	698290	RETAINER, Governor Shaft			
616	691045	CRANK, Governor			
668	691215	SPACER			

Ref #	Part #	Description	Qty	Context Note	Foot Note
691	790574	SEAL-GOVERNOR SHAFT			
695	693149	SCREW		(Ring Gear)	
697	690372	SCREW		(Drive Cap)	
726	499612	GEAR, Ring			
742	690328	RETAINER, E Ring			
783	695708	GEAR-PINION			
797	693167	NUT		(Brush Retainer)	
801	691283	CAP-DRIVE			
802	691286	CAP-END			
803		Housing-Starter		(Serviced By 499521 Starter Motor Only)	
883	690970	GASKET, Exhaust			
1005	499603	FAN, Flywheel		Used Before Code Date 04080400	
1005	790698	FAN, Flywheel		Used After Code Date 04080300	
1051	691265	RING, Retaining			
1070	690372	SCREW		(Flywheel Fan)	
1090	691293	RETAINER-BRUSH			

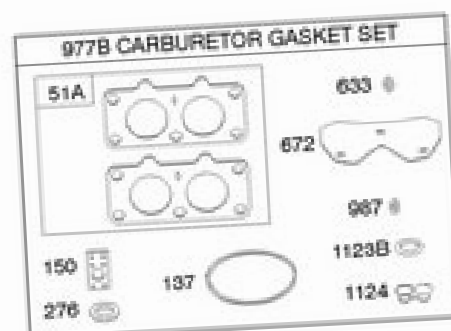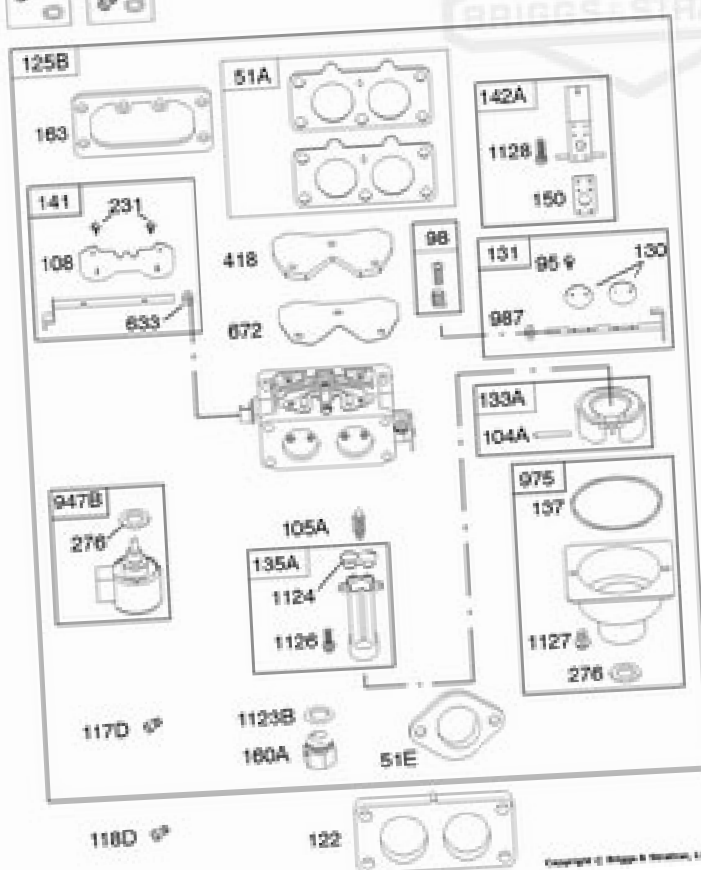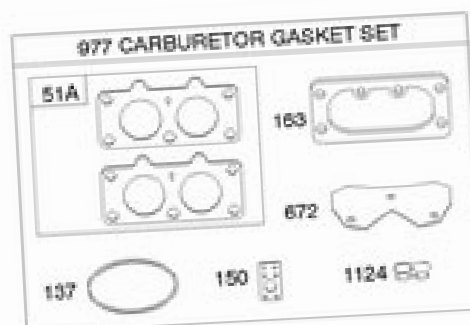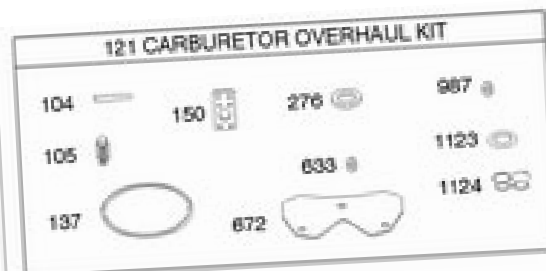






Ref #	Part #	Description	Qty	Context Note	Foot Note
51A	791677	GASKET, Intake			
51E	690949	GASKET, Intake			
95	690718	SCREW		(Throttle Valve)	
98	699721	KIT, Idle Speed			
104	694918	PIN-FLOAT HINGE		Used After Code Date 04080300	
104A	690984	PIN, Float Hinge		Used Before Code Date 04080400	
105	698537	VALVE, Float Needle		Used After Code Date 04080300	
105A	690985	VALVE, Float Needle		Used Before Code Date 04080400	
108	699723	VALVE, Choke			
117	699732	JET, Main		(Standard) (Left)(Nikki) Used After Code Date 04080300	
117A	699733	JET, Main		(Standard) (Right)(Nikki) Used After Code Date 04080300	
117D	690232	JET, Main		(Standard) Used Before Code Date 04080400	
118	790890	JET, Main		(High Altitude) (Left)(Nikki) Used After Code Date 04080300	
118A	699458	JET, Main		(High Altitude) (Right)(Nikki) Used After Code Date 04080300	
118D	690989	JET, Main		(High Altitude) Used Before Code Date 04080400	
121	792455	KIT, Carburetor Overhaul		Used After Code Date 04080300	
121B	499811	KIT, Carburetor Overhaul		Used Before Code Date 04080400	
122	690952	SPACER, Carburetor		Used Before Code Date 00102000	
125	699709	CARBURETOR		Used After Code Date 04080300	
125B		Carburetor		(Order Carburetor 791230) Used Before Code Date 04080400	
130	690993	VALVE, Throttle			
131	499805	KIT, Throttle Shaft			
133	699724	FLOAT, Carburetor		Used After Code Date 04080300	
133A	499806	FLOAT, Carburetor		Used Before Code Date 04080400	
135	699729	TUBE, Fuel Transfer		Used After Code Date 04080300	
135A	499803	TUBE, Fuel Transfer		Used Before Code Date 04080400	
137	690994	GASKET, Float Bowl			
141	699722	KIT, Choke Shaft			
142	699726	NOZZLE, Carburetor		(Standard) Used After Code Date 04080300	
142A	499808	NOZZLE, Carburetor		(Standard) Used Before Code Date 04080400	
150	690995	GASKET, Nozzle			
160	699727	RETAINER, Solenoid		Used After Code Date 04080300	
160A	690996	RETAINER, Solenoid		Used After Code Date 04080300	
163	691001	GASKET, Air Cleaner			
231	690718	SCREW		(Choke Valve)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
276	690997	WASHER, Sealing			
418	690999	PLATE, Carburetor Cover			
633	690998	SEAL, Choke/Throttle Shaft			
672	690234	GASKET, Carburetor Plate			
947	699728	SOLENOID, Fuel		Used After Code Date 04080300	
947B	499809	SOLENOID, Fuel		Used Before Code Date 04080400	
975	499810	BOWL, Float			
977	792456	SET, Carburetor Gasket		Used After Code Date 04080300	
977B	499812	SET, Carburetor Gasket		Used Before Code Date 04080400	
987	691000	SEAL-THROTTLE SHAFT			
1123	699725	SEAL, O-Ring		(Solenoid Retainer) Used After Code Date 04080300	
1123B	690987	SEAL, O-Ring		(Solenoid Retainer) Used Before Code Date 04080400	
1124	690988	SEAL, O-Ring		(Fuel Transfer Tube)	
1126	690991	SCREW		(Fuel Transfer Tube)	
1127	690992	SCREW		(Float Bowl to Carburetor Body)	
1128	690990	SCREW		(Carburetor Nozzle)	
1342A	699731	EXTENSION, Fuel Transfer Tube		Used After Code Date 04080300	

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

350A ENGINE GASKET SET

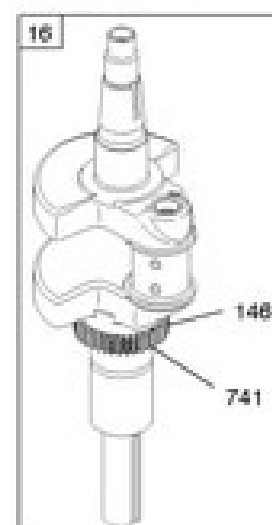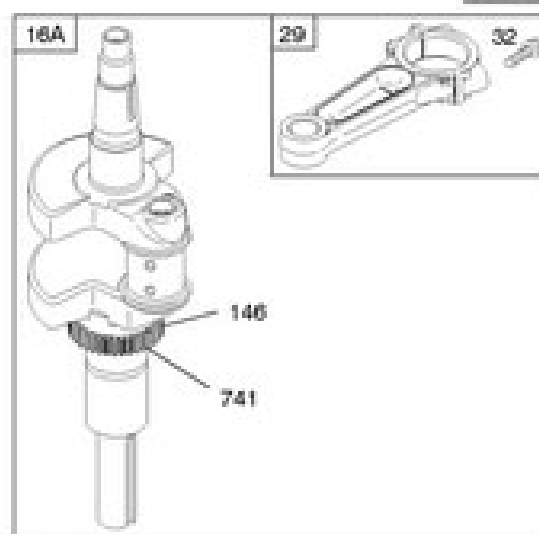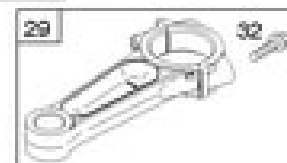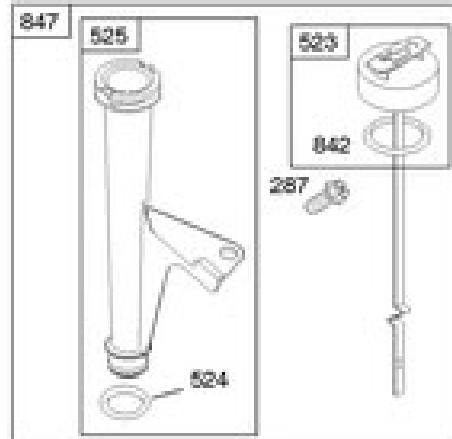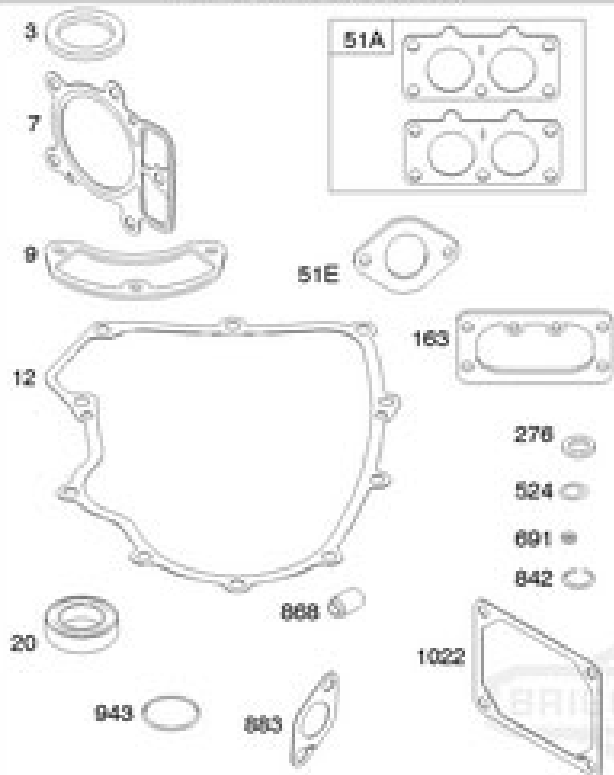


24

Ref #	Part #	Description	Qty	Context Note	Foot Note
3	391086S	SEAL, Oil		(Magneto Side)	
7	693997	GASKET, Cylinder Head			
9	690937	GASKET, Breather			
12	697227	GASKET, Crankcase			
16	699700	CRANKSHAFT		Used After Code Date 04010800	
16A	699701	CRANKSHAFT		(Includes Connecting Rod) Used Before Code Date 04010900	
20	690947	SEAL, Oil		(PTO Side)	
24	222698S	KEY, Flywheel			
25	792023	PISTON ASSEMBLY		(Standard)	
25	792072	PISTON ASSEMBLY		(.020 Oversize)	
26	697683	SET, Ring		(Standard) Used Before Code Date 05102500	
26	697685	SET, Ring		(.020 Oversize) Used Before Code Date 05102500	
26	792026	SET, Ring		(Standard) Used After Code Date 05102400	
26	792073	SET, Ring		(.020 Oversize) Used After Code Date 05102400	
27	690975	LOCK, Piston Pin			
28	690229	PIN-PISTON/STD		(Standard)	
29		Rod-Connecting		(For Replacement Connecting Rod, See Reference 16A) Used Before Code Date 04010900	
29	699699	ROD, Connecting		(Standard) Used After Code Date 04010800	
32	690976	SCREW		(Connecting Rod)	
45	690977	TAPPET, Valve			
46		Camshaft		(No Longer Available-Contact A Briggs & Stratton Authorized Dealer for Replacement Short Block) Used Before Code Date 03082900	
46	790562	CAMSHAFT		Used After Code Date 03082800	
51A	791677	GASKET, Intake			
51E	690949	GASKET, Intake			
146	690979	KEY, Woodruff			
163	691001	GASKET, Air Cleaner			
276	690997	WASHER, Sealing			
287	691108	SCREW		(Dipstick Tube)	
358A	694012	GASKET SET, Engine			
523	691036	DIPSTICK			
524	691032	SEAL, O-Ring			










Ref #	Part #	Description	Qty	Context Note	Foot Note
525	691037	TUBE, Dipstick			
691	790574	SEAL-GOVERNOR SHAFT			
741	690980	GEAR, Timing			
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	499602	DIPSTICK/TUBE ASSEMBLY			
868	690968	SEAL, Valve			
883	690970	GASKET, Exhaust			
943	690589	SEAL, O-Ring		(Oil Pump Cover)	
1022	690971	GASKET, Rocker Cover			
1058	276245	MANUAL, Operator's			
1330	273521	MANUAL, Repair			

DUAL CIRCUIT		TRI CIRCUIT		10 - 16 AMP		20 AMP
474C	1059	474A	1059	474B	1059	474E
877C		877A		877B		
878C				578A	578A	
NOTE: All Stators Use a No. 1119 Mounting Screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.		526A 501A		526B 501B	501C	

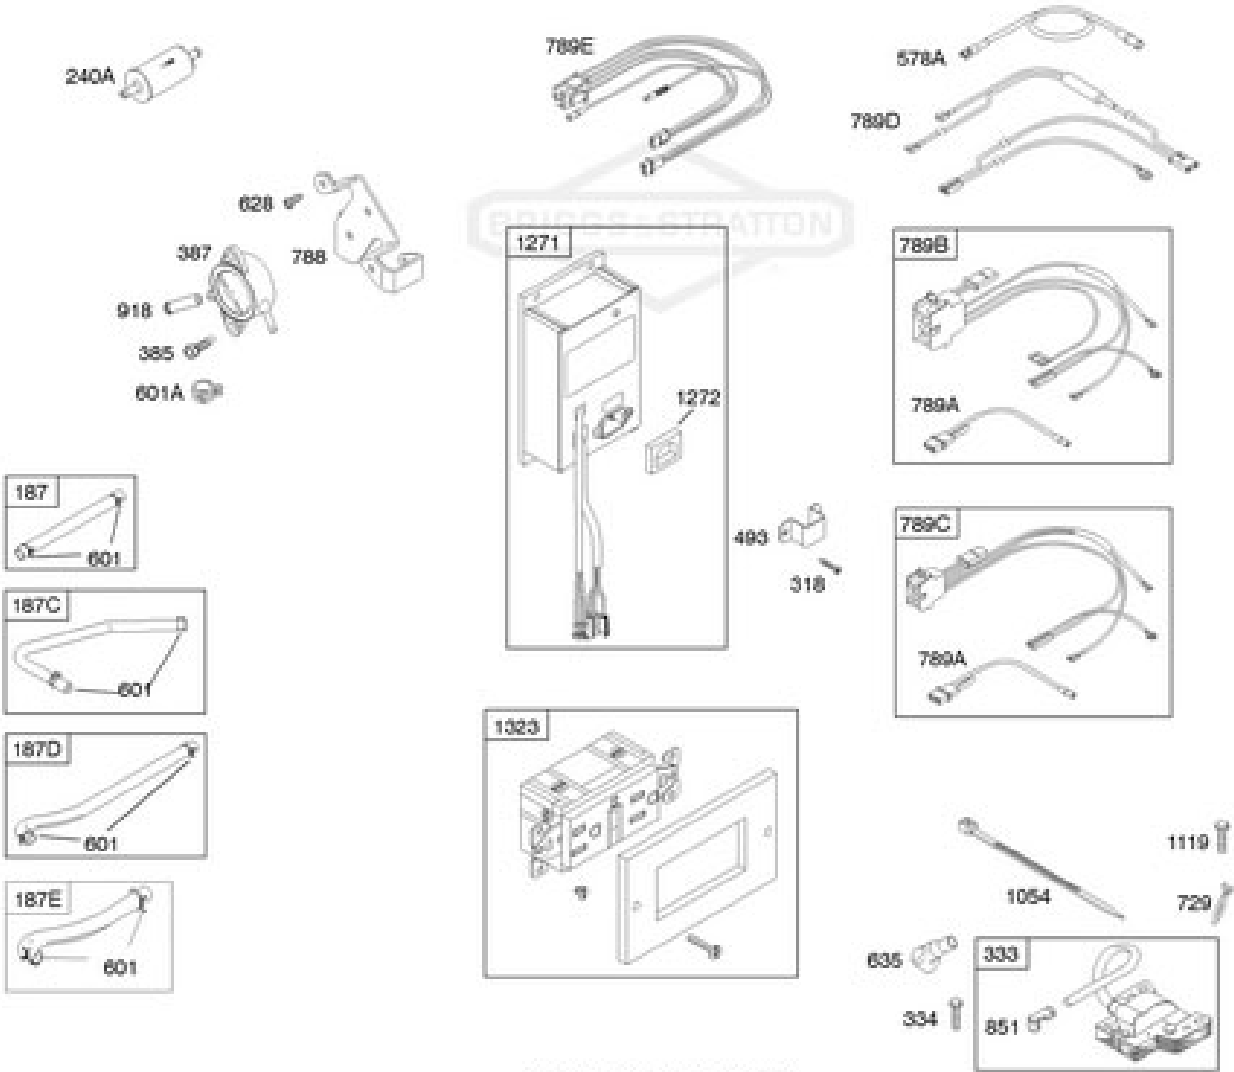

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
10	691108	SCREW		(Breather Assembly)	
20	690947	SEAL, Oil		(PTO Side)	
187	791766	LINE, Fuel		(Cut To Required Length)	
187C	791881	LINE, Fuel			
187D	791744	LINE-FUEL		(Formed)(Cut To Required Length)	
187E	791801	HOSE, Vacuum		(Formed)(Cut To Required Length)	
240A	695666	FILTER, Fuel			
318	807130	SCREW		(Mounting Bracket)	
333	691060	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
385	691108	SCREW		(Fuel Pump)	
387	808656	PUMP, Fuel			
474B	696458	ALTERNATOR		(10 Amp Regulated)	
493	698024	BRACKET, Mounting			
501B	691185	REGULATOR		(10 Amp Regulated)	
526B	691108	SCREW		(Regulator)	
578A	691208	WIRE ASSEMBLY			
601	791850	CLAMP-HOSE		(Green)	
601A	691038	CLAMP, Hose		(Black)	
628	691108	SCREW		(Fuel Pump Bracket)	
635	66538S	BOOT, Spark PLug			
729	694123	CLIP, Wire			
788	691039	BRACKET, Fuel Pump			
789B	698330	HARNESS, Wiring		(6 Pin Customer Conversion)	
851	493880S	TERMINAL-SPARK PLUG			
877B	399916	WIRE/CONN-ALTERNATOR		(10 Amp Regulated)	
878C	398661	HARNESS, Wiring		(Dual Circuit)	
918	694000	HOSE-VACUUM			
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer			
1119	691183	SCREW		(Alternator)	
1272	697260	GASKET, Inverter			
1323	790239	RECEPTACLE, Powerlink			

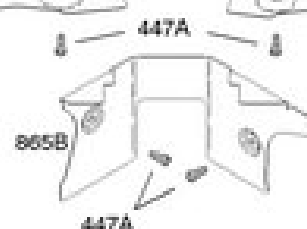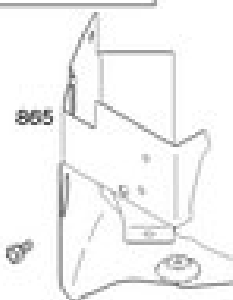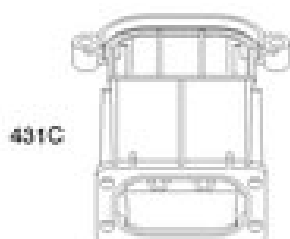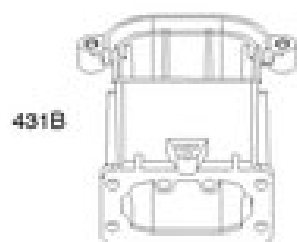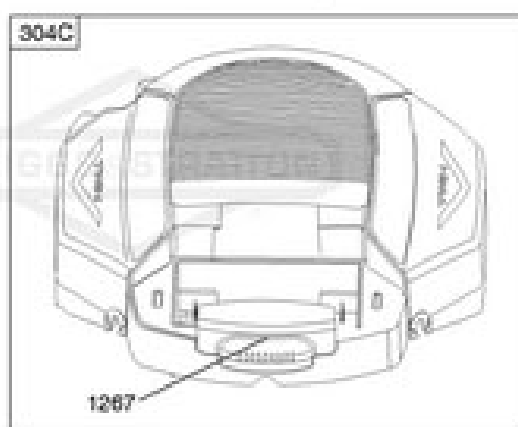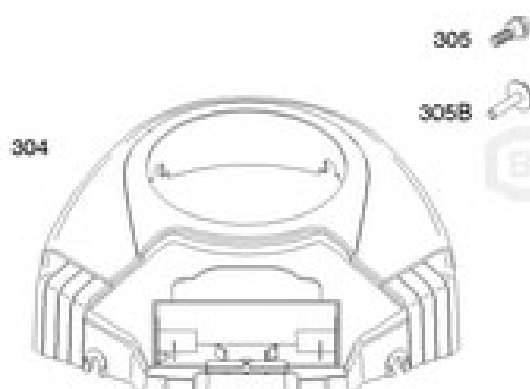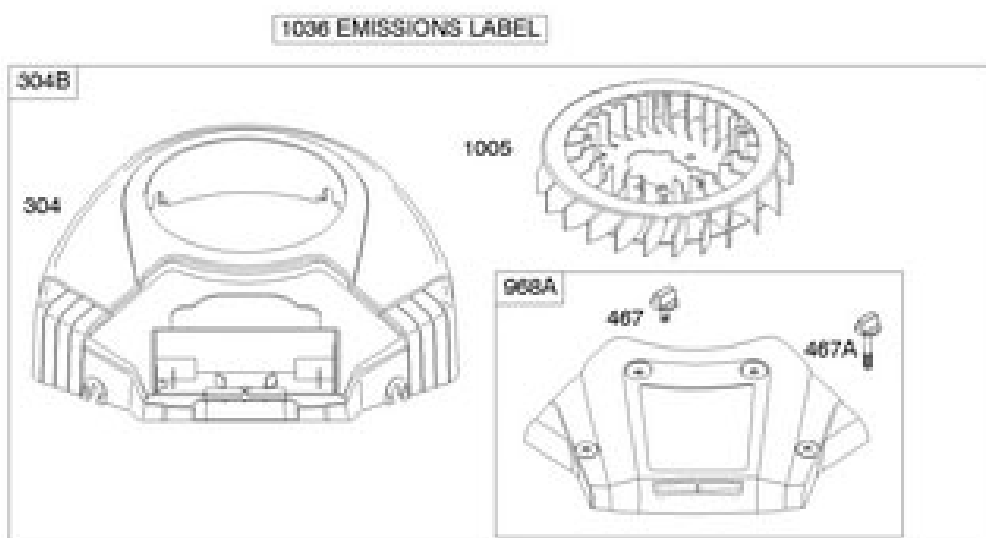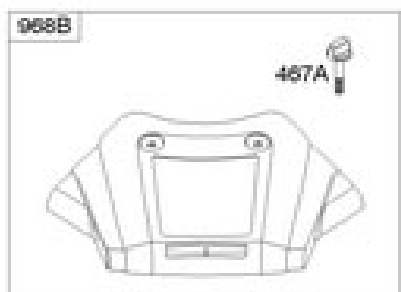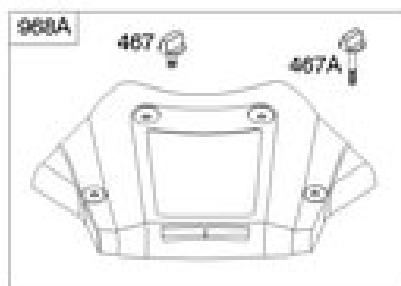

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
163	691001	GASKET, Air Cleaner			
304	790688	HOUSING, Blower		Used After Code Date 04080300	
304B	790692	HOUSING, Blower		Used Before Code Date 04080400	
305	691005	SCREW		(Blower Housing) (21/32)	
305B	790690	SCREW		(Blower Housing) (Blower Housing To Intake Elbow)	
405A	697820	SCREW		(Back Plate)	
431B	790816	MANIFOLD, Intake			
431C	691011	ADAPTER, Air Cleaner			
445	698754	FILTER, A/C Cartridge			
447	691003	SCREW		(Air Guide Cover)	
447A	691108	SCREW		(Air Guide Cover)	
467	790697	KNOB, Air Cleaner Cover			
467A	691008	KNOB, Air Cleaner Cover			
573	790444	PLATE, Back			
703	691010	CLIP			
729	694123	CLIP, Wire			
855A	698072	Adapter-Air Cleaner			
865	691012	COVER, Air Guide		(Cylinder 1)	
865A	691014	COVER, Air Guide		(Cylinder 2)	
865B	691015	COVER, Air Guide		(Valley)	
967	273638S	FILTER-PRE CLEANER			
968A	790689	COVER, Air Cleaner		Used After Code Date 04080300	
968B	790095	COVER, Air Cleaner		Used Before Code Date 04080400	
1005	499603	FAN, Flywheel		Used Before Code Date 04080400	
1005	790698	FAN, Flywheel		Used After Code Date 04080300	
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	