



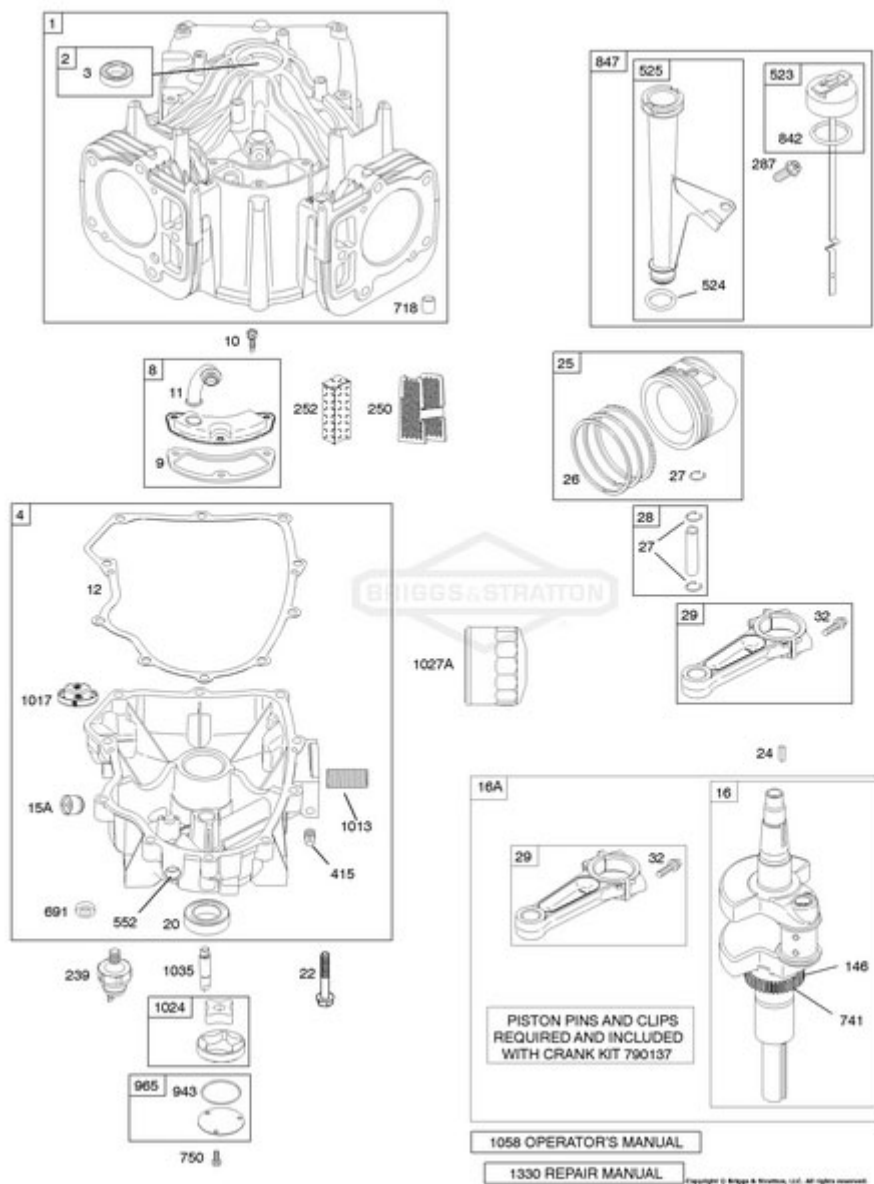

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	699753	CYLINDER ASSEMBLY			
2	499585	KIT, Bushing/Seal		(Magneto Side)	
3	391086S	SEAL, Oil		(Magneto Side)	
4	699747	SUMP, Engine			
8	792185	BREATHER ASSEMBLY			
9	690937	GASKET, Breather			
10	691108	SCREW		(Breather Assembly)	
11	792184	TUBE-BREATHER			
12	697227	GASKET, Crankcase			
15A	690946	PLUG-OIL DRAIN			
16	699700	CRANKSHAFT			
20	791892	SEAL, Oil		(PTO Side)	
22	694966	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	792023	PISTON ASSEMBLY		(Standard)	
25	792072	PISTON ASSEMBLY		(.020 Oversize)	
26	792026	SET, Ring		(Standard) Used After Code Date 05102400	
26	697683	SET, Ring		(Standard) Used Before Code Date 05102500	
26	792073	SET, Ring		(.020 Oversize)	
27	690975	LOCK, Piston Pin			
28	690229	PIN-PISTON/STD		(Standard)	
29	699699	ROD, Connecting		(Standard)	
32	690976	SCREW		(Connecting Rod)	
146	690979	KEY, Woodruff			
239	792028	SWITCH, Oil Pressure		(Normally Closed)	
250	690957	RETAINER, Breather			
252	690956	COLLECTOR, Oil			
287	691108	SCREW		(Dipstick Tube)	
415	690283	PLUG, Oil		(1/8 Standard)	
523	691036	DIPSTICK			
524	691032	SEAL, O-Ring			
525	691037	TUBE, Dipstick			
552	690552	BUSHING-GOV CRANK			
691	790574	SEAL-GOVERNOR SHAFT			
718	690959	PIN, Locating			
741	690980	GEAR, Timing			
750	696999	SCREW		(Oil Pump Cover)	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	499602	DIPSTICK/TUBE ASSEMBLY			
943	690589	SEAL, O-Ring		(Oil Pump Cover)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
965	499613	COVER, Oil Pump			
1013	690954	NIPPLE, Oil Filter			
1017	690770	SCREEN, Oil Pump			
1024	499054	PUMP, Oil			
1027A	696854	FILTER-OIL			
1035	691042	SHAFT, Pump			
1058	277103	MANUAL, Operator's			
1330	273521	MANUAL, Repair			

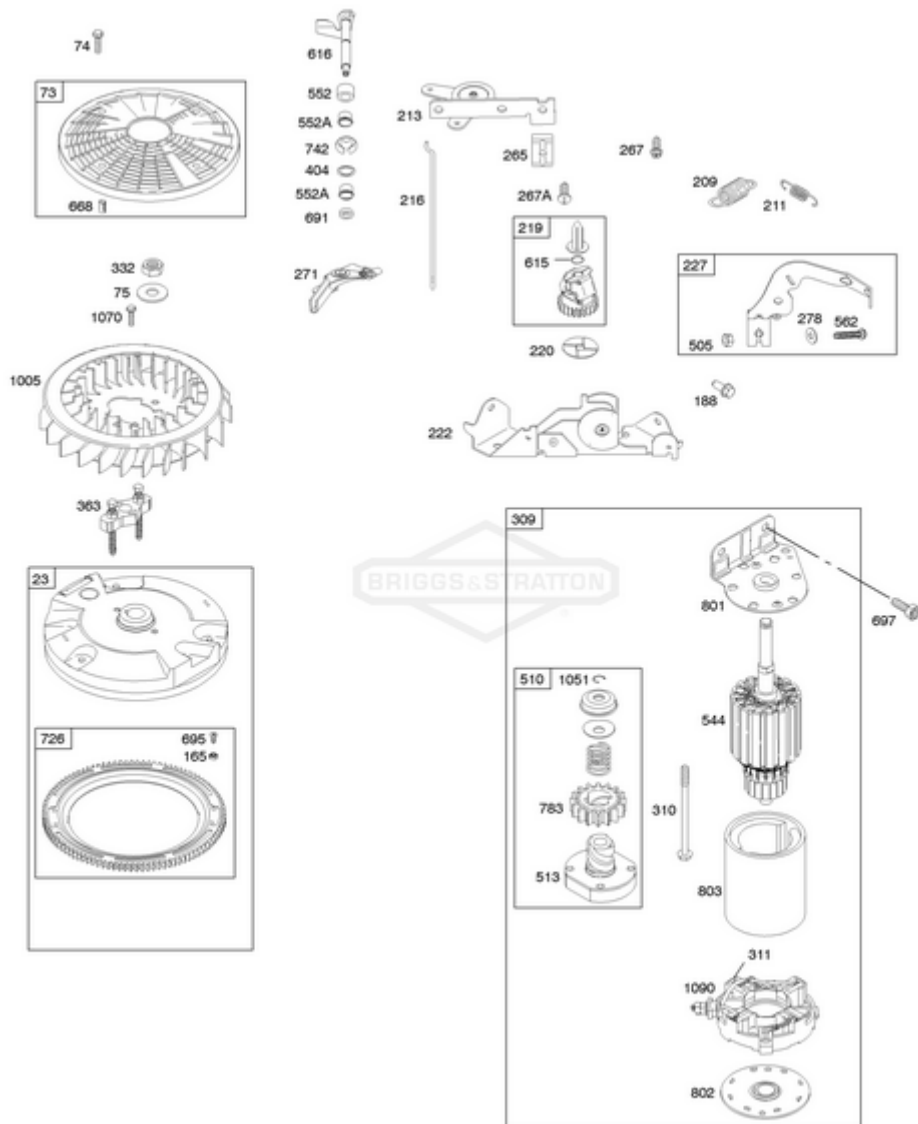

Copyright © Briggs & Stratton, LLC. All rights reserved.







Ref #	Part #	Description	Qty	Context Note	Foot Note
23	691053	FLYWHEEL			
73	494439	SCREEN, Rotating			
74	698425	SCREW		(Rotating Screen)	
75	691056	WASHER		(Flywheel)	
165	693148	NUT		(Ring Gear)	
188	691108	SCREW		(Control Bracket)	
209	697674	SPRING, Governor		(Brown) Used Before Code Date 06081500	
209	793339	SPRING, Governor		(Light Green) Used After Code Date 06081400	
211	691019	SPRING, Governed Idle			
213	691021	BRACKET, Choke Control			
216	691022	LINK, Choke			
219	698231	GEAR, Governor			
220	690412	WASHER		(Governor Gear)	
222	698757	BRACKET, Control			
227	792492	LEVER, Governor Control			
265	691024	CLAMP, Casing			
267	691044	SCREW		(Casing Clamp)	
271	691028	LEVER, Control			
278	792651	WASHER		(Governor Lever)	
309	499521	MOTOR, Starter			
310	691263	BOLT		(Starter Motor) (4 3/8 Housing)	
311	497608	SET, Brush			
332	691059	NUT		(Flywheel)	
363	19203	PULLER, Flywheel			
404	690442	WASHER		(Governor Crank)	
505	691029	NUT		(Governor Control Lever)	
510	696541	DRIVE, Starter			
513	692024	CLUTCH-DRIVE			
544		Armature-Starter		(Serviced By 499521 Starter Motor Only)	
552	690552	BUSHING-GOV CRANK			
552A	690553	BUSHING, Governor Crank			
562	690311	BOLT		(Governor Control Lever)	
615	698290	RETAINER, Governor Shaft			
616	691045	CRANK, Governor			
668	691215	SPACER			
691	790574	SEAL-GOVERNOR SHAFT			
695	693149	SCREW		(Ring Gear)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
697	690372	SCREW		(Drive Cap)	
726	499612	GEAR, Ring			
742	690328	RETAINER, E Ring			
783	695708	GEAR-PINION			
801	691283	CAP-DRIVE			
802	691286	CAP-END			
803		Housing-Starter		(Serviced By 499521 Starter Motor Only)	
1005	791236	FAN, Flywheel			
1051	691265	RING, Retaining			
1070	690372	SCREW		(Flywheel Fan)	
1090	691293	RETAINER-BRUSH			



Ref #	Part #	Description	Qty	Context Note	Foot Note
3	391086S	SEAL, Oil		(Magneto Side)	
7A	693997	GASKET, Cylinder Head			
9	690937	GASKET, Breather			
12	697227	GASKET, Crankcase			
20	791892	SEAL, Oil		(PTO Side)	
51A	791677	GASKET, Intake			
95	690718	SCREW		(Throttle Valve)	
98	699721	KIT, Idle Speed			
104	694918	PIN-FLOAT HINGE			
105	698537	VALVE, Float Needle			
108	699723	VALVE, Choke			
117	791501	JET, Main		(Standard) (Left)(Nikki)	
117A	791502	JET, Main		(Standard) (Right)(Nikki)	
121	792455	KIT, Carburetor Overhaul			
125	791230	CARBURETOR			
130	690993	VALVE, Throttle			
131	499805	KIT, Throttle Shaft			
133	699724	FLOAT, Carburetor			
135	699729	TUBE, Fuel Transfer			
137	690994	GASKET, Float Bowl			
141	699722	KIT, Choke Shaft			
142	699726	NOZZLE, Carburetor		(Standard)	
150	690995	GASKET, Nozzle			
160	699727	RETAINER, Solenoid			
163	691001	GASKET, Air Cleaner			
187	791766	LINE, Fuel		(Cut To Required Length) Used After Code Date 06072700	
187D	791801	HOSE, Vacuum		(Molded) Used Before Code Date 06072800	
231	690718	SCREW		(Choke Valve)	
240A	695666	FILTER, Fuel			
276	695410	WASHER-SEALING			
358A	694012	GASKET SET, Engine			
385	691108	SCREW		(Fuel Pump)	
387	808656	PUMP, Fuel			
418	690999	PLATE, Carburetor Cover			
524	691032	SEAL, O-Ring			
601A	691038	CLAMP, Hose		(Black)	
628	691108	SCREW		(Fuel Pump Bracket) Used Before Code Date 06072800	
633	690998	SEAL, Choke/Throttle Shaft			

Ref #	Part #	Description	Qty	Context Note	Foot Note
672	690234	GASKET, Carburetor Plate			
691	790574	SEAL-GOVERNOR SHAFT			
788	691039	BRACKET, Fuel Pump		Used Before Code Date 06072800	
788A	793145	BRACKET, Fuel Pump		Used After Code Date 06072700	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
868	690968	SEAL, Valve			
883	690970	GASKET, Exhaust			
918	694000	HOSE-VACUUM		Used Before Code Date 06072800	
918	793147	HOSE, Vacuum		Used After Code Date 06072700	
943	690589	SEAL, O-Ring		(Oil Pump Cover)	
947	841546	SOLENOID, Fuel			
975	791232	BOWL, Float			
987	691000	SEAL-THROTTLE SHAFT			
1022	690971	GASKET, Rocker Cover			
1095	694013	GASKET SET, Valve			
1124	690988	SEAL, O-Ring		(Fuel Transfer Tube)	
1126	690991	SCREW		(Fuel Transfer Tube)	
1127	695407	SCREW		(Float Bowl) (Float Bowl to Carburetor Body)	
1128	690990	SCREW		(Carburetor Nozzle)	

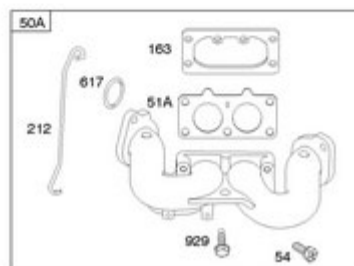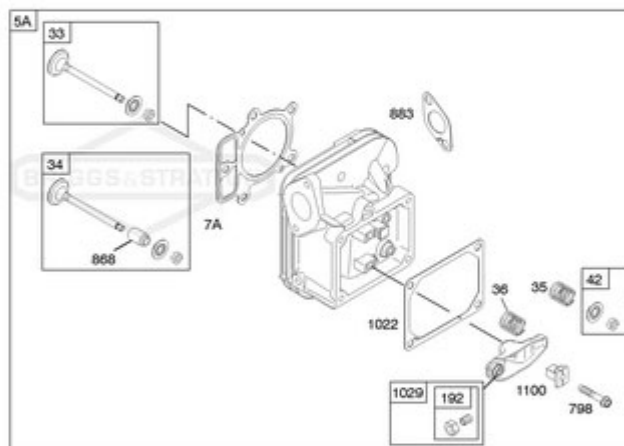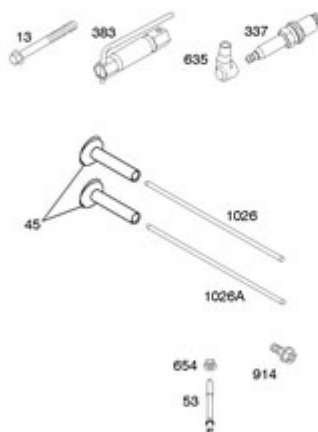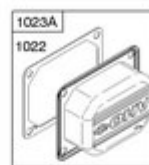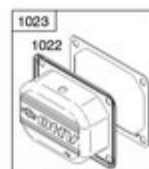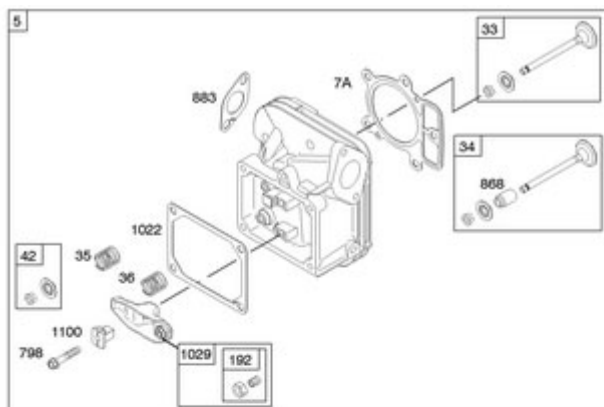

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
5	792299	HEAD, Cylinder		(Cylinder 1)	
5A	792300	HEAD, Cylinder		(Cylinder 2)	
7A	693997	GASKET, Cylinder Head			
13	791130	SCREW		(Cylinder Head)	
33	697576	VALVE, Exhaust			
34	792200	VALVE, Intake			
35	694865	SPRING, Valve		(Intake)	
36	694865	SPRING, Valve		(Exhaust)	
42	499586	KEEPER, Valve			
45	690977	TAPPET, Valve			
46	792555	CAMSHAFT			
50A	695241	MANIFOLD, Intake		(Plastic)	
51A	791677	GASKET, Intake			
53	690951	STUD		(Carburetor)	
54	699816	SCREW		(Intake Manifold) (Used With Plastic Intake Manifold)	
163	691001	GASKET, Air Cleaner			
192	690083	ADJUSTER, Rocker Arm			
212	695238	LINK, Throttle			
337	491055S	PLUG-SPARK			
383	19374S	WRENCH, Spark Plug			
617	697891	SEAL, O-Ring		(Intake Manifold)	
635	66538S	BOOT, Spark PLug			
654	690958	NUT		(Carburetor)	
798	697890	SCREW		(Rocker Arm)	
868	690968	SEAL, Valve			
883	690970	GASKET, Exhaust			
914	691127	SCREW		(Rocker Cover)	
918	596163	HOSE, Vacuum		Used Before Code Date 19091800	
918	593641	HOSE, Vacuum		Used After Code Date 19091700	
929	695239	SCREW		(Choke Control Bracket)	
1022	690971	GASKET, Rocker Cover			
1023	499599	COVER, Rocker		(Cylinder 1)	
1023A	793146	COVER, Rocker		(Cylinder #2) Used After Code Date 06072700	
1023A	499600	COVER, Rocker		(Cylinder #2) Used Before Code Date 06072800	
1026	690981	ROD, Push		(Steel)	
1026A	690982	ROD, Push		(Aluminum)	
1029	690972	ARM, Rocker			

Ref #	Part #	Description	Qty	Context Note	Foot Note
1100	791959	PIVOT, Rocker Arm			

10 AMP

474D

1059

877B



526

 
501




NOTE: All Stators Use a No. 1119 Mounting Screw.

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

789D




789B

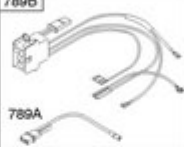

789A



789C

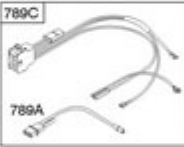

789A



729

1119

1054

635


334

333

851



Ref #	Part #	Description	Qty	Context Note	Foot Note
10	691108	SCREW		(Breather Assembly)	
333	691060	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
474D	696458	ALTERNATOR		(10 and 16 Amp Regulated)	
501	691185	REGULATOR		(16 Amp Regulated)	
526	691108	SCREW		(Regulator)	
635	66538S	BOOT, Spark PLug			
729	694123	CLIP, Wire			
789D	695050	HARNESS, Wiring			
851	493880S	TERMINAL-SPARK PLUG			
877B	399916	WIRE/CONN-ALTERNATOR			
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer		(Alternator)	
1119	691183	SCREW		(Alternator)	

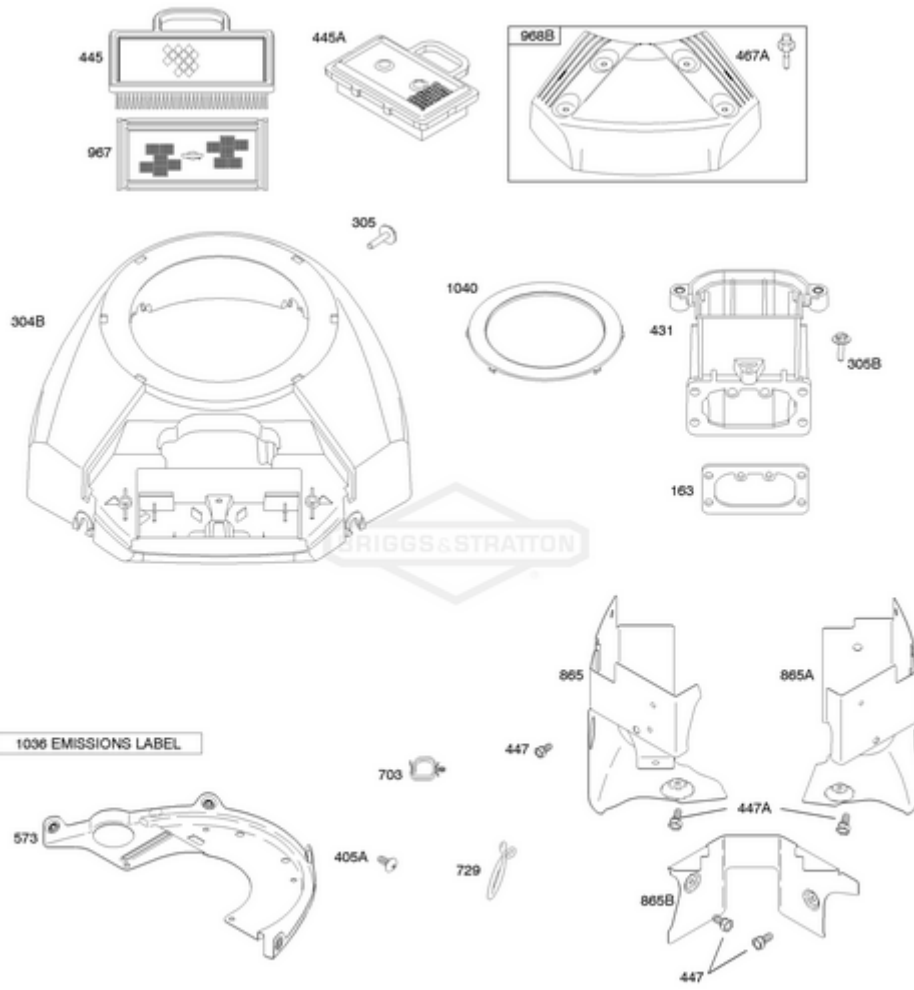

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
163	691001	GASKET, Air Cleaner			
304B	791243	HOUSING, Blower		(Black)	
305	691005	SCREW		(Blower Housing) (21/32)	
305B	790690	SCREW		(Blower Housing) (Blower Housing To Intake Elbow)	
405A	697820	SCREW		(Back Plate)	
431	790816	MANIFOLD, Intake			
445	499486S	FILTER-A/C CARTRIDGE		(Paper Element)	
447	691003	SCREW		(Air Guide Cover)	
447A	691108	SCREW		(Air Guide Cover)	
467A	691008	KNOB, Air Cleaner Cover		(1 1/2)	
573	790444	PLATE, Back			
703	691010	CLIP			
729	694123	CLIP, Wire			
865	691012	COVER, Air Guide		(Cylinder 1)	
865A	793205	SHIELD, Cylinder		(Cylinder 2)	
865B	691015	COVER, Air Guide		(Valley)	
967	273638S	FILTER-PRE CLEANER			
968B	791242	COVER, Air Cleaner			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1040	791237	PLATE, Trim			