




# SPARE PARTS LIST

LAWN MOWERS: CONSUMER  
WALK-BEHINDS

580 RD, 964483939, 1999-02

|                                             |                       |                       |            |
|---------------------------------------------|-----------------------|-----------------------|------------|
| <b>MODEL</b>                                | <b>Jonsered 580RD</b> | <b>PRODUCT NUMBER</b> | 9644837-39 |
| <b>Engine Type XTS50 CAT 12F802-1380-81</b> |                       |                       |            |

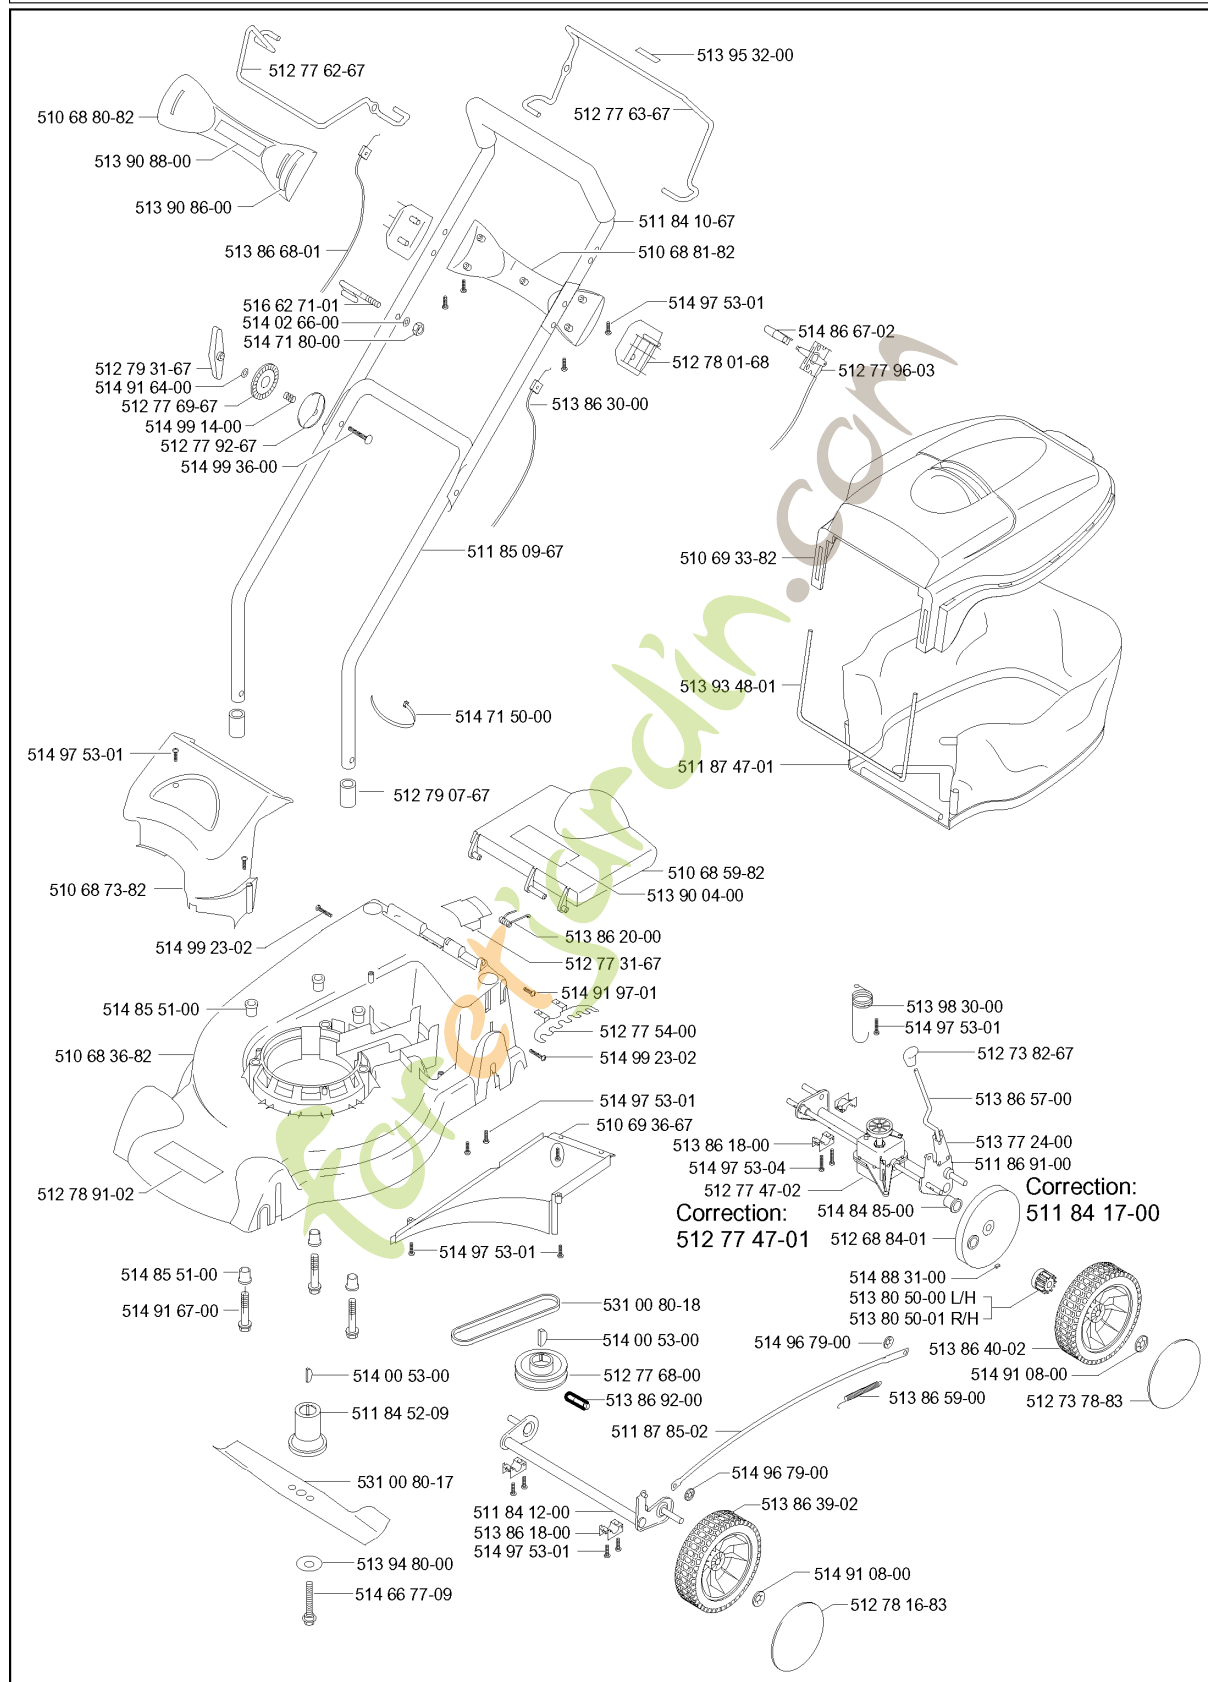

| Numéro de Pièce | Description          | Remarque | Qté Kit équipement |
|-----------------|----------------------|----------|--------------------|
| 510 68 59-82    | CARTER               |          |                    |
| 510 68 73-82    | CARTER               |          |                    |
| 510 68 74-82    | CARTER               |          |                    |
| 510 68 80-82    | PANNEAU              |          |                    |
| 510 68 81-82    | PANNEAU              |          |                    |
| 510 69 33-82    | CARTER               |          |                    |
| 510 69 36-67    | PLAQUE               |          |                    |
| 511 84 12-00    | ARBRE                |          |                    |
| 511 84 17-00    | ARBRE                |          |                    |
| 511 84 50-00    | EMBRAYAGE            |          |                    |
| 511 85 09-67    | POIGNÉE              |          |                    |
| 511 85 30-03    | POIGNÉE              |          |                    |
| 511 87 47-01    | SAC                  |          |                    |
| 511 87 85-03    | TIE STRAP PLAIN      |          |                    |
| 512 68 84-01    | PLAQUE               |          |                    |
| 512 73 78-83    | MOYEU                |          |                    |
| 512 73 82-67    | BOUTON               |          |                    |
| 512 75 30-83    | MOYEU                |          |                    |
| 512 77 31-67    | PLAQUE               |          |                    |
| 512 77 47-01    | GEARBOX              |          |                    |
| 512 77 54-00    | VIS DE REGLAGE       |          |                    |
| 512 77 56-00    | SUPPORT              |          |                    |
| 512 77 57-00    | COMMANDE             |          |                    |
| 512 77 62-67    | OEILLET              |          |                    |
| 512 77 64-67    | OEILLET              |          |                    |
| 512 77 68-00    | POULIE               |          |                    |
| 512 77 69-67    | PLAQUE               |          |                    |
| 512 77 92-67    | PLAQUE               |          |                    |
| 512 77 96-05    | THROTTLE TRIGGER     |          |                    |
| 512 78 01-68    | SUPPORT              |          |                    |
| 512 78 91-05    | DECAL                |          |                    |
| 512 79 07-67    | DOUILLE              |          |                    |
| 513 77 24-00    | SUPPORT              |          |                    |
| 513 80 50-00    | ROUE D'ENTRAÎNEMENT' | L/H      |                    |
| 513 80 50-01    | ROUE D'ENTRAÎNEMENT' | R/H      |                    |
| 513 86 18-00    | COUVERCLE            |          |                    |
| 513 86 18-00    | COUVERCLE            |          |                    |
| 513 86 20-00    | RESSORT              |          |                    |
| 513 86 30-00    | CÂBLE                |          |                    |
| 513 86 39-02    | ROUE                 |          |                    |
| 513 86 40-02    | ROUE                 |          |                    |
| 513 86 57-00    | LEVIER               |          |                    |
| 513 86 59-00    | RESSORT              |          |                    |
| 513 86 68-01    | CÂBLE                |          |                    |
| 513 86 92-00    | VIS                  |          |                    |
| 513 90 04-00    | DECAL                |          |                    |
| 513 90 31-00    | ADAPTATEUR           |          |                    |
| 513 90 36-00    | BOULON               |          |                    |
| 513 90 37-00    | VIS                  |          |                    |
| 513 90 99-00    | RONDELLE             |          |                    |
| 513 91 15-00    | DECAL                |          |                    |
| 513 93 48-01    | RAIL                 |          |                    |
| 513 94 72-01    | DECAL                |          |                    |
| 513 95 08-03    | RESSORT              |          |                    |
| 514 00 53-00    | TOUCHE               |          |                    |
| 514 02 66-00    | RONDELLE             |          |                    |
| 514 02 66-00    | RONDELLE             |          |                    |
| 514 71 50-00    | SANGLES              |          |                    |
| 514 71 80-00    | ÉCROU                |          |                    |
| 514 71 80-00    | ÉCROU                |          |                    |
| 514 84 85-00    | BUSHING              |          |                    |
| 514 85 51-01    | DOUILLE              |          |                    |
| 514 85 51-01    | DOUILLE              |          |                    |

| Numéro de Pièce | Description            | Remarque | Qté Kit équipement |
|-----------------|------------------------|----------|--------------------|
| 514 86 67-02    | BOUTON                 |          |                    |
| 514 88 31-00    | CLIQUET D'ENTRAÎNEMENT |          |                    |
| 514 91 06-00    | ÉCROU                  |          |                    |
| 514 91 08-00    | PUSH ON FIX            |          |                    |
| 514 91 08-00    | PUSH ON FIX            |          |                    |
| 514 91 34-00    | ÉCROU                  |          |                    |
| 514 91 40-01    | VIS                    |          |                    |
| 514 91 40-02    | VIS                    |          |                    |
| 514 91 64-00    | RONDELLE               |          |                    |
| 514 91 97-01    | VIS                    |          |                    |
| 514 92 75-00    | RONDELLE D'ESPACEMENT  |          |                    |
| 514 96 19-00    | RONDELLE               |          |                    |
| 514 96 79-00    | STARLOCK WASHER        |          |                    |
| 514 96 79-00    | STARLOCK WASHER        |          |                    |
| 514 97 53-01    | VIS                    |          |                    |
| 514 97 53-01    | VIS                    |          |                    |
| 514 97 53-01    | VIS                    |          |                    |
| 514 97 53-01    | VIS                    |          |                    |
| 514 97 53-01    | VIS                    |          |                    |
| 514 97 53-01    | VIS                    |          |                    |
| 514 97 53-04    | VIS                    |          |                    |
| 514 99 14-00    | RESSORT                |          |                    |
| 514 99 15-00    | RESSORT                |          |                    |
| 514 99 23-02    | VIS                    |          |                    |
| 514 99 36-00    | BOULON                 |          |                    |
| 514 99 89-00    | VIS                    |          |                    |
| 514 99 96-01    | RONDELLE               |          |                    |
| 515 79 60-19    | RONDELLE               |          |                    |
| 516 62 71-01    | HOLDER                 |          |                    |
| 516 85 70-67    | ÉCROU PAPILLON         |          |                    |
| 531 00 80-17    | MOWER BLADE            |          |                    |
| 531 00 80-18    | COURROIE               |          |                    |