


305 

1036 




1319 

1319A 

304D

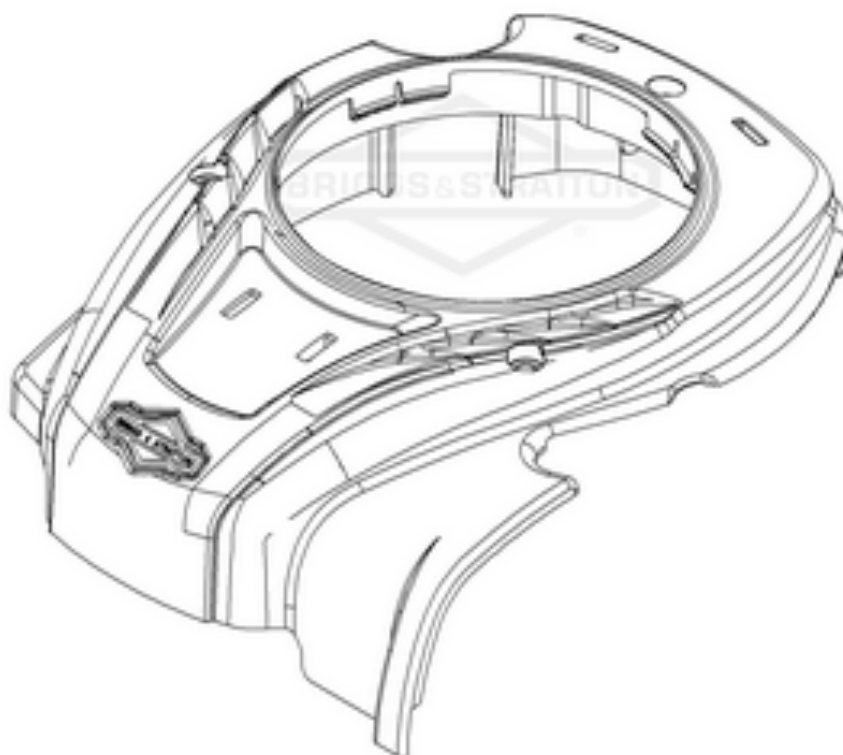


Ref #	Part #	Description	Qty	Context Note	Foot Note
304D	596457	HOUSING, Blower	1		
305	590586	SCREW	3	(Blower Housing)	
1036		LABEL, Emissions	1	(Available from a Briggs & Stratton Authorized Dealer)	
1319	794467	LABEL, Warning	1	(REQUIRED When Replacing Parts With Warning Labels Affixed)	
1319A	797669	LABEL, Warning	1	(REQUIRED When Replacing Parts With Warning Labels Affixed)	

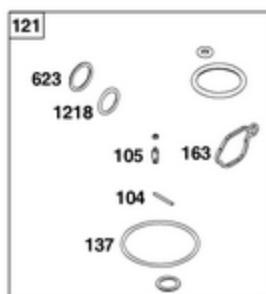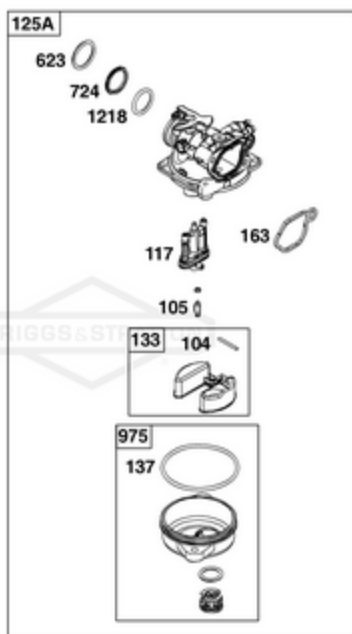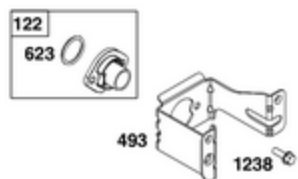






Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
104	590558	PIN, Float Hinge	1		
105	594581	VALVE, Float Needle	1		
117	84002021	JET, Main	1	(Standard)	
118	84002022	JET, Main	1	(High Altitude)	
121	594636	KIT, Carburetor Overhaul	1	(Service Kits may include extra parts not specific to this engine.)	
122	590549	SPACER, Carburetor	1		
125A	84001028	CARBURETOR	1		
133	591120	FLOAT, Carburetor	1		
137	594633	GASKET, Float Bowl	1		
163	799580	GASKET, Air Cleaner	1	(Air Cleaner)	
493	593330	BRACKET, Mounting	1		
623	799581	SEAL, O-Ring	1	(Carburetor Spacer)	
724	697478	RETAINER, Seal	1		
975	594632	BOWL, Float	1		
1127	590554	SCREW	2	(Float Bowl to Carburetor Body)	
1218	270344S	SEAL, O-Ring	1	(Carburetor)	
1238	590562	SCREW	2	(Carburetor Spacer)	

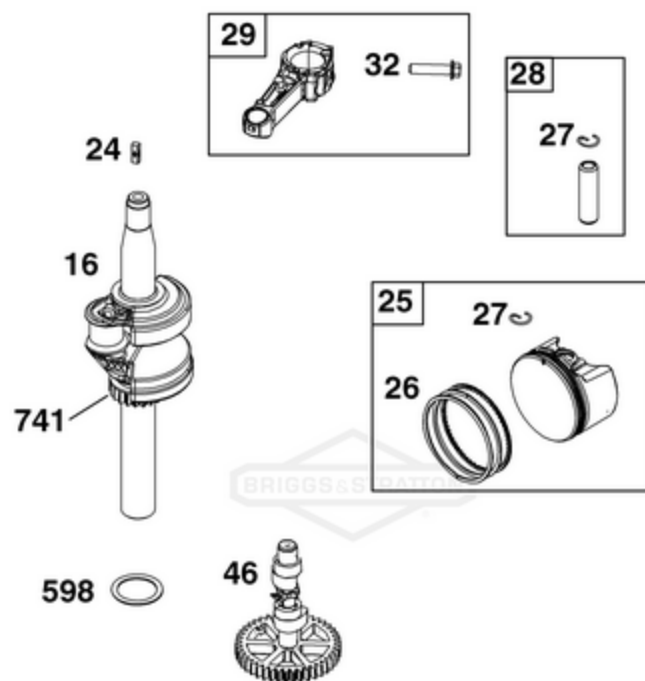

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
16	590537	CRANKSHAFT	1		
24	222698S	KEY, Flywheel	1		
25	591975	PISTON ASSEMBLY	1		
26	591976	SET, Ring	1		
27	691588	LOCK, Piston Pin	1		
28	699659	PIN, Piston	1		
29	590518	ROD, Connecting	1		
32	691664	SCREW	2	(Connecting Rod)	
46	592968	CAMSHAFT	1		
598	593291	SHIM, End Play	1	(Crankshaft or Camshaft Bearing)	
741	796210	GEAR, Timing	1		

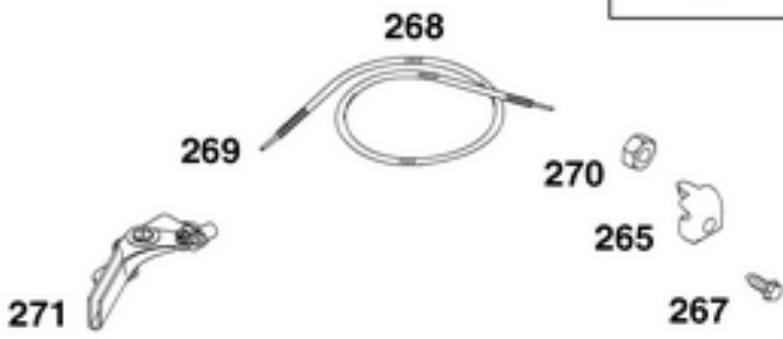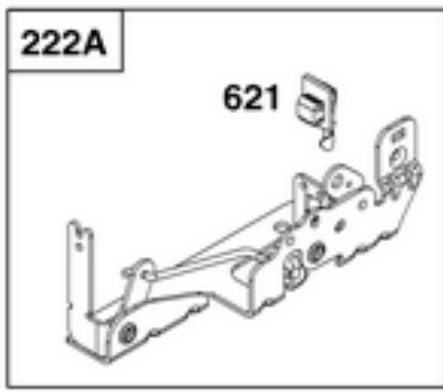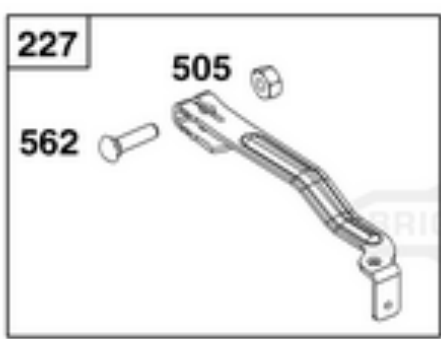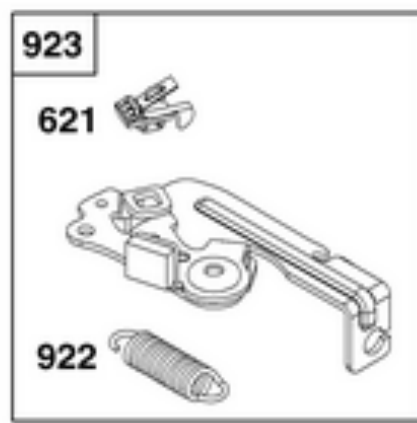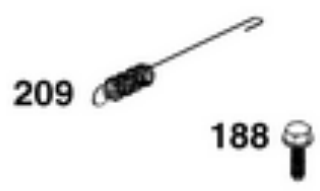

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	793480	SCREW	1	(Control Bracket)	
202	590517	LINK, Mechanical Governor	1		
209	596743	SPRING, Governor	1		
222A	596458	BRACKET, Control	1		
227	590520	LEVER, Governor Control	1		
265	690798	CLAMP, Casing	1		
267	692577	SCREW	1	(Casing Clamp)	
268	691025	CASING, Control Wire	1		
269	691026	WIRE, Control	1		
270	691027	NUT	1	(Control Wire Casing)	
271	691028	LEVER, Control	1		
505	793515	NUT	1	(Governor Control Lever)	
562	793514	BOLT	1	(Governor Lever)	
621	692310	SWITCH, Stop	1		
745	691146	SCREW	1	(Brake)	
745A	690859	SCREW	1	(Brake)	
922	692135	SPRING, Brake	1		
923	691487	BRAKE	1		

615 


404 

1264 

1263 

616 

850 

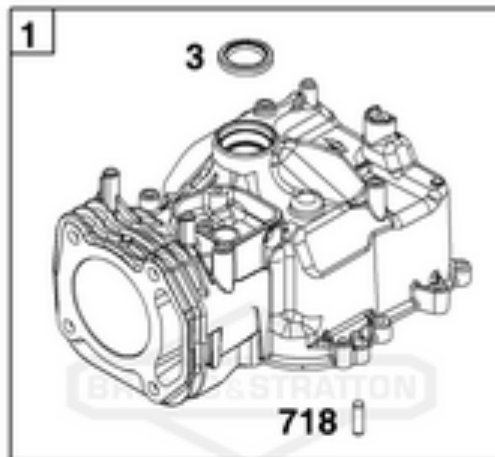

358

842 

524 

623 

163 

3 

868 





7 

12 


1022 

20 

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	592048	CYLINDER ASSEMBLY	1		
3	299819S	SEAL, Oil	1	(Magneto Side)	
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
12		GASKET, Crankcase	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
20		SEAL, Oil	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
358		GASKET SET, Engine	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
404	690272	WASHER	1	(Governor Crank)	
524		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
615	690340	RETAINER, Governor Shaft	1		
616	590516	CRANK, Governor	1		
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
718	690959	PIN, Locating	2		
842		SEAL, O-Ring	1	(Part information located in Crankcase Cover/Sump and Lubrication Group.)	
850	100106	SEALANT, Liquid	1		
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
1022		GASKET, Rocker Cover	1	(Part information located in Cylinder Head Group.)	
1263	697124	REED, Breather	1		
1264	793453	SCREW	1	(Breather Reed)	

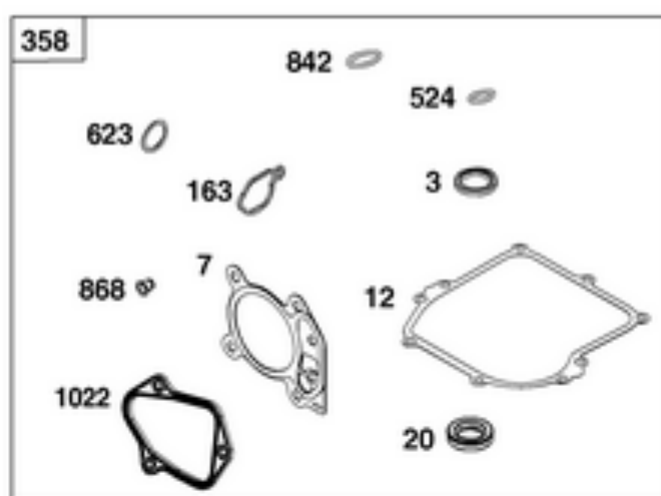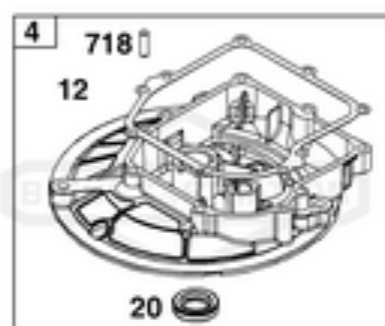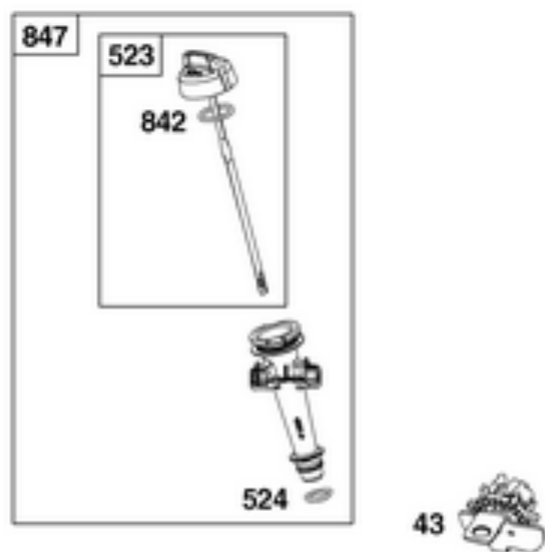

Ref #	Part #	Description	Qty	Context Note	Foot Note
3		SEAL, Oil	1	(Part information located in Cylinder Group.)	
4	84002141	SUMP, Engine	1		
7		GASKET, Cylinder Head	1	(Part information located in Cylinder Head Group.)	
12	799587	GASKET, Crankcase	1		
20	391483S	SEAL, Oil	1	(PTO Side)	
22	692551	SCREW	6	(Crankcase Cover/Sump)	
22A	590763	SCREW	1	(Crankcase Cover/Sump)	
43	594560	SLINGER, Governor/Oil	1		
163		GASKET, Air Cleaner	1	(Part information located in Carburetor Group.)	
358	84001272	GASKET SET, Engine	1	(Service Kits may include extra parts not specific to this engine.)	
523	796503	DIPSTICK	1		
524	691876	SEAL, O-Ring	1	(Dipstick Tube)	
623		SEAL, O-Ring	1	(Part information located in Carburetor Group.)	
718	690959	PIN, Locating	2		
842	691031	SEAL, O-Ring	1	(Dipstick Cap)	
847	590572	DIPSTICK/TUBE ASSEMBLY	1		
868		SEAL, Valve	1	(Part information located in Cylinder Head Group.)	
1022		GASKET, Rocker Cover	1	(Part information located in Cylinder Head Group.)	

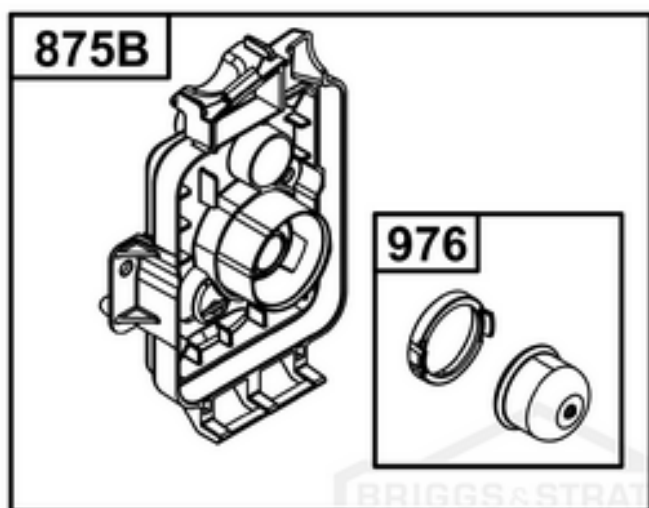


535



968B



Ref #	Part #	Description	Qty	Context Note	Foot Note
11	590522	TUBE, Breather	1		
318	793480	SCREW	2	(Mounting Bracket)	
535	799579	FILTER, Air Cleaner Foam	1		
875B	595663	BASE, Air Cleaner	1		
968B	595660	COVER, Air Cleaner	1		
971	590552	SCREW	2	(Air Cleaner Base to Carburetor/Throttle Body)	
976	594281	PRIMER, Carburetor	1		


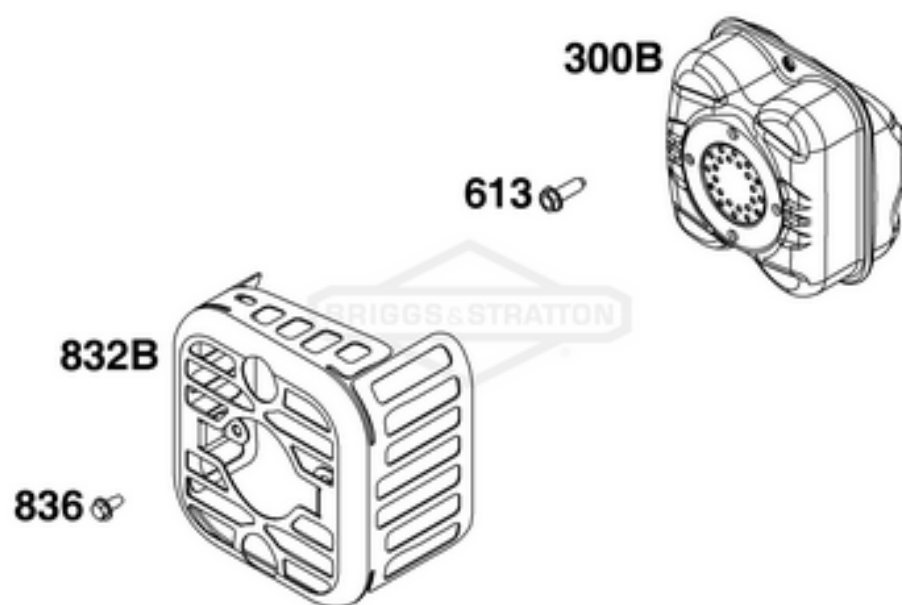


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Context Note	Foot Note
300B	590565	MUFFLER		
613	590562	SCREW		
836	690661	SCREW		



Ref #	Part #	Description	Context Note	Foot Note
23	590544	FLYWHEEL		
37	594729	GUARD, Flywheel		
58	591108	ROPE, Starter		
60	691915	GRIP, Starter Rope		
78	793480	SCREW	5	(Flywheel Guard)
332	690662	NUT	1	(Flywheel)
333	593872	ARMATURE, Magneto	1	
334	691061	SCREW	2	(Magneto Armature)
356	692390	WIRE, Stop	1	
363	19619	PULLER, Flywheel	1	
455A	593960	CUP, Flywheel		
608	593959	STARTER, Rewind		
635	692076	BOOT, Spark Plug		
668	590546	SPACER		

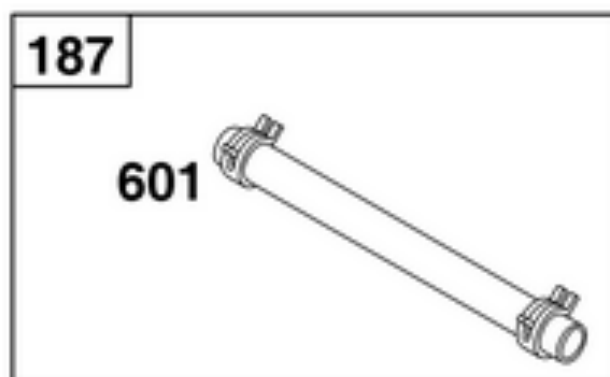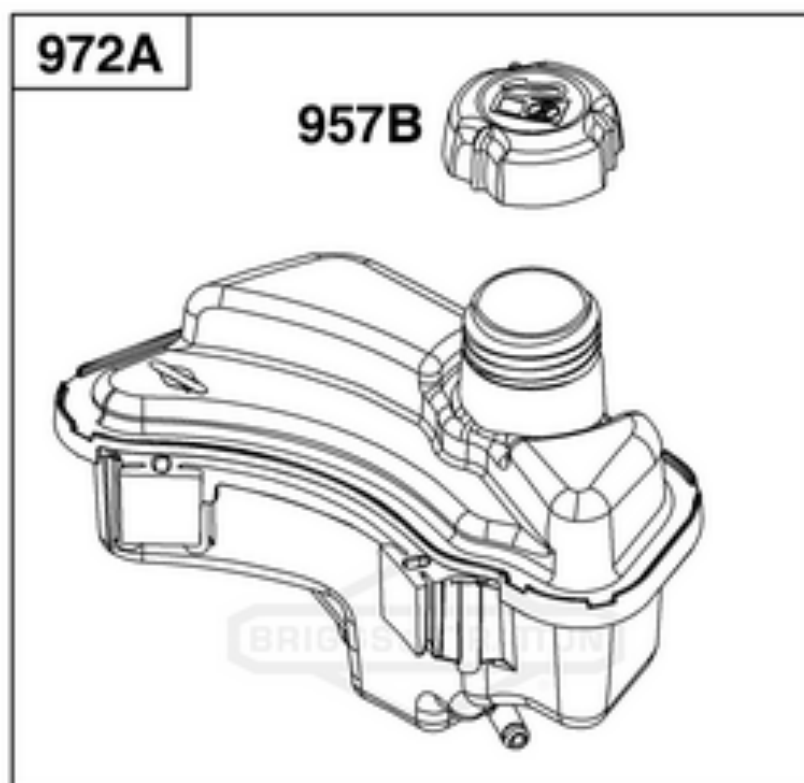

Ref #	Part #	Description	Qty	Context	Note	Foot	Note
187	791766	LINE, Fuel	1				
601	791850	CLAMP, Hose	2				
957B	692046	CAP, Fuel Tank	1				
972A	591947	TANK, Fuel	1				