



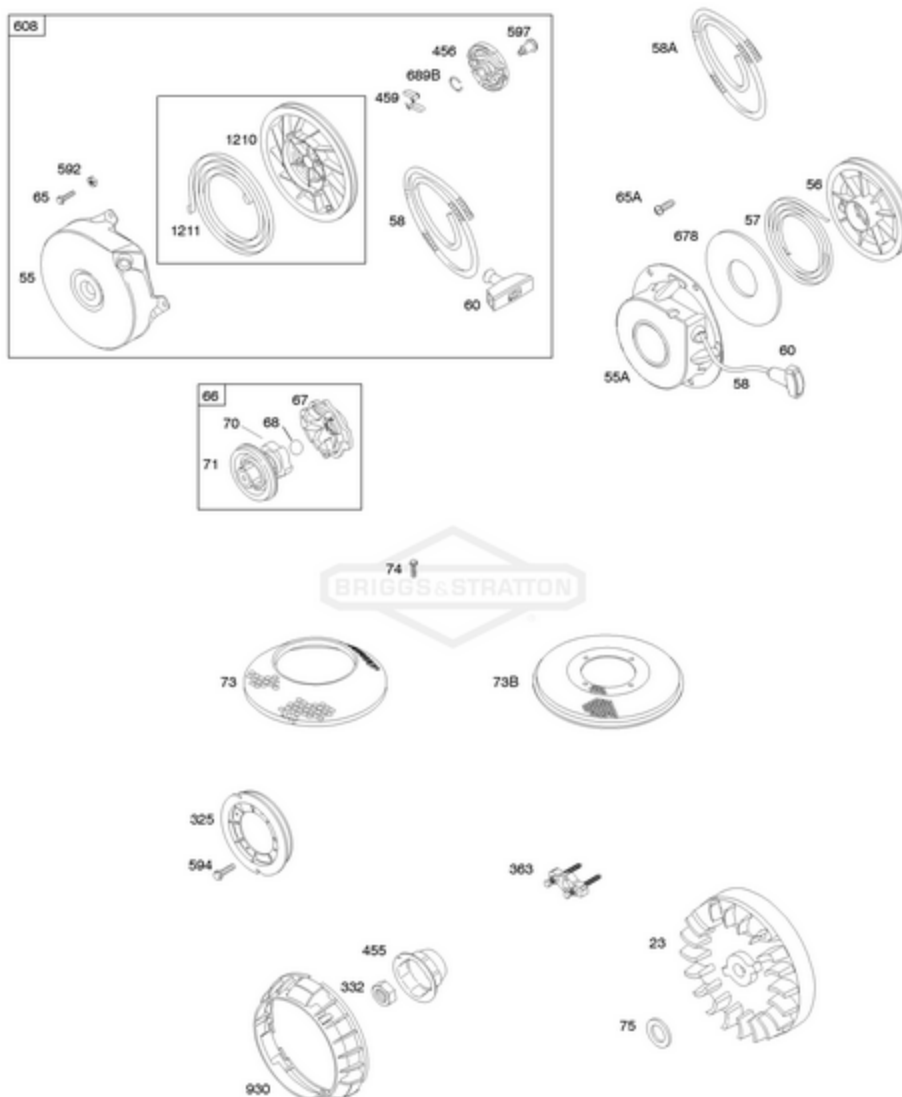


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	690843	FLYWHEEL		Used Before Code Date 08013000	
23	795695	FLYWHEEL		Used After Code Date 08012900	
55	692144	HOUSING, Rewind Starter			
55A	393576	HOUSING, Rewind Starter			
56	280439S	PULLEY, Rope Starter			
57	490179	SPRING-REWIND STR			
58	691921	ROPE, Starter		(70)	
58A	280406S	ROPE, Starter		(82 Rope)	
60	691915	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
65A	690338	SCREW		(Rewind Starter) (3/8)	
66	399671	CLUTCH-STARTER		Used Before Code Date 98123100	
67	394897	HOUSING, Clutch			
68	691604	BALL, Clutch			
70	691945	RATCHET-CLUTCH			
71	691359	COVER, Ratchet			
73	699850	SCREEN, Rotating		Used After Code Date 02060200	
73B	691725	SCREEN, Rotating		Used Before Code Date 02060100	
74	94058	SCREW		(Rotating Screen)	
75	691736	WASHER		(Flywheel)	
332	690662	NUT		(Flywheel)	
363	19069	PULLER, Flywheel			
455	691236	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
592	690800	NUT		(Rewind Starter)	
594	94058	SCREW		(Rope Starter Pulley)	
597	691696	SCREW		(Pawl Friction Plate)	
608	690101	STARTER, Rewind		(70 Rope)	
678	490817	SPACER-REWIND		(Rewind)	
689B	691855	SPRING-FRICTION		(Rewind Starter)	
930	691348	GUARD, Rewind			
1210	499901	PULLEY/SPRING ASSY		(Pulley)	
1211	499901	PULLEY/SPRING ASSY		(Spring)	

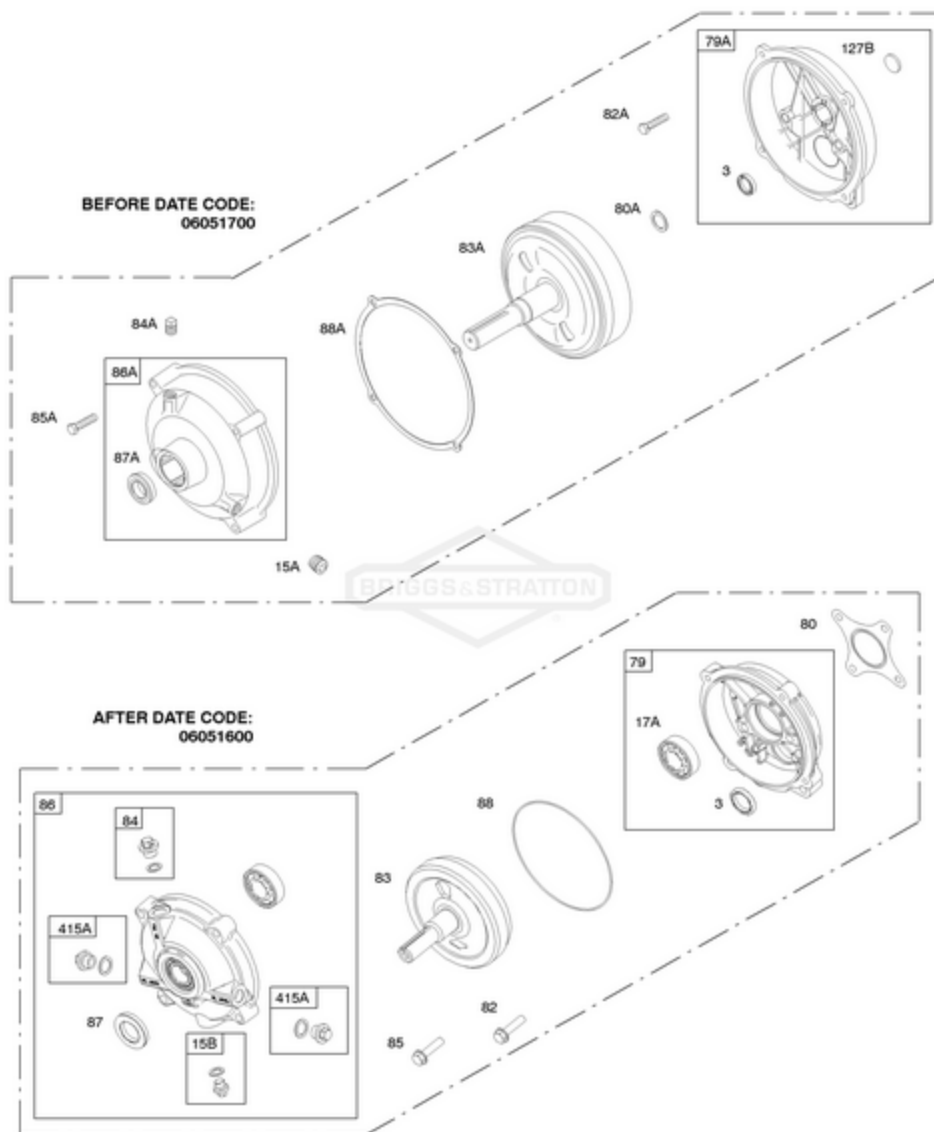

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
3	299819S	SEAL, Oil		(Magneto Side)	
15A	691682	PLUG-OIL DRAIN			
15B	792750	PLUG, Oil Drain		(Gear Cover) Used After Code Date 06051600	
17A	99158	BEARING-BALL		(Gear Reduction Case) Used After Code Date 06051600	
79	792746	CASE, Gear Reduction		Used After Code Date 06051600	
79A	690605	CASE, Gear Reduction		Used Before Code Date 06051700	
80	792755	GASKET, Gear Case		Used After Code Date 06051600	
80A	691602	GASKET, Gear Case		Used Before Code Date 06051700	
82	792753	SCREW		(Gear Reduction Case) (1 1/3) Used After Code Date 06051600	
82A	690369	SCREW		(Gear Reduction Case) (7/8) Used Before Code Date 06051700	
82A	699164	SCREW		(Gear Reduction Case) (1 1/2) Used Before Code Date 06051700	
83	792756	SHAFT, Auxiliary Drive		Used After Code Date 06051600	
83A	690374	SHAFT, Auxiliary Drive		Used Before Code Date 06051700	
84	792759	PLUG, Breather		Used After Code Date 06051600	
84A	691121	PLUG-BREATHING		Used Before Code Date 06051700	
85	690711	SCREW		(Gear Cover to Gear Reduction Case) (1 1/2) Used After Code Date 06051600	
85A	692551	SCREW		(Gear Cover to Gear Reduction Case) (1 3/16) Used Before Code Date 06051700	
86	792748	COVER-GEAR		Used After Code Date 06051600	
86A	690608	COVER, Gear		Used Before Code Date 06051700	
87	792752	SEAL, Gear Reduction		Used After Code Date 06051600	
87A	691582	SEAL, Gear Reduction		Used Before Code Date 06051700	
88	792760	GASKET, Gear Cover/Housing		Used After Code Date 06051600	
88A	691600	GASKET, Gear Cover/Housing		Used Before Code Date 06051700	
127B	691585	PLUG-WELCH		(Gear Reduction Case)	
415A	792749	PLUG		(Gear Cover) Used After Code Date 06051600	

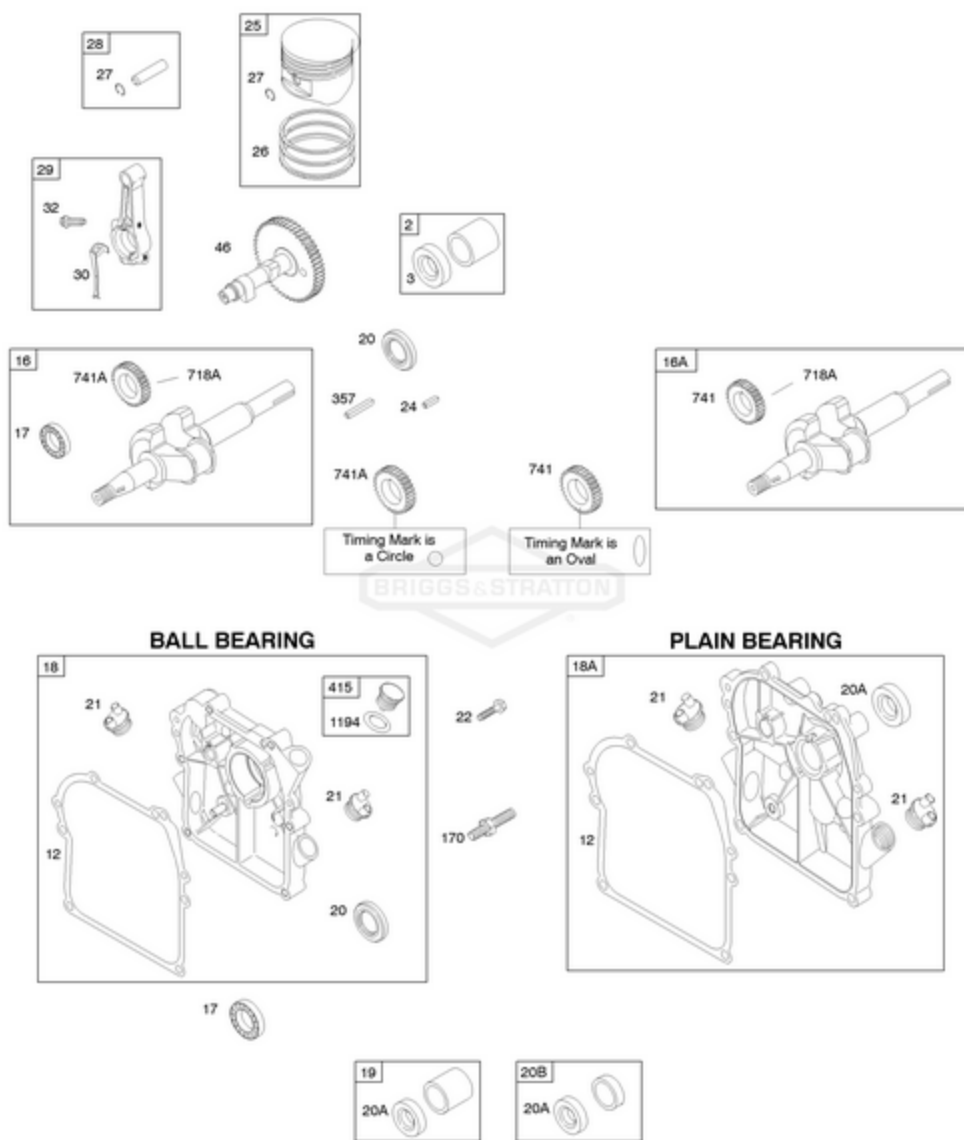

Copyright © Briggs & Stratton, LLC. All rights reserved.








Ref #	Part #	Description	Qty	Context Note	Foot Note
2	399269	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL, Oil		(Magneto Side)	
12	270895	GASKET, Crankcase		(.005)	
12	270896	GASKET, Crankcase		(.009)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
16A	793152	CRANKSHAFT			
17	690824	BEARING-BALL			
18A	496679	COVER, Crankcase		(Plain Bearing)	
19	399269	KIT, Bushing/Seal		(PTO Side)	
20	692020	SEAL, Oil		(PTO Side) (Ball Bearing)	
20A	299819S	SEAL, Oil		(PTO Side) (Plain Bearing Cover)	
21	281658S	CAP, Oil Fill			
22	693732	SCREW		(Crankcase Cover/Sump) (Used in Positions 1 and 6) (7/8)	
24	222698S	KEY, Flywheel			
25	298906	PISTON ASSEMBLY		(.020 Oversize) Used Before Code Date 96012900	
25	298907	PISTON ASSEMBLY		(.030 Oversize) Used Before Code Date 96012900	
25	790908	PISTON ASSEMBLY		(Standard) Used After Code Date 96012800 Used Before Code Date 07073000	
25	792532	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 96012800 Used Before Code Date 07073000	
25	793214	PISTON ASSEMBLY		(Standard) Used Before Code Date 96012900	
25	795131	PISTON ASSEMBLY		(Standard) Used After Code Date 07072900 Used Before Code Date 08021300	
25	795689	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 07072900	
25	795691	PISTON ASSEMBLY		(Standard) Used After Code Date 08021200	
26	298982	RING SET-STD		(Standard) Used Before Code Date 96012900	
26	298984	RING SET-020		(.020 Oversize) Used Before Code Date 96012900	
26	498680	RING SET-STD		(Standard) Used After Code Date 96012800 Used Before Code Date 99110100	
26	498682	SET, Ring		(.020 Oversize) Used After Code Date 96012800 Used Before Code Date 99110100	
26	498683	SET, Ring		(.030 Oversize) Used After Code Date 96012800 Used Before Code Date 99110100	

Ref #	Part #	Description	Qty	Context Note	Foot Note
26	695169	SET, Ring		(Standard) Used After Code Date 99103100 Used Before Code Date 05051900	
26	695171	SET, Ring		(.010 Oversize) Used After Code Date 99103100 Used Before Code Date 05051900	
26	695172	SET, Ring		(.020 Oversize) Used After Code Date 99103100 Used Before Code Date 05051900	
26	790909	SET, Ring		(Standard) Used After Code Date 05051800 Used Before Code Date 07073000	
26	795132	SET, Ring		(Standard) Used After Code Date 07072900 Used Before Code Date 08021300	
26	795134	SET, Ring		(.020 Oversize) Used After Code Date 05051800 Used Before Code Date 08021300	
26	795688	SET, Ring		(.020 Oversize) Used After Code Date 08021200	
26	795690	SET, Ring		(Standard) Used After Code Date 08021200	
27	691588	LOCK, Piston Pin			
28	298908	PIN, Piston		(.005 Oversize) Used Before Code Date 05051900	
28	298909	PIN, Piston		(Standard) Used Before Code Date 05051900	
28	699659	PIN, Piston		(Standard) Used After Code Date 05051800	
29	699655	ROD, Connecting		(Standard)	
30	691719	DIPPER, Connecting Rod			
32	691664	SCREW		(Connecting Rod)	
46	691998	CAMSHAFT			
415	691363	PLUG		(Crankcase Cover/Sump)	
718A	499047	PIN, Locating		(Crankshaft)	
741	791124	GEAR, Timing		[Timing Mark is an Oval {}]	
741A	691805	GEAR, Timing		{Timing Mark is a Circle (O)}	
1194	691876	SEAL, O-Ring		(Plug)	

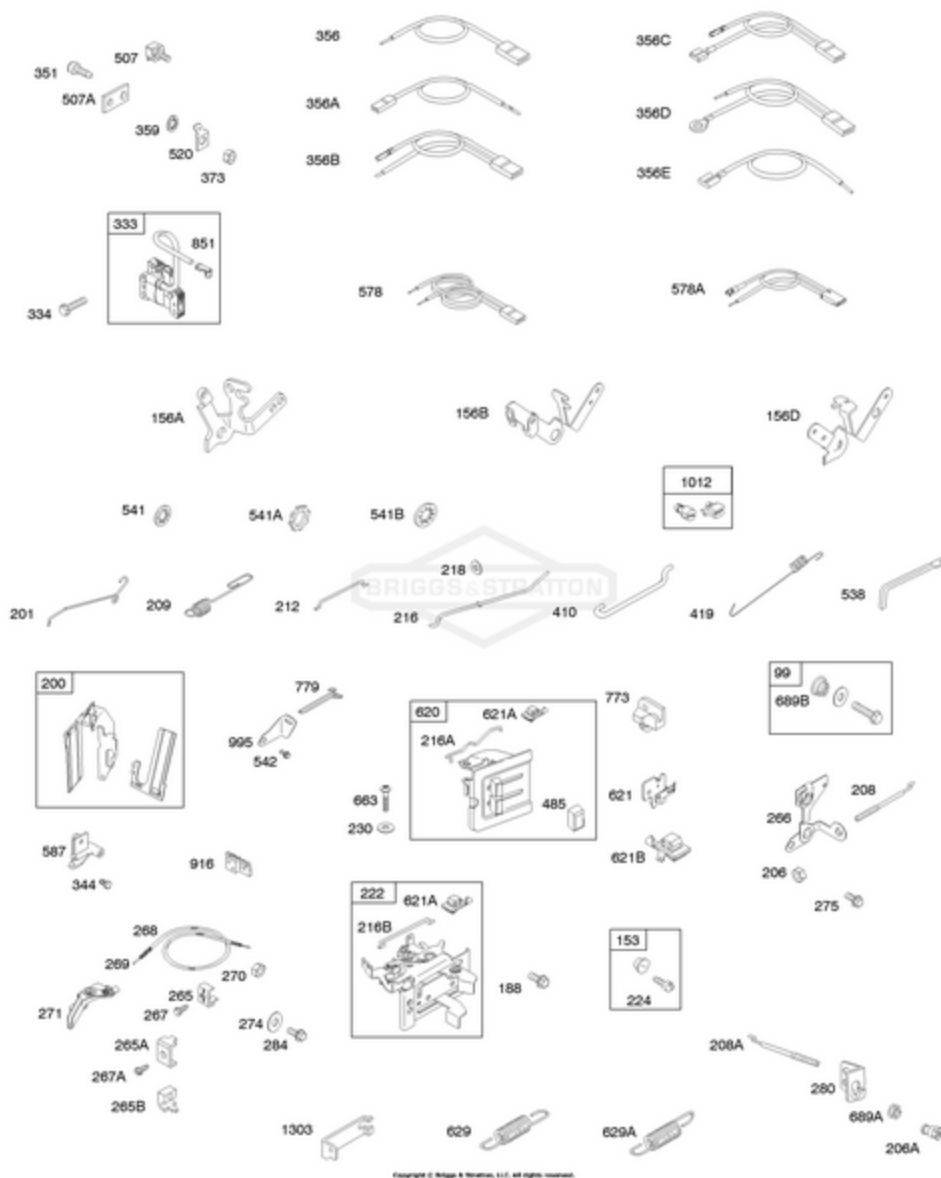

Ref #	Part #	Description	Qty	Context Note	Foot Note
153	490501	SCREW		(Carburetor Lever)	
156A	690439	LEVER, Control			
156B	690438	LEVER, Control			
188	692200	SCREW		(Control Bracket)	
200	498770	BLADE, Governor			
201	691305	LINK, Air Vane			
206A	691771	NUT, Governor Adjusting			
208A	691821	ROD, Governor Control			
209	690373	SPRING, Governor		(Stone Blue)	
209	692205	SPRING, Governor		(No Color)	
216	690551	LINK, Choke			
216A	691824	LINK, Choke			
216B	692904	LINK, Choke			
218	691722	WASHER		(Choke Link)	
222	699132	BRACKET, Control			
224	690320	SCREW		(Collar/Screw Kit)	
265A	691024	CLAMP, Casing			
266	691414	CONTROL, Throttle			
267	691082	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(48" Long)(Cut To Required Length)	
269	691026	WIRE, Control		(78" Long)(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
274	691607	WASHER		(Cable Casing)	
275	691683	SCREW		(Throttle Control)	
280	691184	BRACKET, Rod			
284	691082	SCREW		(Control Wire Casing)	
333	793281	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
344	691685	SCREW		(Cable Clamp)	
351	90200	SCREW		(Ground Terminal)	
356	692390	WIRE, Stop			
356A	690791	WIRE, Stop			
356D	490346	WIRE, Stop		(Dual Stop)	
356E	493501	WIRE, Stop			
356C	691409	WIRE, Stop			
356B	695283	WIRE ASSEMBLY			
359	691077	WASHER		(Ground Terminal)	
373	691612	NUT		(Ground Terminal)	
410	691274	LINK, Control			
485	692295	KNOB, Air Cleaner Cover			





Ref #	Part #	Description	Qty	Context Note	Foot Note
507	691972	INSULATOR			
507A	66895	INSULATOR			
520	691084	TERMINAL, Ground			
541	691067	WASHER		(Speed Adjuster Lever)	
541A	690299	WASHER		(Speed Adjuster Lever) (External Teeth)	
541B	690288	WASHER		(Speed Adjuster Lever) (Internal Teeth)	
542	691683	SCREW		(Link Bracket)	
578	398153	WIRE ASSEMBLY			
578A	696031	WIRE ASSEMBLY			
587	690769	CLAMP, Cable			
620	490649	BRACKET, Control			
621	691941	SWITCH, Stop			
621A	692310	SWITCH, Stop			
621B	692029	SWITCH, Stop			
663	690370	SCREW		(Control Panel)	
689A	692522	SPRING, Friction		(Governor Control Rod)	
689B	691855	SPRING-FRICTION		(Rewind Starter)	
773	697325	RETAINER			
779	691828	LINK, Bell Crank			
851	493880S	TERMINAL-SPARK PLUG			
916	691900	RACK, Governor Gear			
995	691756	BRACKET, Link			
1012	490507	RETAINER, Link			
1303	690594	CLAMP, Speed Control			

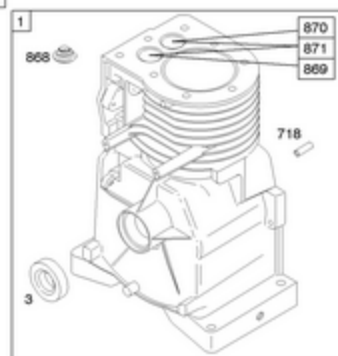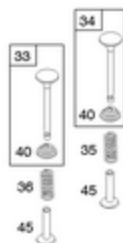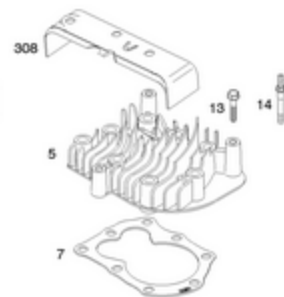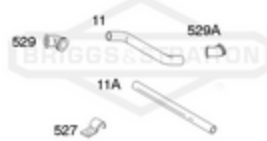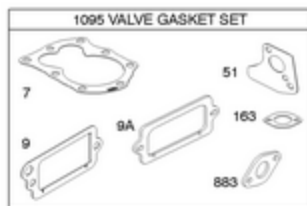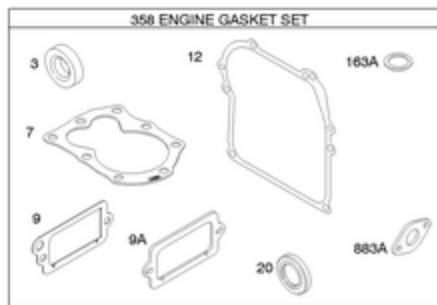

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	791358	CYLINDER ASSEMBLY			
3	299819S	SEAL, Oil		(Magnet Side)	
5	790169	HEAD, Cylinder			
7	698717	GASKET-CYL HD			
8	791779	BREATHER ASSEMBLY			
9	695890	GASKET-BREATHER		Used After Code Date 03031900	
9A	27549S	GASKET, Breather		Used Before Code Date 03032000	
10	691666	SCREW		(Breather Assembly)	
11	692528	TUBE, Breather			
11A	231550	TUBE, Breather			
12	270896	GASKET, Crankcase		(.009)	
12	692218	GASKET, Crankcase		(.015)(Standard)	
12	270895	GASKET, Crankcase		(.005)	
13	691640	SCREW		(Cylinder Head)	
14	690361	SCREW		(Cylinder Head)	
15	691686	PLUG-OIL DRAIN			
15A	691682	PLUG-OIL DRAIN			
20	692020	SEAL, Oil		(PTO Side) (Ball Bearing)	
33	296676	VALVE, Exhaust		(Grooved Stem-Includes Retainer)	
34	296677	VALVE, Intake		(Grooved stem-includes Retainer)	
35	690520	SPRING-VALVE		(Intake)	
36	690520	SPRING-VALVE		(Exhaust)	
40	692194	RETAINER, Valve			
45	691762	TAPPET, Valve			
51	273113S	GASKET, Intake			
163	271935S	GASKET, Air Cleaner		(Air Cleaner)	
306	690461	SHIELD, Cylinder			
307	691660	SCREW		(Cylinder Shield)	
308	690462	COVER, Cylinder Head			
337	802592S	PLUG, Spark		(Resistor)	
358	495605	GASKET SET, Engine			
383	89838S	WRENCH, Spark Plug			
527	691741	CLAMP, Hose			
529	692189	GROMMET		(90 Degree)	
529A	692187	GROMMET		(45 Degree)	
635	66538S	BOOT, Spark PLug			
718	690959	PIN, Locating		(Cylinder)	
868	697338	SEAL, Valve			
869	691701	SEAT-VALVE		(Intake)	
870	691702	SEAT, Valve		(Exhaust)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
871	231348	BUSHING-VALVE GUIDE		(Exhaust) Used Before Code Date 92072000	
871	262001	BUSHING-VALVE GUIDE		(Exhaust) Used After Code Date 92071900	
871	63709	BUSHING, Valve Guide		(Intake)	
883	691314	GASKET, Exhaust			
1058	277098	MANUAL, Operator's			
1095	699450	GASKET SET, Valve			
1319	794467	LABEL, Warning			
1330	270962	REP MAN-1 CYL L-HD			

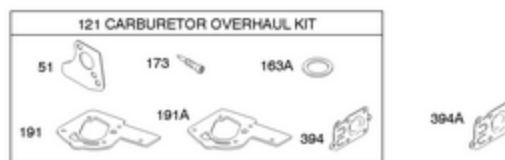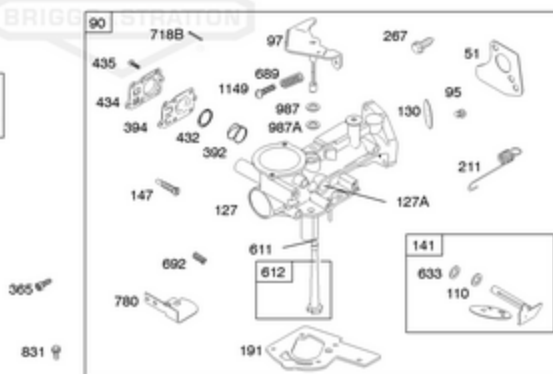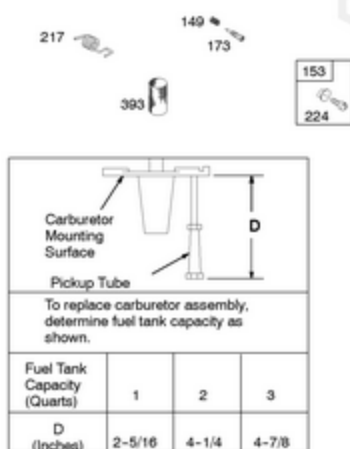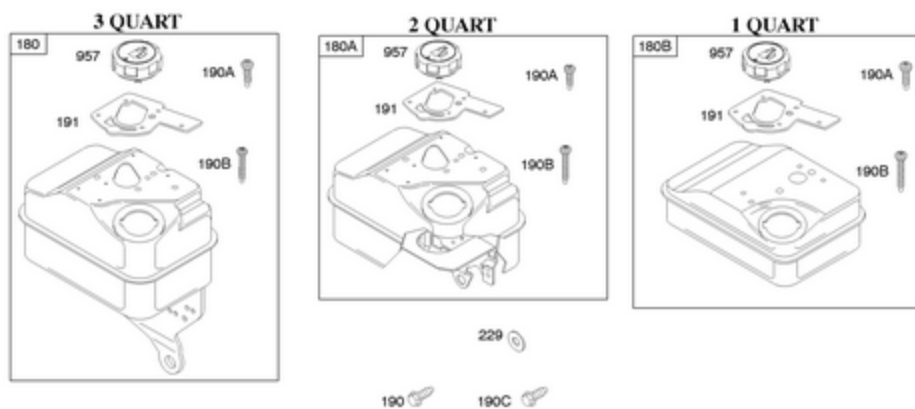


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	273113S	GASKET, Intake			
90	499491	CARBURETOR		(2 Quart Tank)(Air Vane) Used Before Code Date 98082400	
90	499952	CARBURETOR		(2 Quart Tank)(Air Vane) Used After Code Date 98082300	
95	691437	SCREW		(Throttle Valve)	
97	692018	SHAFT, Throttle			
110	690401	WASHER		(Choke Shaft)	
121	495606	KIT, Carburetor Overhaul			
127	691718	PLUG, Welch		(Carburetor Body)	
127A	691742	PLUG, Welch		(Mixing Chamber)	
130	691743	VALVE, Throttle			
141	491177	KIT, Choke Shaft		Used Before Code Date 94092600	
141	497230	KIT, Choke Shaft		Used After Code Date 94092500	
147	499502	JET, Pilot		(High Altitude)	
147	691250	JET, Pilot		(Standard)	
149	691592	SPRING-NEEDLE VALVE			
153	490501	SCREW		(Carburetor Lever)	
173	691777	VALVE, Idle Mixture			
180	495391	TANK, Fuel		(Metal) (3 Quart) (Air Vane)	
180A	495377	TANK, Fuel		(Metal) (2 Quart) (Air Vane)	
180A	495376	TANK, Fuel		(Metal) (2 Quart)(Mechanical Governor)	
180B	495370	TANK, Fuel		(Metal) (1 Quart)	
190	691685	SCREW		(Fuel Tank) (2/3)	
190A	692200	SCREW		(Fuel Tank) (3/4)	
190B	691687	SCREW		(Fuel Tank) (1 3/4)	
190C	691141	SCREW		(Fuel Tank) (1/2)	
191	692241	GASKET, Fuel Tank		Used After Code Date 92090600	
191A	272996	GASKET, Fuel Tank		Used Before Code Date 92090700	
211	691289	SPRING, Governed Idle			
217	691815	SPRING, Choke Return			
224	690320	SCREW		(Collar/Screw Kit)	
267	691082	SCREW		(Casing Clamp)	
365	690953	SCREW		(Carburetor) (3/4)	
392	691823	SPRING, Pump Diaphragm			
393	691213	SCREEN, Carburetor			
394	272538S	DIAPHRAGM, Carburetor		Used After Code Date 92063000	


Ref #	Part #	Description	Qty	Context Note	Foot Note
394A	270026	DIAPHRAGM, Carburetor		Used Before Code Date 92070100	
432	690766	CAP-SPRING			
434	691713	COVER- DIAPHRAGM			
435	691619	SCREW		(Diaphragm Cover)	
611	691770	PIPE-FUEL		(3 Quart Tank)	
611	690507	PIPE-FUEL		(2 Quart Tank)	
612	297219S	TUBE, Pick Up		(1 Quart Tank)	
612	391813	TUBE-PICK UP		(2 And 3 Quart Tanks)	
633	691869	SEAL, Choke/Throttle Shaft			
689	691783	SPRING-FRICTION		(Throttle Shaft)	
692	690572	SPRING, Detent			
718B	690296	PIN-LOCATING		(Diaphragm Cover)	
780	691211	ANCHOR, Spring			
831	691099	SCREW		(Spring Anchor)	
957	494559	CAP, Fuel Tank		(Plastic)	
987	692279	SEAL-THROTTLE SHAFT			
987A	270167	SEAL, Choke/Throttle Shaft			
1149	691624	SCREW		(Throttle Shaft)	

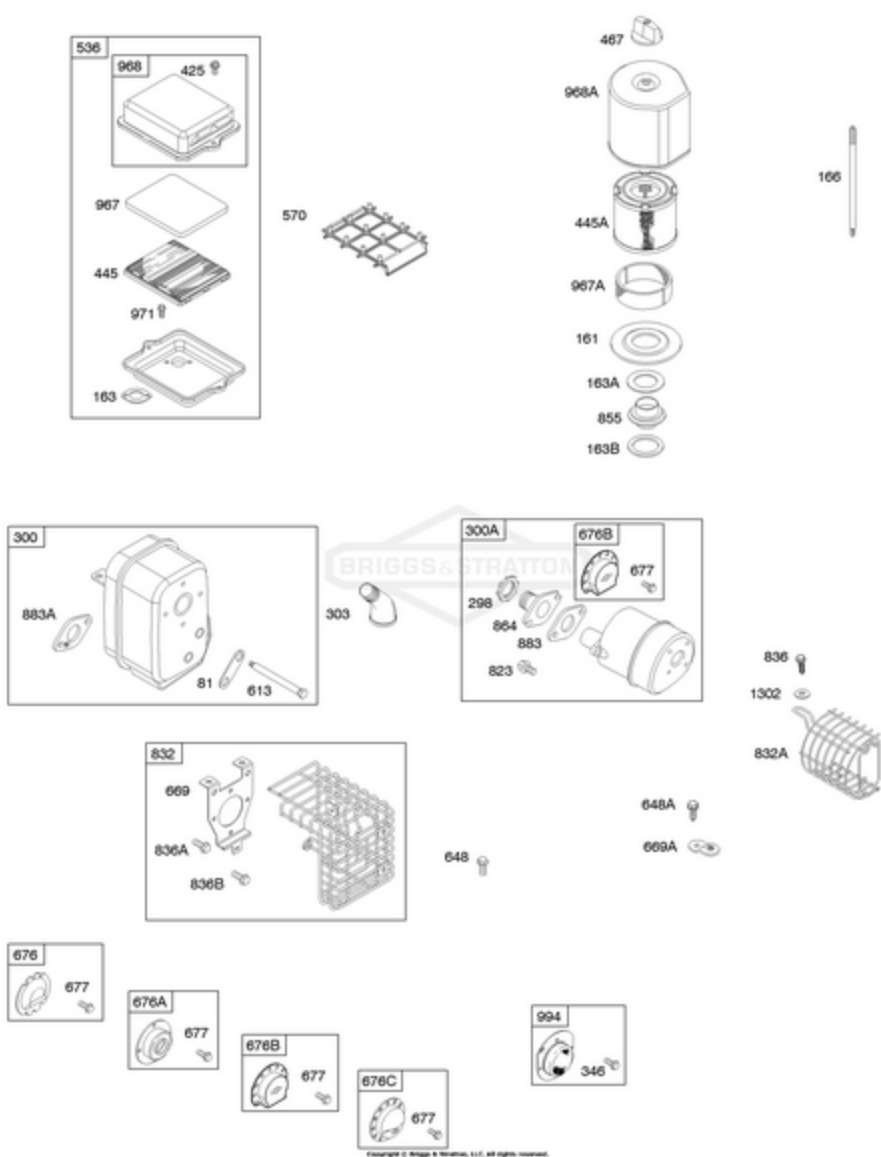

Ref #	Part #	Description	Qty	Context Note	Foot Note
81	691179	LOCK, Muffler Screw			
163	271935S	GASKET, Air Cleaner		(Air Cleaner)	
298	691720	LOCKNUT-MUFF/ ELBOW		(Muffler and Elbow)	
300	691360	MUFFLER			
300A	493288	MUFFLER		(Lo Tone)	
303	690291	ELBOW-EXHAUST			
346	690661	SCREW		(Spark Arrestor)	
425	694515	SCREW		(Air Cleaner Cover)	
445	491588S	FILTER, A/C Cartridge			
445A	396424S	FILTER, A/C Cartridge			
467	691668	KNOB, Air Cleaner Cover			
536	494279	CLEANER-AIR			
613	691632	SCREW		(Muffler)	
648	690661	SCREW		(Muffler Guard Bracket) (13/16" Long)	
648A	690664	SCREW		(Muffler Guard Bracket) (13/32)	
669	690427	BRACKET, Muffler Guard			
669A	691194	BRACKET, Muffler Guard			
676	393756	DEFLECTOR, Muffler		(Side Outlet)	
676A	397931	DEFLECTOR, Muffler			
676B	393760	DEFLECTOR, Muffler			
676C	396548	DEFLECTOR, Muffler			
677	690661	SCREW		(Muffler Deflector)	
823	692336	SCREW		(Muffler Adapter)	
832	490571	GUARD, Muffler			
832A	690789	GUARD-MUFFLER			
836	690367	SCREW		(Muffler Guard) (19/32)	
836A	690661	SCREW		(Muffler Guard) (13/32" Long)	
836B	691683	SCREW		(Muffler Guard) (1/3)	
855	690599	ADAPTER, Air Cleaner			
864	690776	ADAPTER, Muffler			
883	691314	GASKET, Exhaust			
967	491435S	FILTER, Pre Cleaner			
967A	271466	FILTER, Pre Cleaner			
968	692321	COVER, Air Cleaner			
968A	493822	COVER, Air Cleaner			
971	690370	SCREW		(Air Cleaner Base) (Remote Choke)	
994	398067	ARRESTOR-SPARK			
1302	691186	WASHER		(Muffler Guard)	

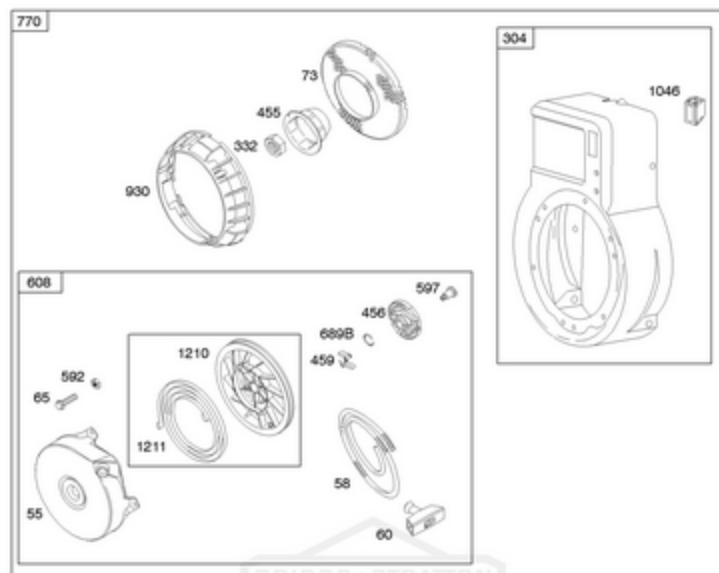

1036 EMISSIONS LABEL

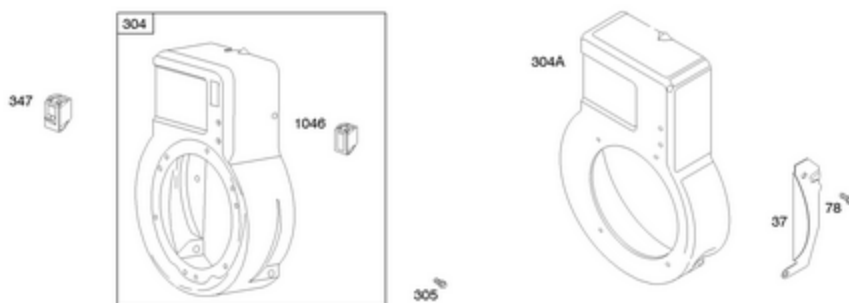

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
37	690463	GUARD, Flywheel			
55	692144	HOUSING, Rewind Starter			
58	691921	ROPE, Starter		(70)	
60	691915	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
73	699850	SCREEN, Rotating		Used After Code Date 02060200	
78	690364	SCREW		(Flywheel Guard)	
304	692622	HOUSING-BLOWER			
305	692198	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
347	691396	SWITCH, Rocker			
455	691236	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	690101	STARTER, Rewind		(70 Rope)	
689B	691855	SPRING-FRICTION		(Rewind Starter)	
770	690098	STARTER, Rewind		Used Before Code Date 95072400	
930	691348	GUARD, Rewind			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1046	691337	PLUG, Blower Housing			
1210	499901	PULLEY/SPRING ASSY		(Pulley)	
1211	499901	PULLEY/SPRING ASSY		(Spring)	