



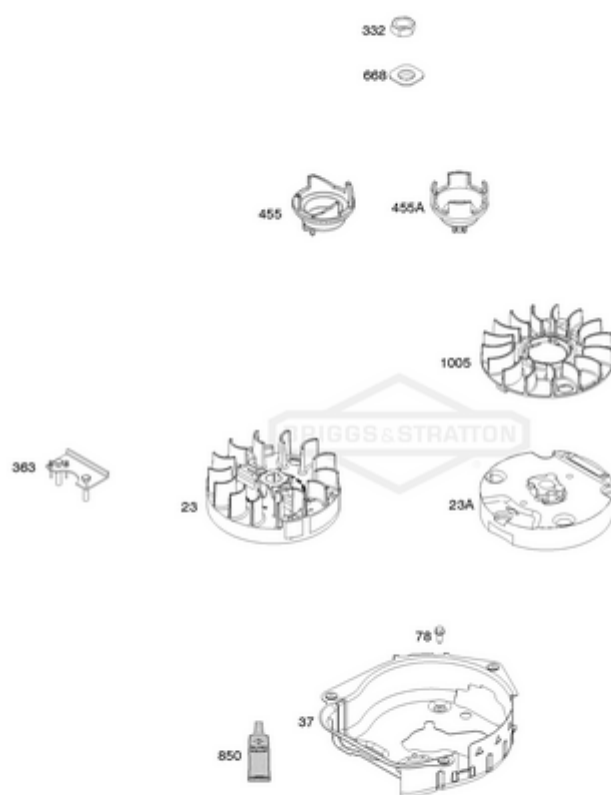


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	590544	FLYWHEEL	1		
23A	592005	FLYWHEEL	1		
37	594729	GUARD, Flywheel	1		
78	793480	SCREW	5	(Flywheel Guard)	
332	690662	NUT	1	(Flywheel)	
363	19619	PULLER, Flywheel	1		
455	590545	CUP, Flywheel	1	Used Before Code Date 14082500	
455A	593960	CUP, Flywheel	1	(To Be Used With Reference 608) Used After Code Date 14082400	
668	590546	SPACER	1	(Flywheel)	
850	100106	SEALANT, Liquid	1		
1005	592050	FAN, Flywheel	1		

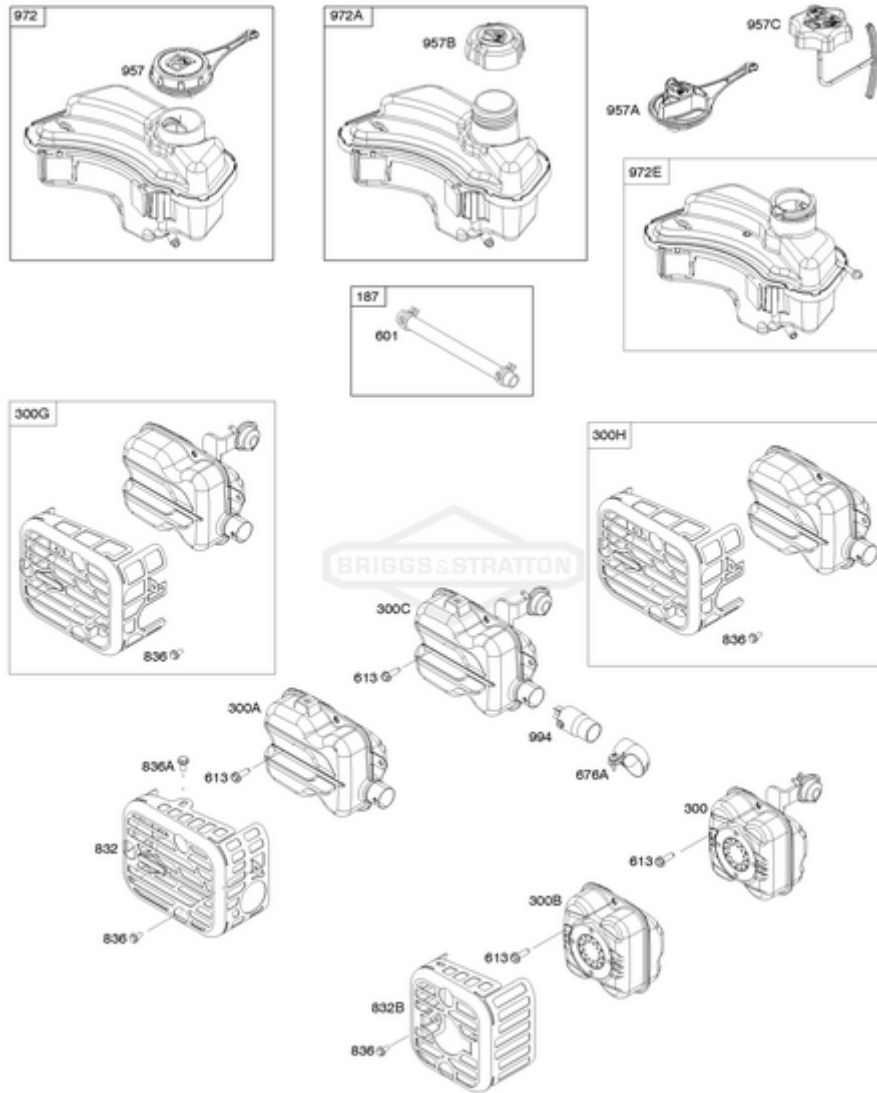


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
187	791766	LINE, Fuel	1	(Cut To Required Length)	
300B	590565	MUFFLER	1		
300C	592362	MUFFLER	1	Used Before Code Date 16012800	
300G	595516	MUFFLER	1	Used After Code Date 16012700	
601	791850	CLAMP-HOSE	2		
613	590562	SCREW	2	(Muffler)	
676A	799187	DEFLECTOR, Muffler	1		
832	590566	GUARD, Muffler	1		
832B	592709	GUARD, Muffler	1		
836	690661	SCREW	3	(Muffler Guard)	
836A	793500	SCREW	3	(Muffler Guard)	
957	799585	CAP, Fuel Tank	1	(Black) Used Before Code Date 16100300	
957A		Cap-Fuel Tank	1	(Order Replacement Fuel Tank Cap Reference Number 957)	
957B	692046	CAP, Fuel Tank	1		
957C	596250	CAP, Fuel Tank	1		
972A	591947	TANK, Fuel	1		
994	690813	ARRESTOR, Spark	1		

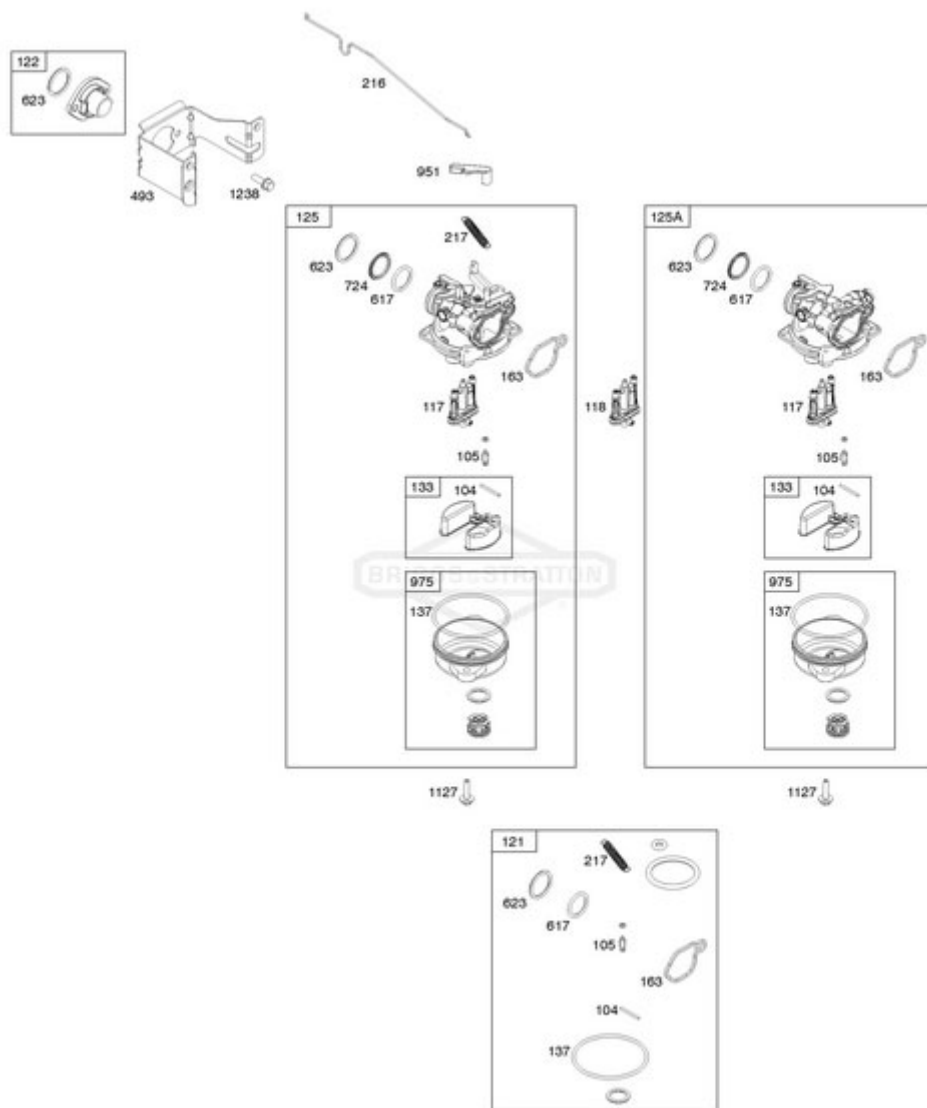

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
104	590558	PIN, Float Hinge			
105	594581	VALVE, Float Needle			
117	596522	JET, Main		(Standard)	
118	592688	JET, Main		(High Altitude)	
121	590589	KIT, Carburetor Overhaul		Used Before Code Date 15030900	
121	594636	KIT, Carburetor Overhaul		Used After Code Date 15030800	
122	590549	SPACER, Carburetor			
125	591109	CARBURETOR			
133	591120	FLOAT, Carburetor			
137	593235	GASKET, Float Bowl		(Pack of 5) Used Before Code Date 15030900	
137	594633	GASKET, Float Bowl		(Pack of 5) Used After Code Date 15030800	
163	799580	GASKET, Air Cleaner		(Air Cleaner)	
216	590547	LINK, Choke			
217	590740	SPRING, Choke Return			
493	593330	BRACKET, Mounting		(Carburetor)	
617	270344S	SEAL, O-Ring		(Intake Manifold)	
623	799581	SEAL, O-Ring		(Carburetor Spacer)	
724	697478	RETAINER, Seal			
951	591104	LEVER, Choke			
975	591492	BOWL, Float		Used Before Code Date 15030900	
975	594632	BOWL, Float		Used After Code Date 15030800	
1127	590554	SCREW		(Float Bowl to Carburetor Body)	
1238	590562	SCREW		(Carburetor Spacer)	

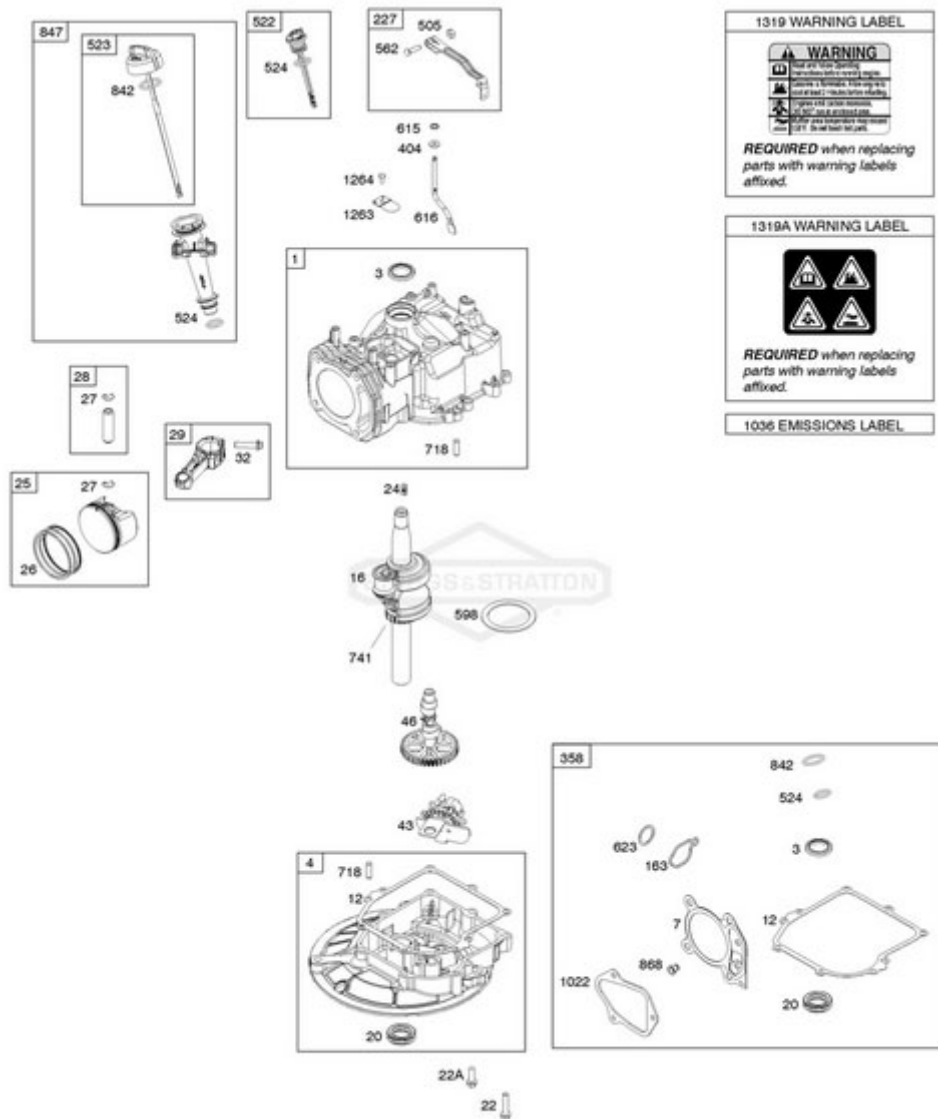

1319 WARNING LABEL

WARNING

Read and follow operating instructions carefully. Failure to follow instructions may result in death or serious injury. Always use proper safety techniques. Do not operate the engine without proper safety equipment. Do not use the engine for any purpose other than intended. Do not use the engine for any purpose other than intended.

REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL

WARNING


Read and follow operating instructions carefully. Failure to follow instructions may result in death or serious injury. Always use proper safety techniques. Do not operate the engine without proper safety equipment. Do not use the engine for any purpose other than intended. Do not use the engine for any purpose other than intended.

REQUIRED when replacing parts with warning labels affixed.

1036 EMISSIONS LABEL


Ref #	Part #	Description	Qty	Context Note	Foot Note
1	590519	CYLINDER ASSEMBLY			
3	299819S	SEAL-OIL		(Magneto Side)	
4	590569	SUMP-ENGINE			
7	799586	GASKET, Cylinder Head			
12	799587	GASKET, Crankcase			
16	590537	CRANKSHAFT			
20	391483S	SEAL, Oil		(PTO Side)	
22	692551	SCREW		(Crankcase Cover/Sump)	
22A	590763	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	590521	PISTON ASSEMBLY		(Standard)	
26	590523	SET, Ring		(Standard)	
27	691588	LOCK, Piston Pin			
28	699659	PIN, Piston		(Standard)	
29	590518	ROD, Connecting			
32	691664	SCREW		(Connecting Rod)	
43	697799	SLINGER, Governor/Oil		Used Before Code Date 16071100	
43	594560	SLINGER, Governor/Oil		Used After Code Date 16071000	
46	592968	CAMSHAFT			
163	799580	GASKET, Air Cleaner		(Air Cleaner)	
227	590520	LEVER, Governor Control			
358	595350	GASKET SET, Engine		(Service Kits may include extra parts not specific to this engine.) Used Before Code Date 18070100	
358	84001272	GASKET SET, Engine		(Service Kits may include extra parts not specific to this engine.) Used After Code Date 18063000	
404	690272	WASHER		(Governor Crank)	
505	793515	NUT		(Governor Control Lever)	
522	590580	PLUG, Dipstick/Fill			
523	796503	DIPSTICK			
524	691876	SEAL-O RING			
562	793514	BOLT		(Governor Lever)	
598	593291	SHIM, End Play		(Crankshaft or Camshaft Bearing)	
615	690340	RETAINER, Governor Shaft			
616	590516	CRANK, Governor			
623	799581	SEAL, O-Ring		(Carburetor Spacer)	
718	690959	PIN, Locating		(Crankcase Cover/Sump)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
741	796210	GEAR, Timing		(Plastic)	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	590572	DIPSTICK/TUBE ASSEMBLY			
868	590534	SEAL, Valve		(Intake)	
1022	591255	GASKET, Rocker Cover			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1263	697124	REED, Breather			
1264	793453	SCREW		(Breather Reed)	
1319	794467	LABEL, Warning			
1319A	797669	LABEL, Warning			

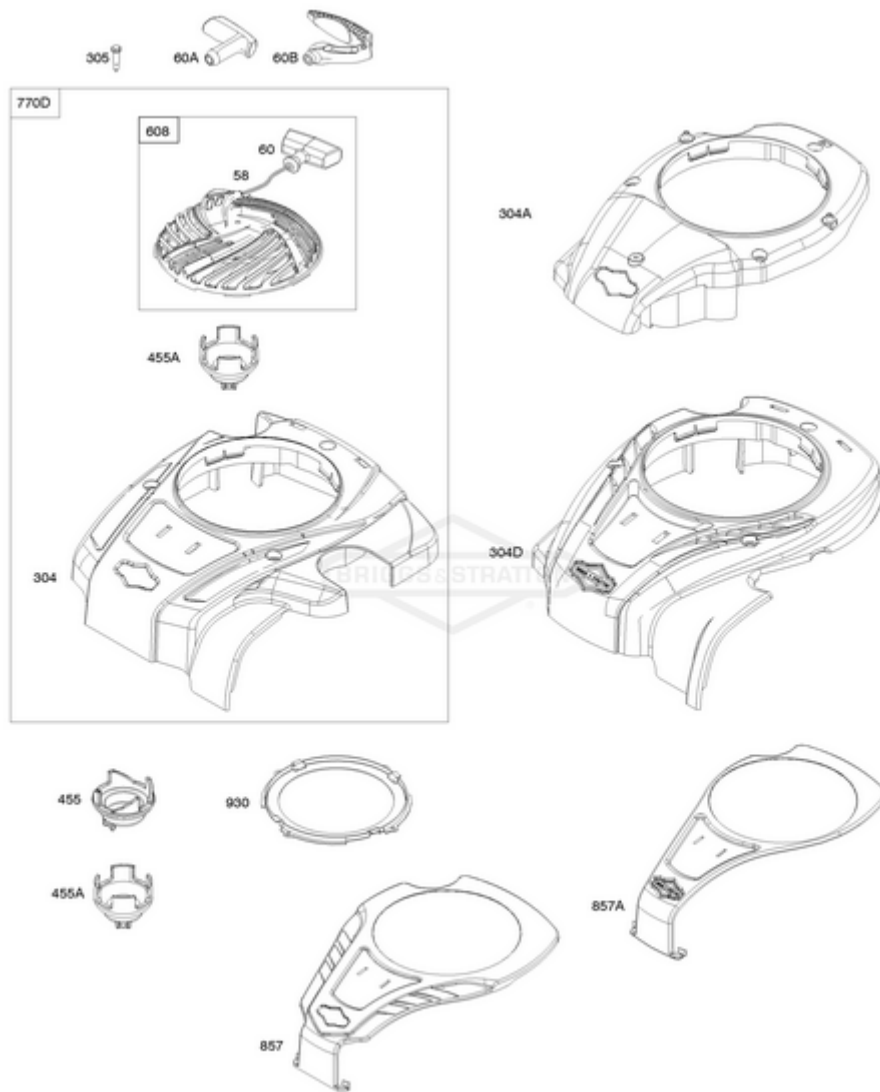


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
58	591108	ROPE, Starter	1		
60	691915	GRIP, Starter Rope	1		
60A	281434S	GRIP, Starter Rope	1		
60B	799716	GRIP, Starter Rope	1		
304	593961	HOUSING, Blower	1		
304A	593962	HOUSING, Blower	1		
304D	596457	HOUSING, Blower	1		
305	590586	SCREW	3	(Blower Housing)	
455	590545	CUP, Flywheel	1	Used Before Code Date 14082500	
455A	593960	CUP, Flywheel	1	(To Be Used With Reference 608) Used After Code Date 14082400	
608	593959	STARTER, Rewind	1	(To Be Used With Reference 455A) (Not To Be Used With Reference 455) Used After Code Date 14082400	
770D	595355	KIT, Rewind/Blower Housing	1		
857	591113	TRIM, Blower Housing Cover	1		
857A	591114	TRIM, Blower Housing Cover	1		
930	590585	GUARD, Rewind	1	Used Before Code Date 15041300	

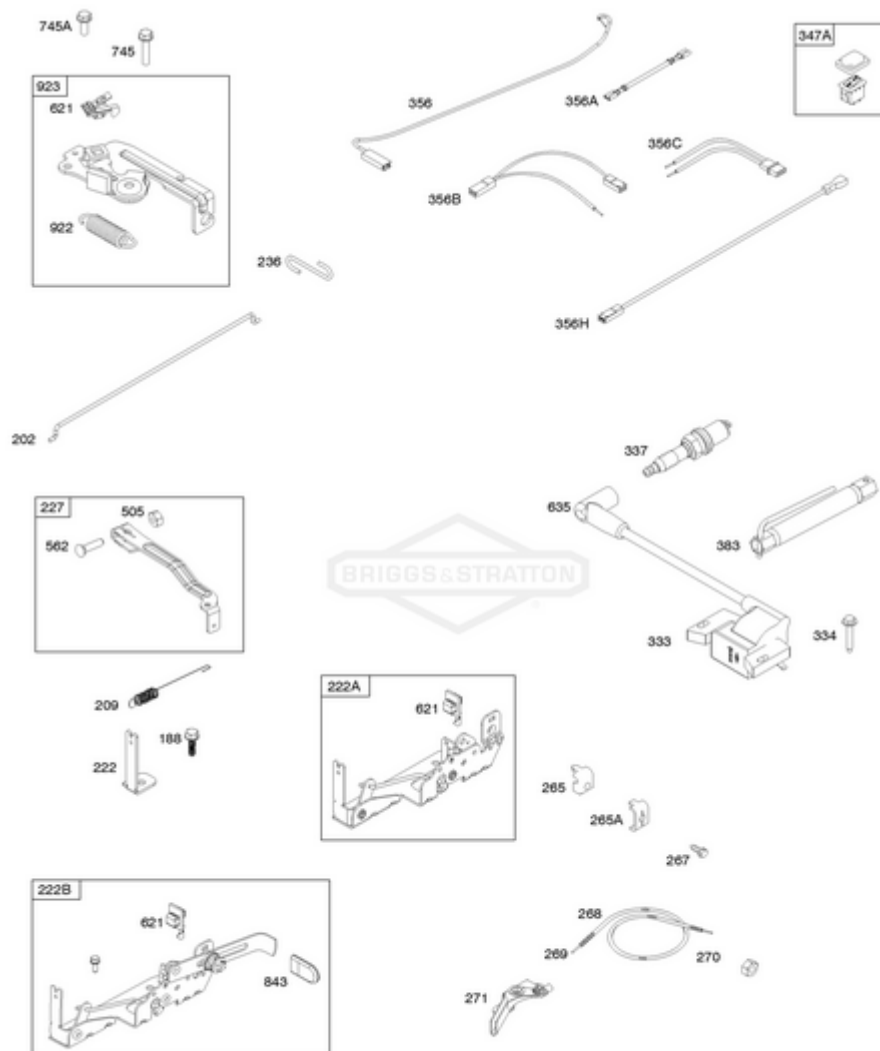

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	793480	SCREW		(Control Bracket)	
202	590517	LINK, Mechanical Governor			
209	590541	SPRING, Governor		Used Before Code Date 16071100	
209	596743	SPRING, Governor		Used After Code Date 16071000	
222	590560	BRACKET, Control			
222A	596458	BRACKET, Control		Used After Code Date 17010100	
222A	590561	BRACKET, Control		Used Before Code Date 17010200	
222B	596465	BRACKET, Control			
227	590520	LEVER, Governor Control			
236	591292	LINK, Lockout			
265	690798	CLAMP, Casing			
265A	691024	CLAMP, Casing			
267	692577	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
333	593872	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
337	692720	PLUG, Spark		(EMS)	
356	692390	WIRE, Stop			
356A	592711	WIRE, Stop			
383	19576S	WRENCH, Spark Plug			
505	793515	NUT		(Governor Control Lever)	
562	793514	BOLT		(Governor Lever)	
621	692310	SWITCH, Stop			
635	692076	BOOT, Spark Plug			
745	691146	SCREW		(Brake)	
745A	690859	SCREW		(Brake)	
843	593215	SLEEVE, Lever			
922	692135	SPRING, Brake			
923	691487	BRAKE			



Ref #	Part #	Description	Qty	Context Note	Foot Note
5	595351	HEAD, Cylinder	1	Used Before Code Date 18070100	
5	84001270	HEAD, Cylinder	1	Used After Code Date 18063000	
7	799586	GASKET, Cylinder Head	1		
11	590522	TUBE, Breather	1		
13	590512	SCREW	4	(Cylinder Head)	
33	590531	VALVE, Exhaust	1		
34	590530	VALVE, Intake	1	Used Before Code Date 18070100	
34	84001987	VALVE, Intake	1	Used After Code Date 18063000	
35	590532	SPRING, Valve	1	(Intake)	
36	590532	SPRING, Valve	1	(Exhaust)	
40	590528	RETAINER, Valve	2		
45	590514	TAPPET, Valve	2		
155	590529	PLATE, Cylinder Head	1		
163	799580	GASKET, Air Cleaner	1	(Air Cleaner)	
192	590535	ADJUSTER. Rocker Arm	2		
238	590533	CAP, Valve	2		
318	793480	SCREW	2	(Mounting Bracket)	
356A	592711	WIRE, Stop	1		
445	593260	FILTER, A/C Cartridge	1		
528	793006	HOSE, Primer	1	(Cut To Required Length)	
535	799579	FILTER, Air Cleaner Foam	1		
535A	595191	FILTER, Air Cleaner Foam	1		
623	799581	SEAL, O-Ring	1	(Carburetor Spacer)	
868	590534	SEAL, Valve	1	Used Before Code Date 18070100	
868	84001271	SEAL, Valve	1	Used After Code Date 18063000	
875	590553	BASE, Air Cleaner	1	Used Before Code Date 16051600	
875	595661	BASE-AIR CLEANER	1	Used After Code Date 16051500	
875A	595662	BASE, Air Cleaner	1	Used After Code Date 16051500	
875A	590557	BASE, Air Cleaner	1	Used Before Code Date 16051600	
914	591103	SCREW	3	(Rocker Cover)	
968	595658	COVER, Air Cleaner	1		
971	590552	SCREW	2	(Air Cleaner Base to Carburetor/Throttle Body)	
976	594281	PRIMER, Carburetor	1		
1022	591255	GASKET, Rocker Cover	1		
1023	595349	COVER, Rocker	1		
1026	590515	ROD, Push	2		
1029	590526	ARM, Rocker	1		
1029A	590527	ARM, Rocker	1		