
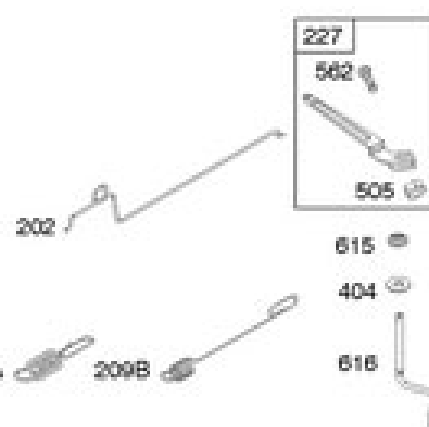
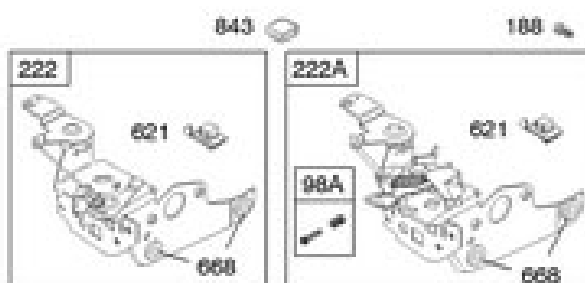

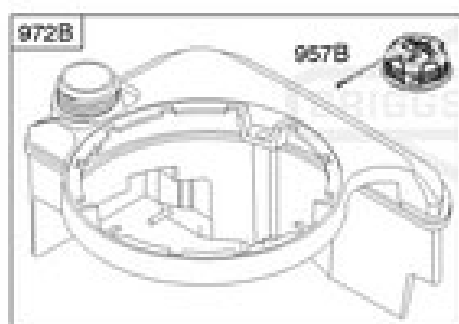
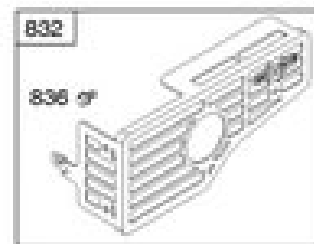
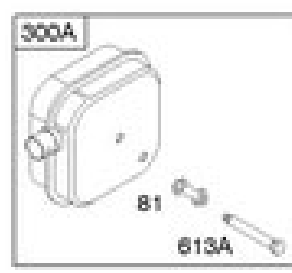
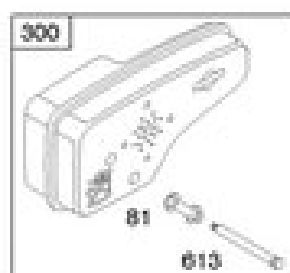
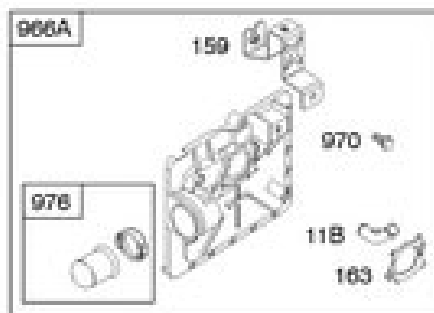
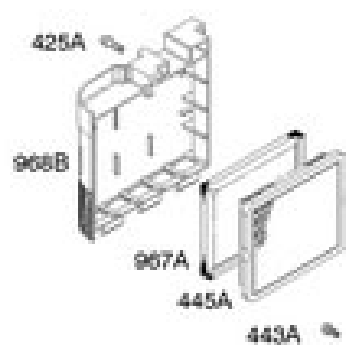


Ref #	Part #	Description	Qty	Context Note	Foot Note
11B	691923	TUBE, Breather			
81	691740	LOCK, Muffler Screw			
98A	493280	SCREW		(Control Bracket)	
159	691753	BRACKET, Air Cleaner Primer			
163	272653S	GASKET, Air Cleaner		(Air Cleaner)	
187	791766	LINE, Fuel		(Cut To Required Length)	
187A	791873	LINE, Fuel		(Cut To Required Length)	
188	690877	SCREW		(Control Bracket)	
190	690940	SCREW		(Fuel Tank)	
202	691829	LINK, Mechanical Governor			
209B	691292	SPRING, Governor			
222	790143	BRACKET, Control		(Remote/Manual Friction) (Primer)	
222A	692021	BRACKET, Control		(Remote Choke & Choke- A-Matic)	
227	690783	LEVER, Governor Control			
265	690798	CLAMP, Casing			
265A	691024	CLAMP, Casing			
267	691044	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
300	692038	MUFFLER		(Super Lo Tone Tuned)	
300A	494343S	MUFFLER		(Square Lo Tone)	
404	690272	WASHER		(Governor Crank)	
425A	690670	SCREW		(Air Cleaner Cover)	
443A	692523	SCREW		(Air Cleaner Primer Base)	
445A	491588S	FILTER, A/C Cartridge			
505	691251	NUT		(Governor Control Lever)	
562	92613	BOLT		(Governor Lever)	
601	791850	CLAMP, Hose			
613	691340	SCREW		(Muffler)	
613A	691653	SCREW		(Muffler)	
615	690340	RETAINER, Governor Shaft			
616	698801	CRANK, Governor			
621	692310	SWITCH, Stop			
668	493823	SPACER		(Includes 2)	
670	692294	SPACER, Fuel Tank			
676	396548	DEFLECTOR, Muffler		(Single Louver)	
676E	393760	DEFLECTOR, Muffler		(Side Out)	
677	690661	SCREW		(Muffler Deflector)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
832	499034	GUARD, Muffler		Used Before Code Date 11070100	
832	590486	GUARD, Muffler		Used After Code Date 11063000	
832A	691424	MUFFLER			
836	690664	SCREW		(Muffler Guard)	
843	691884	SLEEVE, Lever		(Control Bracket)	
883	691881	GASKET, Exhaust			
957	397974S	CAP, Fuel Tank		(Plastic)	
957B	699985	CAP, Fuel Tank		(Plastic)	
966A	496116	BASE, Air Cleaner		(Primer)	
967A	493537S	FILTER, Air Cleaner Foam			
968B	692298	COVER, Air Cleaner			
970	691681	SCREW		(Air Cleaner Primer Bracket)	
972B	699374	TANK, Fuel		(Plastic)	
976	694395	PRIMER, Carburetor			
1059	692311	KIT, Screw/Washer			

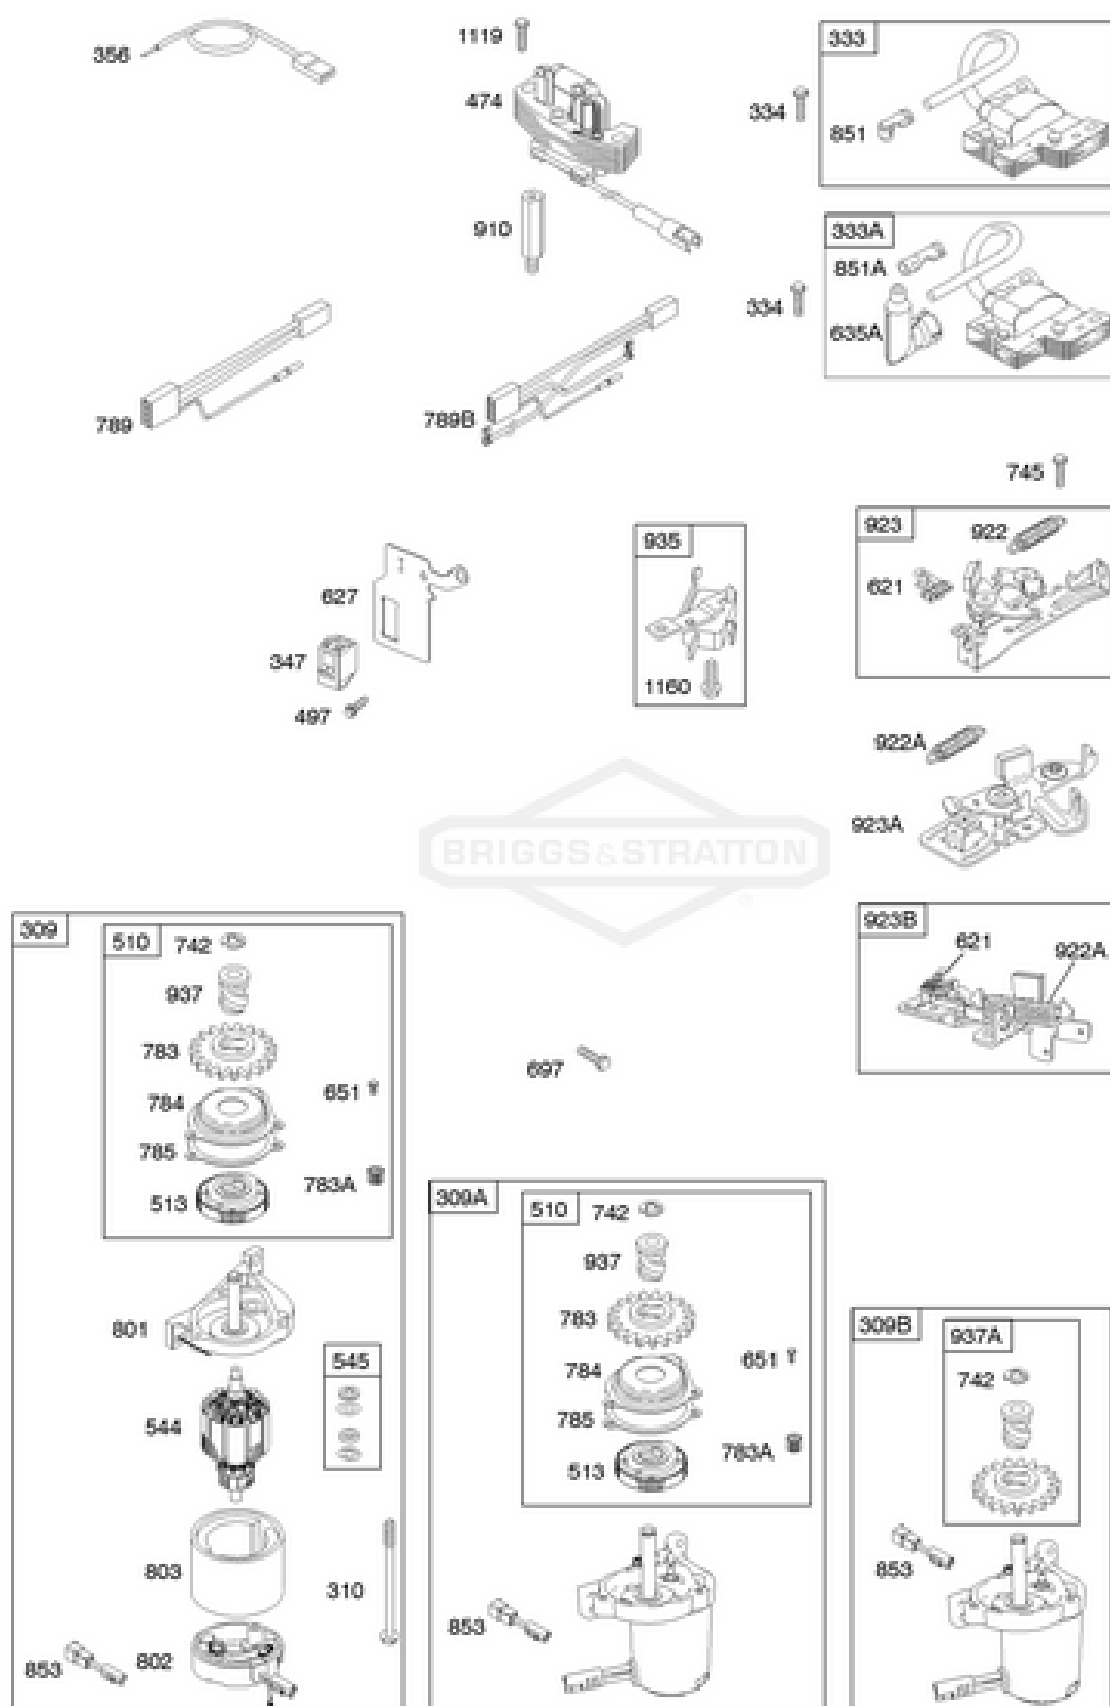

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
309	695550	MOTOR, Starter		Used Before Code Date 07052900	
309A	795092	MOTOR, Starter		Used After Code Date 07052800 Used Before Code Date 10112800	
309B	799045	MOTOR, Starter		Used After Code Date 10112700	
310	692327	SCREW		(Starter Motor)	
333	802574	ARMATURE, Magneto			
333A	792640	ARMATURE, Magneto		(Screw On Spark Plug Boot)	
333A	793353	ARMATURE, Magneto		(Snap In Spark Plug Boot)	
334	691061	SCREW		(Magneto Armature)	
347	691396	SWITCH, Rocker			
356	692390	WIRE, Stop			
474	691991	ALTERNATOR			
497	690664	SCREW		(Stopswitch Bracket)	
510	795093	DRIVE, Starter			
513	692358	CLUTCH, Drive			
544	690786	ARMATURE, Starter			
545	492919	WASHER		(Starter Motor)	
621	692310	SWITCH, Stop			
627	692872	BRACKET, Stopswitch			
635A	793351	SHIELD, Spark Plug		(Snap In Style)	
635A	792597	BOOT, Spark Plug		(Screw On Style)	
651	690345	SCREW		(Starter Gear Cover)	
697	691127	SCREW		(Drive Cap)	
742	93941	RETAINER, E Ring			
745	691648	SCREW		(Brake)	
783	691918	GEAR, Pinion		(Starter Drive)(19 Teeth)	
783A	691269	GEAR, Pinion		(12 Teeth)	
784	795095	COVER, Starter Gear			
785	692352	GASKET, Starter Cover			
789	696546	HARNESS, Wiring			
789B	696547	HARNESS, Wiring			
801	690782	CAP, Drive			
802	695267	CAP, End			
803	695266	HOUSING, Starter			
851	493880S	TERMINAL, Spark Plug			
851A	692424	TERMINAL, Spark Plug			

Ref #	Part #	Description	Qty	Context Note	Foot Note
853	695268	ADAPTER, Wire			
910	691094	STUD		(Alternator)	
922	691831	SPRING, Brake			
922A	692135	SPRING, Brake			
923	796387	BRAKE		Used After Code Date 08043000	
923A	695891	BRAKE			
935	499421	SWITCH, Interlock		Used Before Code Date 08050100	
937	691325	SPLINE, Starter			
937A	799420	SPLINE, Starter			
1119	691648	SCREW		(Alternator)	
1160	690345	SCREW		(Interlock Switch)	

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.


1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL



1019 LABEL KIT


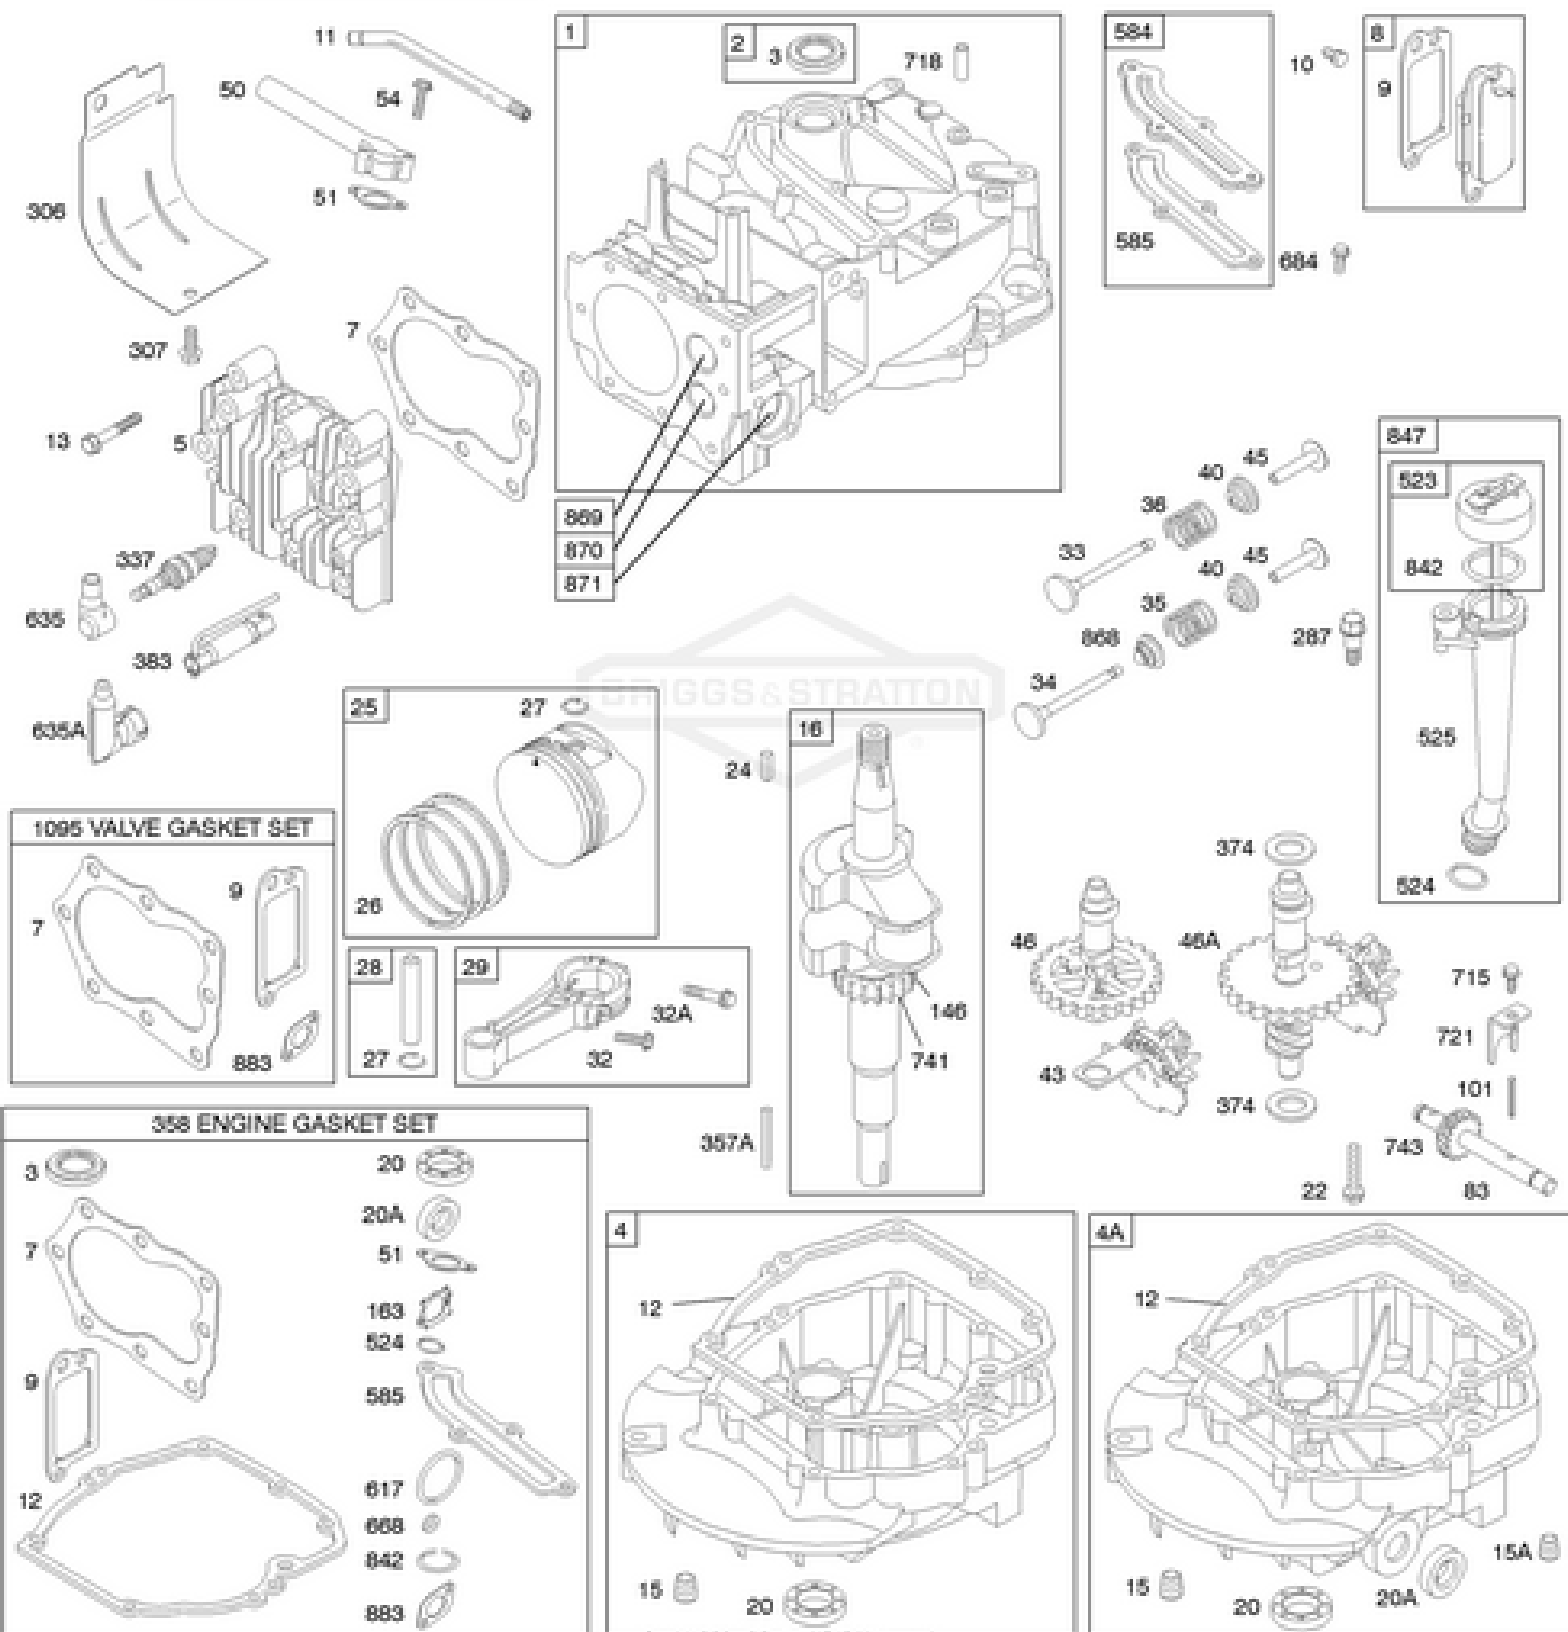


Ref #	Part #	Description	Qty	Context Note	Foot Note
1	590401	CYLINDER ASSEMBLY		Used After Code Date 11063000	
1	697322	CYLINDER ASSEMBLY		Used Before Code Date 11070100	
2	399269	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL, Oil		(Magneto Side)	
4	493279	SUMP, Engine			
4A	493365	SUMP, Engine		(Auxiliary PTO)	
5	691160	HEAD, Cylinder		Used Before Code Date 11070100	
5	590411	HEAD, Cylinder		Used After Code Date 11063000	
7	692249	GASKET, Cylinder Head		Used Before Code Date 11070100	
7	799875	GASKET, Cylinder Head		Used After Code Date 11063000	
8	695250	BREATHER ASSEMBLY		Used Before Code Date 11070100	
8	590395	BREATHER ASSEMBLY		Used After Code Date 11063000	
9	699472	GASKET, Breather		Used After Code Date 11063000	
9	699833	GASKET, Breather		Used Before Code Date 11070100	
10	691125	SCREW		(Breather Assembly)	
11	691781	TUBE, Breather			
12	692232	GASKET, Crankcase			
13	590422	SCREW		(Cylinder Head) Used After Code Date 11063000	
13	690912	SCREW		(Cylinder Head) Used Before Code Date 11070100	
15	691680	PLUG, Oil Drain		(Square Socket)	
15A	691093	PLUG, Oil Drain		(Hex Socket)	
16	691451	CRANKSHAFT			
20	399781S	SEAL, Oil		(PTO Side)	
20A	691952	SEAL, Oil		(PTO Side) (Auxiliary PTO)	
22	691092	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	590405	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 11063000	
25	791097	PISTON ASSEMBLY		(Standard) Used Before Code Date 07090400	
25	791326	PISTON ASSEMBLY		(.020 Oversize) Used Before Code Date 07090400	
25	795429	PISTON ASSEMBLY		(Standard) Used After Code Date 07090300 Used Before Code Date 09041700	
25	795430	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 07090300 Used Before Code Date 09041700	

Ref #	Part #	Description	Qty	Context Note	Foot Note
25	797302	PISTON ASSEMBLY		(Standard) Used After Code Date 09041600 Used Before Code Date 11070100	
25	797303	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 09041600 Used Before Code Date 11070100	
25	590404	PISTON ASSEMBLY		(Standard) Used After Code Date 11063000	
26	499427	SET, Ring		(.020 Oversize) Used Before Code Date 04102200	
26	590402	SET, Ring		(Standard) Used After Code Date 11063000	
26	590403	SET, Ring		(Standard) Used After Code Date 11063000	
26	791098	SET, Ring		(Standard) Used After Code Date 04031400 Used Before Code Date 07090400	
26	791324	SET, Ring		(.020 Oversize) Used After Code Date 04102100 Used Before Code Date 07090400	
26	795431	SET, Ring		(Standard) Used After Code Date 07090300 Used Before Code Date 09041700	
26	795432	SET, Ring		(.020 Oversize) Used After Code Date 07090300 Used Before Code Date 09041700	
26	797304	SET, Ring		(Standard) Used After Code Date 09041600 Used Before Code Date 11070100	
26	797305	SET, Ring		(.020 Oversize) Used After Code Date 09041600 Used Before Code Date 11070100	
26	499425	SET, Ring		(Standard) Used Before Code Date 04031500	
27	691866	LOCK, Piston Pin		Used Before Code Date 09041700	
27	691588	LOCK, Piston Pin		Used After Code Date 09041600	
28	298909	PIN, Piston		(Standard) Used After Code Date 09041600	
28	499423	PIN, Piston		(Standard) Used Before Code Date 09041700	
29	499424	ROD, Connecting		(Standard) Used Before Code Date 09041700	
29	797306	ROD, Connecting		(Standard) Used After Code Date 09041600	
32	691664	SCREW		(Connecting Rod)	
32A	695759	SCREW		(Connecting Rod)	
33	262651S	VALVE, Exhaust		Used Before Code Date 11070100	
33	590394	VALVE, Exhaust		Used After Code Date 11063000	

Ref #	Part #	Description	Qty	Context Note	Foot Note
34	262652S	VALVE, Intake		Used Before Code Date 11070100	
34	590393	VALVE, Intake		Used After Code Date 11063000	
35	691270	SPRING, Valve		(Intake)	
36	691270	SPRING, Valve		(Exhaust)	
40	692194	RETAINER, Valve			
43	691997	SLINGER, Governor/Oil			
45	690548	TAPPET, Valve			
46	691449	CAMSHAFT			
46A	691459	CAMSHAFT		(Counterclockwise)	
50	497465	MANIFOLD, Intake			
51	272199S	GASKET, Intake			
54	691650	SCREW		(Intake Manifold)	
83	690522	SHAFT, Auxiliary Drive			
101	691623	PIN, Shaft			
146	690979	KEY, Woodruff			
163	272653S	GASKET, Air Cleaner		(Air Cleaner)	
287	690940	SCREW		(Dipstick Tube)	
306	690450	SHIELD, Cylinder			
307	690345	SCREW		(Cylinder Shield)	
337	799876	PLUG, Spark		Used After Code Date 11063000	
337	802592S	PLUG, Spark		(Resistor) Used Before Code Date 11070100	
337	697451	PLUG, Spark		(EMS) Used Before Code Date 11070100	
357A	691483	KEY, Drive Pulley			
358	497316	GASKET SET, Engine		Used Before Code Date 11070100	
358	590508	GASKET SET, Engine		Used After Code Date 11063000	
374	691074	WASHER		(Camshaft)	
383	89838S	WRENCH, Spark Plug			
523	499621	DIPSTICK			
524	692296	SEAL, O-Ring		(Dipstick Tube)	
525	495265	TUBE, Dipstick			
584	697734	COVER, Breather Passage			
585	691879	GASKET, Breather Passage			
617	270344S	SEAL, O-Ring		(Intake Manifold)	
635	66538S	BOOT, Spark Plug			
635A	793351	SHIELD, Spark Plug		(Snap In Style)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
635A	792597	BOOT, Spark Plug		(Screw On Style)	
668	493823	SPACER		(Includes 2)	
684	690345	SCREW		(Breather Passage Cover)	
715	691147	SCREW		(Stop Shaft)	
718	690959	PIN, Locating			
721	690449	STOP, Shaft			
741	795755	GEAR, Timing		(Plastic) Used After Code Date 08021700	
741	797521	GEAR, Timing		(Metal) Used After Code Date 08021700	
741	691830	GEAR, Timing		(Uses Woodruff Key)	
741	790345	GEAR, Timing		(Use Without Woodruff Key) Used Before Code Date 07100100	
741	794388	GEAR, Timing		(Use Without Woodruff Key) Used After Code Date 07093000 Used Before Code Date 08021800	
743	691772	GEAR, Drive		(Counterclockwise)	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	692047	DIPSTICK/TUBE ASSEMBLY			
868	697338	SEAL, Valve		Used Before Code Date 11070100	
868	590410	SEAL, Valve		Used After Code Date 11063000	
869	691155	SEAT, Valve		(Intake)	
870	690380	SEAT, Valve		(Exhaust)	
871	63709	BUSHING, Valve Guide		(Intake) Used Before Code Date 11070100	
871	262001	BUSHING, Valve Guide		(Exhaust) Used Before Code Date 11070100	
871	590409	BUSHING, Valve Guide		Used After Code Date 11063000	
883	691881	GASKET, Exhaust			
1019	696438	KIT, Label			
1058	380567TRI	MANUAL, Operator's		Used After Code Date 11063000	
1058	277039TRI	MANUAL, Operator's		Used Before Code Date 11070100	
1095	498528	GASKET SET, Valve		Used Before Code Date 11070100	
1095	590507	GASKET SET, Valve		Used After Code Date 11063000	
1319	794467	LABEL, Warning			
1330	270962	MANUAL, Repair			

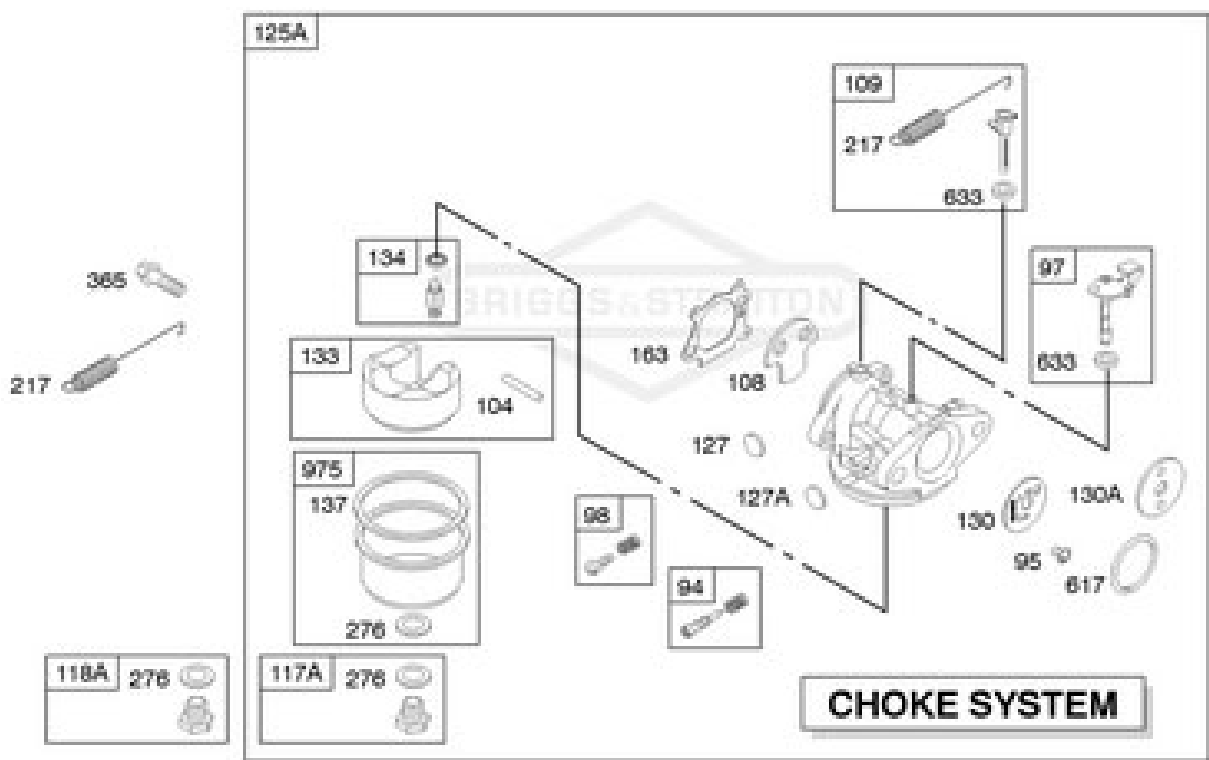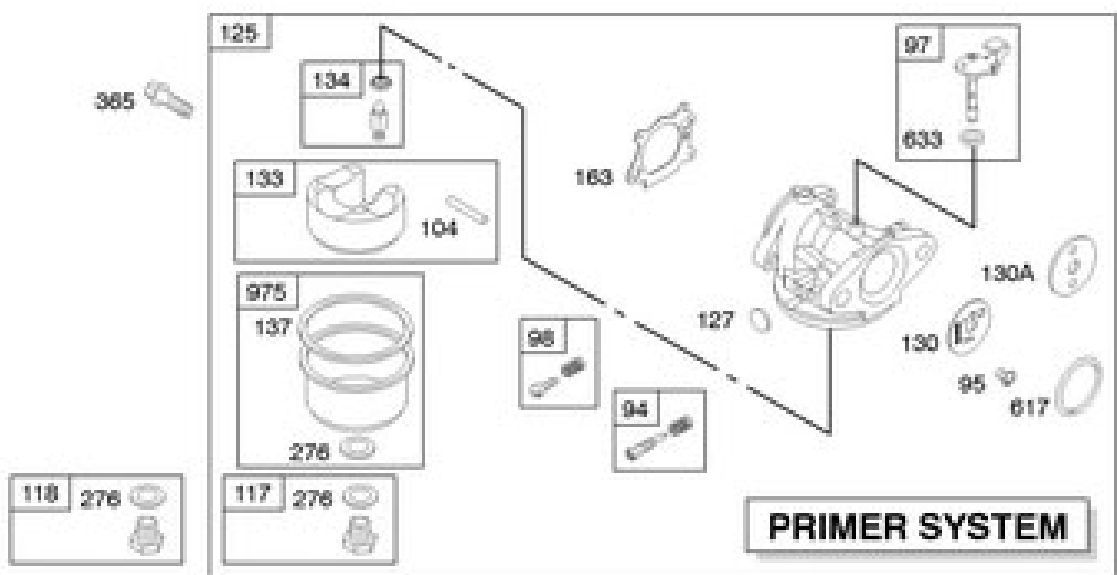


121 CARBURETOR OVERHAUL KIT			
94	134	276	
104	137	617	
127	163	633	
127A			

977 CARBURETOR GASKET SET		
137	276	633
163	617	

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
94	493765	KIT, Idle Mixture		(Used On Carb. I.d. No. M24)	
95	691636	SCREW		(Throttle Valve)	
97	493267	KIT, Throttle Shaft		(Metal)	
97	696565	SHAFT, Throttle		(Plastic)	
98	398185	KIT, Idle Speed		(Carburetor)	
104	691242	PIN, Float Hinge			
108	691182	VALVE, Choke			
109	494218	KIT, Choke Shaft			
117	498978	JET, Main		(Standard)	
117A	498977	JET, Main		(Standard)	
118	498975	JET, Main		(High Altitude)	
118A	498981	JET, Main		(High Altitude)	
121	498260	KIT, Carburetor Overhaul			
125	498170	CARBURETOR		(Primer)	
125A	498965	CARBURETOR		(Choke)	
127	694468	PLUG, Welch		(3/8 Diameter)	
127A	691739	PLUG, Welch		(5/16 Diameter)	
130	696564	VALVE, Throttle		(Used With Plastic Throttle Shaft)	
130A	691181	VALVE, Throttle			
133	398187	FLOAT, Carburetor			
134	398188	KIT, Needle/Seat			
137	796610	GASKET, Float Bowl			
137	693981	GASKET, Float Bowl		(1/16)	
163	272653S	GASKET, Air Cleaner		(Air Cleaner)	
217	690354	SPRING, Choke Return			
276	271716	WASHER, Sealing			
365	691688	SCREW		(Carburetor)	
617	270344S	SEAL, O-Ring		(Intake Manifold)	
633	691321	SEAL, Choke/Throttle Shaft		(Throttle Shaft)	
975	493640	BOWL, Float			
977	498261	SET, Carburetor Gasket			

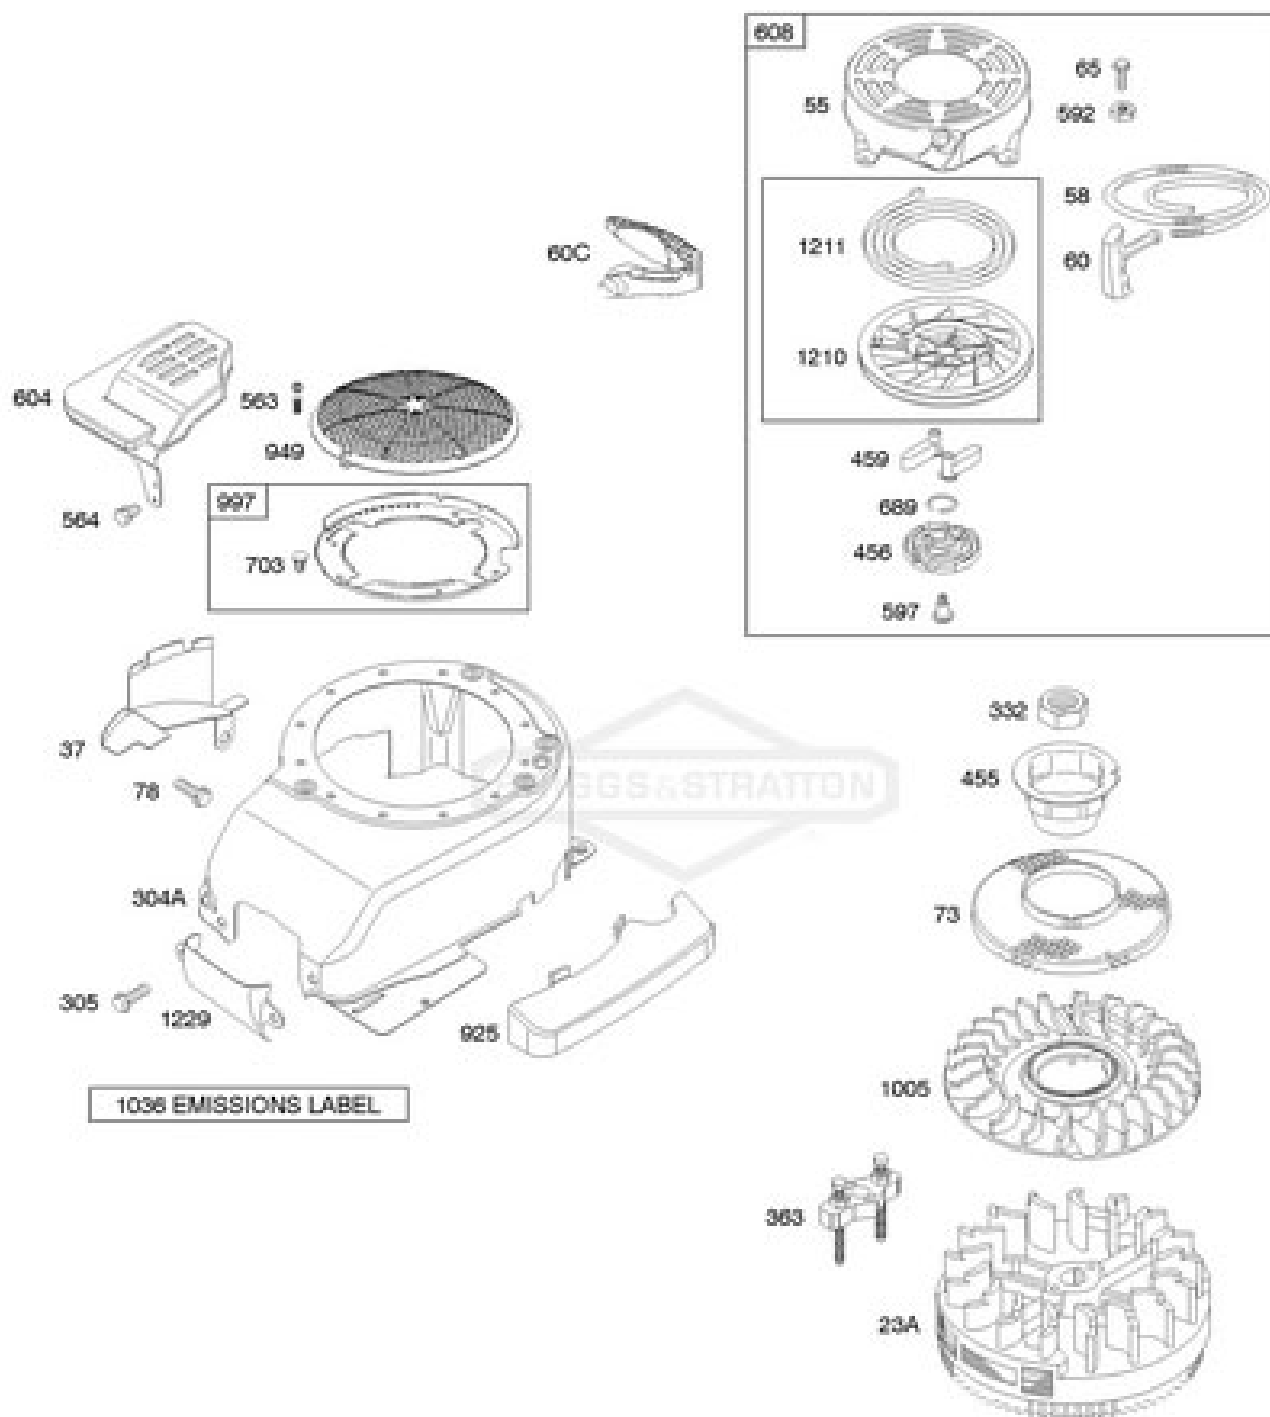

Ref #	Part #	Description	Qty	Context Note	Foot Note
23A	691987	FLYWHEEL			
37	694086	GUARD, Flywheel			
55	691421	HOUSING, Rewind Starter			
58	697316	ROPE, Starter		(Cut To Required Length)	
60	281434S	GRIP, Starter Rope			
60C	799716	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
73	691222	SCREEN, Rotating			
78	691108	SCREW		(Flywheel Guard)	
304A	695892	HOUSING, Blower			
305	691108	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
363	19069	PULLER, Flywheel			
455	791960	CUP, Flywheel			
456	692299	PLATE, Pawl Friction			
459	281505S	PAWL, Ratchet			
563	691138	SCREW		(Debris Screen Guard)	
564	690664	SCREW		(Control Cover)	
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
604	691757	COVER, Control			
608	497680	STARTER, Rewind			
689	691855	SPRING, Friction			
703	696309	CLIP			
925	795403	COVER, Linkage		Used After Code Date 07072200	
925	690595	COVER, Linkage		Used Before Code Date 07072300	
949	696306	GUARD, Debris Screen			
997	696310	SHIELD, Debris			
1005	691346	FAN, Flywheel			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1210	498144	PULLEY/SPRING ASSEMBLY		(Pulley)	
1211	498144	PULLEY/SPRING ASSEMBLY		(Spring)	
1229	696308	EXTENSION, Blower Housing			