

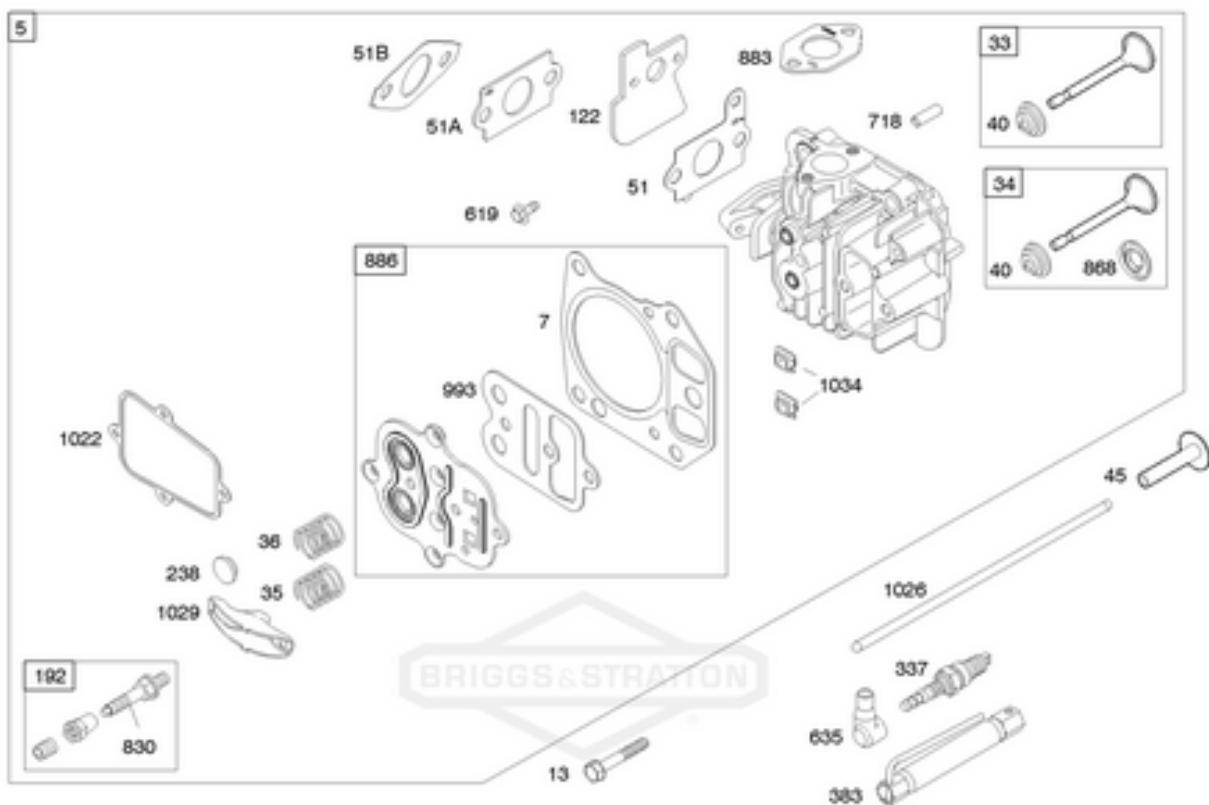
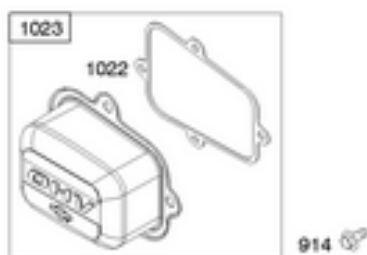



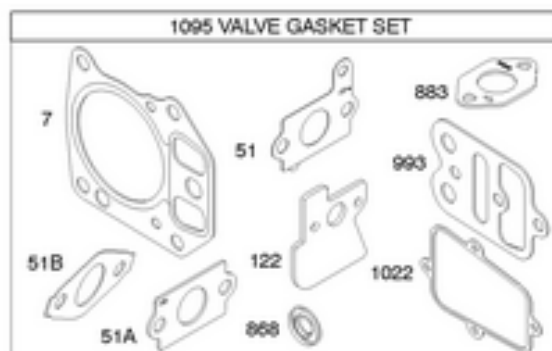


Ref #	Part #	Description	Qty	Context Note	Foot Note
5	695276	HEAD, Cylinder		Used Before Code Date 05110200	
5	795501	HEAD, Cylinder		Used After Code Date 05110100	
7	697230	GASKET-CYLINDER HEAD			
13	691137	SCREW		(Cylinder Head)	
33	499642	VALVE, Exhaust			
34	499641	VALVE, Intake			
35	691304	SPRING, Valve		(Intake)	
36	691304	SPRING, Valve		(Exhaust)	
40	692194	RETAINER, Valve			
45	690977	TAPPET, Valve			
51	692668	GASKET, Intake			
51A	697735	GASKET, Intake			
51B	692555	GASKET, Intake		(2 Required)	
122	692799	SPACER, Carburetor			
192	694543	ADJUSTER-ROCKER ARM			
238	691300	CAP, Valve			
337	692720	PLUG, Spark		(EMS)	
337	692051	PLUG, Spark		(Resistor)	
383	19374S	WRENCH, Spark Plug			
619	691108	SCREW		(Cylinder Head Plate)	
635	66538S	BOOT, Spark PLug			
718	690959	PIN, Locating			
830	694544	STUD-ROCKER ARM		(Rocker Arm)	
868	692044	SEAL, Valve			
883	691893	GASKET-EXHAUST			
886	696268	KIT, Cylinder Head/Plate Gasket			
914	691108	SCREW		(Rocker Cover)	
993	694088	GASKET, Cylinder Head Plate			
1022	691890	GASKET-ROCKER COVER			
1023	499624	COVER, Rocker			
1026	692045	ROD, Push			
1029	691230	ARM, Rocker			
1034	691343	GUIDE, Push Rod			
1095	792386	GASKET SET, Valve			

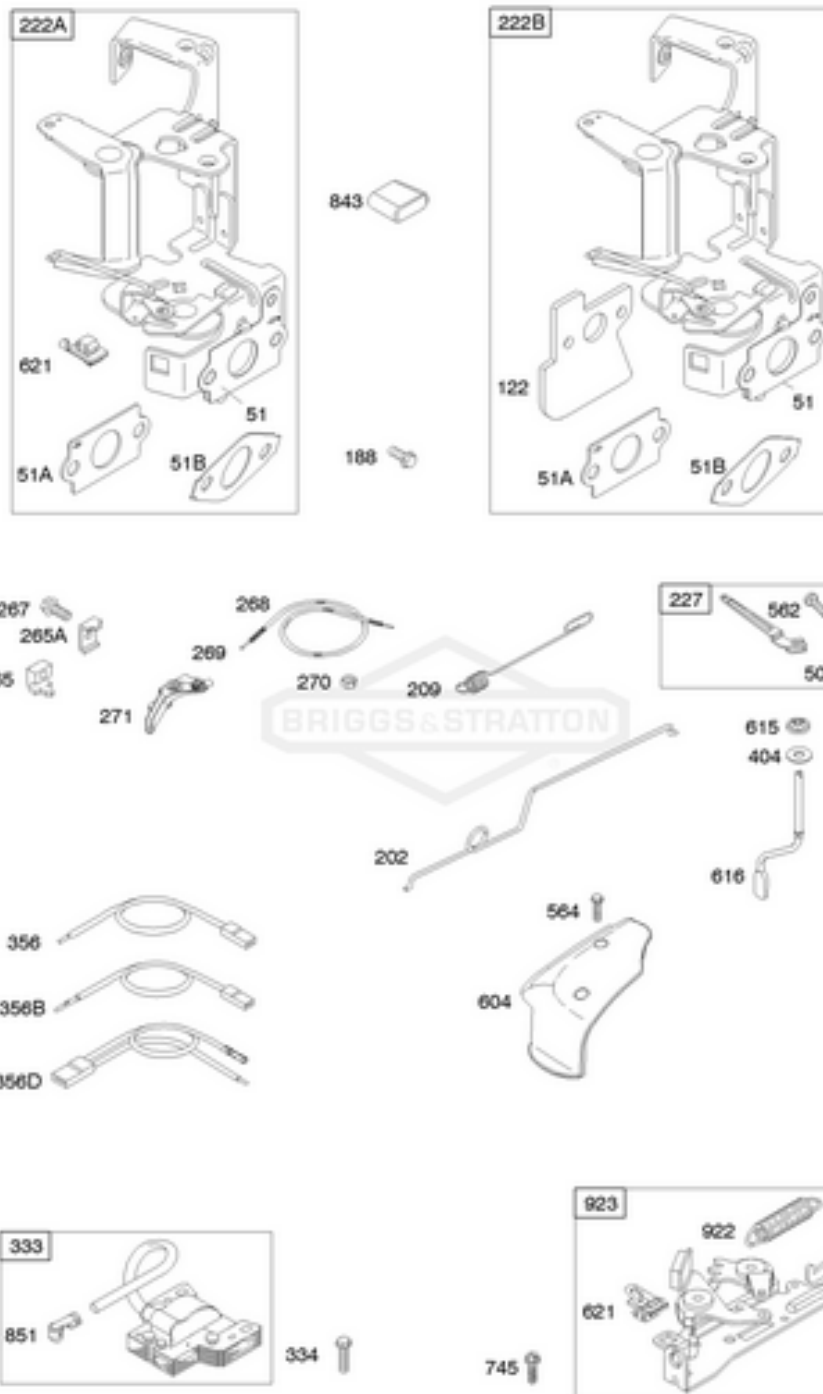


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692668	GASKET, Intake			
51A	697735	GASKET, Intake			
51B	692555	GASKET, Intake		(2 Required)	
122	692799	SPACER, Carburetor			
188	691147	SCREW		(Control Bracket)	
202	691303	LINK, Mechanical Governor			
209	690319	SPRING, Governor			
222B	692672	BRACKET, Control		Used Before Code Date 05110200	
222B	792403	BRACKET, Control		Used After Code Date 05110100	
227	691467	LEVER, Governor Control			
265	690798	CLAMP, Casing			
265A	691024	CLAMP, Casing			
267	691044	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
333	802574	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356	692390	WIRE, Stop			
356B	692151	WIRE, Stop			
356D	695283	WIRE ASSEMBLY			
404	690272	WASHER		(Governor Crank)	
505	691251	NUT		(Governor Control Lever)	
562	691119	BOLT		(Governor Control Lever)	
564	693808	SCREW		(Control Cover)	
604	692669	COVER, Control			
615	690340	RETAINER, Governor Shaft			
616	698801	CRANK, Governor			
621	692310	SWITCH, Stop			
745	691648	SCREW		(Brake)	
843	691884	SLEEVE, Lever			
851	493880S	TERMINAL, Spark Plug			
922	692135	SPRING, Brake			
923	695891	BRAKE			

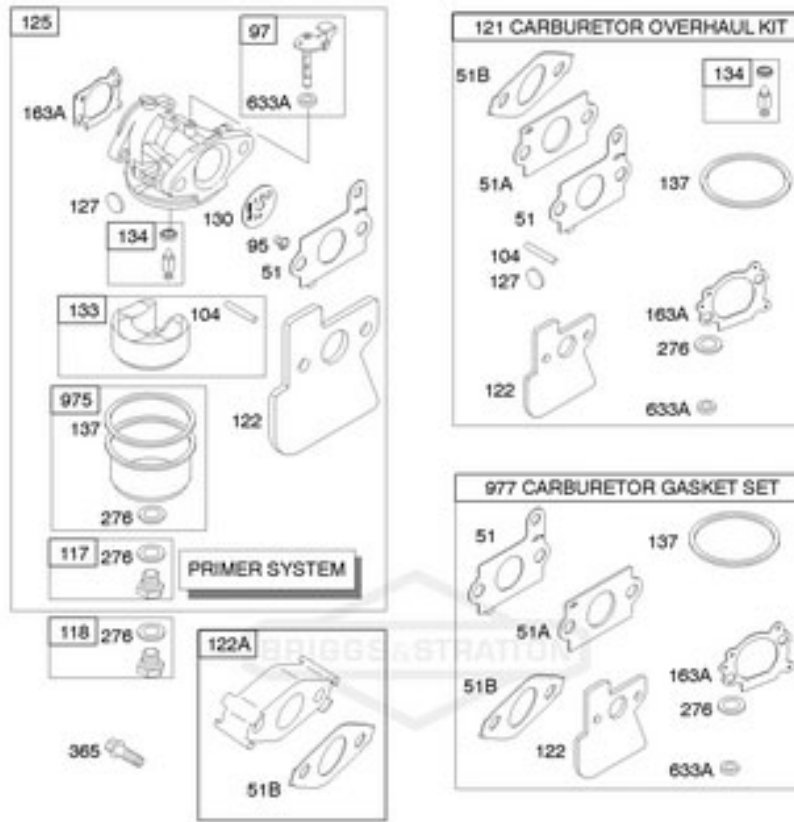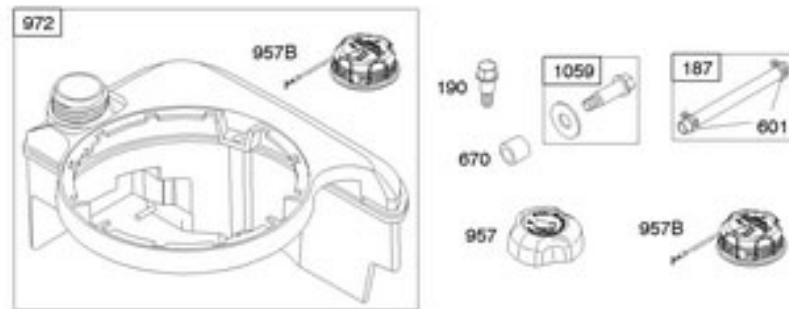

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692668	GASKET, Intake			
51A	697735	GASKET, Intake			
51B	692555	GASKET, Intake		(2 Required)	
95	691636	SCREW		(Throttle Valve)	
97	499682	SHAFT, Throttle		(Metal)	
97	790121	SHAFT, Throttle		(Plastic)	
104	691242	PIN, Float Hinge			
117	498978	JET, Main		(Standard) Used Before Code Date 03110700	
117	498981	JET, Main		(Standard) Used After Code Date 03110600	
118	498975	JET, Main		(High Altitude) Used Before Code Date 03110700	
118	497466	JET, Main		(High Altitude) Used After Code Date 03110600	
121	792383	KIT, Carburetor Overhaul			
122	692799	SPACER, Carburetor			
122A	792382	SPACER, Carburetor			
125	790120	CARBURETOR			
127	694468	PLUG, Welch		(Bowl Vent)	
130	691203	VALVE, Throttle			
130	696564	VALVE, Throttle		(Used With Plastic Throttle Shaft)	
133	398187	FLOAT-CARBURETOR			
134	398188	KIT-NEEDLE/SEAT			
137	693981	GASKET-FLOAT BOWL			
163A	692667	GASKET, Air Cleaner		(Air Cleaner)	
187	791766	LINE, Fuel		(Cut To Required Length)	
190	690940	SCREW		(Fuel Tank)	
276	271716	WASHER-SEALING			
365	691129	SCREW		(Carburetor) Used After Code Date 05110100	
365	691136	SCREW		(Carburetor) Used Before Code Date 05110200	
601	791850	CLAMP, Hose			
633A	691321	SEAL, Choke/Throttle Shaft		(Throttle Shaft)	
670	692294	SPACER, Fuel Tank			
957	692046	CAP, Fuel Tank		(Plastic)	
957B	699985	CAP, Fuel Tank		(Plastic)	
972	699374	TANK, Fuel		(Plastic)	
975	493640	BOWL, Float			
977	792385	SET, Carburetor Gasket			
1059	692311	KIT, Screw/Washer			

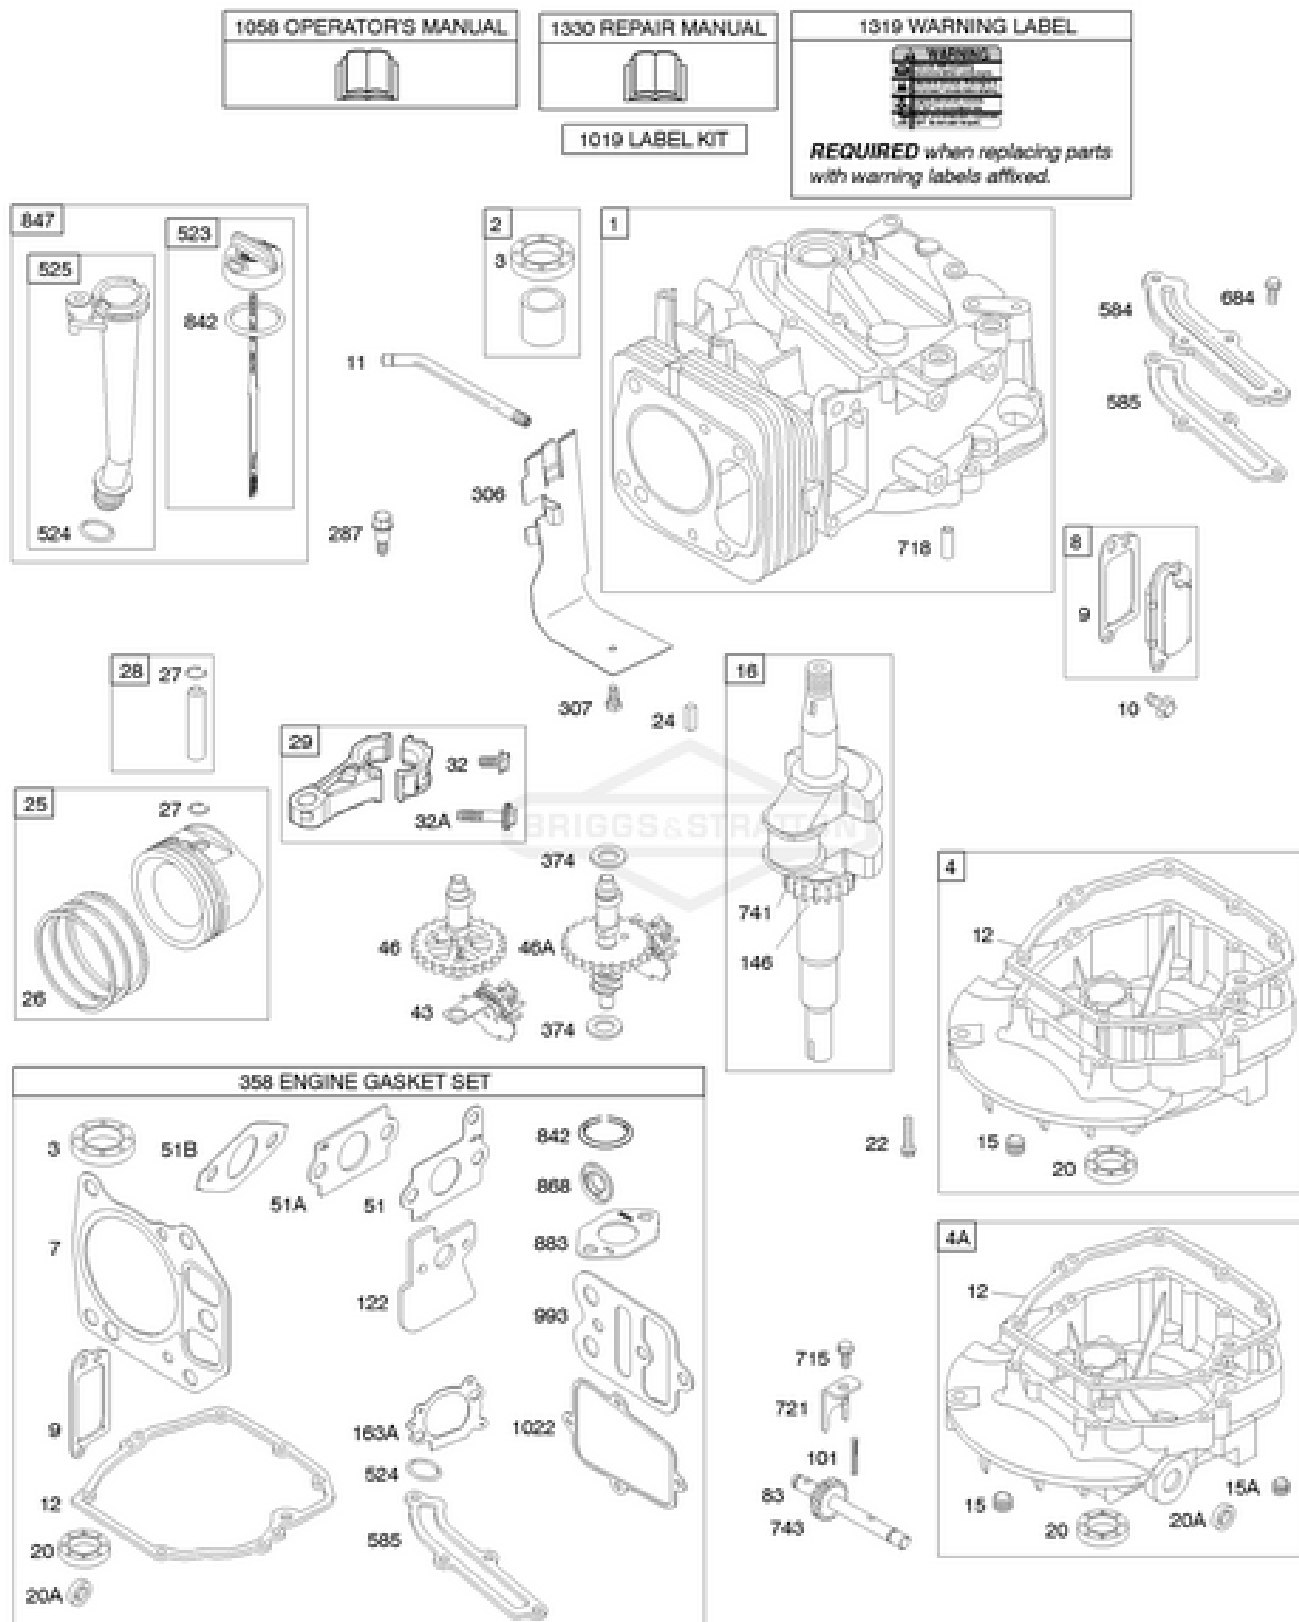


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	499678	CYLINDER ASSEMBLY		Used Before Code Date 04040500	
1	790363	CYLINDER ASSEMBLY		Used After Code Date 04040400	
2	399269	KIT, Bushing/Seal		(Magneto Side)	
3	299819S	SEAL, Oil		(Magneto Side)	
4	493279	SUMP, Engine			
7	697230	GASKET-CYLINDER HEAD			
8	495786	BREATHER ASSEMBLY			
9	699833	GASKET-BREATHER			
10	691125	SCREW		(Breather Assembly)	
11	499675	TUBE, Breather			
12	692232	GASKET, Crankcase			
15	691680	PLUG, Oil Drain		(Square Socket)	
15A	691093	PLUG, Oil Drain		(Hex Socket)	
16	691457	CRANKSHAFT			
20	399781S	SEAL, Oil		(PTO Side)	
20A	691952	SEAL, Oil		(PTO Side) (Auxiliary PTO)	
22	691092	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	791325	PISTON ASSEMBLY		(.020 Oversize) Used Before Code Date 07090400	
25	792004	PISTON ASSEMBLY		(Standard) Used Before Code Date 07090400	
25	795429	PISTON ASSEMBLY		(Standard) Used After Code Date 07090300	
25	795430	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 07090300	
26	795431	RING SET		(Standard) Used After Code Date 07090300	
26	795432	SET, Ring		(.020 Oversize) Used After Code Date 07090300	
26	499631	SET, Ring		(Standard) Used Before Code Date 05030800	
26	692786	SET, Ring		(.020 Oversize) Used Before Code Date 05030800	
26	791324	SET, Ring		(.020 Oversize) Used After Code Date 05030700 Used Before Code Date 07090400	
26	791969	SET, Ring		(Standard) Used After Code Date 05030700 Used Before Code Date 07090400	
27	691866	LOCK-PISTON PIN			
28	499423	PIN-PISTON/STD		(Standard)	





Ref #	Part #	Description	Qty	Context Note	Foot Note
29	499424	ROD, Connecting		(Standard)	
32	691664	SCREW		(Connecting Rod)	
32A	695759	SCREW		(Connecting Rod)	
43	691997	SLINGER, Governor/Oil			
46	694039	CAMSHAFT			
51	692668	GASKET, Intake			
51A	697735	GASKET, Intake			
51B	692555	GASKET, Intake		(2 Required)	
83	690522	SHAFT, Auxiliary Drive			
101	691623	PIN, Shaft			
122	692799	SPACER, Carburetor			
146	690979	KEY, Woodruff			
163A	692667	GASKET, Air Cleaner		(Air Cleaner)	
287	690940	SCREW		(Dipstick Tube)	
306	691232	SHIELD- CYLINDER			
307	690345	SCREW		(Cylinder Shield)	
358	792384	GASKET SET, Engine			
374	691074	WASHER		(Camshaft)	
523	499621	DIPSTICK			
524	692296	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
525	495265	TUBE, Dipstick			
584	697734	COVER-BREA PASSAGE			
585	691879	GASKET-BREA PASSAGE			
684	690345	SCREW		(Breather Passage Cover)	
715	691147	SCREW		(Stop Shaft)	
718	690959	PIN, Locating			
721	690449	STOP, Shaft			
741	790345	GEAR, Timing		(Use Without Woodruff Key) Used Before Code Date 07100100	
741	794388	GEAR, Timing		(Use Without Woodruff Key) Used After Code Date 07093000	
741	691830	GEAR-TIMING		(Uses Woodruff Key)	
743	691772	GEAR, Drive		(Counterclockwise)	
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	692047	DIPSTICK/TUBE ASSY			
868	692044	SEAL, Valve			

Ref #	Part #	Description	Qty	Context Note	Foot Note
883	691893	GASKET- EXHAUST			
993	694088	GASKET, Cylinder Head Plate			
1019	696438	KIT, Label			
1022	691890	GASKET-ROCKER COVER			
1058	277102	MANUAL, Operator's			
1319	794467	LABEL, Warning			
1330	272147	MANUAL, Repair			

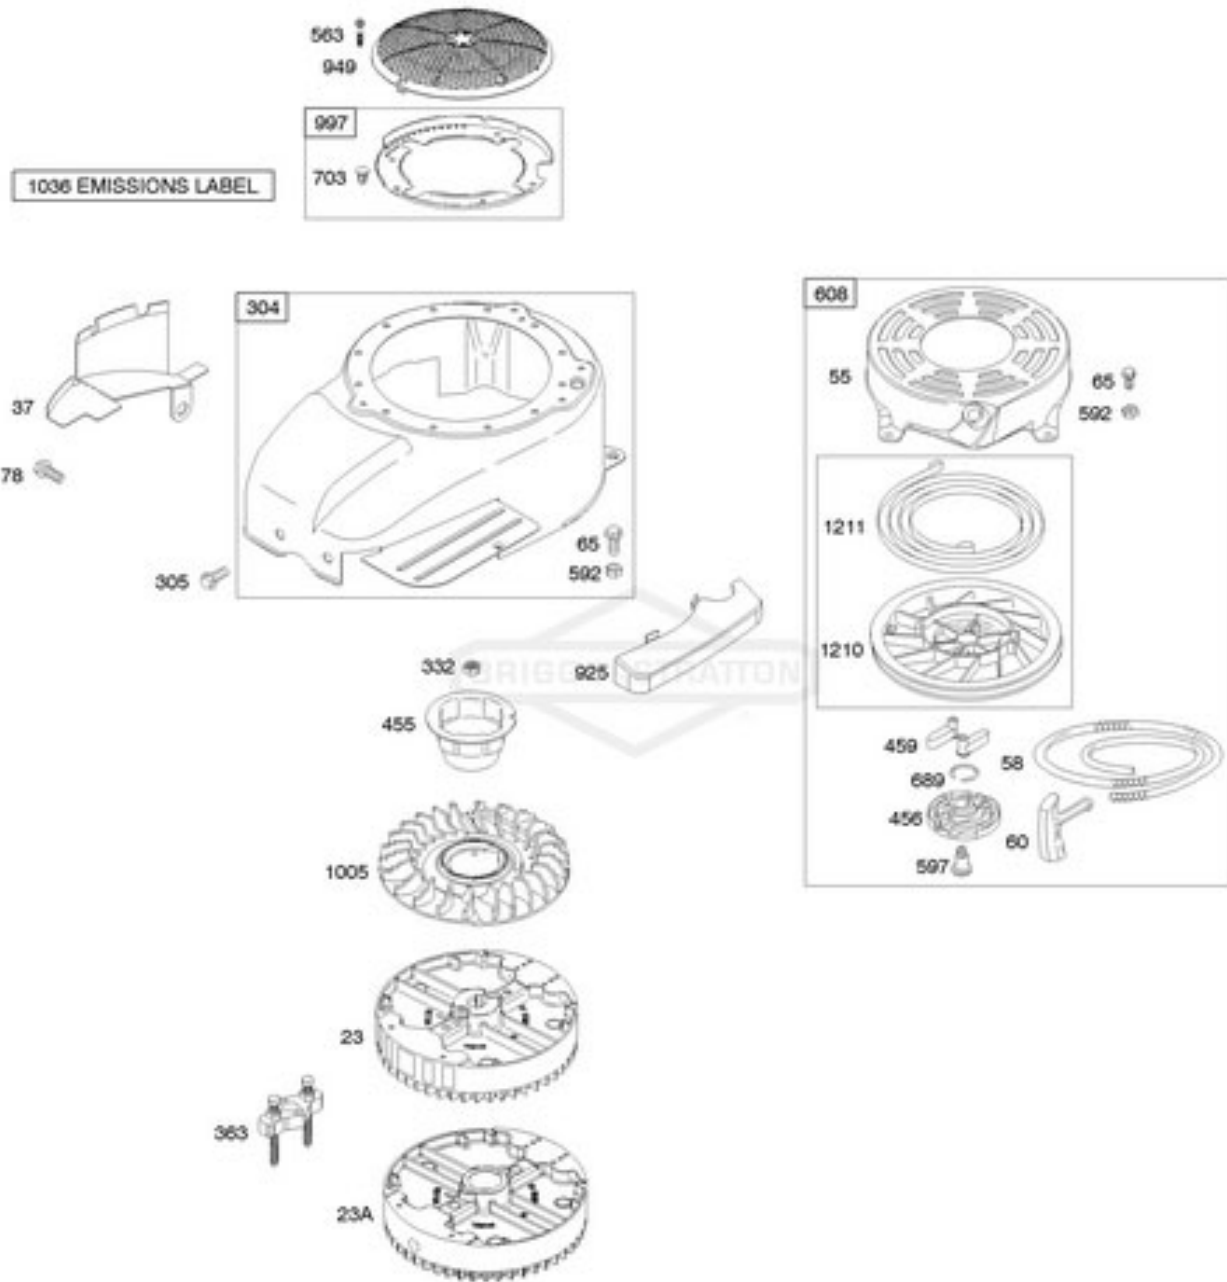

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23A	697610	FLYWHEEL			
37	694086	GUARD, Flywheel			
55	691421	HOUSING, Rewind Starter			
58	697316	ROPE, Starter		(Cut To Required Length)	
60	281434S	GRIP, Starter Rope			
65	690837	SCREW		(Rewind Starter)	
78	691108	SCREW		(Flywheel Guard)	
304	697383	HOUSING, Blower			
305	691108	SCREW		(Blower Housing)	
305	691138	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
363	19069	PULLER, Flywheel			
455	791960	CUP, Flywheel			
456	692299	PLATE-PAWL FRICTION			
459	281505S	PAWL-RATCHET			
563	691138	SCREW		(Debris Screen Guard)	
592	690800	NUT		(Rewind Starter)	
597	691696	SCREW		(Pawl Friction Plate)	
608	497680	STARTER, Rewind			
689	691855	SPRING-FRICTION			
703	696309	CLIP			
925	795403	COVER-LINKAGE		Used After Code Date 07072200	
925	690595	COVER, Linkage		Used Before Code Date 07072300	
949	696306	GUARD, Debris Screen			
997	696310	SHIELD, Debris			
1005	691346	FAN, Flywheel			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1210	498144	PULLEY/SPRING ASSY		(Pulley)	
1211	498144	PULLEY/SPRING ASSY		(Spring)	

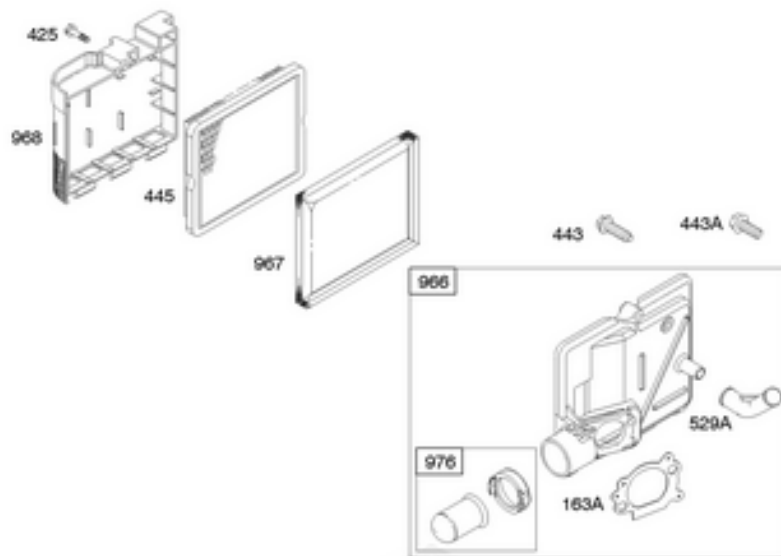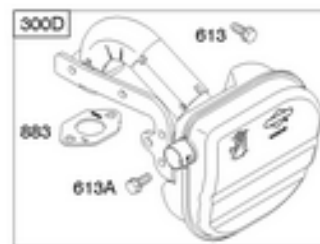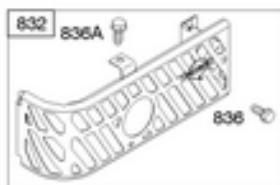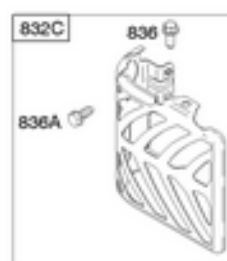

Ref #	Part #	Description	Qty	Context Note	Foot Note
163A	692667	GASKET, Air Cleaner		(Air Cleaner)	
300D	699769	MUFFLER			
425	690670	SCREW		(Air Cleaner Cover)	
443	691637	SCREW		(Air Cleaner Primer Base)	
443A	692523	SCREW		(Air Cleaner Primer Base)	
445	491588S	FILTER, A/C Cartridge			
529A	691923	TUBE, Breather			
613	691108	SCREW		(Muffler)	
613A	691140	SCREW		(Muffler)	
677	690661	SCREW		(Muffler Deflector)	
832	691466	GUARD-MUFFLER			
832C	695593	GUARD, Muffler			
836	691147	SCREW		(Muffler Guard)	
836A	697551	SCREW		(Muffler Guard)	
883	691893	GASKET-EXHAUST			
966	692673	BASE, Air Cleaner		(Primer)	
967	493537S	FILTER, Air Cleaner Foam			
968	692298	COVER, Air Cleaner			
976	694395	PRIMER, Carburetor			