

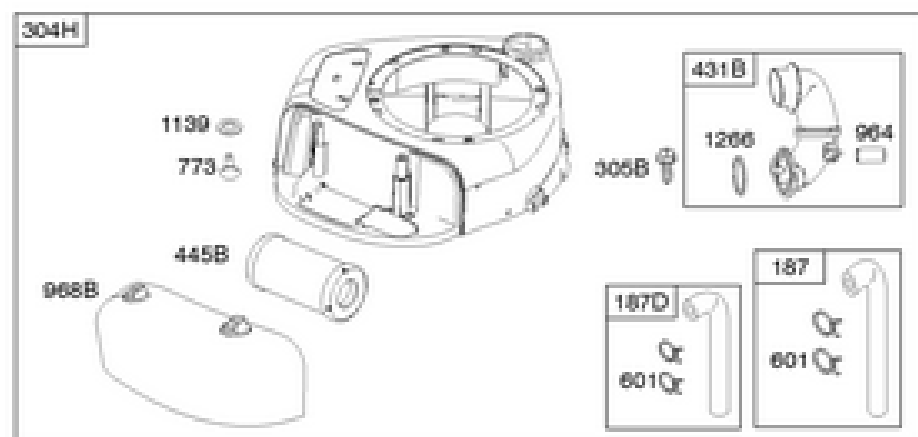
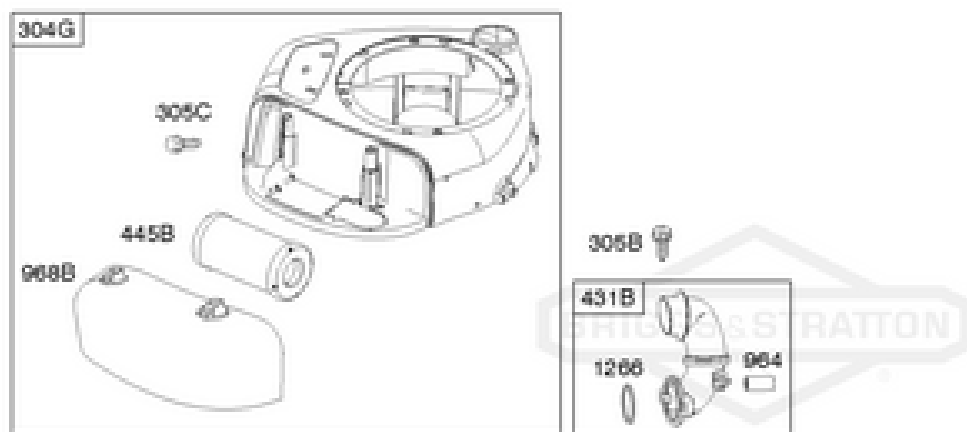


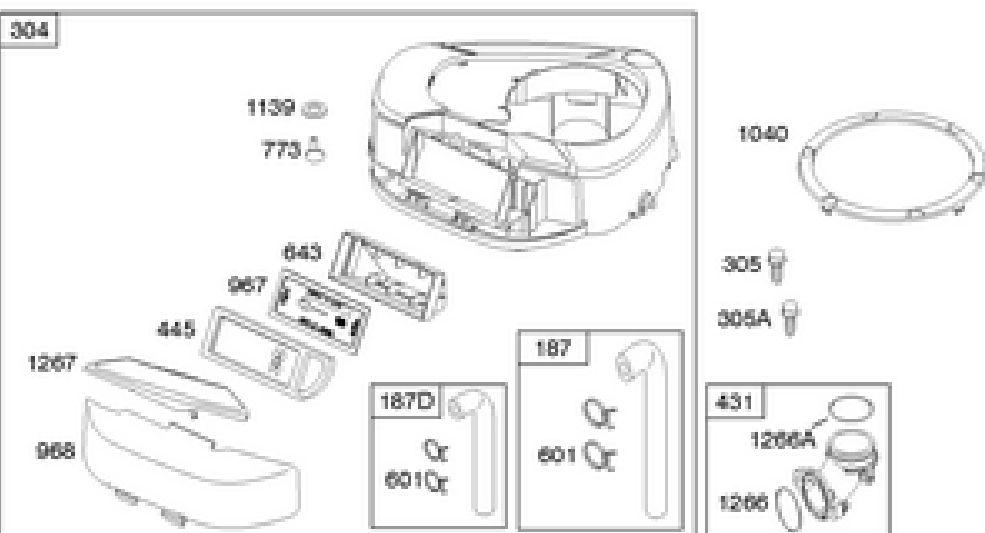


Ref #	Part #	Description	Qty	Context Note	Foot Note
187	791805	LINE, Fuel		(Formed)(10-1/4" Long)(Cut to Required Length)	
187D	791744	LINE-FUEL		(Formed)(14 Inches Long)(Cut To Required Length)	
304		Housing-Blower		(Compatible With Panel Style Filter. No Longer Available. See Reference304H For Replacement Blower Housing Kit.)	
304H	591906	HOUSING, Blower			
305	697102	SCREW		(Blower Housing)	
305A	793376	SCREW		(Blower Housing) (Used On Non-Grommet Style Blower Housings)	
305C	799370	SCREW		(Blower Housing) (Used On Grommet Style Blower Housings)	
305B	795891	SCREW		(Blower Housing)	
431	697122	MANIFOLD, Intake			
445	797007	FILTER, A/C Cartridge		(Flat Panel)	
445B	591583	FILTER, A/C Cartridge		(Canister)	
601	791850	CLAMP-HOSE		(Green)	
601	691038	CLAMP, Hose		(Black)	
643	697155	RETAINER, Air Filter			
773	796448	RETAINER			
964	799159	CAP, Connector			
967	697292	FILTER, Pre Cleaner			
968	697420	COVER, Air Cleaner		(Black-Compatible With Panel Style Filter)	
968B	591646	COVER, Air Cleaner		(Black-Compatible With Canister Style Filter)	
1040	698368	PLATE, Trim			
1139	796449	WASHER		(Fuel Pump Bracket)	
1266	691917	SEAL, O-Ring		(Intake Elbow)	
1266A	697123	SEAL, O-Ring		(Intake Elbow)	
1267	697419	LATCH, Blower Housing		(Black)	

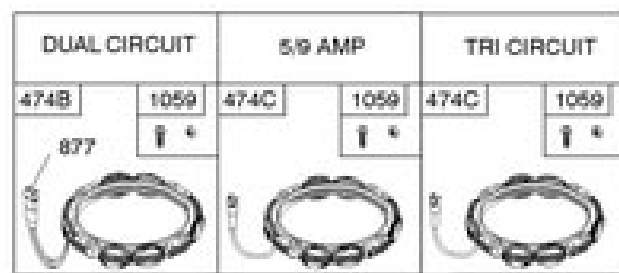

NOTE: All stators use a No. 1119 mounting screw.




NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

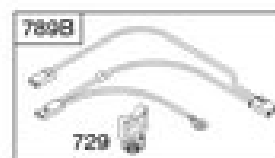

333A






BRIGGS & STRATTON

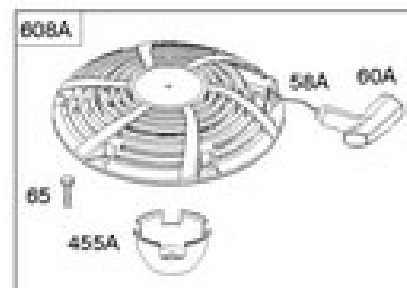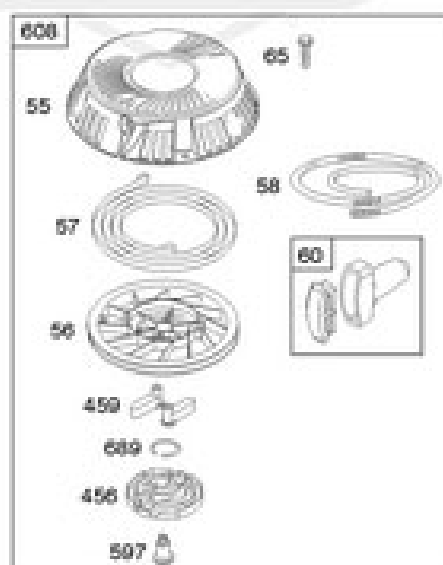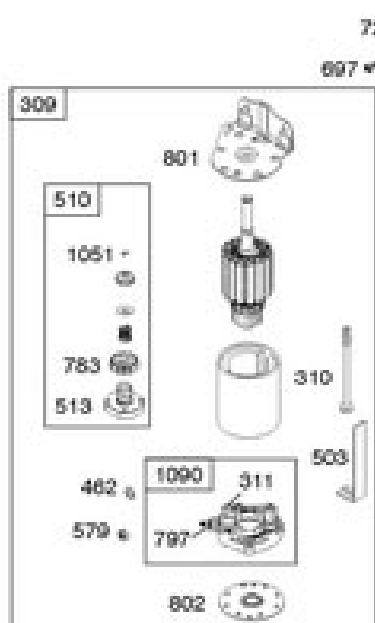


Ref #	Part #	Description	Qty	Context Note	Foot Note
55	695130	HOUSING, Rewind Starter		Used Before Code Date 12082700	
56	695129	PULLEY, Starter		Used Before Code Date 12082700	
57	695131	SPRING, Rewind Starter		Used Before Code Date 12082700	
58	695132	ROPE, Starter		Used Before Code Date 12082700	
58A	697316	ROPE, Starter		Used After Code Date 12082600	
60	490652	GRIP-STARTER ROPE			
60A	281434S	GRIP, Starter Rope			
65	690940	SCREW		(Rewind Starter) Used After Code Date 12082600	
65	690837	SCREW		(Rewind Starter) Used Before Code Date 12082700	
309	693551	MOTOR, Starter			
310	690323	SCREW		(Starter Motor)	
311	497608	SET, Brush			
333A	592841	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356B	697089	WIRE, Stop			
455A	796615	CUP, Flywheel		Used After Code Date 12082600	
456	695128	PLATE, Pawl Friction		Used Before Code Date 12082700	
459	281505S	PAWL-RATCHET		Used Before Code Date 12082700	
462	691261	WASHER		(Starter Cable)	
474C	592829	ALTERNATOR		(Tri Circuit Or 5/9 Amp. Regulated)	
501A	794360	REGULATOR			
503	691532	STRAP-STARTER			
510	693699	DRIVE, Starter			
513	692024	CLUTCH-DRIVE			
521	690581	SHIELD, Cable			
526A	697088	SCREW		(Regulator)	
579	691029	NUT		(Starter Cable)	
597	691696	SCREW		(Pawl Friction Plate) Used Before Code Date 12082700	
608	695058	STARTER, Rewind		Used Before Code Date 12082700	
608A	591606	STARTER, Rewind		Used After Code Date 12082600	
689	691855	SPRING-FRICTION		Used Before Code Date 12082700	
697	791680	SCREW		(Starter Motor) (Drive Cap)	
729	691335	CLIP, Wire			
729A	691224	CLIP, Wire			

Ref #	Part #	Description	Qty	Context Note	Foot Note
783	693713	GEAR, Pinion			
789	698329	HARNESS, Wiring			
789B	692037	HARNESS-WIRING			
797	693167	NUT		(Brush Retainer)	
801	691283	CAP-DRIVE			
802	691286	CAP-END			
851	692424	TERMINAL, Spark Plug			
877	393456	WIRE/CONNECTOR, Alternator			
877D	790544	WIRE/CONNECTOR, Alternator			
878	398661	HARNESS, Wiring			
878A	691955	HARNESS, Alternator			
1051	691265	RING, Retaining			
1059	698516	KIT, Screw/Washer			
1090	691293	RETAINER-BRUSH			
1119	691183	SCREW		(Alternator)	
1448	690260	WASHER		(Magneto Armature)	

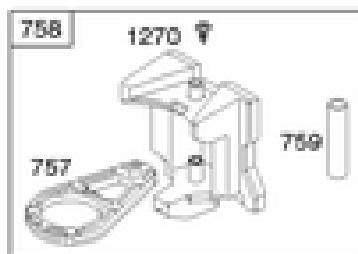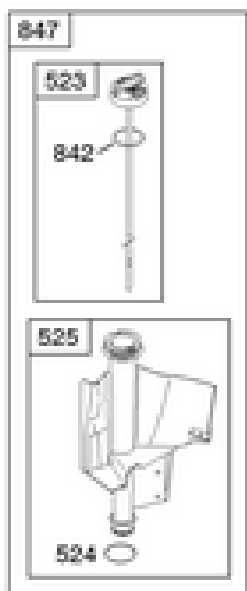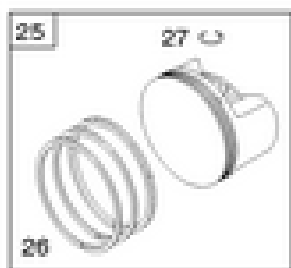



Ref #	Part #	Description	Qty	Context Note	Foot Note
16	697390	CRANKSHAFT		Used Before Code Date 12071700	
16	591953	CRANKSHAFT		Used After Code Date 12071600	
24	591757	KEY, Flywheel		Used After Code Date 12071600	
24	796335	KEY, Flywheel		Used Before Code Date 12071700	
25	792307	PISTON ASSEMBLY		(Standard)	
25	792728	PISTON ASSEMBLY		(.020 Oversize)	
26	792306	SET, Ring		(Standard)	
26	792643	SET, Ring		(.020 Oversize)	
27	698469	LOCK-PISTON PIN			
28	697099	PIN, Piston			
29	791633	ROD, Connecting		(Standard)	
32	791118	SCREW		(Connecting Rod)	
43	691968	SLINGER, Governor/Oil			
45	690564	TAPPET, Valve			
46	793880	CAMSHAFT			
186A	796532	CONNECTOR, Hose		Oil Drain	
377	691639	KEY, Woodruff			
512	796530	HOSE, Oil Drain			
523	699908	DIPSTICK			
524	691032	SEAL, O-Ring			
525	697184	TUBE, Dipstick			
741	697128	GEAR, Timing			
757	793242	LINK, Counterweight			
758	697391	COUNTERWEIGHT		Used After Code Date 05100200	
758	795940	COUNTERWEIGHT		Used Before Code Date 05100300	
759	697392	PIN, Counterweight			
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	790442	DIPSTICK/TUBE ASSEMBLY			
1270	793243	PLUG, AVS Counterweight			

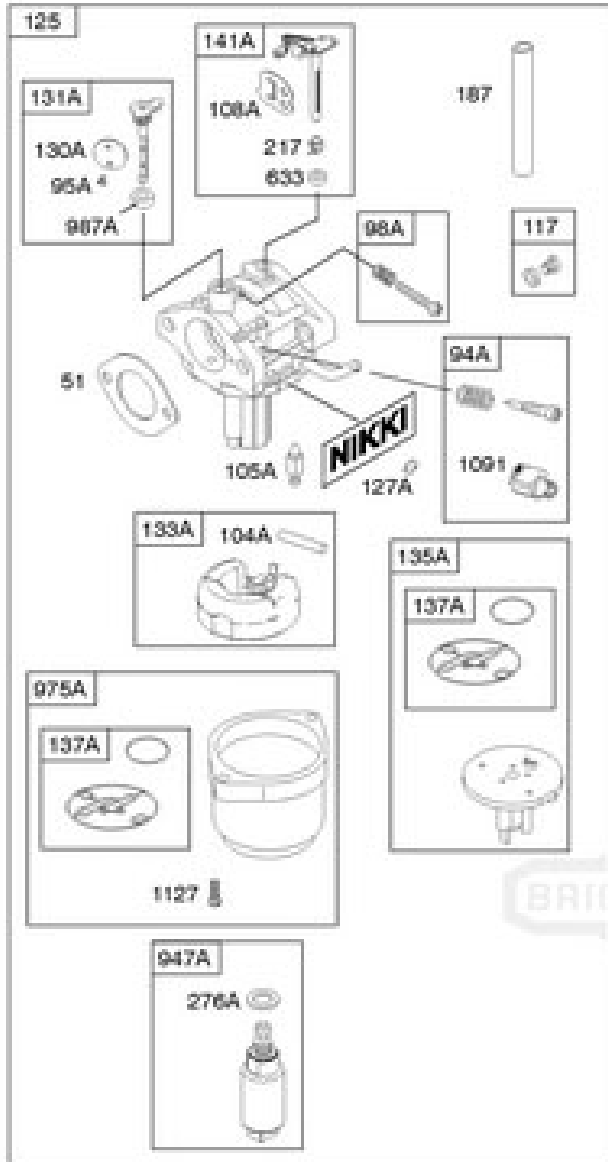



121A CARBURETOR OVERHAUL KIT			
51	127A	137A	98A
104A	987A		
105A	633	1266	217
51A	617	1266A	276A

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692137	GASKET-INTAKE			
51A	796081	GASKET, Intake			
94A	793610	KIT, Idle Mixture			
95A	690718	SCREW		(Throttle Valve)	
98A	695408	KIT, Idle Speed			
104A	694918	PIN-FLOAT HINGE			
105A	696136	VALVE, Float Needle			
108A	698773	VALVE, Choke			
117	591936	JET, Main		(Standard) (Nikki Carburetor 794458, 794459, 799246, 799247) Used After Code Date 08110500	
117	794352	JET, Main		(Standard) Used Before Code Date 08110600	
118	791405	JET, Main		(High Altitude) Used Before Code Date 08110600	
118	698788	JET, Main		(High Altitude) (Nikki Carburetor 794458, 794459, 799246, 799247) Used After Code Date 08110500	
121A	796184	KIT, Carburetor Overhaul		(Nikki)	
125	590400	CARBURETOR		Used After Code Date 08110500	
125	593433	CARBURETOR		Used Before Code Date 08110600	
127A	690727	PLUG, Welch			
130A	698774	VALVE, Throttle			
131A	698776	KIT, Throttle Shaft			
133A	694914	FLOAT, Carburetor			
135A	698780	TUBE, Fuel Transfer		(Nikki)(Gravity Feed)	
135A	792022	TUBE-FUEL TRANSFER		(Nikki)(Pump Feed) Used Before Code Date 08121500	
137A	698781	GASKET, Float Bowl			
141A	698778	KIT, Choke Shaft		(Nikki)	
187	791805	LINE, Fuel		(Formed)(10-1/4" Long)(Cut to Required Length)	
217	695409	SPRING, Choke Return			
276A	695410	WASHER- SEALING			
617	692138	SEAL, O-Ring		(Intake Manifold)	
633	699813	SEAL, Choke/Throttle Shaft			
947A	699915	SOLENOID, Fuel			
975A	699502	BOWL, Float		(Nikki)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
987A	698777	SEAL, Choke/Throttle Shaft			
1091	691333	CAP, Limiter			
1127	695407	SCREW		(Float Bowl) (Float Bowl to Carburetor Body)	
1266	691917	SEAL, O-Ring		(Intake Elbow)	
1266A	697123	SEAL, O-Ring		(Intake Elbow)	

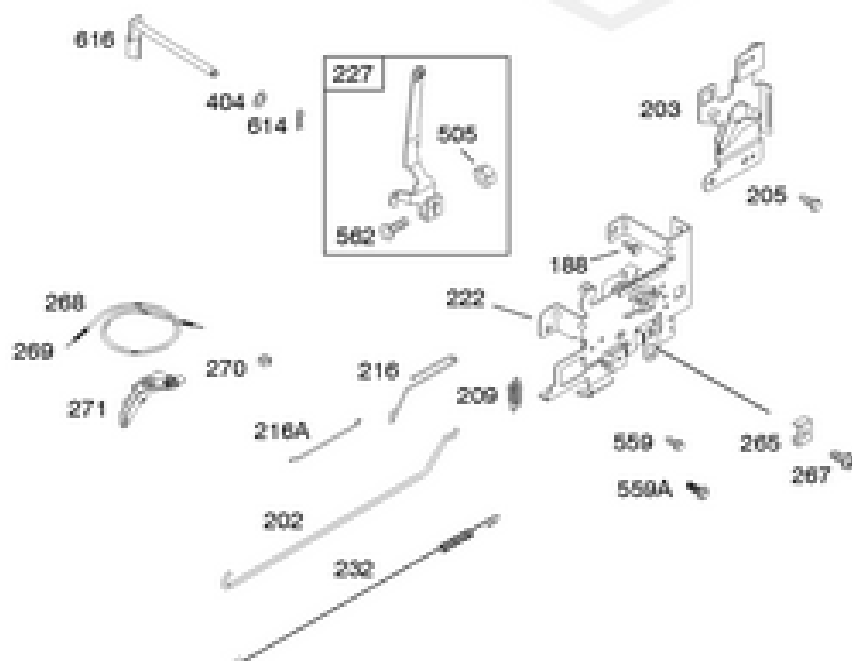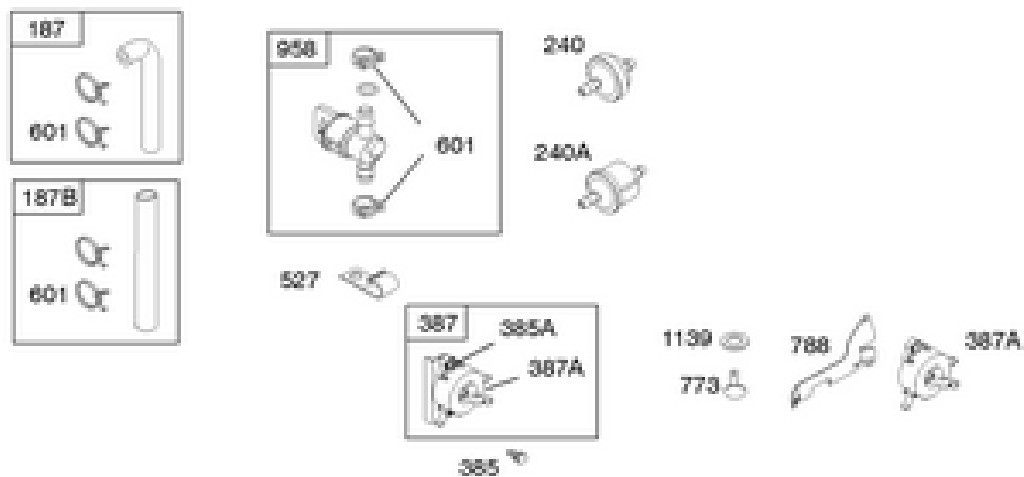


Ref #	Part #	Description	Qty	Context Note	Foot Note
187	791805	LINE, Fuel		(Formed)(10-1/4" Long)(Cut to Required Length)	
187B	791766	LINE, Fuel		(15" Long)(Cut to Required Length)	
188	691693	SCREW		(Control Bracket)	
202	691841	LINK, Mechanical Governor			
205	691693	SCREW		(Bell Crank)	
209	796260	SPRING-GOVERNOR			
216	691840	LINK, Choke			
222	694042	BRACKET, Control			
227	691374	LEVER, Governor Control			
232	691842	SPRING, Governor Link			
240	394358S	FILTER-FUEL		(White, 75 Microns)	
265	691024	CLAMP, Casing			
267	794904	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
385	694476	SCREW		(Fuel Pump)	
385A	690297	SCREW		(Fuel Pump)	
404	691691	WASHER		(Governor Crank)	
505	691251	NUT		(Governor Control Lever)	
527	698467	CLAMP, Hose			
559	697561	SCREW		(Remote Choke Stop) (Length .375 Inches)	
559A	693675	SCREW		(Remote Choke Stop) (Length .419 Inches)	
562	691119	BOLT		(Governor Control Lever)	
601	691038	CLAMP, Hose		(Black)	
601	791850	CLAMP-HOSE		(Green)	
614	691620	PIN, Cotter			
616	692012	CRANK-GOVERNOR			
773	796448	RETAINER			
788	699347	BRACKET, Fuel Pump		Used Before Code Date 08073000	
958	698183	VALVE-FUEL SHUT OFF			
1139	796449	WASHER		(Fuel Pump Bracket)	

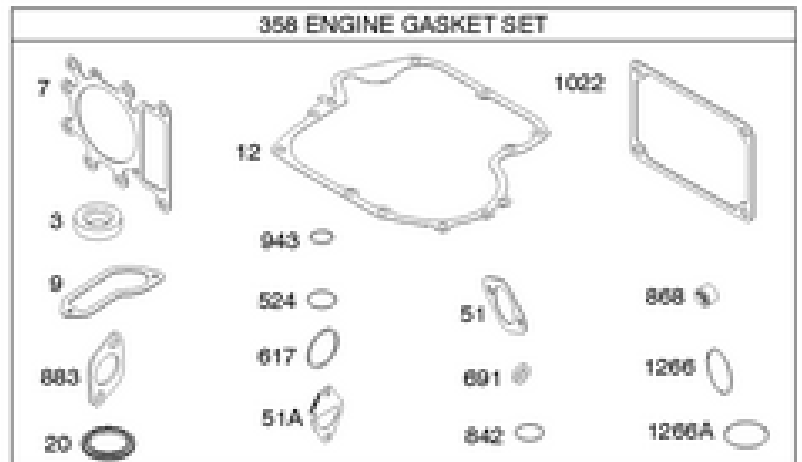
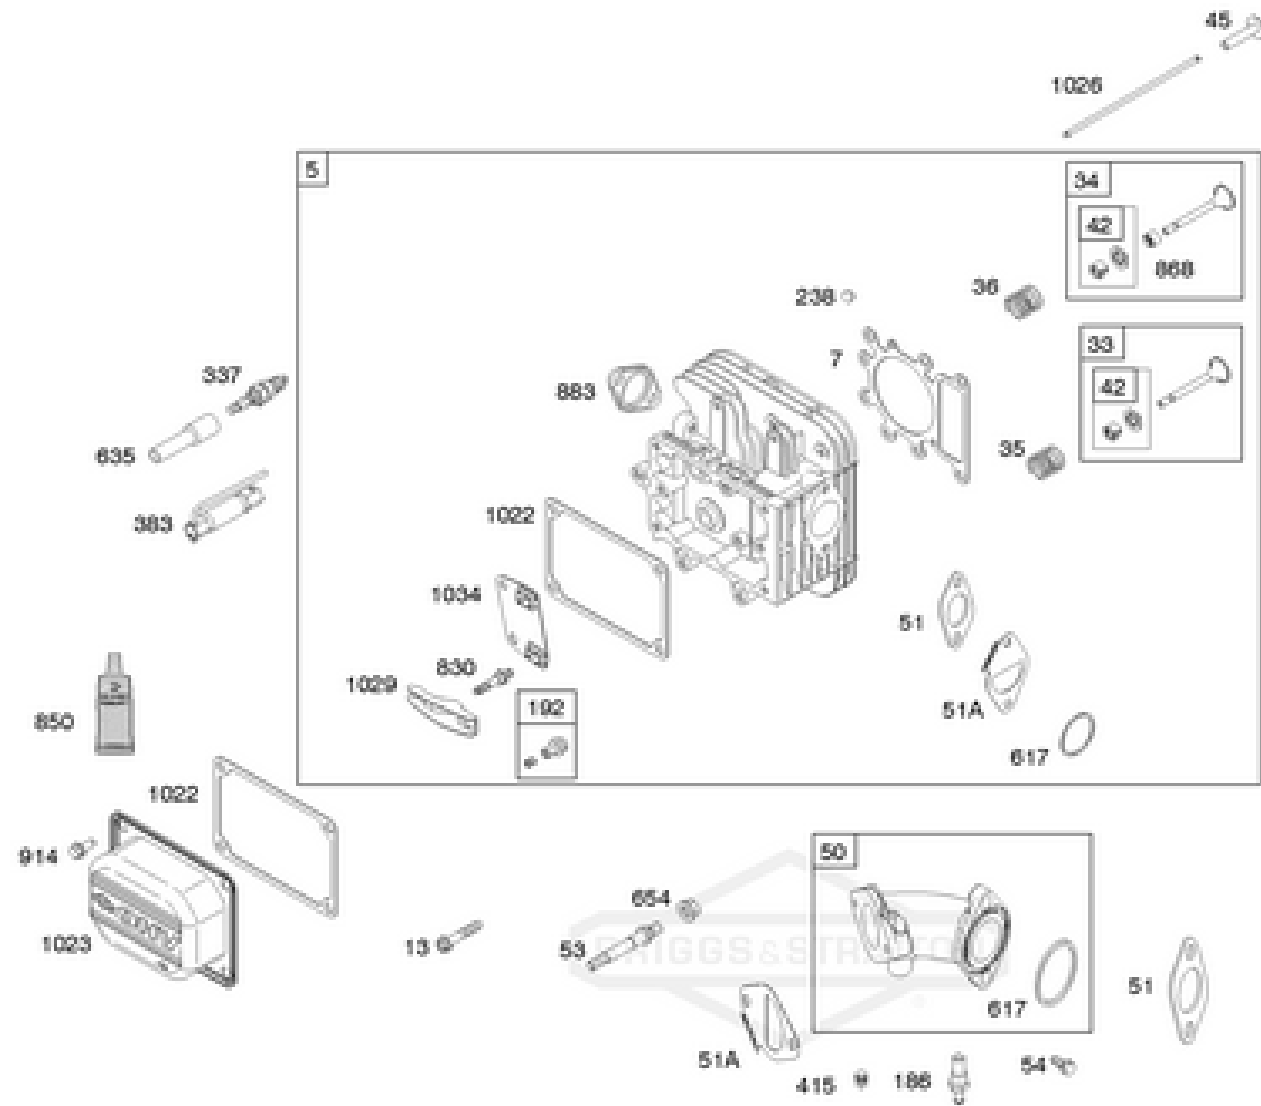


Ref #	Part #	Description	Qty	Context Note	Foot Note
3	391086S	SEAL, Oil		(Magneto Side)	
5	796183	HEAD, Cylinder			
7	273280S	GASKET, Cylinder Head			
9	697109	GASKET, Breather		(After Date Code Use Liquid Sealant Reference 850) Used Before Code Date 07071900	
12	697110	GASKET, Crankcase		(.015" Thick)(Standard)	
13	690360	SCREW		(Cylinder Head)	
20	795387	SEAL-OIL		(PTO Side)	
33	792868	VALVE, Exhaust			
34	791935	VALVE, Intake			
35	691279	SPRING, Valve		(Intake)	
36	691279	SPRING, Valve		(Exhaust)	
42	499586	KEEPER, Valve			
45	690564	TAPPET, Valve			
50	592845	MANIFOLD, Intake			
51	692137	GASKET-INTAKE			
51A	796081	GASKET, Intake			
53	591260	STUD		(Carburetor) Used After Code Date 11120100	
53	690227	STUD		(Carburetor) Used Before Code Date 11120200	
54	691148	SCREW		(Intake Manifold)	
186	794873	CONNECTOR, Hose			
192	691986	ADJUSTER, ROCKER ARM			
238	691843	CAP, Valve			
337	691043	PLUG, Spark		(EMS)	
358	796181	GASKET SET, Engine			
383	19576S	WRENCH, Spark Plug			
415	794903	PLUG			
524	691032	SEAL, O-Ring			
617	692138	SEAL, O-Ring		(Intake Manifold)	
635	691909	BOOT, Spark Plug			
654	690958	NUT		(Carburetor)	
691	692407	SEAL-GOVERNOR SHAFT			
830	691095	STUD-ROCKER ARM			
842	691031	SEAL, O-Ring		(Dipstick Tube)	
850	100106	SEALANT, Liquid		Used After Code Date 07071800	

Ref #	Part #	Description	Qty	Context Note	Foot Note
868	794086	SEAL, Valve			
883	692236	GASKET, Exhaust			
914	691108	SCREW		(Rocker Cover)	
1022	272475S	GASKET, Rocker Cover		(After Date Code Use Liquid Sealant Reference 850) Used Before Code Date 07091000	
1023	797421	COVER-ROCKER			
1026	794573	ROD, Push		(Exhaust)	
1026	697394	ROD, Push		(Intake)	
1029	691751	ARM, Rocker			
1034	690822	GUIDE, Push Rod			
1095	796189	GASKET SET, Valve			
1266	691917	SEAL, O-Ring		(Intake Elbow)	
1266A	697123	SEAL, O-Ring		(Intake Elbow)	

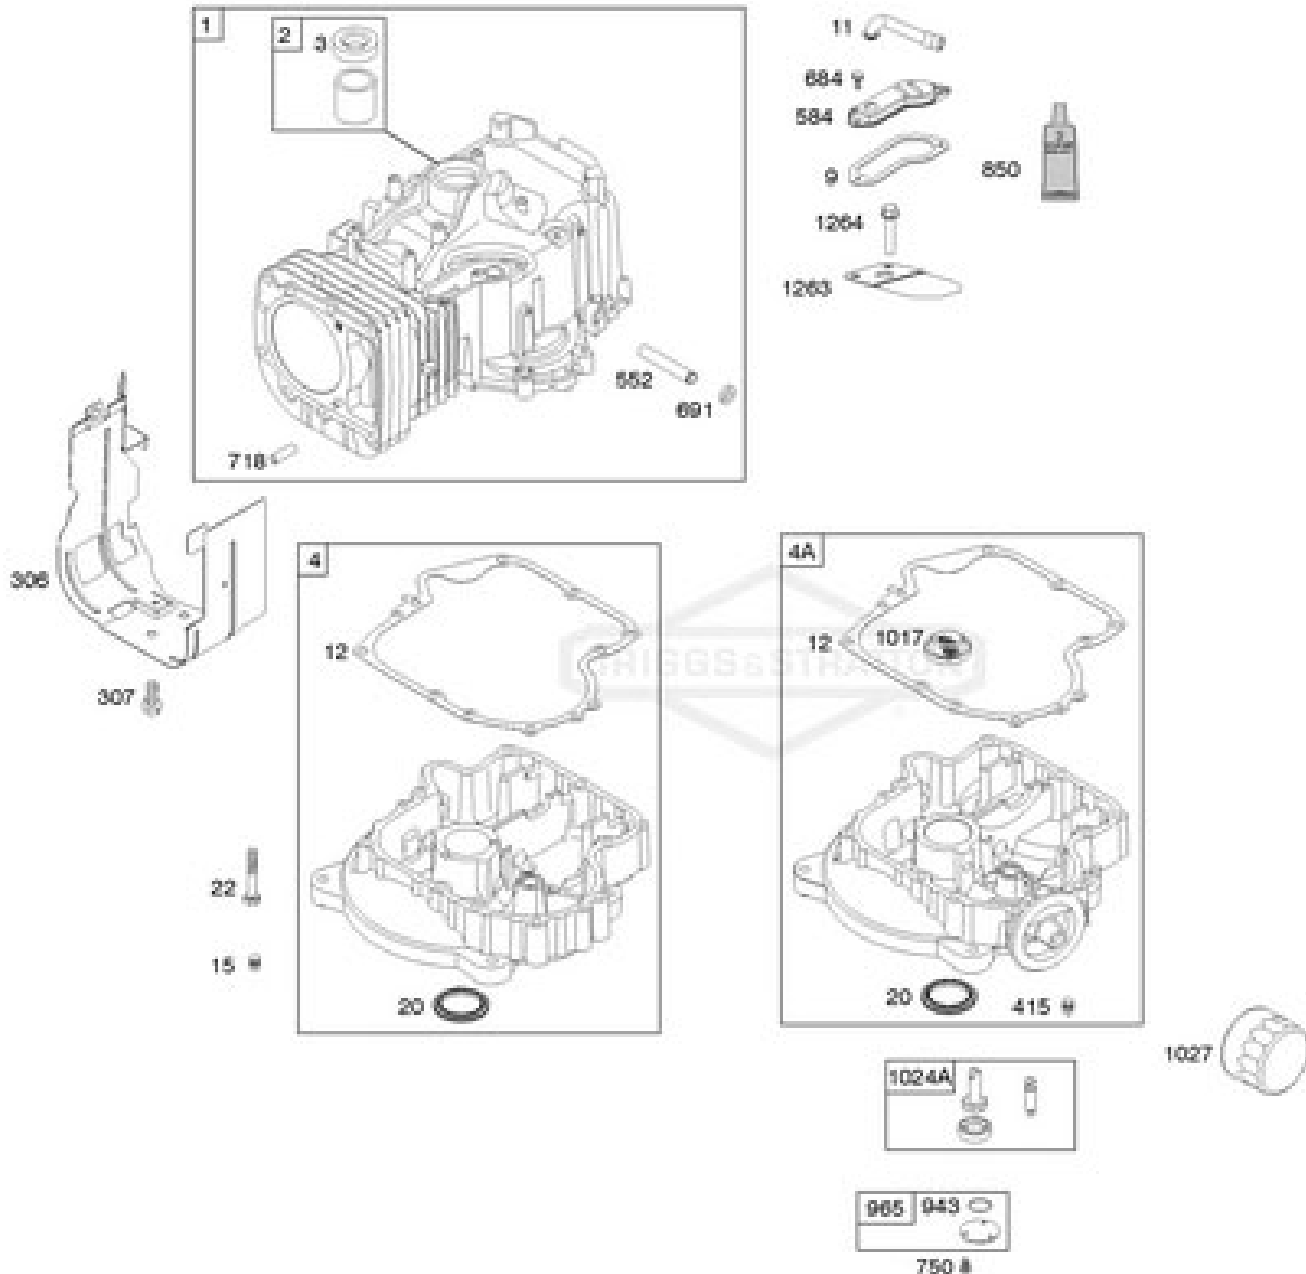

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	697377	CYLINDER ASSEMBLY			
2	797673	KIT-BUSHING/SEAL		(Magneto Side)	
3	391086S	SEAL, Oil		(Magneto Side)	
4	795940	COUNTERWEIGHT		(Must Use Kit 795940, Includes Sump And Counterweight) Used Before Code Date 05100300	
4	697106	SUMP, Engine		Used After Code Date 05100200	
9	697109	GASKET, Breather		(After Date Code Use Liquid Sealant Reference 850) Used Before Code Date 07071900	
11	794683	TUBE, Breather			
12	697110	GASKET, Crankcase		(.015" Thick)(Standard)	
15	690946	PLUG-OIL DRAIN		(3/8" Standard)	
20	795387	SEAL-OIL		(PTO Side)	
22	692125	SCREW		(Crankcase Cover/Sump)	
306	592778	SHIELD, Cylinder			
307	691693	SCREW		(Cylinder Shield)	
415	794903	PLUG			
552	697144	BUSHING, Governor Crank			
584	794682	COVER, Breather Passage			
684	697157	SCREW		(Breather Passage Cover)	
691	692407	SEAL-GOVERNOR SHAFT			
718	690959	PIN, Locating			
750	790832	SCREW		(Oil Pump Cover)	
850	100106	SEALANT, Liquid		Used After Code Date 07071800	
965	499613	COVER, Oil Pump			
1024A	794644	PUMP-OIL			
1027	492932S	FILTER, Oil		(Standard)	
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1058	276344TRI	MANUAL, Operator's			
1263	697124	REED, Breather			
1264	697104	SCREW		(Breather Reed)	
1319	794467	LABEL, Warning			
1319A	797669	LABEL, Warning			

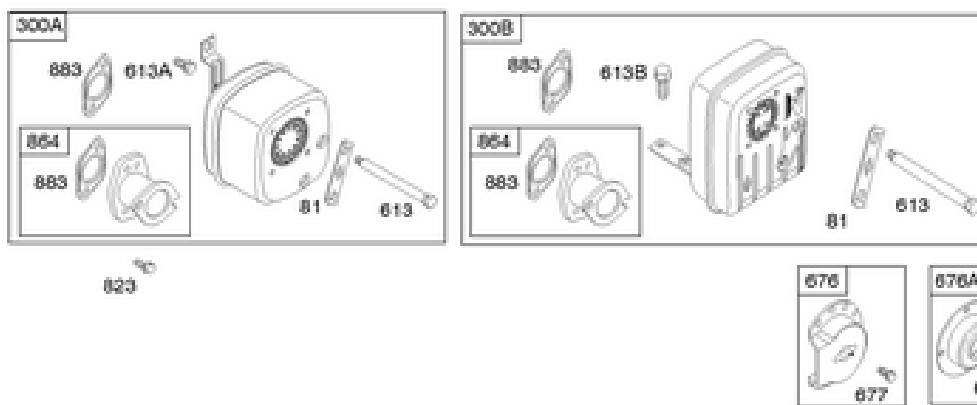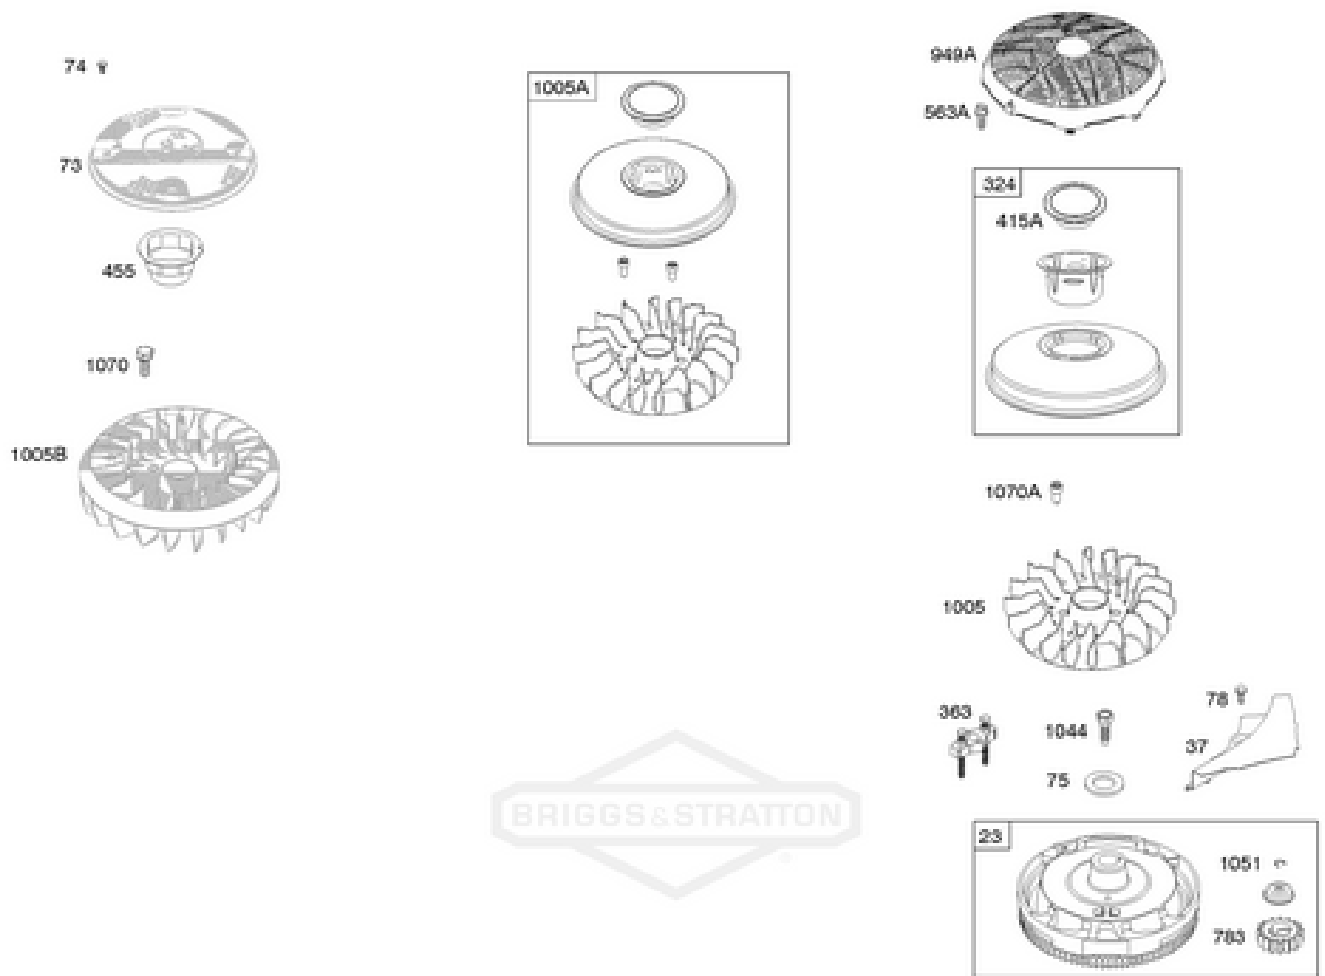

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	698282	FLYWHEEL		Used Before Code Date 12071700	
23	591758	FLYWHEEL		Used After Code Date 12071600	
37	697352	GUARD, Flywheel			
73		Screen-Rotating		(No Longer Available)(See Reference 1005A for Service Flywheel Fan) Used Before Code Date 07040900	
74	697897	SCREW		(Rotating Screen) Used Before Code Date 07040900	
75	690582	WASHER		(Flywheel)	
78	691693	SCREW		(Flywheel Guard)	
81	691178	LOCK, Muffler Screw			
300A	796000	MUFFLER			
324	796308	SCREEN/CUP ASSEMBLY		Used After Code Date 07040800	
363	19203	PULLER, Flywheel			
415A	794129	COVER, Flywheel		(Cover/Retainer) Used After Code Date 07040800	
455	695113	CUP, Flywheel		Used Before Code Date 12082700	
563A	799359	SCREW		(Debris Screen Guard)	
613	691416	SCREW		(Muffler)	
613A	691678	SCREW		(Muffler)	
613B	690297	SCREW		(Muffler)	
783	693713	GEAR, Pinion			
823	698941	SCREW		(Muffler Adapter)	
864	796002	ADAPTER, Muffler		(2 1/4" Long)	
883	692236	GASKET, Exhaust			
949A	799358	GUARD, Debris Screen			
1005	796082	FAN, Flywheel		Used After Code Date 07040800	
1005A	796200	FAN, Flywheel		Used Before Code Date 07040900	
1005B		Fan-Flywheel		(No Longer Available)(See Reference 1005A for Service Flywheel Fan)	
1044	698139	SCREW		(Flywheel)	
1051	691265	RING, Retaining			
1070	791680	SCREW		(Flywheel Fan) Used Before Code Date 07040900	
1070A	690363	SCREW		(Flywheel Fan) Used After Code Date 07040800 Used Before Code Date 08061900	