



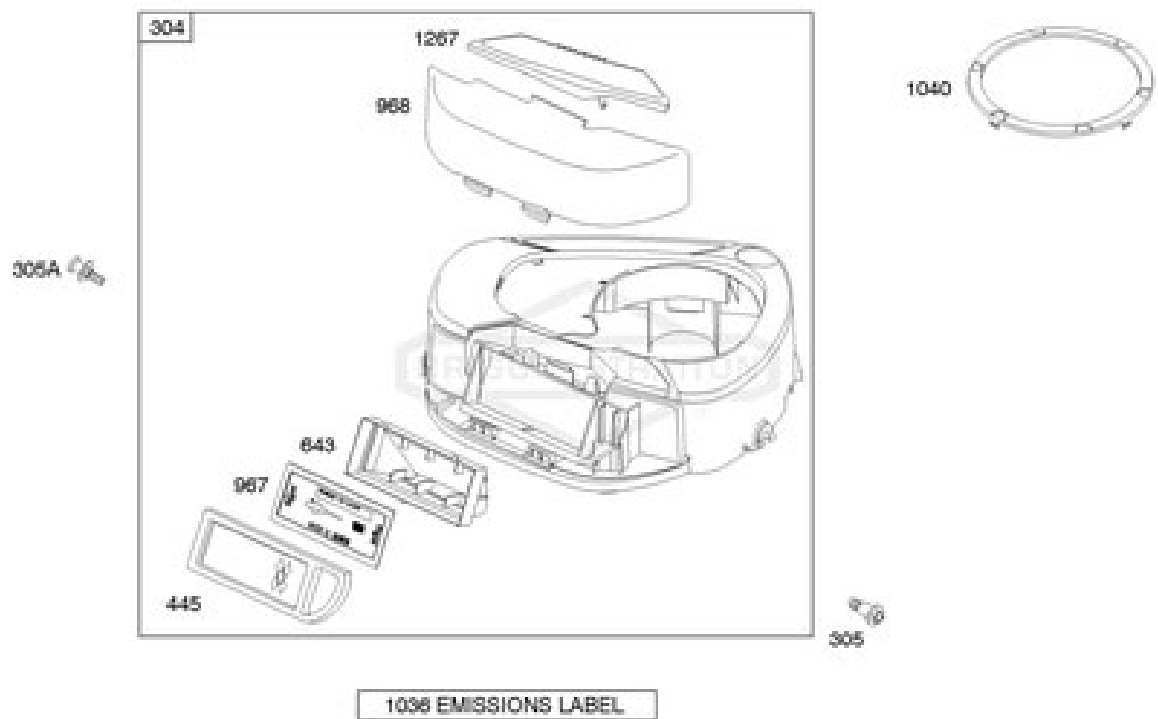


Ref #	Part #	Description	Qty	Context Note	Foot Note
304	698402	HOUSING, Blower		(Red)	
305	697102	SCREW		(Blower Housing)	
305A	697103	SCREW		(Blower Housing)	
445	698083	FILTER, A/C Cartridge		(Non Washable)	
643	698401	RETAINER, Air Filter			
967	697015	FILTER, Pre Cleaner			
968	698403	COVER, Air Cleaner			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1040	698368	PLATE, Trim			
1267	697575	LATCH, Blower Housing		(Black)	

DC ONLY	DUAL CIRCUIT	474B	TRI CIRCUIT
474 	474A 	1059 	
576 	676 	878A 	5/9 AMP REGULATED 501  526 

NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

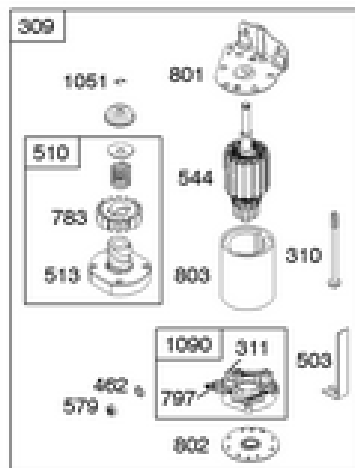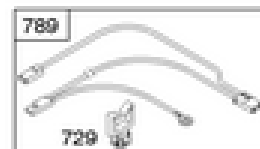

729A
697

BRIGGS & STRATTON


521

356

1054

616

404
614

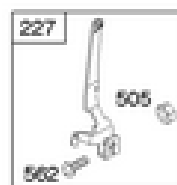

216

202

232

268

269

271

227

505

562

188

222

209




265

558

267

Ref #	Part #	Description	Qty	Context Note	Foot Note
188	691693	SCREW		(Control Bracket)	
202	691841	LINK, Mechanical Governor			
209	690576	SPRING-GOVERNOR			
216	691840	LINK, Choke			
222	694042	BRACKET, Control			
227	691374	LEVER, Governor Control			
232	691842	SPRING, Governor Link			
265	691024	CLAMP, Casing			
267	794904	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
309	693552	MOTOR, Starter			
310	690323	SCREW		(Starter Motor)	
311	497608	SET, Brush			
333	492341	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356	697089	WIRE, Stop			
404	691691	WASHER		(Governor Crank)	
462	691261	WASHER		(Starter Cable)	
474	696578	ALTERNATOR		(DC Only)	
501	691188	REGULATOR		(9 Amp Regulated)	
503	691532	STRAP-STARTER			
505	691251	NUT		(Governor Control Lever)	
510	693699	DRIVE, Starter			
513	692024	CLUTCH-DRIVE			
521	690581	SHIELD, Cable			
526	697088	SCREW		(Regulator)	
544	692034	ARMATURE, Starter		(3 5/8 Housing)	
559	697561	SCREW		(Remote Choke Stop)	
562	691119	BOLT		(Governor Control Lever)	
578	692306	WIRE ASSEMBLY			
579	691029	NUT		(Starter Cable)	
614	691620	PIN, Cotter			
616	692012	CRANK-GOVERNOR			
697	690372	SCREW		(Drive Cap)	
729	691335	CLIP, Wire		(Wire Saddle)	
729A	691224	CLIP, Wire		(Aluminum Coated Steel)	
783	693713	GEAR, Pinion			
789A	698329	HARNESS, Wiring			
797	693167	NUT		(Brush Retainer)	








Ref #	Part #	Description	Qty	Context Note	Foot Note
801	691283	CAP-DRIVE			
802	691286	CAP-END			
803		Housing-Starter		(Not Serviced Separately, Order Starter Motor 693551 Or 693552 AsApplicable)	
851	692424	TERMINAL, Spark Plug			
877A	393814	WIRE/CONNECTOR, Alternator		(DC Only)	
1051	691265	RING, Retaining			
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer			
1090	691293	RETAINER-BRUSH			
1119	691183	SCREW		(Alternator)	

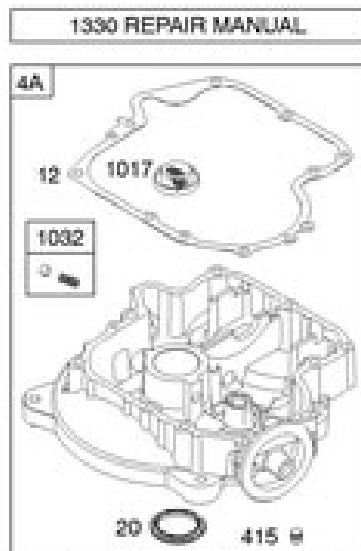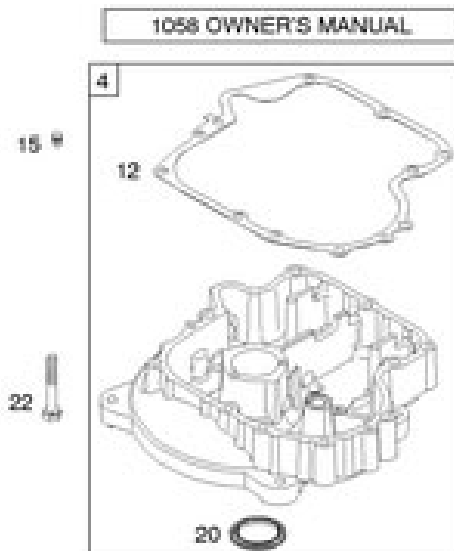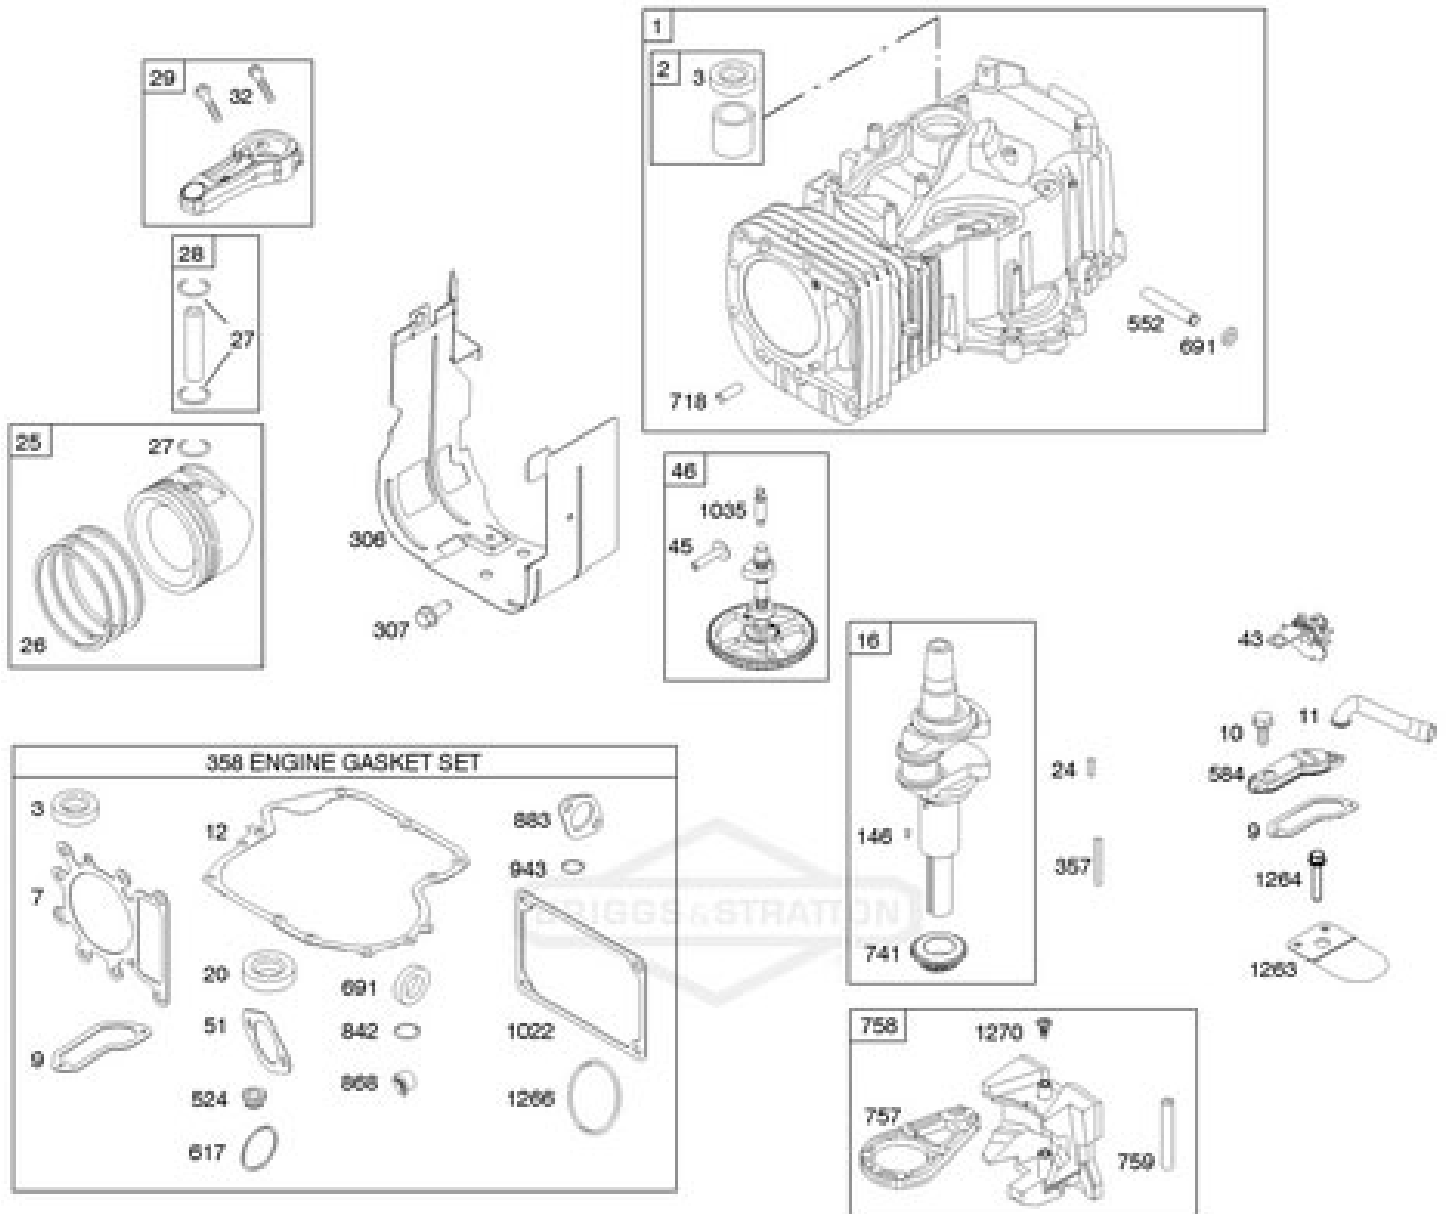

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	794087	CYLINDER ASSEMBLY			
2	399265	KIT, Bushing/Seal		(Magnet Side)	
3	391086S	SEAL, Oil		(Magnet Side)	
4		Sump-Engine		(Must Use Kit 795903, Includes Sump And Counterweight) Used Before Code Date 05100300	
4	697106	SUMP, Engine		Used After Code Date 05100200	
7	273280S	GASKET, Cylinder Head			
9	697109	GASKET, Breather			
10	697157	SCREW		(Breather Assembly)	
11	697113	TUBE, Breather			
12	697110	GASKET, Crankcase			
15	690946	PLUG, Oil Drain		(Square Head)	
16	697127	CRANKSHAFT			
20	791892	SEAL, Oil		(PTO Side)	
22	692125	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	792728	PISTON ASSEMBLY		(.020 Oversize)	
25	792307	PISTON ASSEMBLY		(Standard)	
26	792306	SET, Ring		(Standard) Used After Code Date 05112000	
26	792643	SET, Ring		(.020 Oversize) Used After Code Date 05112000	
26	698375	SET, Ring		(Standard) Used Before Code Date 05112100	
26	698397	SET, Ring		(.020 Oversize) Used Before Code Date 05112100	
27	698469	LOCK-PISTON PIN			
28	697099	PIN, Piston		(Standard)	
29	791631	ROD, Connecting		(Standard)	
32	791118	SCREW		(Connecting Rod)	
43	691968	SLINGER, Governor/Oil			
45	690564	TAPPET, Valve			
46	793583	CAMSHAFT			
51	692137	GASKET-INTAKE			
146	691639	KEY, Woodruff			
239	491657S	SWITCH, Oil Pressure			
306	697107	SHIELD, Cylinder			
307	691003	SCREW		(Cylinder Shield)	
358	697151	GASKET SET, Engine			
415	690283	PLUG, Oil		(1/8 Standard)	
524	691032	SEAL, O-Ring			


Ref #	Part #	Description	Qty	Context Note	Foot Note
552	697144	BUSHING, Governor Crank			
584	697112	COVER, Breather Passage			
617	692138	SEAL, O-Ring		(Intake Manifold)	
691	692407	SEAL-GOVERNOR SHAFT			
718	690959	PIN, Locating			
741	697128	GEAR, Timing			
757	793242	LINK, Counterweight			
758		Counterweight		(Must Use Kit 795903, Includes Sump And Counterweight) Used Before Code Date 05100300	
758	793763	COUNTERWEIGHT		Used After Code Date 05100200	
759	697392	PIN, Counterweight			
842	691031	SEAL, O-Ring		(Dipstick Tube)	
868	690968	SEAL, Valve			
883	692236	GASKET, Exhaust			
1017	690770	SCREEN, Oil Pump			
1022	272475S	GASKET, Rocker Cover			
1032	491710	SPRING, Compression			
1058	276344	MANUAL, Operator's			
1263	697124	REED, Breather			
1264	697104	SCREW		(Breather Reed)	
1266	691917	SEAL, O-Ring		(Intake Elbow)	
1270	697156	PLUG, AVS Counterweight			
1319	794467	LABEL, Warning			
1330	272147	MANUAL, Repair			

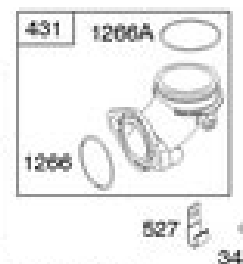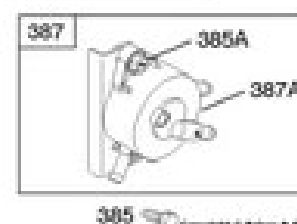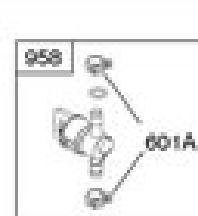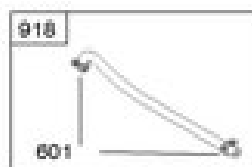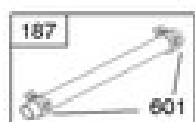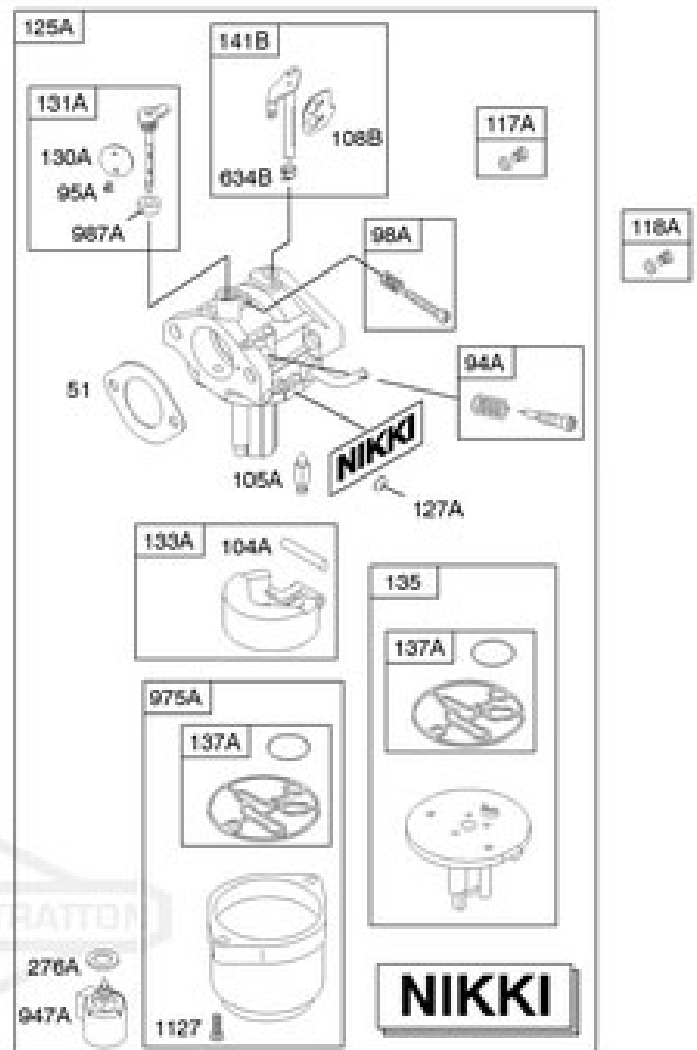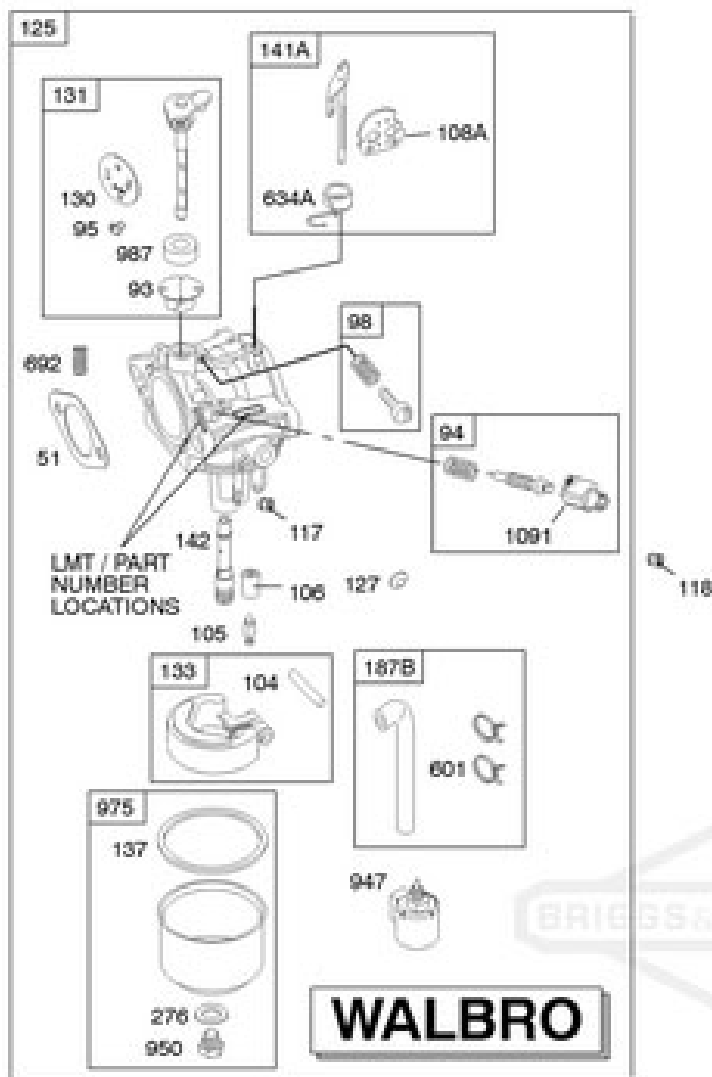

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692137	GASKET-INTAKE			
93	690602	BUSHING, Throttle Shaft			
94	498030	KIT, Idle Mixture		(Lmt 153154,155,156)	
94A	695425	KIT, Idle Mixture			
95	691636	SCREW		(Throttle Valve)	
95A	690718	SCREW		(Throttle Valve)	
98	495800	KIT, Idle Speed		(Idle Speed) (Lmt 54, 55, 91)	
98A	695408	KIT, Idle Speed			
104	690525	PIN, Float Hinge			
104A	694918	PIN, Float Hinge			
105	231855S	VALVE-FLOAT NEEDLE			
105A	696136	VALVE, Float Needle			
106	690577	SEAT, Inlet		(Walbro)(Gravity Feed)	
106	691780	SEAT, Inlet		(Walbro)(Pump Feed)	
108A	692344	VALVE, Choke			
108B	695419	VALVE, Choke			
117	694352	JET, Main		(Standard)	
117A	699457	JET, Main		(Standard)	
118	697228	JET, Main		(High Altitude)	
118A	699458	JET, Main		(High Altitude)	
121	697241	KIT, Carburetor Overhaul		(Walbro Carburetor)	
121A	699521	KIT, Carburetor Overhaul		(Nikki Carburetor)	
125	791888	CARBURETOR		(Walbro)(Gravity Feed)	
127	695005	PLUG, Welch			
127A	690727	PLUG, Welch			
130	691750	VALVE, Throttle			
130A	699500	VALVE, Throttle			
131	790901	KIT, Throttle Shaft			
131A	699501	KIT, Throttle Shaft			
133	494381	FLOAT, Carburetor			
133A	694914	FLOAT, Carburetor			
135	698780	TUBE, Fuel Transfer			
137	281165S	GASKET-FLOAT BOWL			
137A	698781	GASKET, Float Bowl			
141A	790902	KIT, Choke Shaft			
141B	698778	KIT, Choke Shaft			
142	697140	NOZZLE, Carburetor		(Standard)	
187	791766	LINE, Fuel		(Cut To Required Length)	
187A	791806	LINE, Fuel		(Formed)(21)(Cut to Required Length)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
187B	791805	LINE, Fuel		(Formed)(10-1/4" Long)(Cut to Required Length)	
240B	84001895	FILTER, FUEL		(Includes Paper Element With A 40 Micron Rating)	
276	692255	WASHER, Sealing			
276A	695410	WASHER, Sealing			
344	693675	SCREW		(Cable Clamp)	
385	694476	SCREW		(Fuel Pump)	
385A	690297	SCREW		(Fuel Pump)	
387	697090	PUMP, Fuel		(Includes Mounting Bracket)	
387A	808656	PUMP, Fuel			
431	697122	MANIFOLD, Intake			
527	698467	CLAMP, Hose			
601	791850	CLAMP, Hose			
601A	691038	CLAMP, Hose			
617	692138	SEAL, O-Ring		(Intake Manifold)	
634A	690802	SPRING/SEAL ASSEMBLY			
634B	698779	SPRING/SEAL ASSEMBLY			
692	690572	SPRING, Detent			
788	699347	BRACKET, Fuel Pump			
918	791851	HOSE, Vacuum		(Formed)(14 Inches)(Cut To Required Length)	
947	694393	SOLENOID, Fuel			
947A	699915	SOLENOID, Fuel			
950	691657	SCREW		(Float Bowl) (Bottom Of Bowl)	
958	698183	VALVE, Fuel Shut Off		(Plastic)	
975	495933	BOWL, Float		(Float Bowl)	
975A	699502	BOWL, Float			
977	690192	SET, Carburetor Gasket			
987	691326	SEAL, Choke/Throttle Shaft			
987A	698777	SEAL, Choke/Throttle Shaft			
1091	691333	CAP, Limiter			
1127	695407	SCREW		(Float Bowl) (Float Bowl to Carburetor Body)	
1266	691917	SEAL, O-Ring		(Intake Elbow)	
1266A	697123	SEAL, O-Ring		(Intake Elbow)	

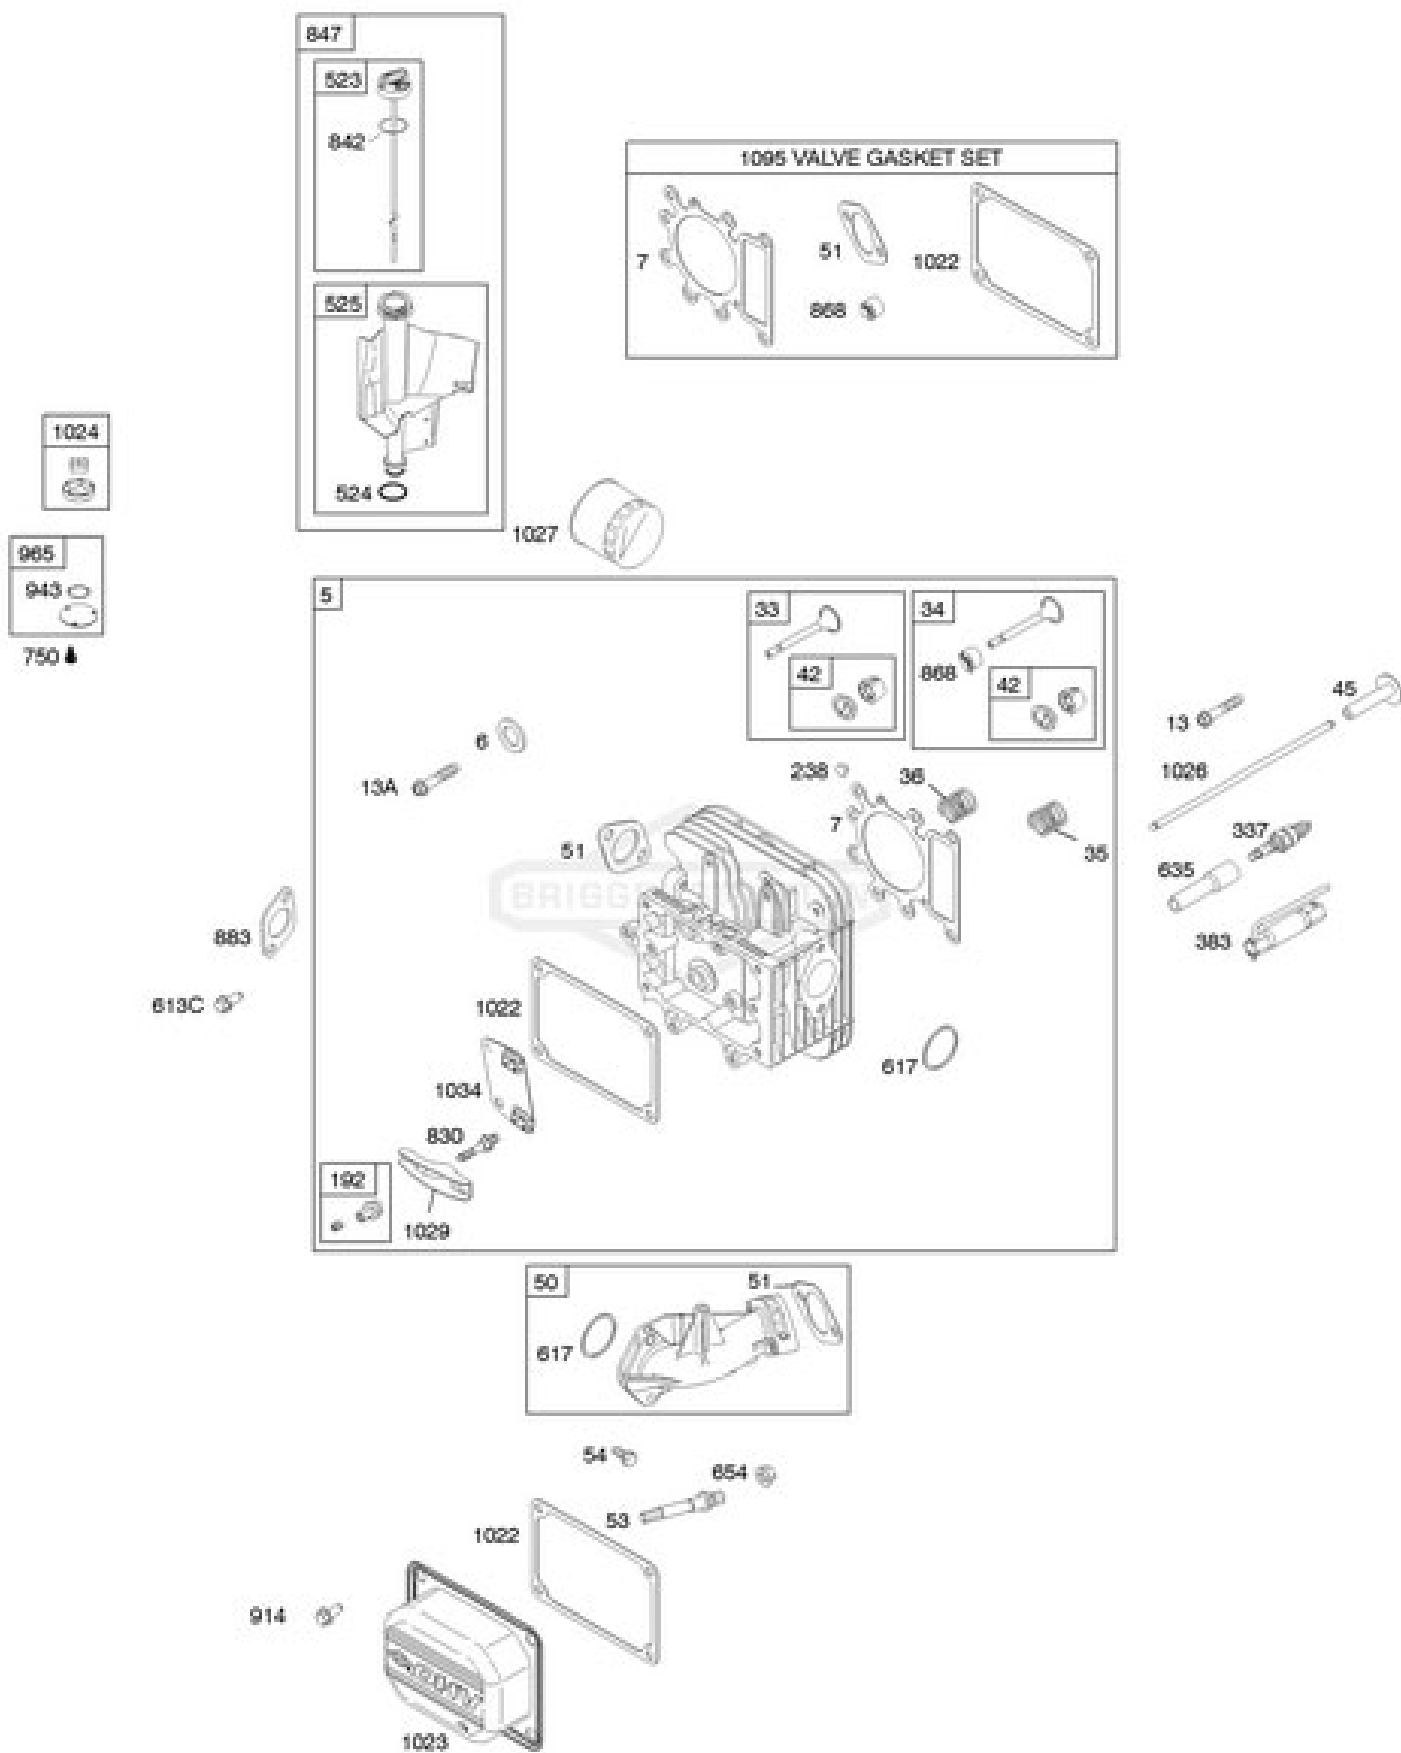

Ref #	Part #	Description	Qty	Context Note	Foot Note
5	794538	HEAD, Cylinder			
6	690310	WASHER		(Cylinder Head)	
7	273280S	GASKET, Cylinder Head			
13	690360	SCREW		(Cylinder Head) Used Before Code Date 07011000	
13A	793988	SCREW		(Cylinder Head) Used After Code Date 07010900	
33	791934	VALVE, Exhaust		Used After Code Date 06011900	
33	695760	VALVE, Exhaust		Used Before Code Date 06012000	
34	695761	VALVE, Intake		Used Before Code Date 06012000	
34	791935	VALVE, Intake		Used After Code Date 06011900	
35	691279	SPRING, Valve		(Intake)	
36	691279	SPRING, Valve		(Exhaust)	
42	499586	KEEPER, Valve			
45	690564	TAPPET, Valve			
50	690193	MANIFOLD, Intake			
51	692137	GASKET-INTAKE			
53	690227	STUD		(Carburetor)	
54	691148	SCREW		(Intake Manifold)	
192	691986	ADJUSTER, ROCKER ARM			
238	691843	CAP, Valve			
337	691043	PLUG, Spark			
383	89838S	WRENCH-SPARK PLUG			
523	699908	DIPSTICK			
524	691032	SEAL, O-Ring			
525	697085	TUBE, Dipstick			
617	692138	SEAL, O-Ring		(Intake Manifold)	
635	691909	BOOT, Spark Plug			
654	690958	NUT		(Carburetor)	
830	691095	STUD-ROCKER ARM			
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	790443	DIPSTICK/TUBE ASSEMBLY			
868	690968	SEAL, Valve			
883	692236	GASKET, Exhaust			
914	691108	SCREW		(Rocker Cover)	
1022	272475S	GASKET, Rocker Cover			
1023	692492	COVER, Rocker		Used Before Code Date 05020100	
1023	791079	COVER, Rocker		Used After Code Date 05013100	
1026	692003	ROD, Push		(Intake)	
1026	692011	ROD, Push		(Exhaust)	
1029	691751	ARM, Rocker			
1034	690822	GUIDE, Push Rod			

Ref #	Part #	Description	Qty	Context Note	Foot Note
1095	691581	GASKET SET, Valve			

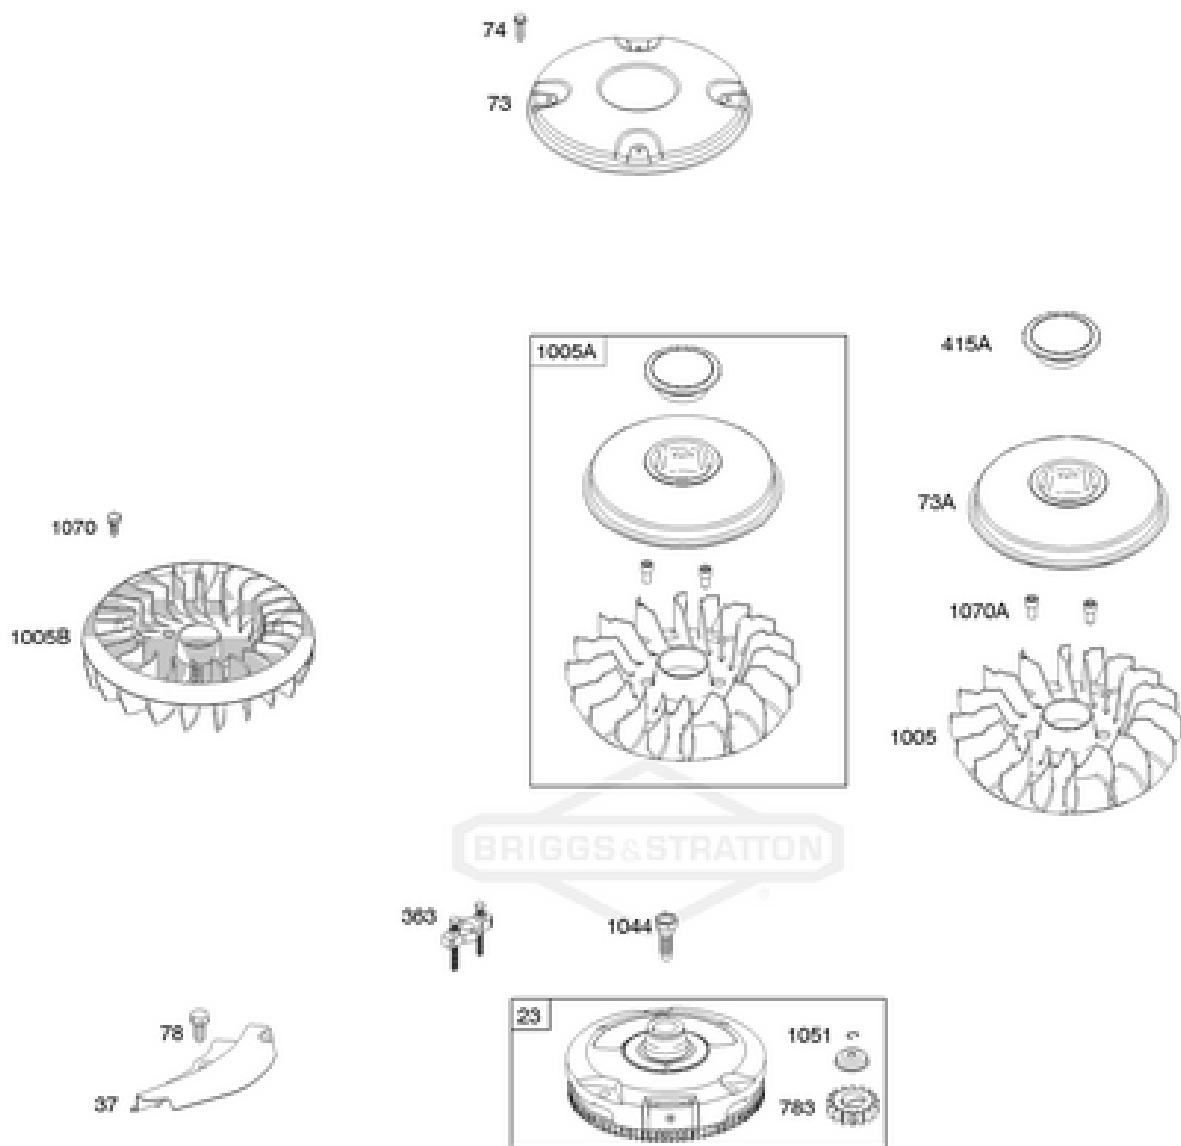

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	693557	FLYWHEEL			
37	697352	GUARD, Flywheel			
73	697133	SCREEN, Rotating		Used Before Code Date 07040900	
73A	794437	SCREEN, Rotating		Used After Code Date 07040800	
74	697897	SCREW		(Rotating Screen)	
78	691003	SCREW		(Flywheel Guard)	
363	19203	PULLER, Flywheel			
415A	794129	COVER, Flywheel		Used After Code Date 07040800	
783	693713	GEAR, Pinion			
1005	794438	FAN, Flywheel		Used After Code Date 07040800	
1005A	794436	FAN, Flywheel		Used Before Code Date 07040900	
1005B		Fan-Flywheel		(No Longer Available)(See Reference 1005A for Service Flywheel Fan)	
1044	691658	SCREW		(Flywheel)	
1051	691265	RING, Retaining			
1070	690372	SCREW		(Flywheel Fan) Used Before Code Date 07040900	
1070A	690363	SCREW		(Flywheel Fan) Used After Code Date 07040800	