
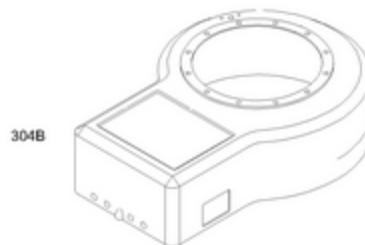
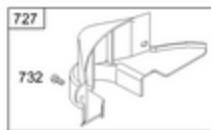
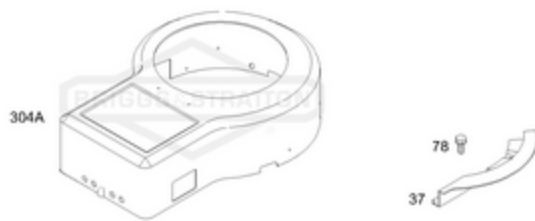



1019 LABEL KIT

1036 EMISSION LABEL

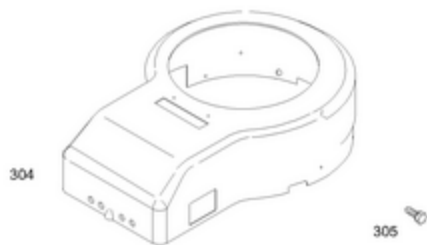


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
37	690456	GUARD, Flywheel			
78	690661	SCREW		(Flywheel Guard)	
304	690847	HOUSING, Blower		(Black)	
305	691108	SCREW		(Blower Housing)	
727	490324	COVER, Starter Drive		(Includes Mounting Hardware)	
732	691002	SCREW		(Starter Drive Cover)	
1019	496758	KIT, Label			
1036	499363	LABEL, Emissions		Used Before Code Date 97070100	
1036	499364	LABEL, Emissions		Used After Code Date 97063000	Used Before Code Date 99010100
1036	694318	LABEL, Emissions		Used After Code Date 98123100	Used Before Code Date 99100100
1036	695700	LABEL, Emissions		Used After Code Date 00063000	
1036	694997	LABEL, Emissions		Used After Code Date 99093000	Used Before Code Date 00070100

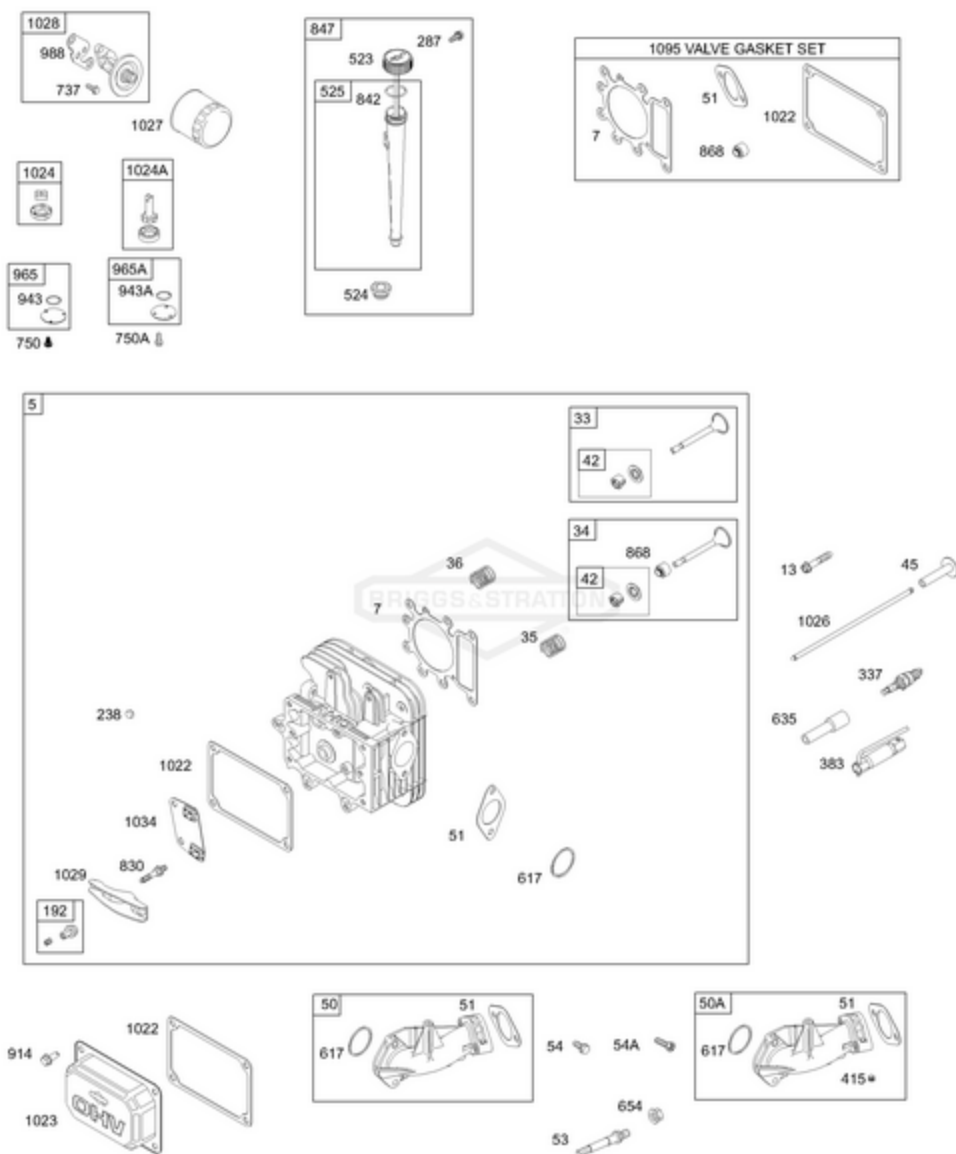

Ref #	Part #	Description	Qty	Context Note	Foot Note
5	698148	HEAD, Cylinder			
7	273280S	GASKET, Cylinder Head			
13	690360	SCREW		(Cylinder Head)	
33	695760	VALVE, Exhaust			
34	695761	VALVE, Intake			
35	691279	SPRING, Valve		(Intake)	
36	691279	SPRING, Valve		(Exhaust)	
42	499586	KEEPER, Valve			
45	690564	TAPPET, Valve			
50	690193	MANIFOLD, Intake			
51	692137	GASKET-INTAKE		Used After Code Date 97100500	
53	690227	STUD		(Carburetor)	
54	691148	SCREW		(Intake Manifold) Used After Code Date 97100500	
54A	690953	SCREW		(Intake Manifold) Used Before Code Date 97100600	
192	691986	ADJUSTER, Rocker Arm			
238	691843	CAP, Valve			
287	691002	SCREW		(Dipstick Tube)	
337	491055S	PLUG, Spark			
337	84007216	PLUG, SPARK	1	(China Only)	
383	89838S	WRENCH, Spark Plug			
415	690283	PLUG, Oil		(1/8 Standard)	
523	692014	DIPSTICK			
524	281370S	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
525	691398	TUBE, Dipstick			
617	692138	SEAL, O-Ring		(Intake Manifold) Used After Code Date 97100500	
635	691909	BOOT, Spark Plug			
654	690958	NUT		(Carburetor)	
737	691118	SCREW		(Oil Filter Adapter)	
830	691095	STUD, Rocker Arm			
842	691870	SEAL, O-Ring		(Dipstick Tube)	
847	496415	DIPSTICK/TUBE ASSEMBLY			
868	690968	SEAL, Valve			
914	691108	SCREW		(Rocker Cover)	
988	691317	GASKET, Oil Adapter			
1022	272475S	GASKET, Rocker Cover			
1023	691192	COVER, Rocker			
1026	692011	ROD, Push		(Exhaust)	
1026	692003	ROD, Push		(Intake)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
1027	492932S	FILTER, Oil			
1028	496744	ADAPTER, Oil Filter			
1029	691751	ARM, Rocker			
1034	690822	GUIDE, Push Rod			
1095	691581	GASKET SET, Valve		Used After Code Date 97100500	
1095	495992	GASKET SET, Valve		Used Before Code Date 97100600	

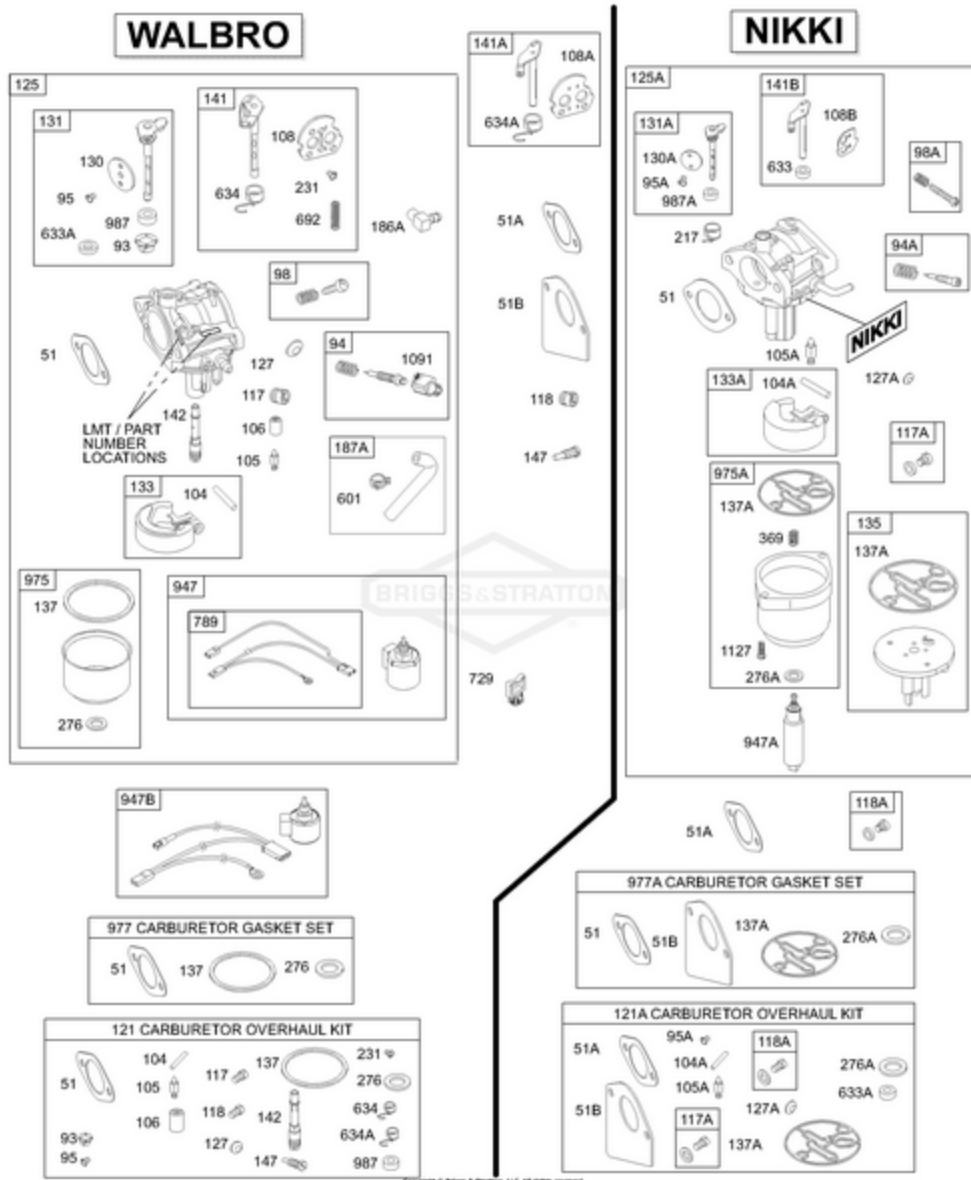

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692137	GASKET-INTAKE		Used After Code Date 97100500	
51A	272569S	GASKET, Intake		Used Before Code Date 97100600	
51B	692284	GASKET, Intake			
93	690602	BUSHING, Throttle Shaft			
94	498032	KIT, Idle Mixture		(LMT 121, 122, 125, 129, 130, 137, 138)	
94	496589	KIT, Idle Mixture		(LMT 149, 150)	
94	498030	KIT, Idle Mixture		(LMT 153, 154, 155, 156)	
94A	695425	KIT, Idle Mixture			
95	691636	SCREW		(Throttle Valve)	
95A	690718	SCREW		(Throttle Valve)	
98	495800	KIT, Idle Speed		(Idle Speed) (Lmt 54, 55, 91)	
98A	695408	KIT, Idle Speed			
104	690525	PIN, Float Hinge			
104A	694918	PIN, Float Hinge			
105	231855S	VALVE-FLOAT NEEDLE			
105A	696136	VALVE, Float Needle			
106	690577	SEAT, Inlet		(Gravity Feed)	
106	691780	SEAT, Inlet		(Pump Feed)	
108	690464	VALVE, Choke		(Used On Manual Choke)	
108A	692344	VALVE, Choke		(Used On Choke A Matic)	
108B	695419	VALVE, Choke			
117	697228	JET, Main		(Standard) (LMT 33, 34, 73, 74, 76, 121, 122, 125, 126, 128, 129, 130, 132, 137, 138)	
117	692408	JET, Main		(Standard) (LMT 149, 150, 153, 154, 155 and 697481, 697482)	
117A	695415	JET, Main		(Standard)	
118	692411	JET, Main		(High Altitude) (LMT 153, 154, 155, and 697481, 697482)	
118	231850	JET, Main		(High Altitude) (LMT 33, 34, 73, 74, 76, 121, 122, 125, 126, 128, 129, 130, 132, 137, 138)	
118	232116	JET, Main		(High Altitude) (LMT 149, 150)	
118A	695416	JET, Main		(High Altitude)	
121	498116	KIT, Carburetor Overhaul		Used Before Code Date 96072600	
121	499233	KIT, Carburetor Overhaul		Used After Code Date 96072500 Used Before Code Date 97100600	
121	690191	KIT, Carburetor Overhaul		Used After Code Date 97100500	
121A	695427	KIT, Carburetor Overhaul			

Ref #	Part #	Description	Qty	Context Note	Foot Note
125	698620	CARBURETOR		(Gravity Feed)	
125A		Carburetor		(Nikki Carburetor, Service With Walbro Carburetor) Used After Code Date 02091500	
125A		Carburetor		(Nikki Carburetor, Service With Walbro Carburetor) Used Before Code Date 02091600	
127	695005	PLUG, Welch			
127A	694530	PLUG, Welch			
130	691750	VALVE, Throttle			
130A	695418	VALVE, Throttle			
131	494379	KIT, Throttle Shaft			
131A	695421	KIT, Throttle Shaft			
133	494381	FLOAT, Carburetor			
133A	694914	FLOAT, Carburetor			
135	696142	TUBE, Fuel Transfer			
137	281165S	GASKET, Float Bowl			
137A	695426	GASKET, Float Bowl			
141	495097	KIT, Choke Shaft		(Manual Choke)	
141A	495931	KIT, Choke Shaft		(Choke A Matic)	
141B	695420	KIT, Choke Shaft			
142	231990	NOZZLE, Carburetor		(Standard) (LMT 33, 34, 73, 74, 76, 121, 122, 125, 126, 128, 129, 130, 132, 137, 138)	
142	692412	NOZZLE, Carburetor		(Standard) (LMT 149, 150, 153, 154, 155, 156)	
147	497472	JET, Pilot		(LMT 33, 34)	
147	231985	JET, Pilot		(LMT 73, 74, 121, 122, 125, 129, 130, 131, 132, 137, 138)	
186A	692317	CONNECTOR-HOSE			
187A	699332	LINE, Fuel		(Formed)(21)(Cut To Required Length)	
187A	699331	LINE, Fuel		(Formed)(10-1/4 Inches)(Cut to Required Length)	
217	695409	SPRING, Choke Return			
231	691636	SCREW		(Choke Valve)	
276	692255	WASHER, Sealing			
276A	695410	WASHER, Sealing			
369	695422	SPRING, Float Bowl			
601	95162S	CLAMP, Hose			
633	695414	SEAL, Choke/Throttle Shaft			


Ref #	Part #	Description	Qty	Context Note	Foot Note
633A	690998	SEAL, Choke/ Throttle Shaft			
634	690801	SPRING/SEAL ASSEMBLY		(Manual Choke)	
634A	690802	SPRING/SEAL ASSEMBLY		(Choke A Matic)	
692	690572	SPRING, Detent		(LMT 155, 156 And 697482, 697483)	
729	691335	CLIP, Wire		(Fuel Solenoid)	
789	692037	HARNESS-WIRING		(Fuel Solenoid)	
947	692734	SOLENOID, Fuel			
947A	695423	SOLENOID, Fuel			
947B	497672	SOLENOID, Fuel			
975	495933	BOWL, Float		(Float Bowl)	
975A	695417	BOWL, Float			
977	690192	SET, Carburetor Gasket			
977A	695428	SET, Carburetor Gasket			
987	691326	SEAL, Choke/ Throttle Shaft			
987A	698777	SEAL, Choke/ Throttle Shaft			
1091	691333	CAP, Limiter			
1127	695407	SCREW		(Float Bowl)	

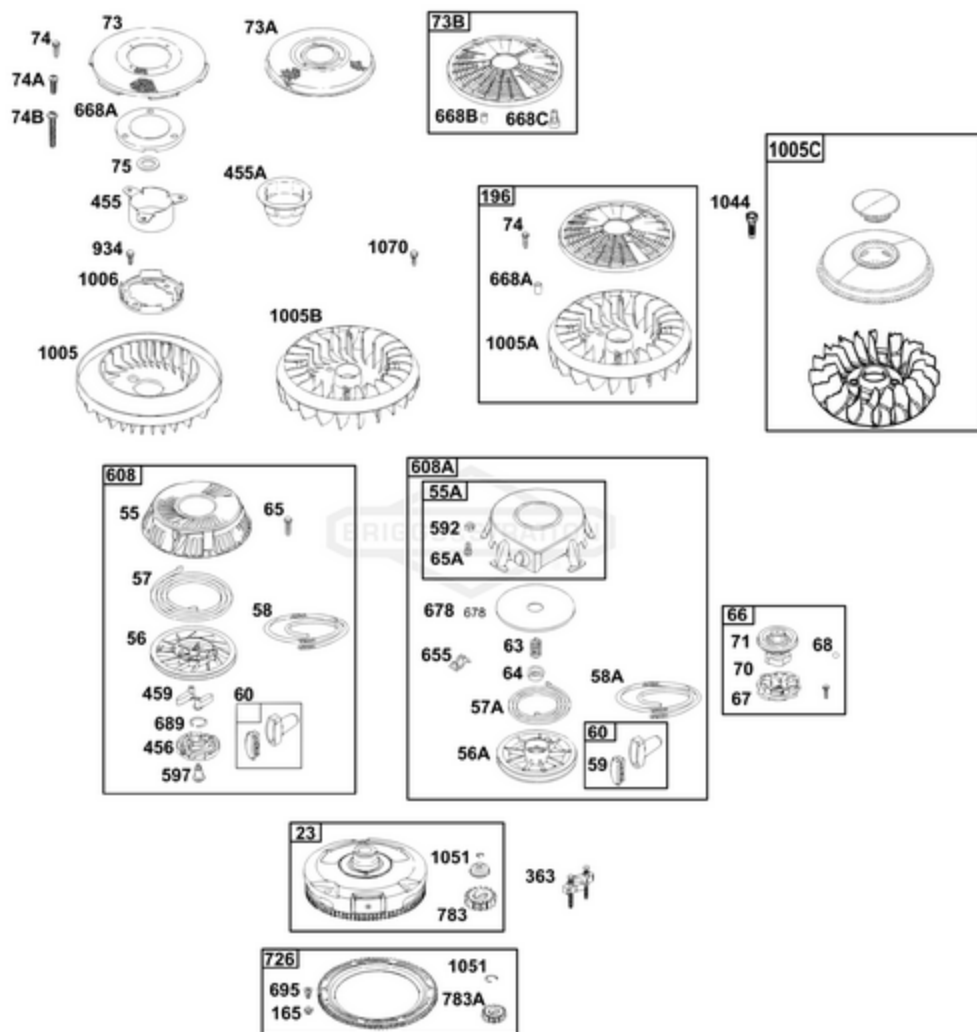

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	693557	FLYWHEEL		(Steel Ring Gear)	
55	695130	HOUSING, Rewind Starter			
55A	393576	HOUSING, Rewind Starter			
56	695129	PULLEY, Starter			
56A	295871	PULLEY, Starter		(63 Rope)	
57	695131	SPRING, Rewind Starter			
57A	490179	SPRING-REWIND STR			
58	695132	ROPE, Starter		(59" Long)	
58A	695002	ROPE, Starter		(99)(Cut to Required Length)	
59	490653	INSERT, Grip			
60	494212	GRIP, Starter Rope			
60A	490652	GRIP-STARTER ROPE			
63	690547	SPRING, Ratchet			
64	691920	ADAPTER, Ratchet Spring			
65	690837	SCREW		(Rewind Starter)	
65A	695453	SCREW		(Rewind Starter)	
66	399671	CLUTCH-STARTER			
67	394897	HOUSING, Clutch			
68	691604	BALL, Clutch			
70	691945	RATCHET-CLUTCH			
71	691359	COVER, Ratchet			
73	691191	SCREEN-ROTATING			
73A	690492	SCREEN, Rotating			
73B	494439	SCREEN, Rotating			
74	691627	SCREW		(Rotating Screen)	
74A	691655	SCREW		(Rotating Screen)	
74B	691674	SCREW		(Rotating Screen) Used Before Code Date 00040300	
74B	698425	SCREW		(Rotating Screen) Used After Code Date 00040200	
75	690582	WASHER		(Flywheel)	
165	693148	NUT		(Ring Gear)	
196	695493	FAN/SCREEN ASSEMBLY			
363	19203	PULLER, Flywheel			
455	691173	CUP, Flywheel			
456	695128	PLATE, Pawl Friction			
459	281505S	PAWL-RATCHET			
592	690800	NUT		(Rewind Starter)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
597	691696	SCREW		(Pawl Friction Plate)	
608A	390391	STARTER, Rewind			
655	691734	ANCHOR-REWIND SPRING			
668A	691323	SPACER			
668B	691215	SPACER		(Rotating Screen)	
668C	691500	SPACER		(Rotating Screen)	
678	490817	SPACER-REWIND		(Rewind)	
689	691855	SPRING-FRICTION			
695	693109	SCREW		(Ring Gear)	
726	696537	GEAR, Ring		(Aluminum)(Services Plastic Ring Gear Only)	
783	693713	GEAR, Pinion		(Steel Ring Gear)	
783A	695708	GEAR-PINION		(Plastic Ring Gear)	
934	691058	SCREW		(Fan Retainer)	
1005	691905	FAN, Flywheel			
1005A	697853	FAN, Flywheel			
1005C	796201	FAN-FLYWHEEL		Used Before Code Date 07040900	
1006	690452	RETAINER, Fan			
1044	698139	SCREW		(Flywheel)	
1051	691265	RING, Retaining			
1070	690372	SCREW		(Flywheel Fan)	

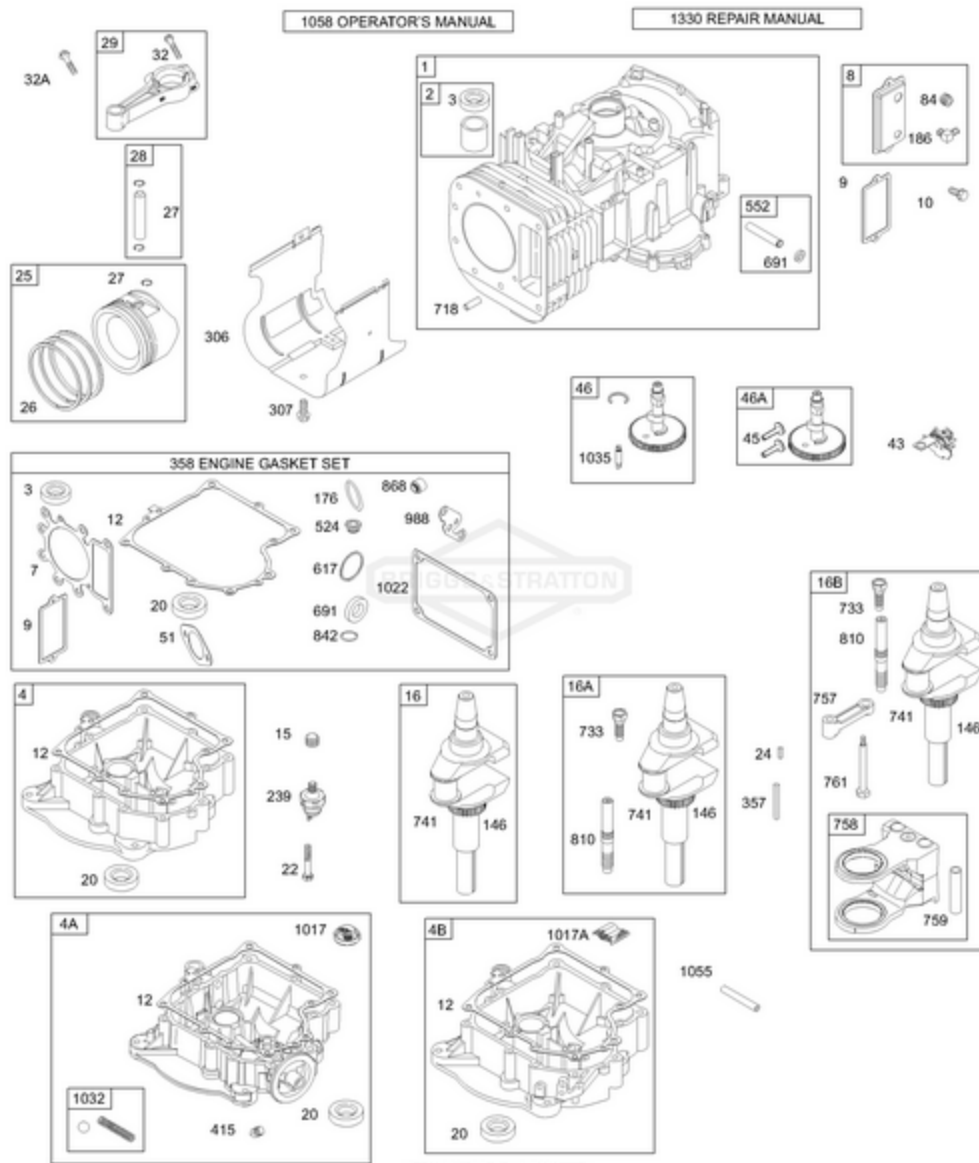

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	496412	CYLINDER ASSEMBLY			
2	399265	KIT, Bushing/Seal		(Magneto Side)	
3	391086S	SEAL, Oil		(Magneto Side)	
4	494238	SUMP, Engine			
7	273280S	GASKET, Cylinder Head			
8	696126	BREATHER ASSEMBLY			
9	27803S	GASKET, Breather			
10	691666	SCREW		(Breather Assembly)	
12	692226	GASKET, Crankcase		(.015)(Standard)	
12	692405	GASKET, Crankcase		(.009)	
12	692406	GASKET, Crankcase		(.005)	
15	690946	PLUG, Oil Drain			
16	690136	CRANKSHAFT			
16A	693944	CRANKSHAFT		Used After Code Date 95073100	
16B	693653	CRANKSHAFT		Used Before Code Date 95080100	
20	291675S	SEAL, Oil		(PTO Side)	
22	692125	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	499284	PISTON ASSEMBLY		(Standard) Used Before Code Date 01041900	
25	499292	PISTON ASSEMBLY		(.020 Oversize) Used Before Code Date 01041900	
25	696397	PISTON ASSEMBLY		(Standard) Used After Code Date 01041800	
25	696399	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 01041800	
25	696400	PISTON ASSEMBLY		(.030 Oversize) Used After Code Date 01041800	
26	696404	SET, Ring		(.010 Oversize) Used After Code Date 01041800	
26	696405	SET, Ring		(.020 Oversize) Used After Code Date 01041800	
26	696403	SET, Ring		(Standard) Used After Code Date 01041800	
26	495851	SET, Ring		(.020 Oversize) Used Before Code Date 01041900	
26	696406	SET, Ring		(.030 Oversize) Used After Code Date 01041800	
26	495854	SET, Ring		(Standard) Used Before Code Date 01041900	




Ref #	Part #	Description	Qty	Context Note	Foot Note
26	495855	SET, Ring		(.030 Oversize) Used Before Code Date 01041900	
27	691792	LOCK, Piston Pin		Used Before Code Date 95101600	
27	691299	LOCK, Piston Pin		Used After Code Date 95101500	
28	498320	PIN, Piston		(.005 Oversize) Used After Code Date 95101500	
28	299691	PIN, Piston		(Standard) Used Before Code Date 95101600	
28	391286	PIN, Piston		(.005 Oversize) Used Before Code Date 95101600	
28	498319	PIN, Piston		(Standard) Used After Code Date 95101500	
29	692420	ROD, Connecting		(.020 Undersize) Used After Code Date 98063000	
29	494504S	ROD, Connecting		(Standard) Used Before Code Date 98070100	
29	495490	ROD, Connecting		(.020 Undersize) Used Before Code Date 98070100	
29	692419	ROD, Connecting		(Standard) Used After Code Date 98063000	
32	692852	SCREW		(Connecting Rod) (1 5/8) Used After Code Date 98063000	
32	690356	SCREW		(Connecting Rod) (1 7/8) Used Before Code Date 98070100	
32A	690348	SCREW		(Connecting Rod) (1 5/8)	
43	691968	SLINGER, Governor/ Oil			
45	690564	TAPPET, Valve			
46	698492	CAMSHAFT		Used After Code Date 98063000	
46A	790340	CAMSHAFT		(Used After Code Date 98070100) (Used on Type No (s) 0103, 0119, 0130, 0174 0642)	
51	692137	GASKET-INTAKE			
84	690343	PLUG, Oil Drain			
146	691639	KEY, Woodruff			
176	691917	SEAL, O-Ring		(Air Cleaner Base)	
186	691609	CONNECTOR, Hose			
306	698454	SHIELD-CYLINDER			
307	691003	SCREW		(Cylinder Shield)	
357	691483	KEY, Drive Pulley			
358	495993	GASKET SET, Engine		Used Before Code Date 97100600	
358	691580	GASKET SET, Engine		Used After Code Date 97100500	
415	690283	PLUG, Oil		(1/8 Standard)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
524	281370S	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
552	491986	BUSHING, Governor Crank		(1/4 I.D.)	
617	692138	SEAL, O-Ring		(Intake Manifold) Used After Code Date 97100500	
691	692407	SEAL, Governor Shaft			
718	690959	PIN, Locating			
733	691658	SCREW		(Crankshaft Extension)	
741	691284	GEAR, Timing			
757	691714	LINK, Counterweight		(Used After Code Date 78100411)	
758	692423	COUNTERWEIGHT			
759	691239	PIN, Counterweight			
761	691096	SCREW		(Counterweight)	
810	691779	EXTENSION, Crankshaft			
842	691870	SEAL, O-Ring		(Dipstick Tube)	
868	690968	SEAL, Valve			
988	691317	GASKET, Oil Adapter			
1017A	691216	SCREEN, Oil Pump			
1022	272475S	GASKET, Rocker Cover			
1032	491710	SPRING, Compression			
1035	693784	SHAFT, Pump			
1055	690528	TUBE, Oil Pump			
1058	275935	MANUAL, Operator's			
1330	272147	MANUAL, Repair			

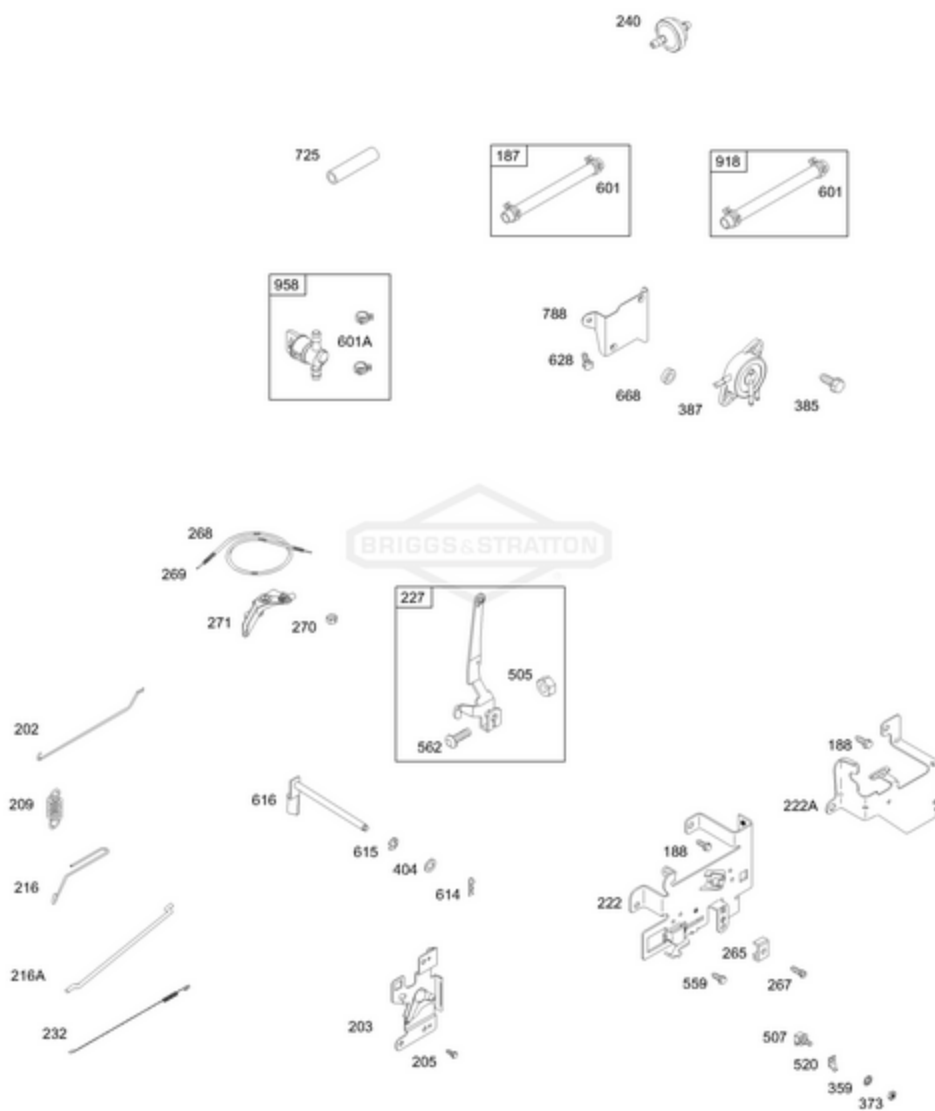

Ref #	Part #	Description	Qty	Context Note	Foot Note
187	691050	LINE, Fuel		(Cut To Required Length)	
188	691693	SCREW		(Control Bracket)	
202	691841	LINK, Mechanical Governor			
203	691381	CRANK, Bell			
205	691693	SCREW		(Bell Crank)	
209	692208	SPRING, Governor		(Green)	
216	691840	LINK, Choke			
216A	691281	LINK, Choke			
222	694042	BRACKET, Control			
227	691374	LEVER, Governor Control			
232	691842	SPRING, Governor Link			
240	298090S	FILTER, Fuel		(Red)	
240	394358S	FILTER, Fuel		(White)	
265	691024	CLAMP, Casing			
267	690804	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
359	691077	WASHER		(Ground Terminal)	
373	691612	NUT		(Ground Terminal)	
385	691108	SCREW		(Fuel Pump)	
387	808656	PUMP, Fuel			
404	691691	WASHER		(Governor Crank)	
505	691251	NUT		(Governor Control Lever)	
507	691972	INSULATOR			
520	691084	TERMINAL, Ground			
559	690661	SCREW		(Remote Choke Stop)	
562	691119	BOLT		(Governor Control Lever)	
601	95162S	CLAMP, Hose			
601A	691038	CLAMP, Hose		(Black)	
614	691620	PIN, Cotter			
615	93307	RETAINER, Governor Shaft			
616	692012	CRANK, Governor			
628	690661	SCREW		(Fuel Pump Bracket)	
668	690510	SPACER		(Fuel Pump)	
725	690403	SHIELD, Heat			
788	690458	BRACKET, Fuel Pump			


Ref #	Part #	Description	Qty	Context Note	Foot Note
918	393815	HOSE, Vacuum		(Cylinder To Impulse Pump)(Cut To Required Length)	
958	698183	VALVE, Fuel Shut Off		(Plastic)	

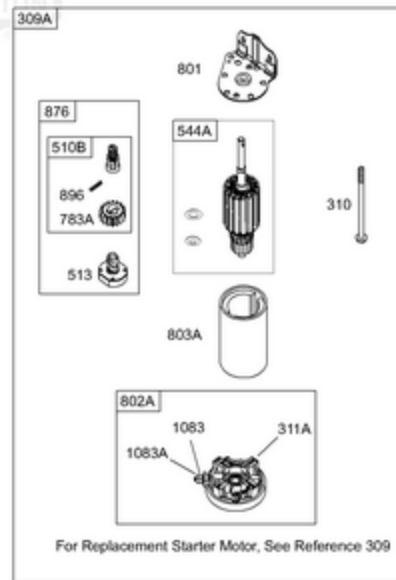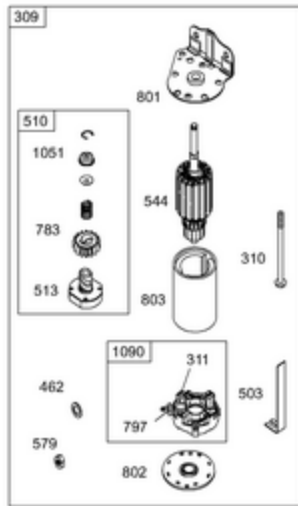




Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
309	693054	MOTOR, Starter		(3 5/8) (Aluminum Ring Gear)	
309	693551	MOTOR, Starter		(3 5/8 Housing Length For Steel Ring Gear Only)	
309	693552	MOTOR, Starter		(4 3/8 Housing Length For Steel Ring Gear Only)	
309	497401	MOTOR, Starter		(4 3/8 Housing Length For Plastic Ring Gear Only)	
309	497595	MOTOR, Starter		(3 5/8) (Plastic Ring Gear)	
309	499521	MOTOR, Starter		(4 3/8 Housing Length For Aluminum Ring Gear Only)	
309A		Motor-Starter		(For Replacement Starter Motor, Order Reference 309)	
310	690323	SCREW		(Starter Motor) (3 5/8" Housing Length)	
310	691263	BOLT		(Starter Motor) (4 3/8 Housing)	
310	692329	BOLT		(Starter Motor) (4 9/16 Housing)	
311	497608	SET, Brush			
311A	395538	SET, Brush		(3 5/8 Housing)	
311B	490311	SET, Brush		(4 9/16 Housing)	
462	691261	WASHER		(Starter Cable)	
503	691532	STRAP, Starter			
510	693699	DRIVE, Starter		(Steel Ring Gear)	
510A	696541	DRIVE, Starter		(Used With Aluminum And Plastic Ring Gears)	
510B	696540	DRIVE, Starter			
513	692024	CLUTCH, Drive			
544	692034	ARMATURE, Starter		(3 5/8 Housing)	
544A	390837	ARMATURE, Starter		(3 5/8 Housing)	
544A	490309	ARMATURE, Starter		(4 3/8 Housing)	
579	691029	NUT		(Starter Cable)	
697	690372	SCREW		(Drive Cap)	
697A	691058	SCREW		(Drive Cap)	
729A	224723	CLIP, Wire			
783	693713	GEAR, Pinion		(Steel Ring Gear)	
783A	695708	GEAR-PINION		(Plastic Ring Gear)	
797	693167	NUT		(Brush Retainer)	
801	691283	CAP, Drive			
802	691286	CAP, End			
802A	395537	CAP, End		(3 5/8 Housing)	
803	693757	HOUSING, Starter		(3-5/8 Housing)(4 3/8 Housing Length Serviced By Reference Number 309)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
803A	494205	HOUSING, Starter		(4 3/8 Housing)	
803A	398159	HOUSING, Starter		(3 5/8 Housing)	
876	696539	KIT, Pinion Spring			
896	691641	PIN, Drive Retainer			
1051	691265	RING, Retaining			
1083	690958	NUT		(End Cap) (Serrated)	
1083A	691626	NUT		(End Cap)	
1090	691293	RETAINER, Brush			

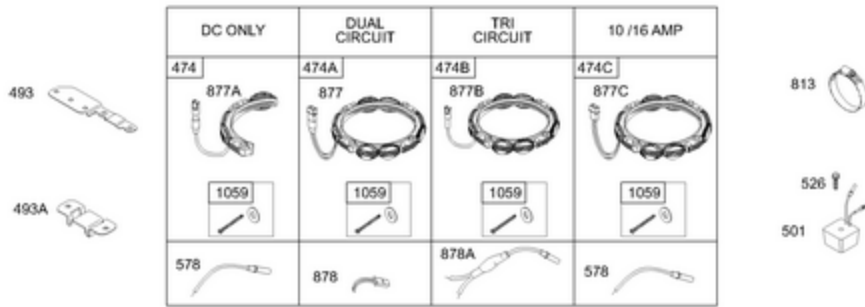


NOTE: ALL OLD STYLE STATORS USE
REFERENCE NUMBER 1119 MOUNTING SCREW

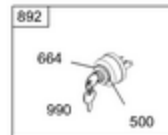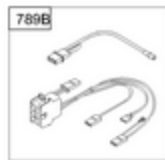

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
333	492341	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356A	690807	WIRE, Stop			
474	696578	ALTERNATOR		(DC Only)	
474A	696459	ALTERNATOR		(Dual Circuit)	
474B	696457	ALTERNATOR		(Tri Circuit)	
474C	696458	ALTERNATOR		(10 and 16 Amp Regulated)	
493	694475	BRACKET, Mounting			
493A	691177	BRACKET, Mounting			
500	691086	WASHER		(Key Switch)	
501	691188	REGULATOR		(9 Amp Regulated)	
521	690581	SHIELD, Cable			
526	690326	SCREW		(Regulator) Used Before Code Date 99070600	
526	694476	SCREW		(Regulator) Used After Code Date 99070500	
664	691087	NUT		(Key Switch)	
813	690635	CLAMP			
851	692424	TERMINAL, Spark Plug			
877	393456	WIRE/CONNECTOR, Alternator		(Dual Circuit)	
877A	393814	WIRE/CONNECTOR, Alternator		(DC Only)	
877B	393537	WIRE/CONNECTOR, Alternator		(Tri Circuit)	
877C	399916	WIRE/CONN- ALTERNATOR		(10 and 16 Amp Regulated)	
878	691237	HARNESS, Alternator		Used Before Code Date 01090400	
878A	691955	HARNESS, Alternator			
892	692318	SWITCH, Key			
920	691656	SOLENOID, Starter			
990	691959	SET, Key			
1059	698516	KIT, Screw/Washer			
1119	691183	SCREW		(Alternator)	

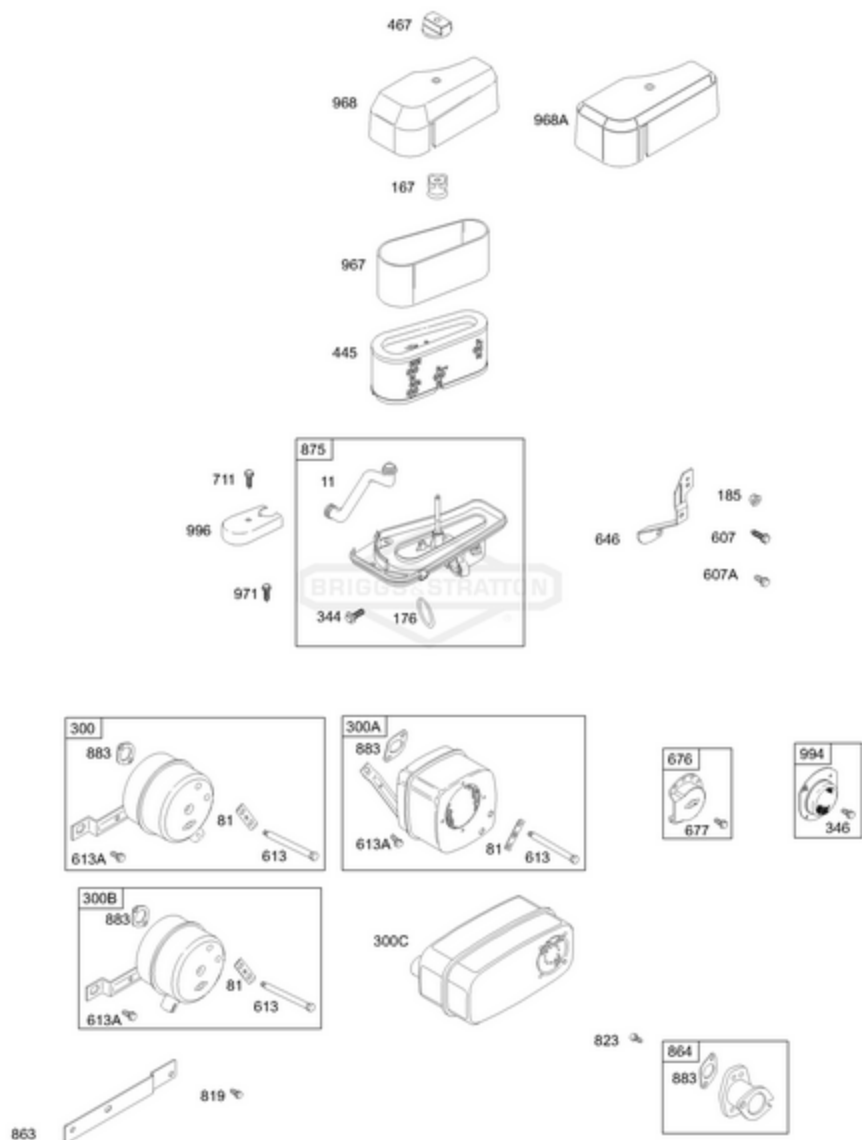

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	691328	TUBE, Breather			
81	691178	LOCK, Muffler Screw			
167	692297	SEAL-A/C NUT			
176	691917	SEAL, O-Ring		(Air Cleaner Base)	
185	690958	NUT		(Air Cleaner Base)	
300	495805S	MUFFLER			
300A	496022S	MUFFLER			
344	693675	SCREW		(Cable Clamp)	
346	690661	SCREW		(Spark Arrestor)	
445	496894S	FILTER-A/C CARTRIDGE			
467	691668	KNOB, Air Cleaner Cover			
607	690703	SCREW		(Air Cleaner Brace)	
607A	691693	SCREW		(Air Cleaner Brace)	
613	691416	SCREW		(Muffler)	
613A	691678	SCREW		(Muffler)	
646	690460	BRACE, Air Cleanr			
676	393761	DEFLECTOR, Muffler		(Side Outlet)	
677	690661	SCREW		(Muffler Deflector)	
711	690703	SCREW		(Carburetor Shield)	
819	690297	SCREW		(Muffler Bracket)	
823	698941	SCREW		(Muffler Adapter)	
864	697346	ADAPTER, Muffler			
875	696129	BASE, Air Cleaner		(Plastic)	
883	692236	GASKET, Exhaust			
967	272403S	FILTER-PRE CLEANER			
968	691332	COVER, Air Cleaner			
971	690810	SCREW		(Air Cleaner Base to Carburetor) Used Before Code Date 97100600	
971	692129	SCREW		(Air Cleaner Base to Carburetor) Used After Code Date 97100500	
994	392390	ARRESTOR, Spark			
996	690678	SHIELD, Carburetor			