




Ref #	Part #	Description	Qty	Context Note	Foot Note
1	496413	CYLINDER ASSEMBLY			
2	399265	KIT, Bushing/Seal		(Magneto Side)	
3	391086S	SEAL, Oil		(Magneto Side)	
4	494238	SUMP, Engine			
5	494240	HEAD, Cylinder			
7	271866S	GASKET, Cylinder Head			
8	495735	BREATHER ASSEMBLY			
9	27803S	GASKET, Breather			
10	691666	SCREW		(Breather Assembly)	
12	692405	GASKET, Crankcase		(.009)	
12	692406	GASKET, Crankcase		(.005)	
12	692226	GASKET, Crankcase		(.015)(Standard)	
13	690904	SCREW		(Cylinder Head)	
13A	691681	SCREW		(Cylinder Head)	
15	690946	PLUG, Oil Drain			
16	693944	CRANKSHAFT		Used After Code Date 95073100	
16B	693653	CRANKSHAFT		Used Before Code Date 95080100	
20	291675S	SEAL, Oil		(PTO Side) (PTO Side)	
22	692125	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	499292	PISTON ASSEMBLY		(.020 Oversize) Used Before Code Date 01060700	
25	696397	PISTON ASSEMBLY		(Standard) Used After Code Date 01060600	
25	696399	PISTON ASSEMBLY		(.020 Oversize) Used After Code Date 01060600	
25	696400	PISTON ASSEMBLY		(.030 Oversize) Used After Code Date 01060600	
25	499284	PISTON ASSEMBLY		(Standard) Used Before Code Date 01060700	
26	499996	SET, Ring		(Standard) Used Before Code Date 01060700	
26	499998	SET, Ring		(.020 Oversize) Used Before Code Date 01060700	
26	696403	SET, Ring		(Standard) Used After Code Date 01060600	
26	696405	SET, Ring		(.020 Oversize) Used After Code Date 01060600	
26	696406	SET, Ring		(.030 Oversize) Used After Code Date 01060600	
26	392331	SET, Ring		(Standard)(Chrome) Used Before Code Date 01060700	
27	691299	LOCK, Piston Pin		Used After Code Date 95101500	

Ref #	Part #	Description	Qty	Context Note	Foot Note
27A	691792	LOCK, Piston Pin		Used Before Code Date 95101600	
28	391286	PIN, Piston		(.005 Oversize) Used Before Code Date 95101600	
28	498319	PIN, Piston		(Standard) Used After Code Date 95101500	
28	498320	PIN, Piston		(.005 Oversize) Used After Code Date 95101500	
28	299691	PIN, Piston		(Standard) Used Before Code Date 95101600	
29	490469	ROD, Connecting		(.020 Undersize)	
29	494504S	ROD, Connecting		(Standard)	
32	690348	SCREW		(Connecting Rod) (1 7/8)	
32A	690356	SCREW		(Connecting Rod) (1 5/8)	
33	262246S	VALVE, Exhaust			
34	262247S	VALVE, Intake			
35	691605	SPRING, Valve		(Intake)	
36	691597	SPRING, Valve		(Exhaust)	
40	690656	RETAINER, Valve		(Intake)	
40A	691939	RETAINER-VALVE		(Exhaust)	
42	494553	KEEPER, Valve		(Exhaust)	
43	691968	SLINGER, Governor/Oil			
45	691811	TAPPET, Valve			
46	697668	CAMSHAFT			
51A	272554S	GASKET, Intake			
146	691639	KEY, Woodruff			
176	691917	SEAL, O-Ring		(Air Cleaner Base)	
287	691002	SCREW		(Dipstick Tube)	
306	698477	SHIELD-CYLINDER			
307	691003	SCREW		(Cylinder Shield)	
308	698476	COVER, Cylinder Head			
322	691681	SCREW		(Cylinder Head Cover)	
322A	692198	SCREW		(Cylinder Head Cover)	
337	802592S	PLUG, Spark		(Resistor)	
358	494241	GASKET SET, Engine			
383	89838S	WRENCH-SPARK PLUG			
523	692014	DIPSTICK			
524	281370S	SEAL-DIPSTICK TUBE		(Dipstick Tube)	
525	691398	TUBE, Dipstick			
552	491986	BUSHING, Governor Crank		(1/4 I.D.)	
635	66538S	BOOT, Spark PLug			
668	690510	SPACER		(Cylinder Head)	


Ref #	Part #	Description	Qty	Context Note	Foot Note
691	692407	SEAL-GOVERNOR SHAFT			
718	690959	PIN, Locating			
733	691658	SCREW		(Crankshaft Extension)	
741	691284	GEAR, Timing			
757	691714	LINK, Counterweight		(Used After Code Date 78100411)	
758	692423	COUNTERWEIGHT			
759	691239	PIN, Counterweight			
761	691096	SCREW		(Counterweight)	
810	691779	EXTENSION, Crankshaft			
842	691870	SEAL, O-Ring		(Dipstick Tube)	
847	496415	DIPSTICK/TUBE ASSEMBLY			
869	691802	SEAT, Valve		(Intake)	
870	691844	SEAT-VALVE		(Exhaust)	
871	231218	BUSHING, Valve Guide		(Brass Intake Valve)	
871	261961	BUSHING, Valve Guide		(Exhaust)	
883	692236	GASKET, Exhaust			
1019	491252	KIT, Label			
1058	274787	MANUAL, Operator's			
1095	498539	GASKET SET, Valve			

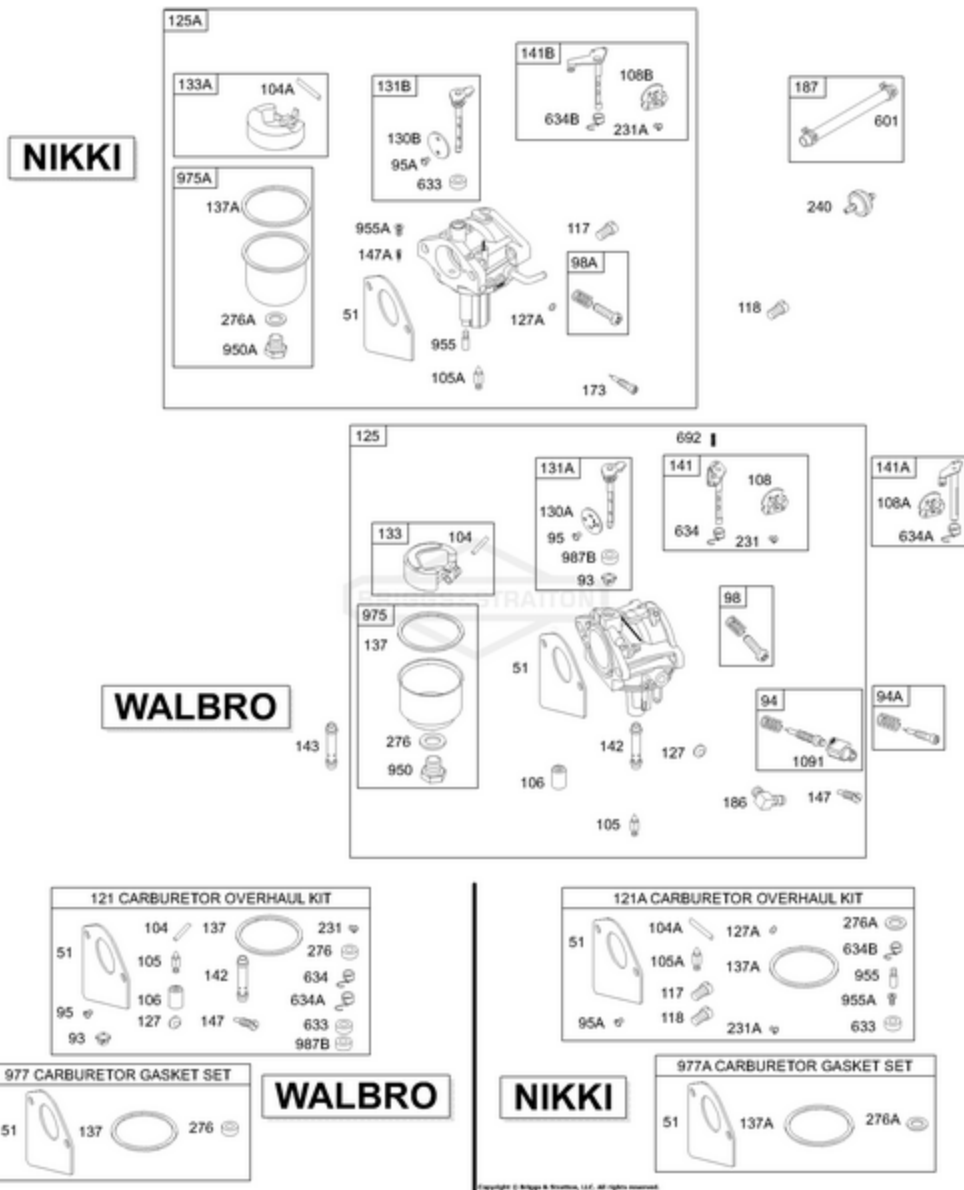

Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692284	GASKET, Intake			
93	690602	BUSHING, Throttle Shaft			
94	498030	KIT, Idle Mixture		(Lmt 153154,155,156)	
94A	494383	KIT, Idle Mixture		(Lmt 71,101,102,113,114,116)	
95	691636	SCREW		(Throttle Valve)	
95A	690718	SCREW		(Throttle Valve)	
98	495800	KIT, Idle Speed		(Idle Speed) (Lmt 54, 55, 91)	
98A	694907	KIT, Idle Speed			
104	690525	PIN, Float Hinge			
104A	694918	PIN, Float Hinge			
105	231855S	VALVE-FLOAT NEEDLE			
105A	696136	VALVE, Float Needle			
106	690577	SEAT, Inlet			
108	690464	VALVE, Choke		(Manual Choke)	
108A	692344	VALVE, Choke		(Choke A Matic)	
108B	694923	VALVE, Choke			
117	690880	JET, Main		(Standard)	
118	694925	JET, Main		(High Altitude)	
121	499231	KIT, Carburetor Overhaul		(LMT 133, 134, 135, 136, 166, 168)	
121	499220	KIT, Carburetor Overhaul		(LMT 58, 59, 60, 61, 62, 92, 93, 94, 95, 96, 108, 111, 162, 165, 169)	
121A	694930	KIT, Carburetor Overhaul		(Nikki)	
125	498027	CARBURETOR		(GRAVITY FEED)(LMT 1, 2, 3, 4, 5, 6, 7, 32, 37, 38, 39, 40, 41, 63, 64,65, 66, 77, 78, 79, 80, 81, 92, 93, 94, 95, 96, 97, 108, 111, 133, 134,135, 136, 162, 163, 164, 165)	
125	698171	CARBURETOR		(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	
125A	699831	CARBURETOR			
127	695005	PLUG, Welch			
127A	694916	PLUG, Welch			
130A	694917	VALVE, Throttle			
130B	691750	VALVE, Throttle			
131A	494379	KIT, Throttle Shaft			
131B	694909	KIT, Throttle Shaft			



Ref #	Part #	Description	Qty	Context Note	Foot Note
133	494381	FLOAT, Carburetor			
133A	694914	FLOAT, Carburetor			
137	281165S	GASKET-FLOAT BOWL			
137A	694920	GASKET, Float Bowl			
141	495097	KIT, Choke Shaft		(Manual Choke)	
141A	495931	KIT, Choke Shaft		(Choke A Matic)	
141B	694913	KIT, Choke Shaft			
142	697592	NOZZLE, Carburetor		(Standard) (696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	
142	691434	NOZZLE, Carburetor		(Standard) (LMT 92, 93, 94, 96)	
143	497737	NOZZLE, Carburetor		(High Altitude) (LMT 92, 93, 94, 96)	
147	497472	JET, Pilot		(LMT 37, 39, 41, 77, 79, 81)	
147A	694927	JET, Pilot			
173	694926	VALVE, Idle Mixture			
186	692317	CONNECTOR- HOSE			
187	691050	LINE, Fuel		(Cut To Required Length)	
231	691636	SCREW		(Choke Valve)	
231A	690718	SCREW		(Choke Valve)	
240	394358S	FILTER-FUEL		(White)	
276	692255	WASHER, Sealing			
276A	690997	WASHER, Sealing			
601	95162S	CLAMP, Hose			
633	690998	SEAL, Choke/Throttle Shaft			
634	690801	SPRING/SEAL ASSEMBLY		(Manual Choke)	
634A	690802	SPRING/SEAL ASSEMBLY		(Choke A Matic)	
634B	694912	SPRING/SEAL ASSEMBLY			
692	690572	SPRING, Detent			
950	691657	SCREW		(Float Bowl)	
950A	694919	SCREW		(Float Bowl)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
955	694924	PLUG, Carburetor		(Idle Chamber)	
955A	694921	PLUG, Carburetor		(Pilot Jet)	
975	495933	BOWL, Float		(Float Bowl)	
975A	694908	BOWL, Float			
977	690192	SET, Carburetor Gasket			
977A	694931	SET, Carburetor Gasket			
		SEAL,			
987B	692001	Choke/Throttle Shaft			
1091	691333	CAP, Limiter			

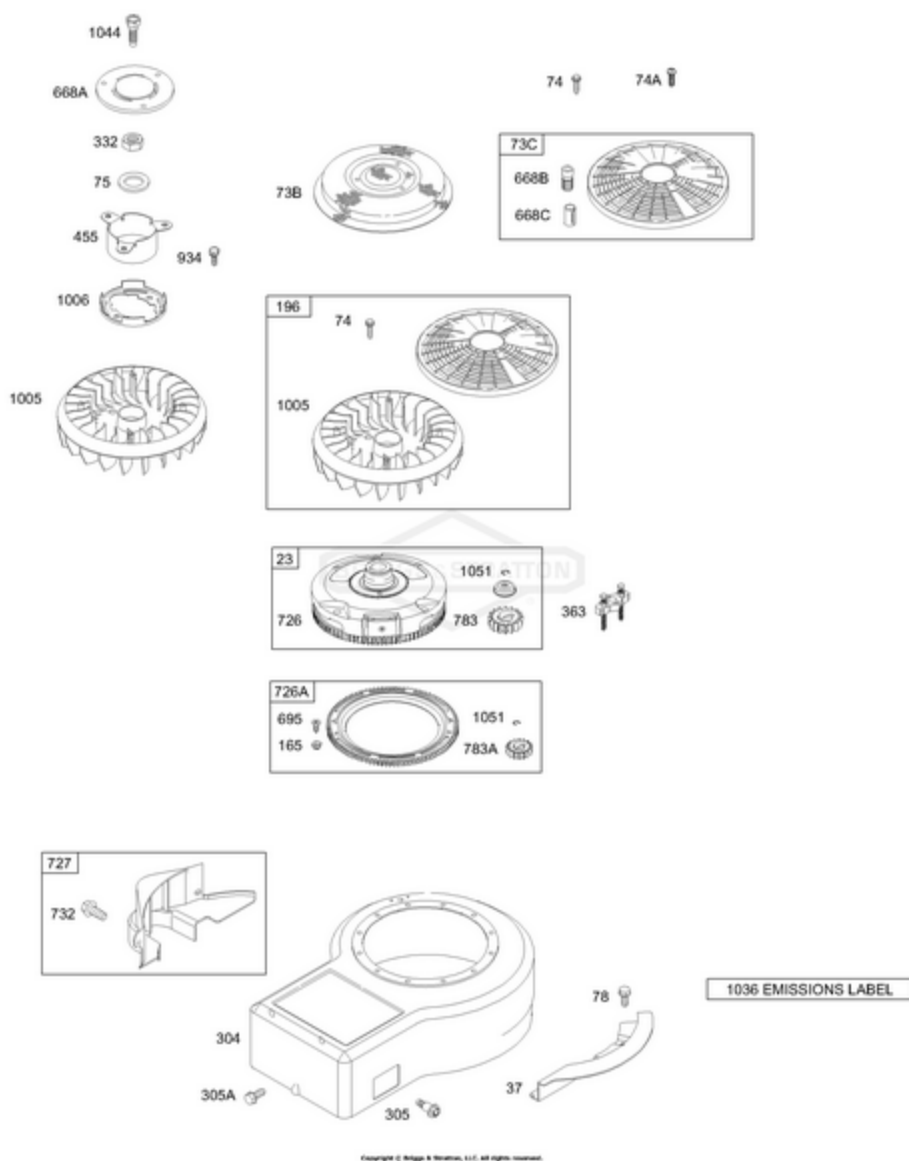


Ref #	Part #	Description	Qty	Context Note	Foot Note
23	693557	FLYWHEEL		(Steel Ring Gear)	
37	690456	GUARD, Flywheel			
73B	690492	SCREEN, Rotating			
73C	494439	SCREEN, Rotating			
74	691674	SCREW		(Rotating Screen) (1 1/2) Used Before Code Date 00040300	
74	698425	SCREW		(Rotating Screen) (1 1/4" Long) Used After Code Date 00040200	
74A	691655	SCREW		(Rotating Screen) (13/32)	
75	690582	WASHER		(Flywheel)	
78	690661	SCREW		(Flywheel Guard)	
165	693148	NUT		(Ring Gear)	
304	691399	HOUSING, Blower			
305	692198	SCREW		(Blower Housing)	
305A	692127	SCREW		(Blower Housing)	
332	690662	NUT		(Flywheel)	
363	19203	PULLER, Flywheel			
455	691173	CUP, Flywheel			
668A	691323	SPACER		(Rotating Screen)	
668C	691215	SPACER		(Rotating Screen)	
668B	691500	SPACER		(Rotating Screen)	
695	693109	SCREW		(Ring Gear)	
726		Gear-Ring		(Steel)(See Reference 23 for Service)	
726A	696537	GEAR, Ring		(Aluminum)(Services Plastic Ring Gear Only)	
727	490324	COVER, Starter Drive		(Includes Mounting Hardware)	
732	691002	SCREW		(Starter Drive Cover)	
783	693713	GEAR, Pinion		(Steel Ring Gear Only)	
783A	695708	GEAR-PINION		(Aluminum And Plastic Ring Gears)	
934	691058	SCREW		(Fan Retainer)	
1005	697853	FAN, Flywheel			
1006	690452	RETAINER, Fan			
1036	695036	LABEL, Emissions		Used After Code Date 99093000 Used Before Code Date 00070100	
1036	694325	LABEL, Emissions		Used After Code Date 99010300 Used Before Code Date 99100100	
1036	499362	LABEL, Emissions		Used After Code Date 97063000 Used Before Code Date 99010100	
1036	499361	LABEL, Emissions		Used Before Code Date 97070100	

Ref #	Part #	Description	Qty	Context Note	Foot Note
1036	696770	LABEL, Emissions		Used After Code Date 01093000	
1036	695699	LABEL, Emissions		Used After Code Date 00063000 Code Date 01100100	Used Before
1044	691658	SCREW		(Flywheel)	
1051	691265	RING, Retaining			

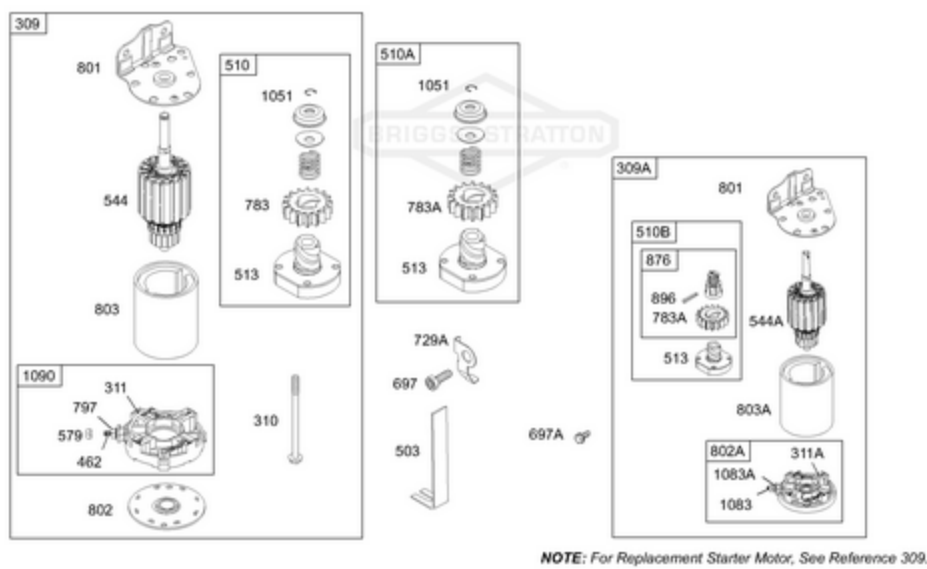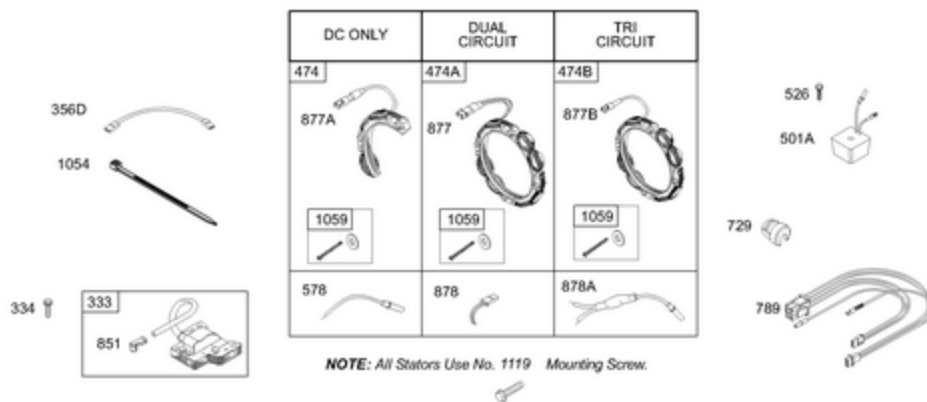

Ref #	Part #	Description	Qty	Context Note	Foot Note
309	693551	MOTOR, Starter		(3 5/8 Housing Length For Steel Ring Gear Only)	
309	497401	MOTOR, Starter		(4 3/8 Housing Length For Plastic Ring Gear Only)	
309	497595	MOTOR-STARTER		(3 5/8) (Plastic Ring Gear)	
309	499521	MOTOR, Starter		(4 3/8 Housing Length For Aluminum Ring Gear Only)	
309	693054	MOTOR, Starter		(3 5/8) (Aluminum Ring Gear)	
309A		Motor-Starter		(For Replacement Starter Motor, Order Reference 309)	
310	691263	BOLT		(Starter Motor) (4 3/8 Housing)	
310	690323	SCREW		(Starter Motor) (3 5/8" Housing Length)	
311	497608	SET, Brush			
311A	395538	SET, Brush		(3 5/8 Housing)	
333	492341	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356D	690799	WIRE, Stop			
462	691261	WASHER		(Starter Cable)	
474	696578	ALTERNATOR		(DC Only)	
474A	696459	ALTERNATOR		(Dual Circuit)	
474B	696457	ALTERNATOR		(Tri Circuit)	
503	691532	STRAP-STARTER			
510	693699	DRIVE, Starter		(Used With Steel Ring Gear)	
510A	696541	DRIVE, Starter		(Used With Aluminum And Plastic Ring Gears)	
510B	696540	DRIVE, Starter			
513	692024	CLUTCH-DRIVE			
526	690326	SCREW		(Regulator)	
544	692034	ARMATURE, Starter		(3 5/8 Housing)	
544A	490309	ARMATURE, Starter		(4 3/8 Housing)	
544A	390837	ARMATURE, Starter		(3 5/8 Housing)	
578	692306	WIRE ASSEMBLY			
579	691029	NUT		(Starter Cable)	
697	690372	SCREW		(Drive Cap)	
697A	691058	SCREW		(Drive Cap)	
729	690596	CLIP, Wire			
729A	691224	CLIP, Wire			
783	693713	GEAR, Pinion		(Steel Ring Gear Only)	
783A	695708	GEAR-PINION		(Aluminum And Plastic Ring Gears)	
789	695050	HARNESS, Wiring			
797	693167	NUT		(Brush Retainer)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
801	691283	CAP-DRIVE			
802	691286	CAP-END			
802A	395537	CAP, End		(3 5/8 Housing)	
803A	398159	HOUSING, Starter		(3 5/8 Housing)	
803A	494205	HOUSING, Starter		(4 3/8 Housing)	
851	493880S	TERMINAL-SPARK PLUG			
876	696539	KIT, Pinion Spring			
877	393456	WIRE/CONNECTOR, Alternator			
877A	393814	WIRE/CONNECTOR, Alternator		(10 Amp Regulated)	
877B	393537	WIRE/CONNECTOR, Alternator		(Tri Circuit) (9 Amp)	
878	398661	HARNESS, Wiring			
878A	691955	HARNESS, Alternator			
896	691641	PIN, Drive Retainer			
1051	691265	RING, Retaining			
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer		(Alternator)	
1083	691626	NUT		(End Cap)	
1083A	690958	NUT		(End Cap) (Serrated)	
1090	691293	RETAINER-BRUSH			
1119	691183	SCREW		(Alternator)	

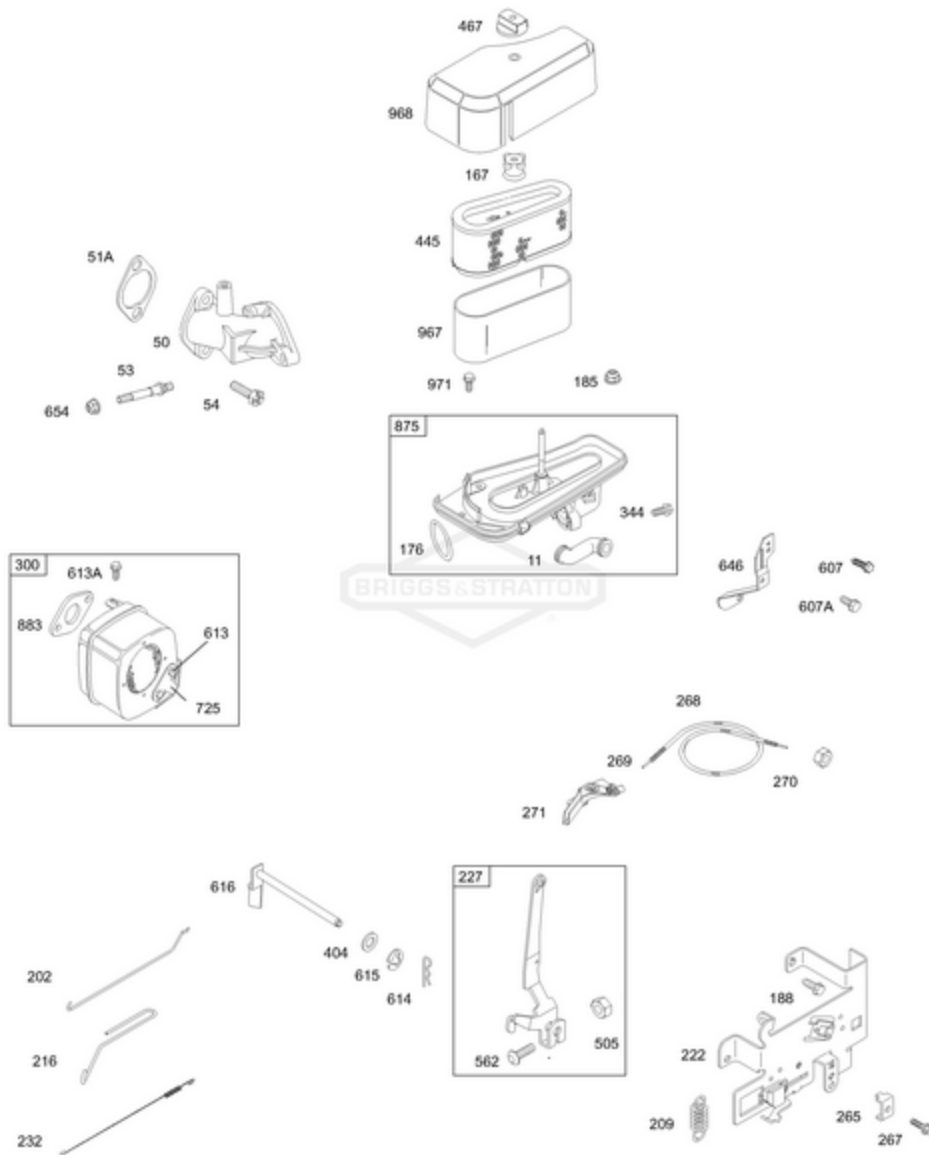

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
11	692253	TUBE, Breather			
50	691711	MANIFOLD, Intake			
51A	272554S	GASKET, Intake			
53	690227	STUD		(Carburetor)	
54	690953	SCREW		(Intake Manifold)	
167	692297	SEAL-A/C NUT			
176	691917	SEAL, O-Ring		(Air Cleaner Base)	
185	690958	NUT		(Air Cleaner Base)	
188	691693	SCREW		(Control Bracket)	
202	691841	LINK, Mechanical Governor			
209	690480	SPRING, Governor		(Red)	
216	691840	LINK, Choke			
222	694042	BRACKET, Control			
227	691374	LEVER, Governor Control			
232	691842	SPRING, Governor Link			
265	691024	CLAMP, Casing			
267	690804	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
300	691874	MUFFLER			
344	693675	SCREW		(Cable Clamp)	
404	691691	WASHER		(Governor Crank)	
445	496894S	FILTER-A/C CARTRIDGE			
467	691668	KNOB, Air Cleaner Cover			
505	691251	NUT		(Governor Control Lever)	
562	691119	BOLT		(Governor Control Lever)	
607	691693	SCREW		(Air Cleaner Brace)	
607A	690703	SCREW		(Air Cleaner Brace)	
613	691416	SCREW		(Muffler)	
613A	692198	SCREW		(Muffler)	
614	691620	PIN, Cotter			
615	93307	RETAINER, Governor Shaft			
616	692012	CRANK-GOVERNOR			
646	690460	BRACE, Air Cleanr			
654	690958	NUT		(Carburetor)	
725	690420	SHIELD, Heat		(Muffler)	
875	696129	BASE, Air Cleaner		(Plastic)	
883	692236	GASKET, Exhaust			
967	272403S	FILTER-PRE CLEANER			

Ref #	Part #	Description	Qty	Context Note	Foot Note
968	691332	COVER, Air Cleaner			
971	691108	SCREW		(Air Cleaner Base) (Remote Choke)	