
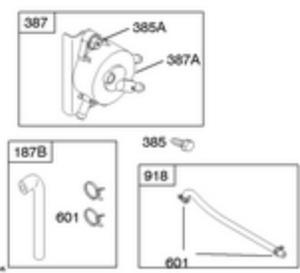
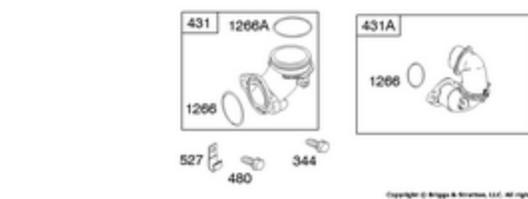
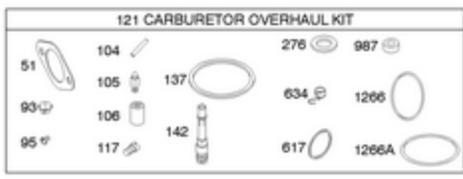
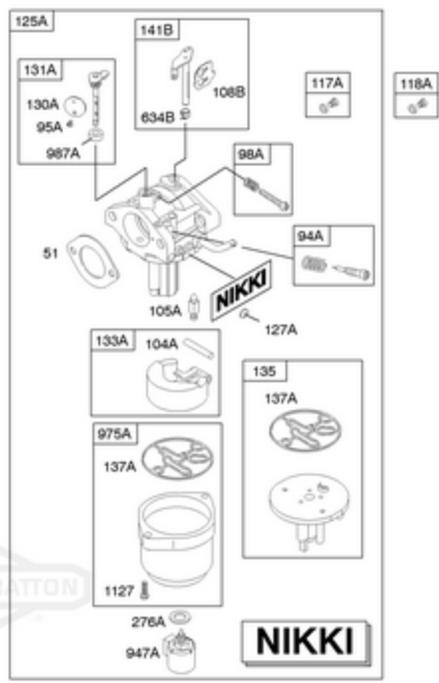


Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
23	693556	FLYWHEEL			
37	697108	GUARD, Flywheel			
78	691003	SCREW		(Flywheel Guard)	
363	19203	PULLER, Flywheel			
783	693713	GEAR, Pinion			
1005	697111	FAN, Flywheel			
1044	698139	SCREW		(Flywheel)	
1051	691265	RING, Retaining			
1070	690372	SCREW		(Flywheel Fan)	

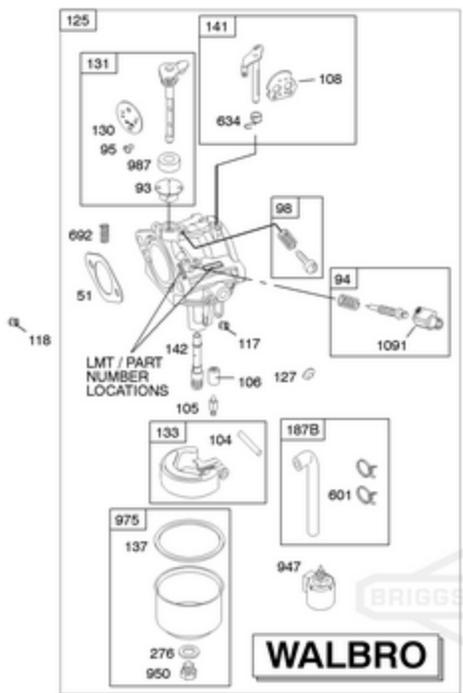

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
51	692137	GASKET-INTAKE			
93	690602	BUSHING, Throttle Shaft			
94	498030	KIT, Idle Mixture		(Lmt 153154,155,156)	
94A	695425	KIT, Idle Mixture			
95	691636	SCREW		(Throttle Valve)	
95A	690718	SCREW		(Throttle Valve)	
98	495800	KIT, Idle Speed		(Idle Speed) (Lmt 54, 55, 91)	
98A	695408	KIT, Idle Speed			
104	690525	PIN, Float Hinge			
104A	694918	PIN, Float Hinge			
105	231855S	VALVE-FLOAT NEEDLE			
105A	696136	VALVE, Float Needle			
106	690577	SEAT, Inlet		(Gravity Feed Carburetor)	
106	691780	SEAT, Inlet		(Pump Feed Carburetor)	
108	692344	VALVE, Choke			
108B	695419	VALVE, Choke			
117	694352	JET, Main		(Standard)	
117A	699457	JET, Main		(Standard)	
118	697228	JET, Main		(High Altitude)	
118A	699458	JET, Main		(High Altitude)	
121	697241	KIT, Carburetor Overhaul		(Walbro)	
121A	699521	KIT, Carburetor Overhaul		(Nikki Carburetor)	
125	791888	CARBURETOR		(Walbro)(Gravity Feed)	
125A	792358	CARBURETOR		(Nikki)(Gravity Feed)	
127	695005	PLUG, Welch			
127A	690727	PLUG, Welch			
130	691750	VALVE, Throttle			
130A	699500	VALVE, Throttle			
131	790901	KIT, Throttle Shaft			
131A	699501	KIT, Throttle Shaft			
133	494381	FLOAT, Carburetor			
133A	694914	FLOAT, Carburetor			
135	698780	TUBE, Fuel Transfer		(Nikki)(Gravity Feed)	
135	792022	TUBE-FUEL TRANSFER		(Nikki)(Pump Feed)	
137	281165S	GASKET, Float Bowl			
137A	698781	GASKET, Float Bowl			
141	790902	KIT, Choke Shaft			

Ref #	Part #	Description	Qty	Context Note	Foot Note
141B	695420	KIT, Choke Shaft			
142	697140	NOZZLE, Carburetor		(Standard)	
187B	791805	LINE, Fuel		(Formed)(10-1/4 Inches Long)(Cut to Required Length)	
240B	695666	FILTER, Fuel		(Includes 30 Micron Paper Element)	
276	692255	WASHER, Sealing			
276A	695410	WASHER, Sealing			
344	693675	SCREW		(Cable Clamp)	
385	694476	SCREW		(Fuel Pump)	
385A	690297	SCREW		(Fuel Pump)	
387	697090	PUMP, Fuel			
387A	808656	PUMP, Fuel			
431	697122	MANIFOLD, Intake			
480	693675	SCREW		(Tube Clamp)	
527	698467	CLAMP, Hose			
601	791850	CLAMP, Hose			
617	692138	SEAL, O-Ring		(Intake Manifold)	
634	690802	SPRING/SEAL ASSEMBLY			
634B	698779	SPRING/SEAL ASSEMBLY			
692	690572	SPRING, Detent			
918	791851	HOSE, Vacuum			
947	694393	SOLENOID, Fuel			
947A	699915	SOLENOID, Fuel			
950	691657	SCREW		(Float Bowl)	
975	495933	BOWL, Float		(Float Bowl)	
975A	699502	BOWL, Float			
977	690192	SET, Carburetor Gasket			
987	691326	SEAL, Choke/Throttle Shaft			
987A	698777	SEAL, Choke/Throttle Shaft			
1091	691333	CAP, Limiter			
1127	695407	SCREW		(Float Bowl)	
1266	691917	SEAL, O-Ring		(Intake Elbow)	
1266A	697123	SEAL, O-Ring		(Intake Elbow)	

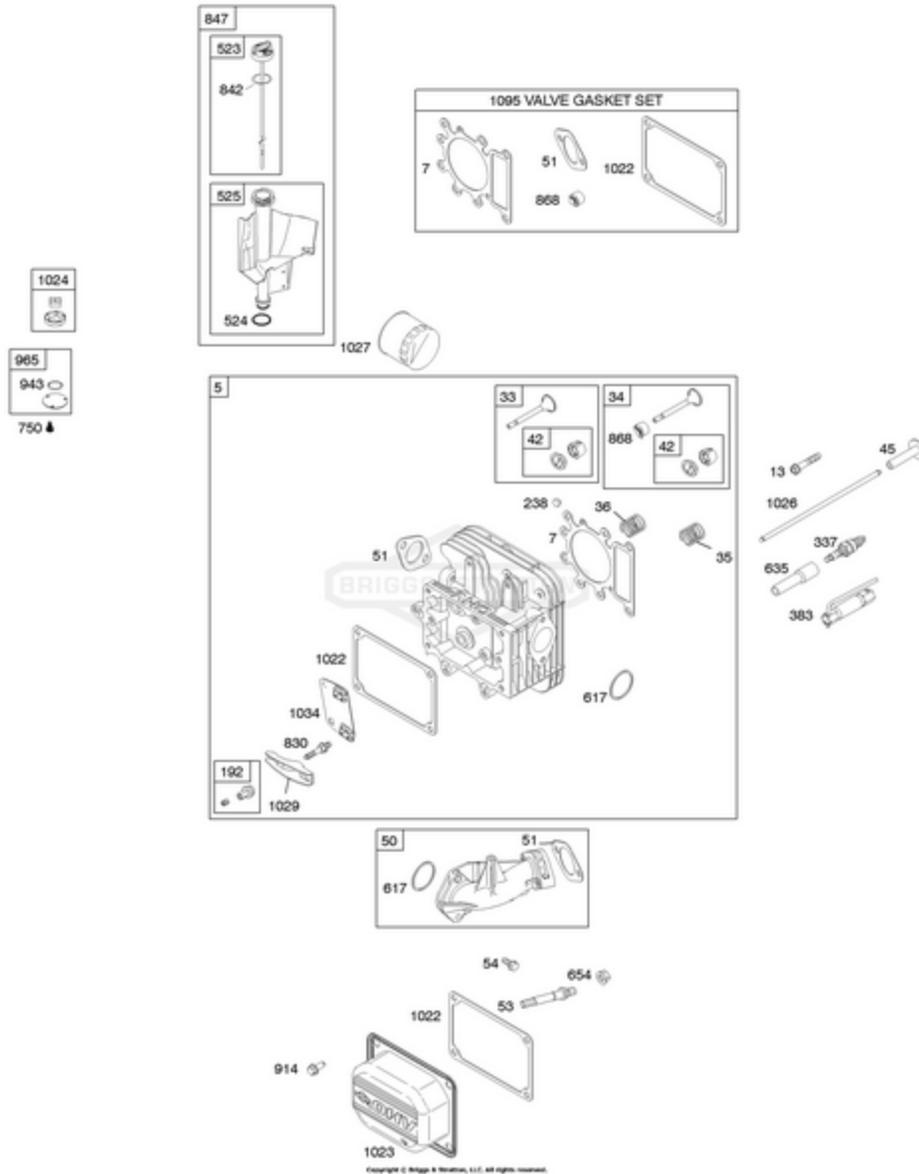





Ref #	Part #	Description	Qty	Context Note	Foot Note
5	793990	HEAD, Cylinder			
7	794114	GASKET, Cylinder Head			
13	690360	SCREW		(Cylinder Head) Used Before Code Date 07011500	
13	793988	SCREW		(Cylinder Head) Used After Code Date 07011400	
33	792868	VALVE, Exhaust			
34	791935	VALVE, Intake			
35	691279	SPRING, Valve		(Intake)	
36	691279	SPRING, Valve		(Exhaust)	
42	499586	KEEPER, Valve			
45	690564	TAPPET, Valve			
50	690193	MANIFOLD, Intake			
51	692137	GASKET-INTAKE			
53	690227	STUD		(Carburetor)	
54	691148	SCREW		(Intake Manifold)	
192	691986	ADJUSTER, Rocker Arm			
238	691843	CAP, Valve			
383	89838S	WRENCH, Spark Plug			
523	699908	DIPSTICK			
524	691032	SEAL, O-Ring			
525	697085	TUBE, Dipstick			
617	692138	SEAL, O-Ring		(Intake Manifold)	
635	691909	BOOT, Spark Plug			
654	690958	NUT		(Carburetor)	
750	790832	SCREW		(Oil Pump Cover)	
830	691095	STUD, Rocker Arm			
842	691031	SEAL, O-Ring		(Dipstick Tube)	
847	790443	DIPSTICK/TUBE ASSEMBLY			
868	690968	SEAL, Valve			
914	691108	SCREW		(Rocker Cover)	
943	690589	SEAL, O-Ring		(Oil Pump Cover)	
965	499613	COVER, Oil Pump			
1022	272475S	GASKET, Rocker Cover			
1023	791079	COVER, Rocker			
1024	499054	PUMP, Oil			
1026	692003	ROD, Push		(Intake)	
1026	692011	ROD, Push		(Exhaust)	
1027	696854	FILTER, Oil			
1029	691751	ARM, Rocker			

Ref #	Part #	Description	Qty	Context Note	Foot Note
1034	690822	GUIDE, Push Rod			
1095	690190	GASKET SET, Valve			

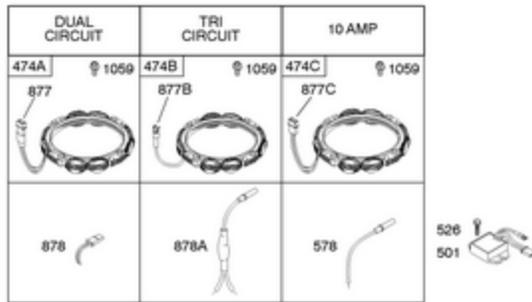

NOTE: All stators use a No. 1119 mounting screw.



NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

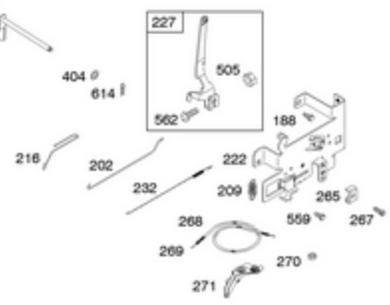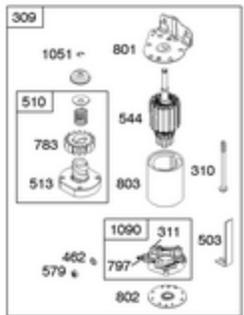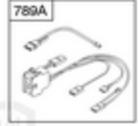

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
188	691693	SCREW		(Control Bracket)	
202	691841	LINK, Mechanical Governor			
209	692208	SPRING, Governor			
216	691840	LINK, Choke			
222	694042	BRACKET, Control			
227	691374	LEVER, Governor Control			
232	691842	SPRING, Governor Link			
265	691024	CLAMP, Casing			
267	690804	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
309	693551	MOTOR, Starter			
310	690323	SCREW		(Starter Motor)	
311	497608	SET, Brush			
333	492341	ARMATURE, Magneto			
334	691061	SCREW		(Magneto Armature)	
356	697089	WIRE, Stop			
404	691691	WASHER		(Governor Crank)	
462	691261	WASHER		(Starter Cable)	
474C	696458	ALTERNATOR		(10 Amp Regulated)	
501	691185	REGULATOR		(16 Amp Regulated)	
503	691532	STRAP, Starter			
505	691251	NUT		(Governor Control Lever)	
510	693699	DRIVE, Starter			
513	692024	CLUTCH, Drive			
521	690581	SHIELD, Cable			
526	697348	SCREW		(Regulator)	
544	692034	ARMATURE, Starter		(3 5/8 Housing)	
559	697561	SCREW		(Remote Choke Stop)	
562	691119	BOLT		(Governor Control Lever)	
578	692306	WIRE ASSEMBLY			
579		NUT		(Starter Cable)	
614	691620	PIN, Cotter			
616	692012	CRANK, Governor			
697	690372	SCREW		(Drive Cap)	
729	691335	CLIP, Wire		(Wire Saddle)	
729A	691224	CLIP, Wire		(Aluminum Coated Steel)	
783	693713	GEAR, Pinion			

Ref #	Part #	Description	Qty	Context Note	Foot Note
789	692037	HARNESS-WIRING			
797	693167	NUT		(Brush Retainer)	
801	691283	CAP, Drive			
802	691286	CAP, End			
803		Housing-Starter		(Not Serviced Separately, Order Starter Motor 693551)	
851	692424	TERMINAL, Spark Plug			
877	393456	WIRE/CONNECTOR, Alternator		(Dual Circuit)	
877B	393537	WIRE/CONNECTOR, Alternator		(Tri Circuit)	
877C	399916	WIRE/CONN- ALTERNATOR		(10 Amp Regulated)	
878	398661	HARNESS, Wiring		(Dual Circuit)	
878A	691955	HARNESS, Alternator		(Tri Circuit)	
1051	691265	RING, Retaining			
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer			
1090	691293	RETAINER, Brush			
1119	691183	SCREW		(Alternator)	

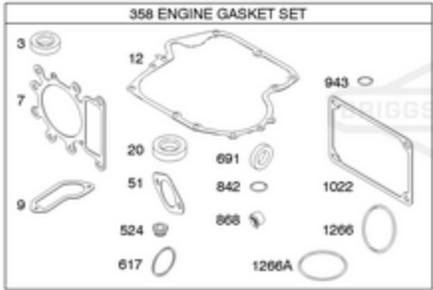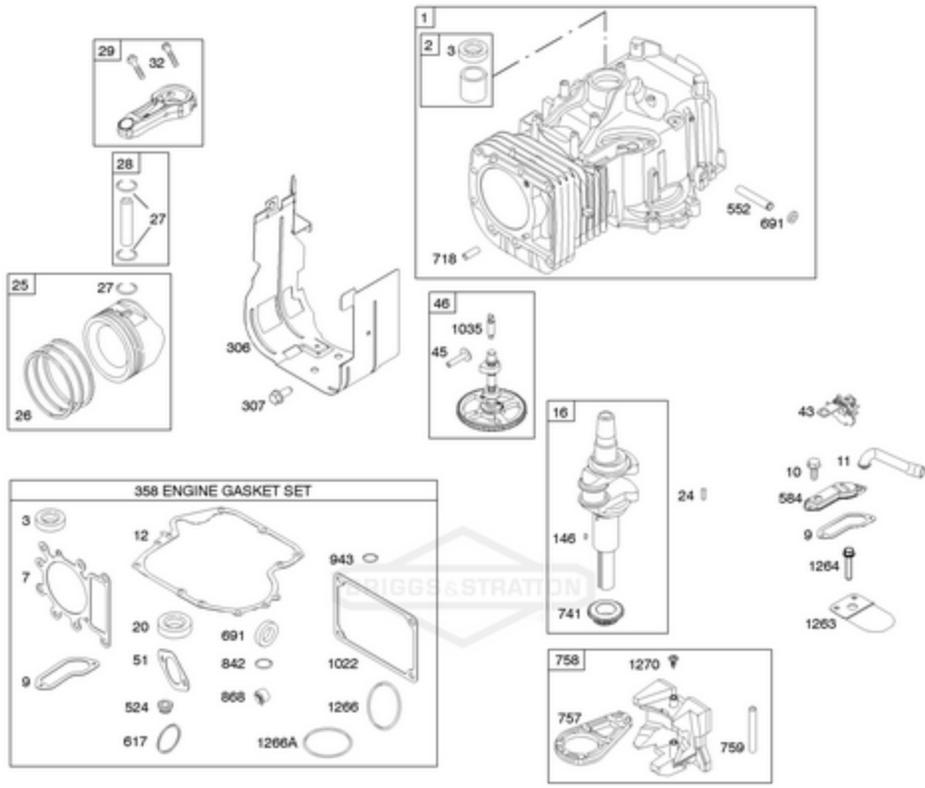

1058 OPERATOR'S MANUAL




1330 REPAIR MANUAL

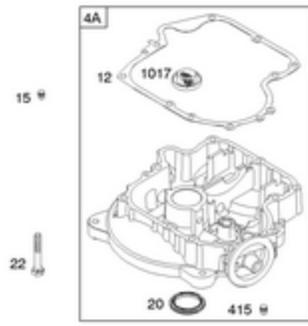

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	793987	CYLINDER ASSEMBLY			
2	399265	KIT, Bushing/Seal		(Magneto Side)	
3	391086S	SEAL, Oil		(Magneto Side)	
4A	697188	SUMP, Engine			
7	794114	GASKET, Cylinder Head			
9	697109	GASKET, Breather			
10	697157	SCREW		(Breather Assembly)	
11	697113	TUBE, Breather			
12	697110	GASKET, Crankcase		(.015" Thick)(Standard)	
15	690946	PLUG, Oil Drain		(Square Head)	
16	697516	CRANKSHAFT			
20	791892	SEAL, Oil		(PTO Side)	
22	692125	SCREW		(Crankcase Cover/Sump)	
24	222698S	KEY, Flywheel			
25	792507	PISTON ASSEMBLY		(Standard)	
25	792648	PISTON ASSEMBLY		(.020 Oversize)	
26	699051	SET, Ring		(Standard) Used Before Code Date 06010200	
26	791936	SET, Ring		(Standard) Used After Code Date 06010100	
26	792649	SET, Ring		(.020 Oversize) Used After Code Date 06010100	
26	697559	SET, Ring		Used Before Code Date 06010200	
27	698469	LOCK, Piston Pin			
28	697099	PIN, Piston			
29	791632	ROD, Connecting		(Standard)	
29	697264	ROD, Connecting		(.020 Undersize) Used Before Code Date 05040400	
32	791118	SCREW		(Connecting Rod)	
43	691968	SLINGER, Governor/Oil			
45	690564	TAPPET, Valve			
46	793583	CAMSHAFT			
51	692137	GASKET-INTAKE			
146	691639	KEY, Woodruff			
306	697107	SHIELD, Cylinder			
307	691003	SCREW		(Cylinder Shield)	
358	794150	GASKET SET, Engine			
415	690283	PLUG, Oil		(Engine Sump)	
524	691032	SEAL, O-Ring			
552	697144	BUSHING, Governor Crank			

Ref #	Part #	Description	Qty	Context Note	Foot Note
584	697112	COVER, Breather Passage			
617	692138	SEAL, O-Ring		(Intake Manifold)	
691	692407	SEAL, Governor Shaft			
718	690959	PIN, Locating			
741	697128	GEAR, Timing			
757	793242	LINK, Counterweight			
758	697134	COUNTERWEIGHT			
759	697392	PIN, Counterweight			
842	691031	SEAL, O-Ring		(Dipstick Tube)	
868	690968	SEAL, Valve			
943	690589	SEAL, O-Ring		(Oil Pump Cover)	
1017	690770	SCREEN, Oil Pump		(Push In)	
1022	272475S	GASKET, Rocker Cover			
1035	693784	SHAFT, Pump			
1058	276344	MANUAL, Operator's			
1263	697124	REED, Breather			
1264	697104	SCREW		(Breather Reed)	
1266	691917	SEAL, O-Ring		(Intake Elbow)	
1266A	697123	SEAL, O-Ring		(Intake Elbow)	
1270	697156	PLUG, AVS Counterweight			
1330	272147	MANUAL, Repair			

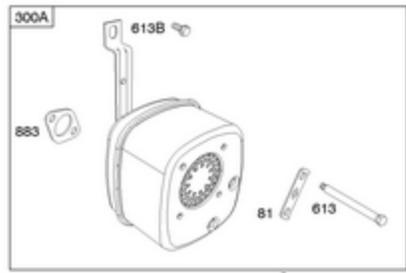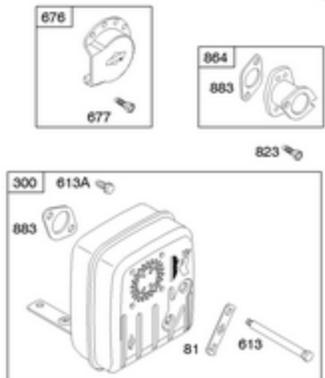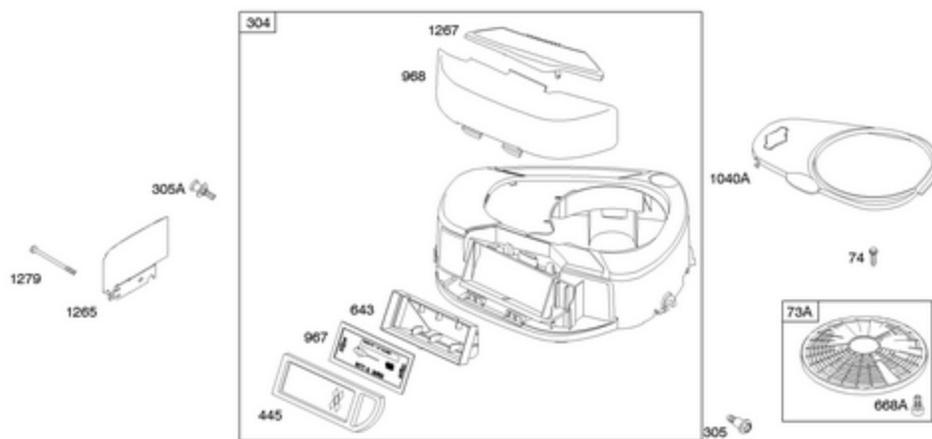

Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
73A	494439	SCREEN, Rotating			
74	691674	SCREW		(Rotating Screen)	
81	691178	LOCK, Muffler Screw			
300	697349	MUFFLER			
304	790009	HOUSING, Blower		(Black)	
305	697102	SCREW		(Blower Housing)	
305A	697103	SCREW		(Blower Housing)	
445	697153	FILTER, A/C Cartridge		(Washable)	
613	691416	SCREW		(Muffler)	
613A	690297	SCREW		(Muffler)	
613B	691678	SCREW		(Muffler)	
643	698401	RETAINER, Air Filter			
668A	691500	SPACER		(Rotating Screen)	
823	698941	SCREW		(Muffler Adapter) (Muffler Adapter)	
836	691676	SCREW		(Muffler Guard)	
836A	690367	SCREW		(Muffler Guard)	
864	697346	ADAPTER, Muffler			
883	692236	GASKET, Exhaust			
967	697015	FILTER, Pre Cleaner			
968	697574	COVER, Air Cleaner			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1040A	698470	PLATE, Trim			
1265	697125	SUPPORT, Blower Housing			
1267	697575	LATCH, Blower Housing			
1279	691108	SCREW		(Blower Housing Support)	