



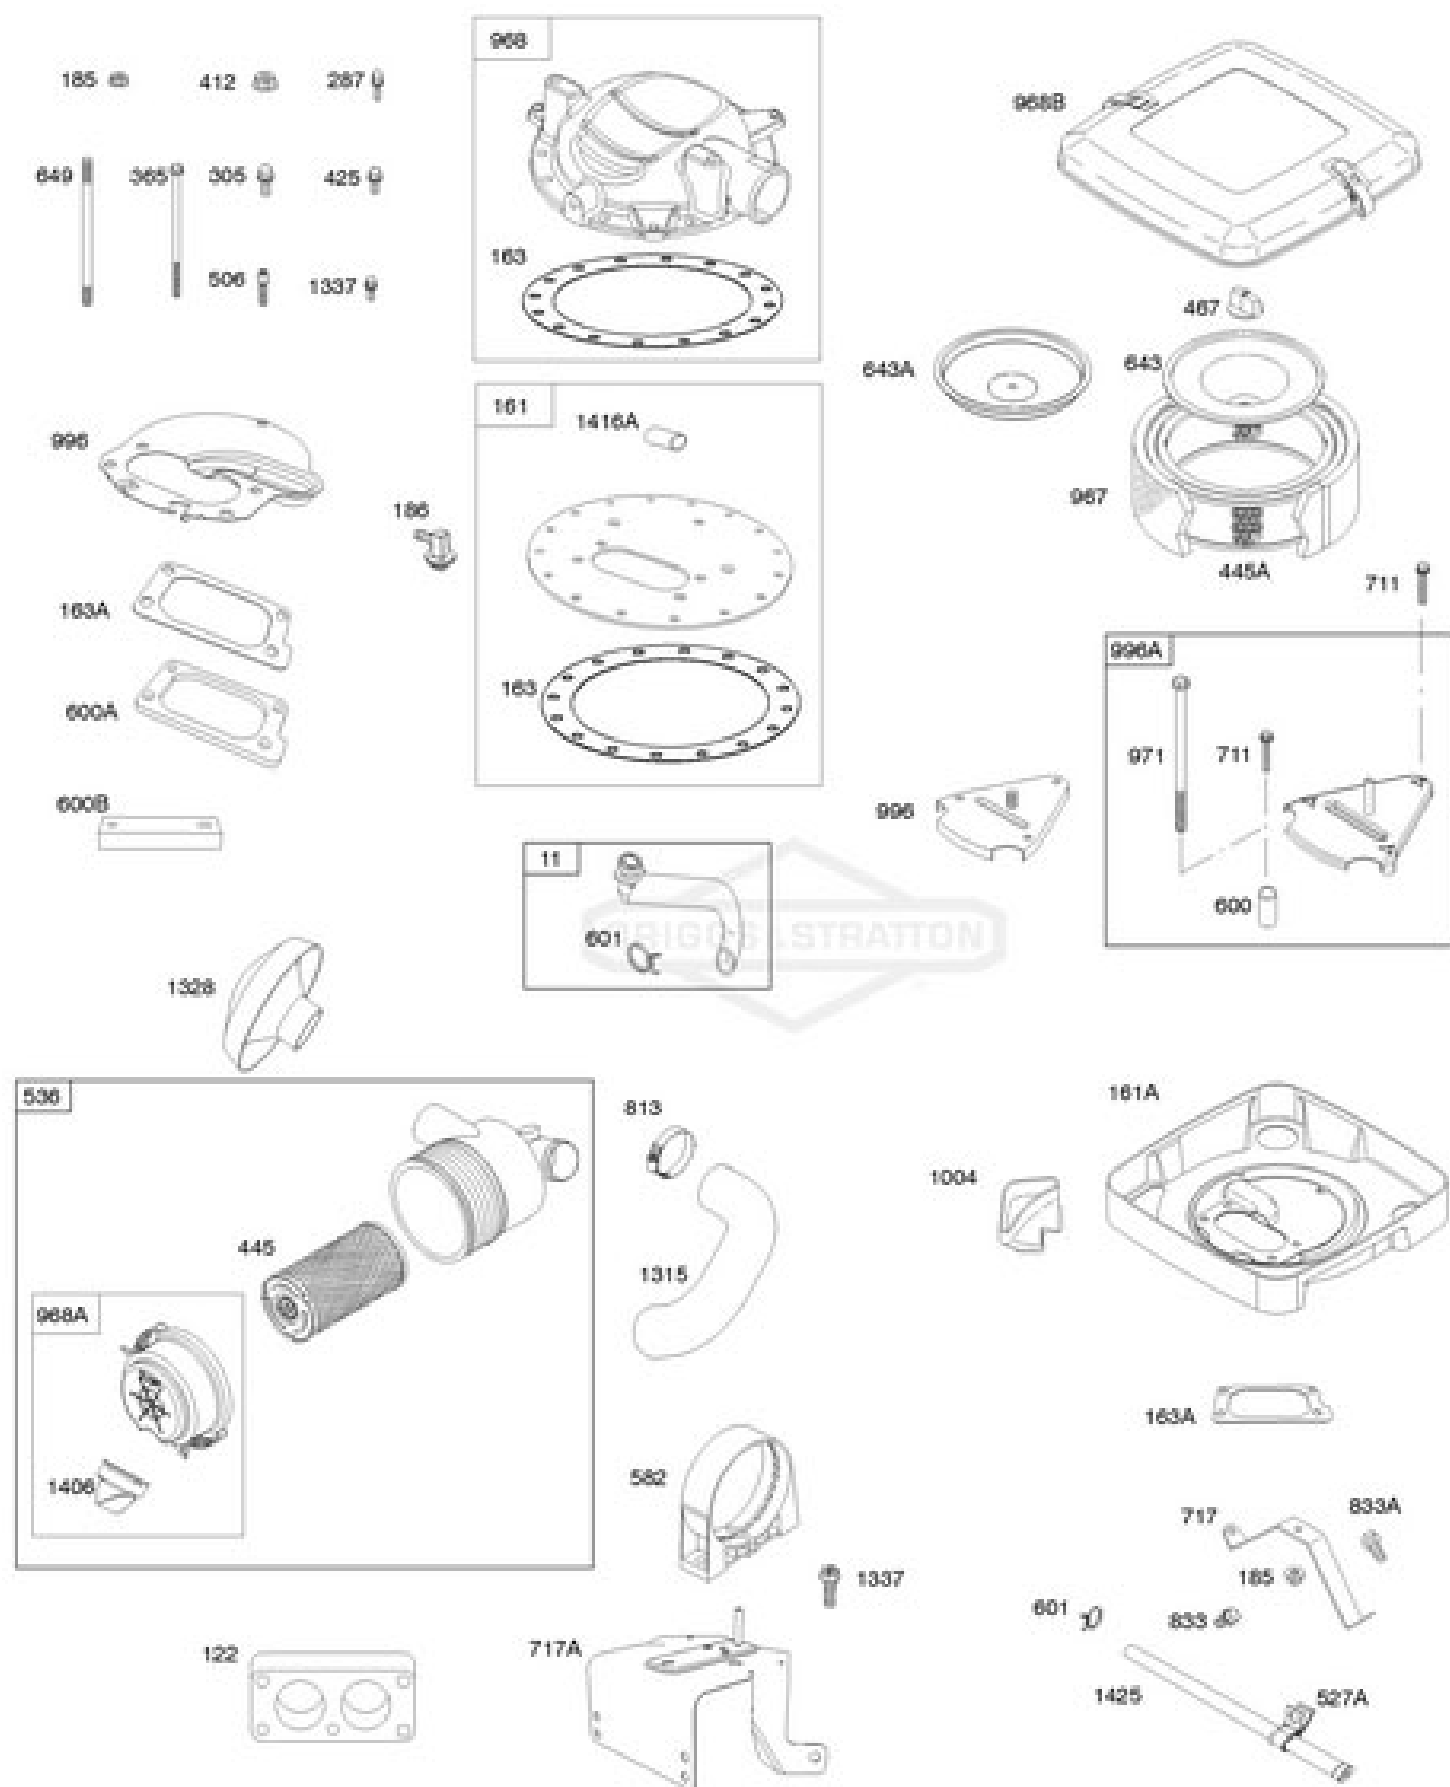

Copyright © Briggs & Stratton, LLC. All rights reserved.


Ref #	Part #	Description	Qty	Context Note	Foot Note
11	806379	TUBE, BREATHER			
122	690870	SPACER, Carburetor			
161	843563	BASE, Air Cleaner		(Metal)	
161A	808676	BASE, Air Cleaner		(Metal)	
163	841823	GASKET, Air Cleaner		(Used With Metal Air Cleaner Base)	
163A	692087	GASKET, Air Cleaner		(Used With Metal Air Cleaner Base)	
185	690939	NUT		(Air Cleaner Base)	
186	845141	CONNECTOR, Hose			
287	807084	SCREW		(Dipstick Tube)	
305	692056	SCREW		(Blower Housing) (14mm)	
365	690866	SCREW		(Carburetor)	
412	690941	NUT		(Air Cleaner Cover) (Air Cleaner)	
425	691593	SCREW		(Air Cleaner Cover)	
445	820263	FILTER, A/C Cartridge			
445A	692519	FILTER, A/C Cartridge		(Round)	
467	844618	KNOB, Air Cleaner Cover		Used After Code Date 10033100	
467	691985	KNOB, Air Cleaner Cover		Used Before Code Date 10040100	
506	807120	SCREW		(Carburetor Cover)	
536	825117	CLEANER, Air			
582	807381	CLAMP, Air Cleaner			
600	845213	SPACER, Air Cleaner			
600A	844738	SPACER, Air Cleaner			
600B	843564	SPACER, Air Cleaner			
601	691145	CLAMP, Hose			
643	692079	RETAINER, Air Filter		Used Before Code Date 11120700	
643A	844932	RETAINER, Air Cleaner		Used After Code Date 11120700	
649	842446	STUD		(Air Cleaner Cover)	
711	691492	SCREW		(Carburetor Shield) (M6x30mm)	
717	690868	BRACKET, Air Cleaner			
717A	843566	BRACKET, Air Cleaner			
813	807377	CLAMP			
833	841853	SCREW		(Air Cleaner Mounting Strap/Stud)	
833A	841233	SCREW		(Air Cleaner Mounting Strap/Stud)	
967	692520	FILTER, Pre Cleaner		(Round)	
968	841822	COVER, Air Cleaner			
968A	842620	COVER, Air Cleaner			
968B	808654	COVER, Air Cleaner		(Used With Metal Air Cleaner Base)	
971	690866	SCREW		(Air Cleaner Base to Carburetor)	
971	841853	SCREW		(Air Cleaner Base to Carburetor) (M6x103mm)	
996	845211	SHIELD, Carburetor			

Ref #	Part #	Description	Qty	Context Note	Foot Note
996A	845543	SHIELD- CARBURETOR			
1004	690865	DUCT, Air		(Used With Metal Air Cleaner Base)	
1315	842445	HOSE, Air Cleaner			
1328	716244	CAP, A/C Rain			
1337	841233	SCREW		(Air Cleaner Clamp) (M6x10mm)	
1406	842623	VALVE, Debris			
1416A	807468	CAP, Carburetor			

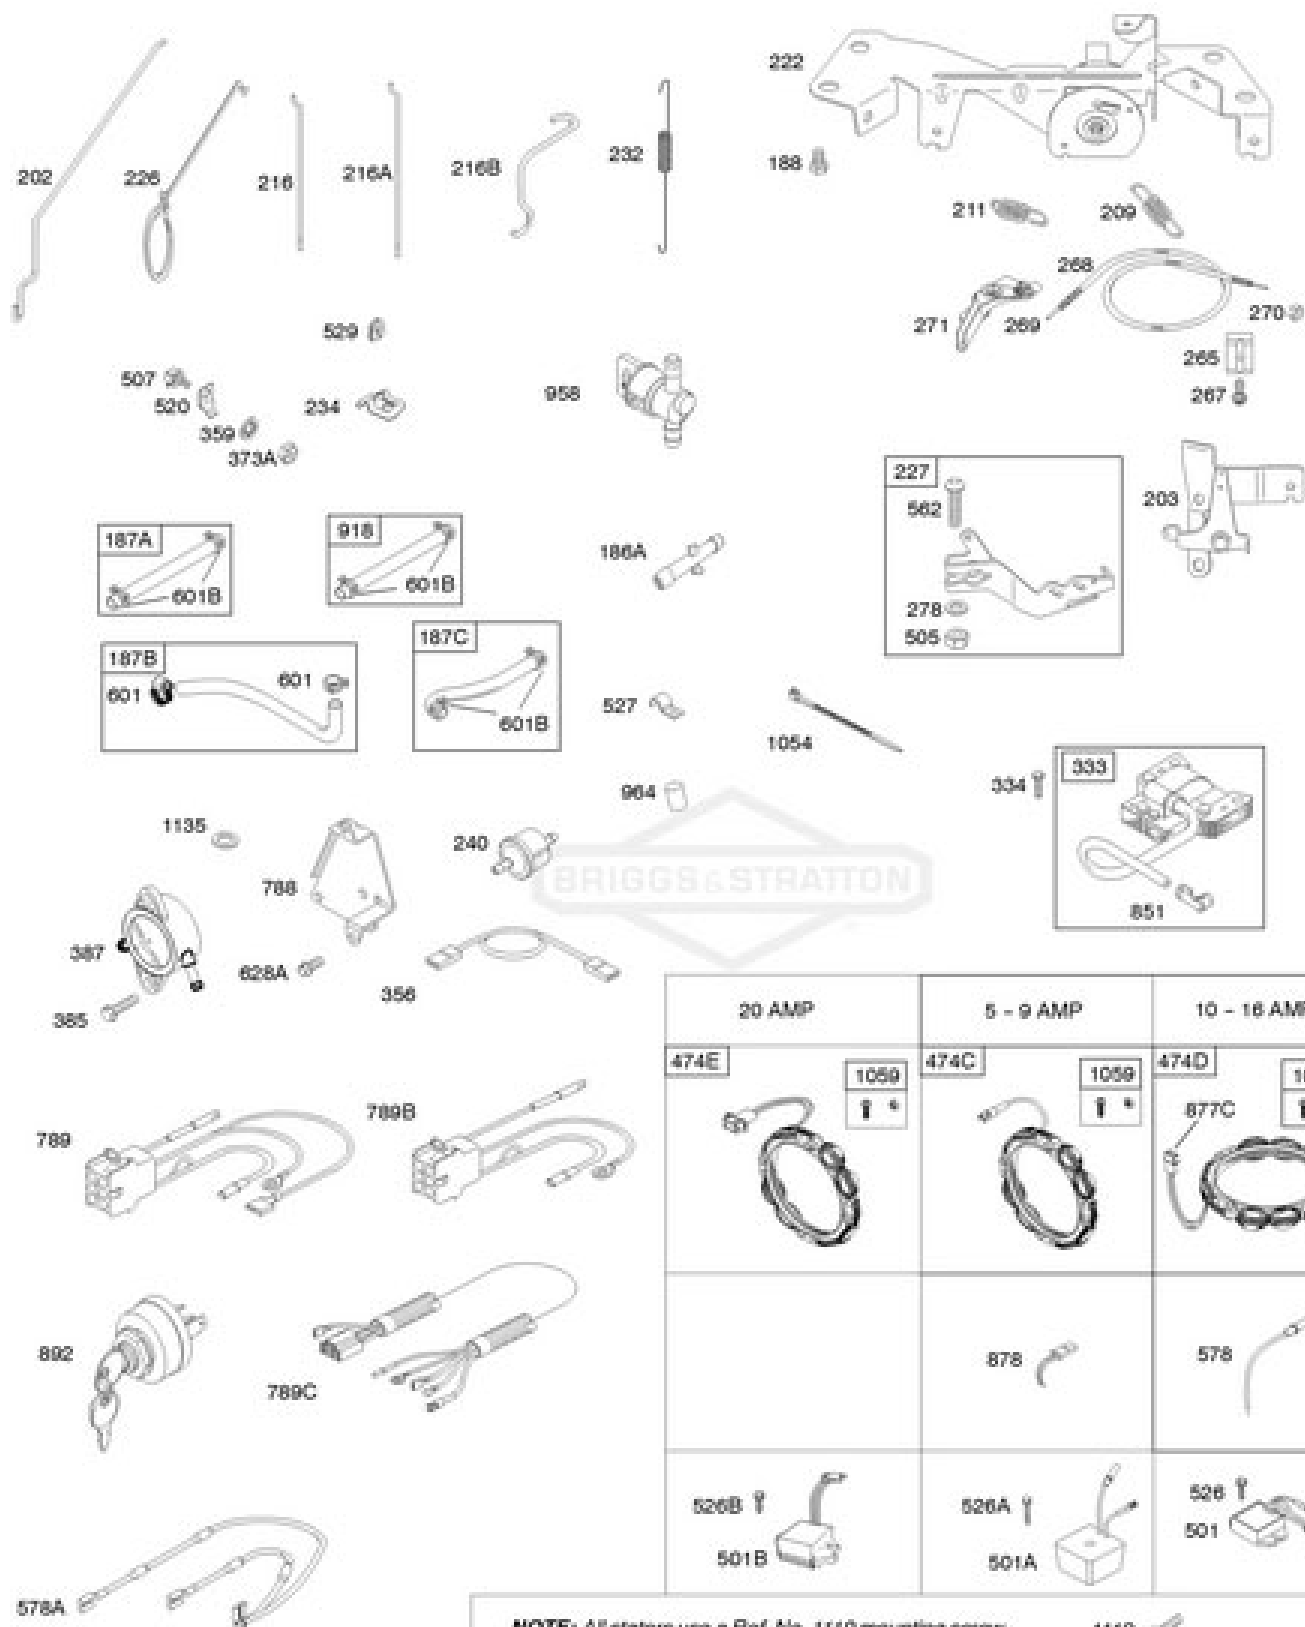


Ref #	Part #	Description	Qty	Context Note	Foot Note
186A	845121	CONNECTOR, Hose			
187A	791745	LINE-FUEL		(Cut To Required Length)	
187A	791766	LINE, Fuel		(Cut To Required Length)	
187C	791801	HOSE, Vacuum		(Molded)	
187B	791744	LINE-FUEL		(Molded)	
188	692056	SCREW		(Control Bracket)	
202	690867	LINK, Mechanical Governor			
203	808753	CRANK, Bell			
209	692072	SPRING, Governor		(Purple)	
211	692069	SPRING, Governed Idle			
216	690705	LINK, Choke			
216A	690871	LINK, Choke			
216B	691542	LINK, Choke			
222	808454	BRACKET, Control			
226	692075	ROD, Choke			
227	690236	LEVER, Governor Control			
232	690874	SPRING/LINK, Governor			
240	84001895	FILTER, FUEL		(Includes Paper Element With A 40 Micron Rating)	
265	691024	CLAMP, Casing			
267	841552	SCREW		(Casing Clamp)	
268	691025	CASING, Control Wire		(Cut To Required Length)	
269	691026	WIRE, Control		(Cut To Required Length)	
270	691027	NUT		(Control Wire Casing)	
271	691028	LEVER, Control			
278	842122	WASHER		(Governor Control Lever)	
333	844548	ARMATURE, Magneto			
334	692066	SCREW		(Magneto Armature)	
359	691077	WASHER		(Ground Terminal)	
373A	691612	NUT		(Ground Terminal)	
385	807084	SCREW		(Fuel Pump)	
387	808656	PUMP, Fuel			
474D	696458	ALTERNATOR			
501	797375	REGULATOR			
505	690238	NUT		(Governor Lever)	
507	691972	INSULATOR			
520	691084	TERMINAL, Ground		(Brass)	
526	692067	SCREW		(Regulator) (Regulator)	
527	690423	CLAMP, Tube			
529	690744	GROMMET			
562	690239	BOLT		(Governor Control Lever)	
578	692306	WIRE ASSEMBLY			
578A	844547	WIRE ASSEMBLY			

Ref #	Part #	Description	Qty	Context Note	Foot Note
601	691145	CLAMP, Hose			
601B	691038	CLAMP, Hose		(Silver)	
628A	806660	SCREW		(Fuel Pump Bracket)	
788	691559	BRACKET, Fuel Pump			
789	698332	HARNESS, Wiring			
851	493880S	TERMINAL-SPARK PLUG			
877C	393537	WIRE/CONNECTOR, Alternator		(Tri Circuit) (9 Amp)	
918	791880	LINE, Fuel		(Cut To Required Length)	
958	698183	VALVE-FUEL SHUT OFF		(Plastic)	
964	590799	CAP, Connector			
1054	280275	TIE, Cable			
1059	698516	KIT, Screw/Washer			
1119	691552	SCREW		(Alternator)	

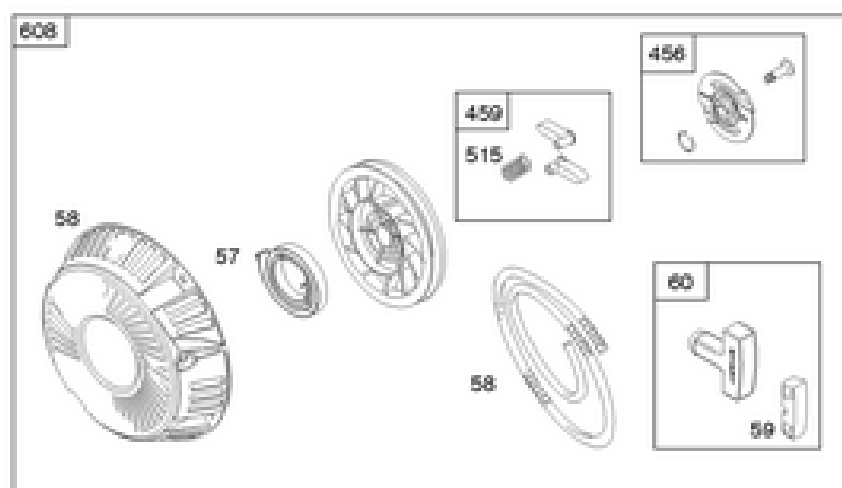



930

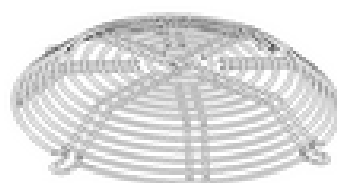


1392



304A

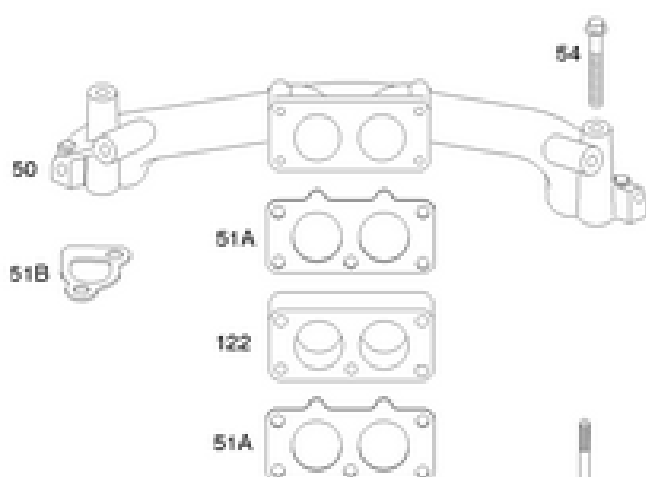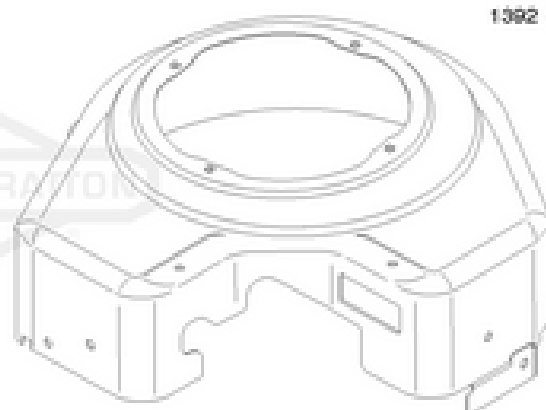

304

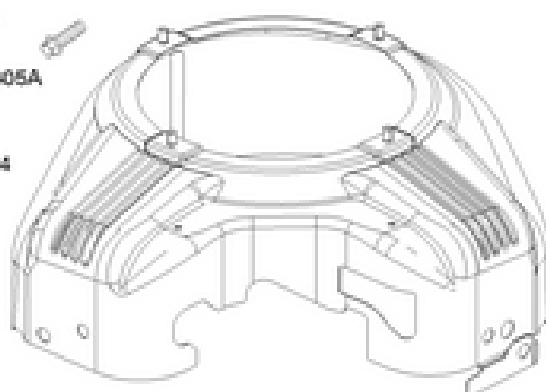

1048

720B





1130

1130A





Copyright © Briggs & Stratton, LLC, all rights reserved.





Ref #	Part #	Description	Qty	Context Note	Foot Note
50	690886	MANIFOLD, Intake			
51A	690950	GASKET, Intake		(Manifold/Carburetor Spacer)	
51B	692035	GASKET, Intake		(Manifold/Heads)	
54	690676	SCREW		(Intake Manifold)	
57	692086	SPRING, Rewind Starter			
58	66574	ROPE, Starter			
59	805957	INSERT, Grip			
60	808167	GRIP, Starter Rope			
65	690341	SCREW		(Rewind Starter) (Rewind Starter)	
122	690870	SPACER, Carburetor			
304A	844154	HOUSING, Blower			
305	692056	SCREW		(Blower Housing) (14mm)	
305A	692062	SCREW		(Blower Housing)	
437	691902	SCREW		(Exhaust Manifold)	
456	845219	PLATE, Pawl Friction			
459	845218	PAWL, Ratchet			
515	691528	SPRING, Pawl			
592	690939	NUT		(Rewind Starter) (M6)	
608	841729	STARTER, Rewind			
613	691902	SCREW		(Muffler)	
729B	690586	CLIP, Wire		(Snap In)(Nylon)	
930	841490	GUARD, Rewind			
1046	841165	PLUG, Blower Housing			
1130	690869	STUD		(Intake Manifold)	
1392	690939	NUT		(Rewind Guard) (M6)	

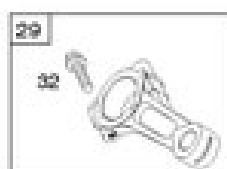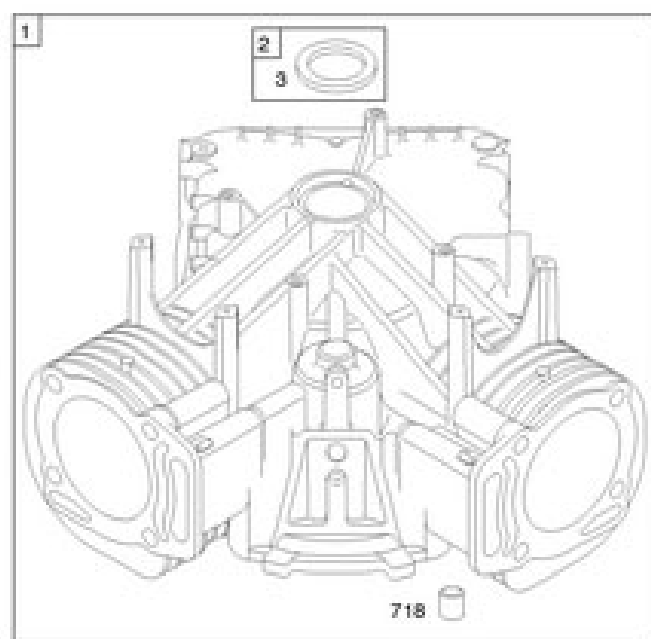

USED AFTER DATE CODE: 07062900

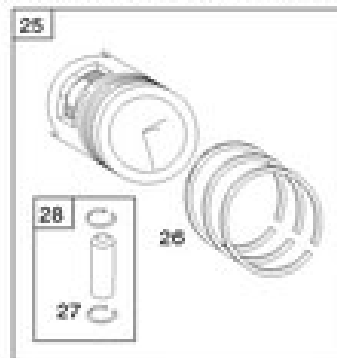

USED BEFORE DATE CODE: 07063000

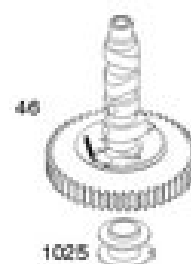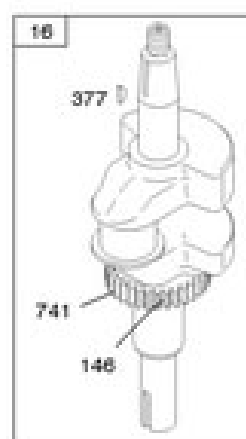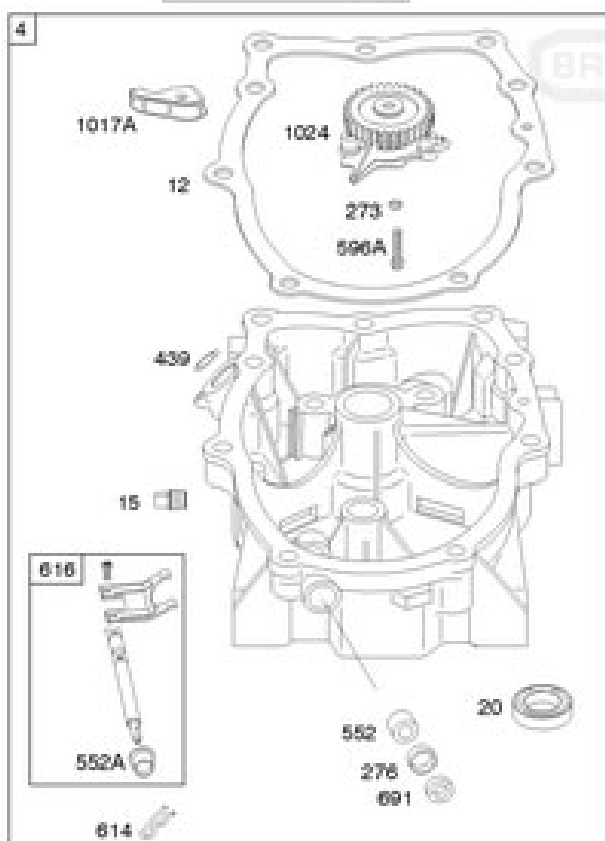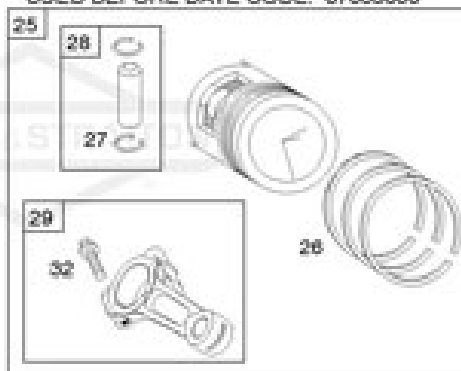

1036 EMISSIONS LABEL

1056 OPERATOR'S MANUAL

1330 REPAIR MANUAL

1319 WARNING LABEL

WARNING

Read and follow Operating Instructions before running engine.

Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.


Engines emit carbon monoxide. DO NOT run in enclosed area.

Weather area temperature may exceed 100°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.


Ref #	Part #	Description	Qty	Context Note	Foot Note
1	845094	CYLINDER ASSEMBLY			
2	808534	KIT, Bushing/Seal		(Magneto Side)	
3	805101S	SEAL, Oil		(Magneto Side)	
4	843954	SUMP-ENGINE			
10	806421	SCREW		(Breather Assembly)	
11	806379	TUBE, BREATHER			
12	846487	GASKET, Crankcase			
15	691680	PLUG-OIL DRAIN		(3/8"-18 NPTF - Internal 3/8" Sq)	
15	690946	PLUG-OIL DRAIN		(3/8"-18 NPTF-External 7/16" Sq)	
16	843796	CRANKSHAFT			
20	805049S	SEAL, Oil		(PTO Side)	
22	807362	SCREW		(Crankcase Cover/Sump)	
25	808336	PISTON ASSEMBLY		(.010 Oversize)	
25	843792	PISTON ASSEMBLY		(Standard) Used After Code Date 07062900	
25	843821	PISTON ASSEMBLY		(.020 Oversize)	
25	844540	PISTON ASSEMBLY		(Standard) Used Before Code Date 07063000	
26	843793	SET, Ring		(Standard)	
26	843822	SET, Ring		(.020 Oversize)	
27	690683	LOCK, Piston Pin			
28	690229	PIN-PISTON/STD		(Standard)	
29	807900S	ROD, Connecting		(Standard)	
32	690698	SCREW		(Connecting Rod)	
46	845649	CAMSHAFT			
146	691639	KEY, Woodruff			
273	690681	SEAL, O-Ring		(Oil Pump)	
276	690704	WASHER		(Crankcase Cover/Sump)	
377	808095	KEY, Flywheel			
415	794903	PLUG		(Square Head)	
439	692154	O-RING, Oil Gallery		(Crankcase Cover/Sump or Cylinder Assembly)	
454	693289	CAP, Breather			
552	690701	BUSHING, Governor Crank			
552A	806686	BUSHING, Governor Crank			
596A	807389	SCREW		(Oil Pump) (M6x45mm)	
601	691145	CLAMP, Hose			
614	691550	PIN, Cotter			
616	806685	CRANK, Governor			
691	842826	SEAL, Governor Shaft			
718	806469	PIN-LOCATING			
741	691530	GEAR, Timing			

Ref #	Part #	Description	Qty	Context Note	Foot Note
1017A	843960	SCREEN, Oil Pump		Used After Code Date 08022600	
1024		Pump-Oil		Used Before Code Date 08022700	
1024	843959	PUMP, Oil		Used After Code Date 08022600	
1025	690689	SPOOL, Governor			
1036		Label-Emissions		(Available From A Briggs & Stratton Authorized Dealer)	
1058	277107	MANUAL, Operator's			
1135	806497	WASHER		(Crankcase Cover/Sump)	
1319	794467	LABEL, Warning			
1330	272144	MANUAL, Repair			

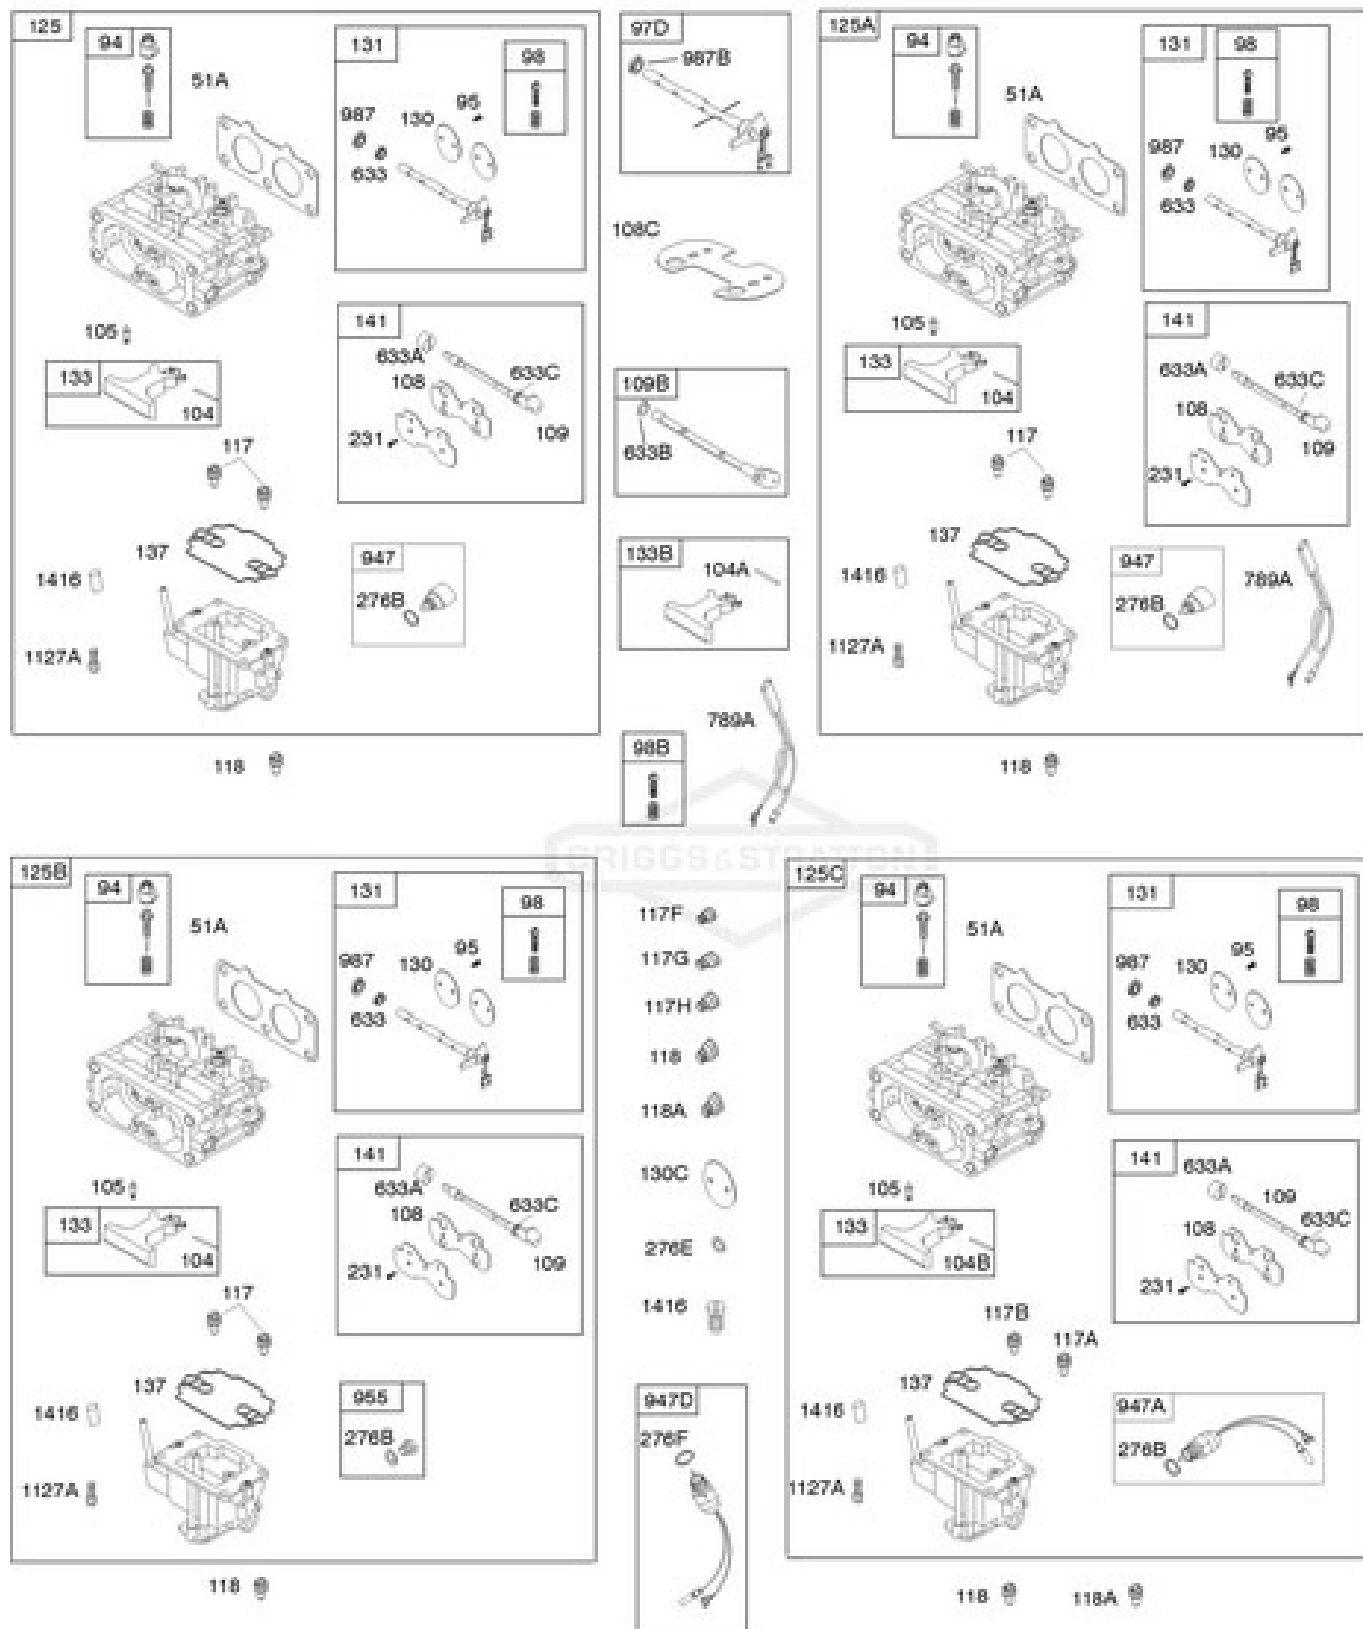


Ref #	Part #	Description	Qty	Context Note	Foot Note
51A	690950	GASKET, Intake		(Manifold/Carburetor Spacer)	
94	842883	KIT, Idle Mixture			
95	690718	SCREW		(Throttle Valve)	
97D	808715	SHAFT, Throttle			
98	809716	KIT, Idle Speed			
98B	808177	KIT, Idle Speed			
104	844444	PIN, Float Hinge			
104A	690882	PIN, Float Hinge			
104B	690739	PIN, Float Hinge			
105	809759	VALVE, Float Needle			
108	809643	VALVE, Choke			
108C	690883	VALVE, Choke			
109	809710	KIT, Choke Shaft			
109B	808181	SHAFT, Choke			
117	842151	JET, Main		(Standard) (Right Or Cylinder 2)	
117F	806374	JET, Main		(Standard) (Right Or Cylinder 2)	
117G	842293	JET, Main		(Standard) (Left or Cylinder 1)	
117H	842070	JET, Main		(Standard)	
118	842292	JET, Main		(High Altitude) (Left or Cylinder 1) Used Before Code Date 05022800	
118	842153	JET, Main		(High Altitude) (Left or Cylinder 1) Used After Code Date 05022700	
118A	842291	JET, Main		(High Altitude) (Right Or Cylinder 2) Used Before Code Date 05022800	
125	844714	CARBURETOR		(Carburetor Part No. 842897) Used Before Code Date 12031500	
125A	845199	CARBURETOR		(Same as service Carburetor {Ref Item #125} except with Solenoid Wire)(Ref Item #789A) Used After Code Date 12031400	
130	809642	VALVE, Throttle			
130C	690884	VALVE, Throttle			
131	842068	KIT, Throttle Shaft			
133	809637	FLOAT, Carburetor			
133B	808180	FLOAT, Carburetor			
137	809645	GASKET, Float Bowl			
141	843785	KIT, Choke Shaft			
231	690718	SCREW		(Choke Valve)	
276B	806476	WASHER, Sealing			
276E	690724	WASHER, Sealing		(Carburetor Plug)	
276F	693497	WASHER, Sealing		(Carburetor Plug)	

Ref #	Part #	Description	Qty	Context Note	Foot Note
633	809641	SEAL, Choke/Throttle Shaft			
633A	809644	SEAL, Choke/Throttle Shaft			
633B	690722	SEAL, Choke/Throttle Shaft			
633C	809638	SEAL, Choke/Throttle Shaft			
789	698332	HARNESSE, Wiring			
947	842109	SOLENOID, Fuel		Used After Code Date 09111700	
947A	809632	SOLENOID- FUEL		Used Before Code Date 09111800	
947D	808624	SOLENOID, Fuel			
955	691511	PLUG, Carburetor			
987	809639	SEAL, Choke/Throttle Shaft			
987B	808183	SEAL, Choke/Throttle Shaft			
1127A	809715	SCREW		(Float Bowl to Carburetor Body)	
1416	809640	CAP, Carburetor			

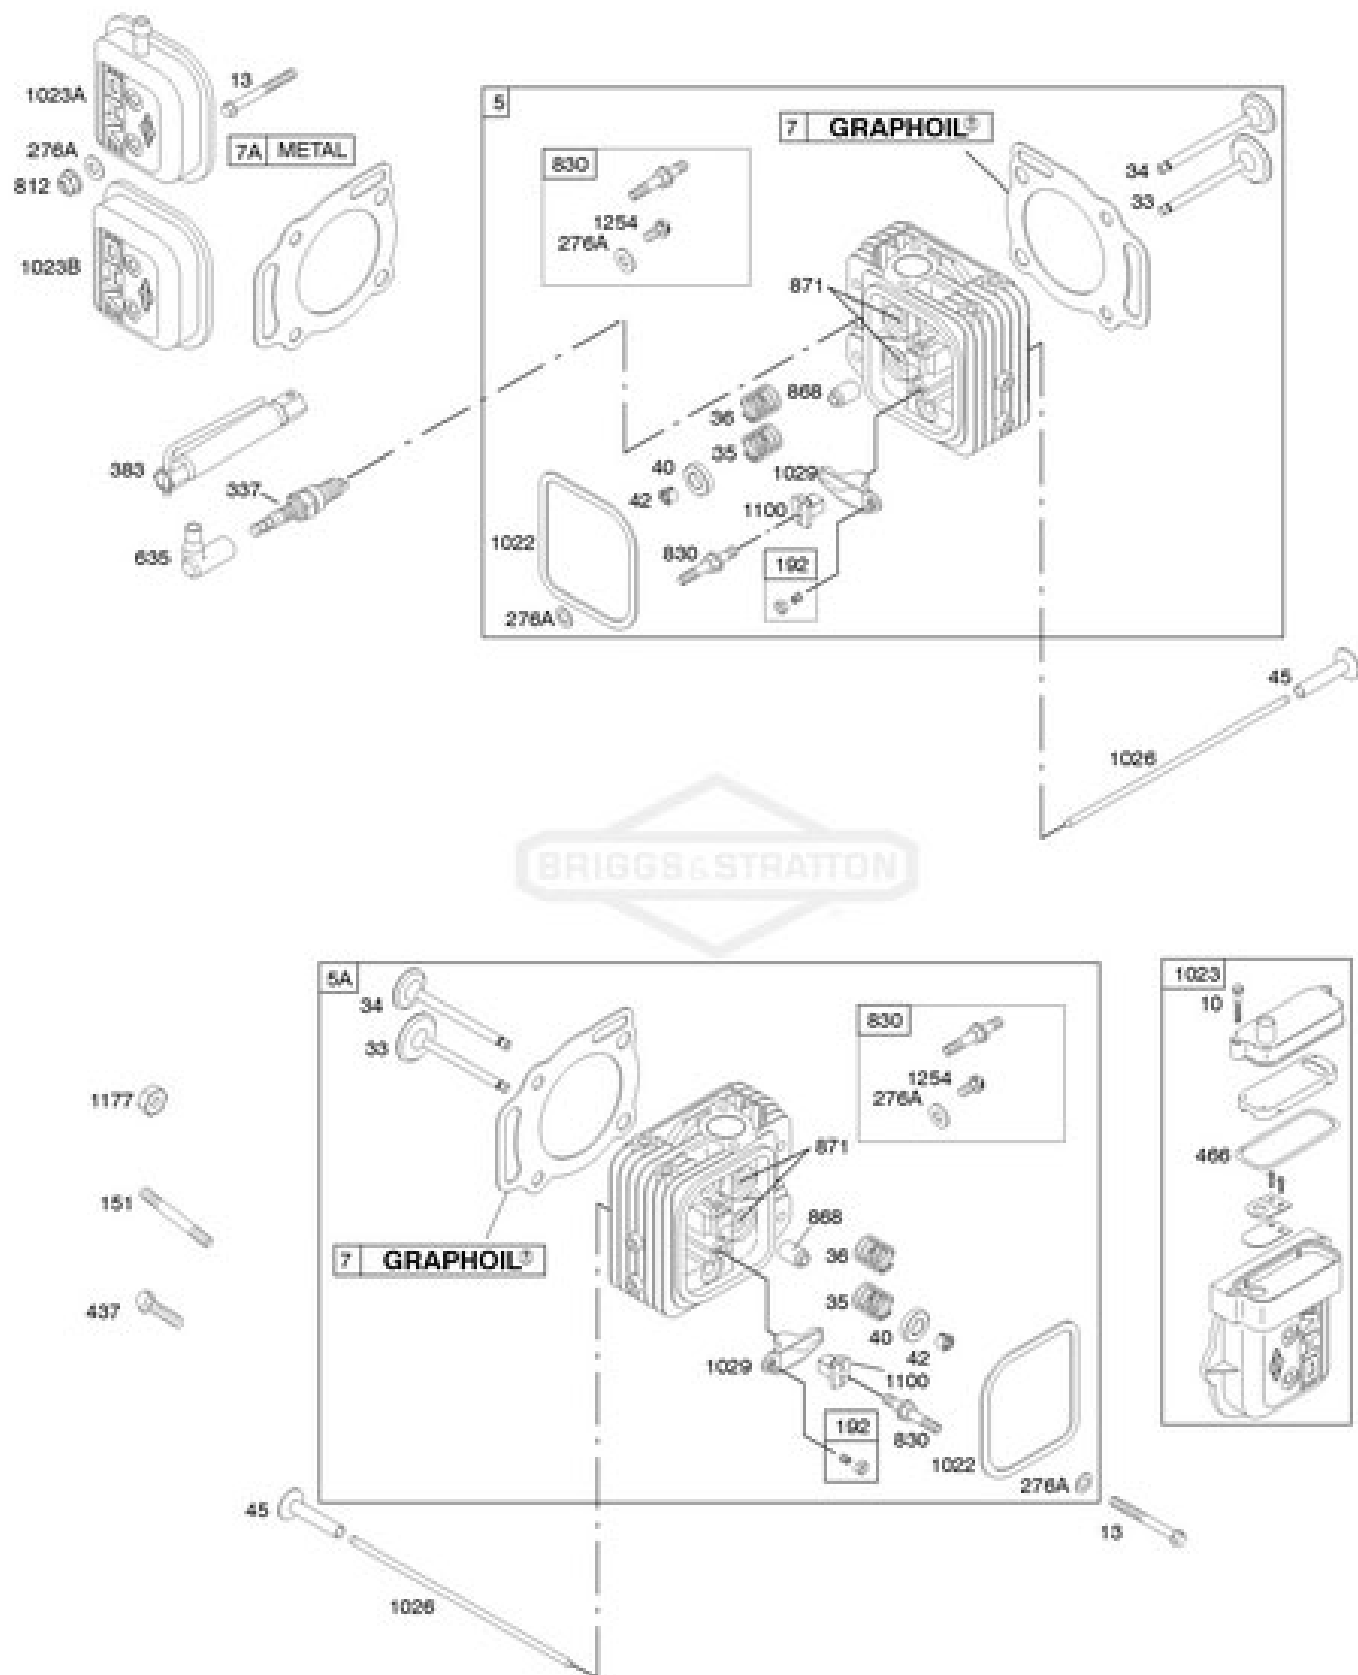


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
5	809185	HEAD, Cylinder		(Cylinder 1)	
5A	809186	HEAD, Cylinder		(Cylinder 2)	
7	690888	GASKET, Cylinder Head		(Graphoil)	
7A	805653S	GASKET, Cylinder Head		(Metal)	
10	806421	SCREW		(Breather Assembly)	
13	692059	SCREW		(Cylinder Head) (86mm)	
33	807681	VALVE, Exhaust			
34	807680	VALVE, Intake			
35	692084	SPRING, Valve		(Intake)	
36	692084	SPRING, Valve		(Exhaust)	
40	692058	RETAINER, Valve			
42	807683	KEEPER, Valve			
45	843379	TAPPET, Valve			
151	841185	STUD		(Exhaust Manifold)	
192	807623	ADJUSTER, Rocker Arm			
276A	807085	WASHER, Sealing			
337	792015	PLUG, Spark			
383	19576S	WRENCH, Spark Plug			
437	691902	SCREW		(Exhaust Manifold)	
466	806466	SEAL, O-Ring		(Breather Assembly)	
635	692076	BOOT, Spark Plug			
812	692055	NUT		(Rocker Cover)	
830	809157	STUD, Rocker Arm		(Rocker Arm)	
868	691963	SEAL, Valve			
871	692057	BUSHING, Valve Guide			
1022	806039S	GASKET, Rocker Cover			
1023	843750	COVER, Rocker		(Includes Breather Assembly)	
1023A	691558	COVER, Rocker		(Cylinder 1) (With Fuel Pump)	
1023B	691494	COVER, Rocker			
1026	691836	ROD-PUSH		(Intake)(Steel)	
1026	691758	ROD-PUSH		(Exhaust)(Aluminum)	
1029	807323	ARM, Rocker			
1100	791959	PIVOT, Rocker Arm			
1177	842067	NUT		(Muffler)	
1254	807084	SCREW		(Rocker Arm Stud)	



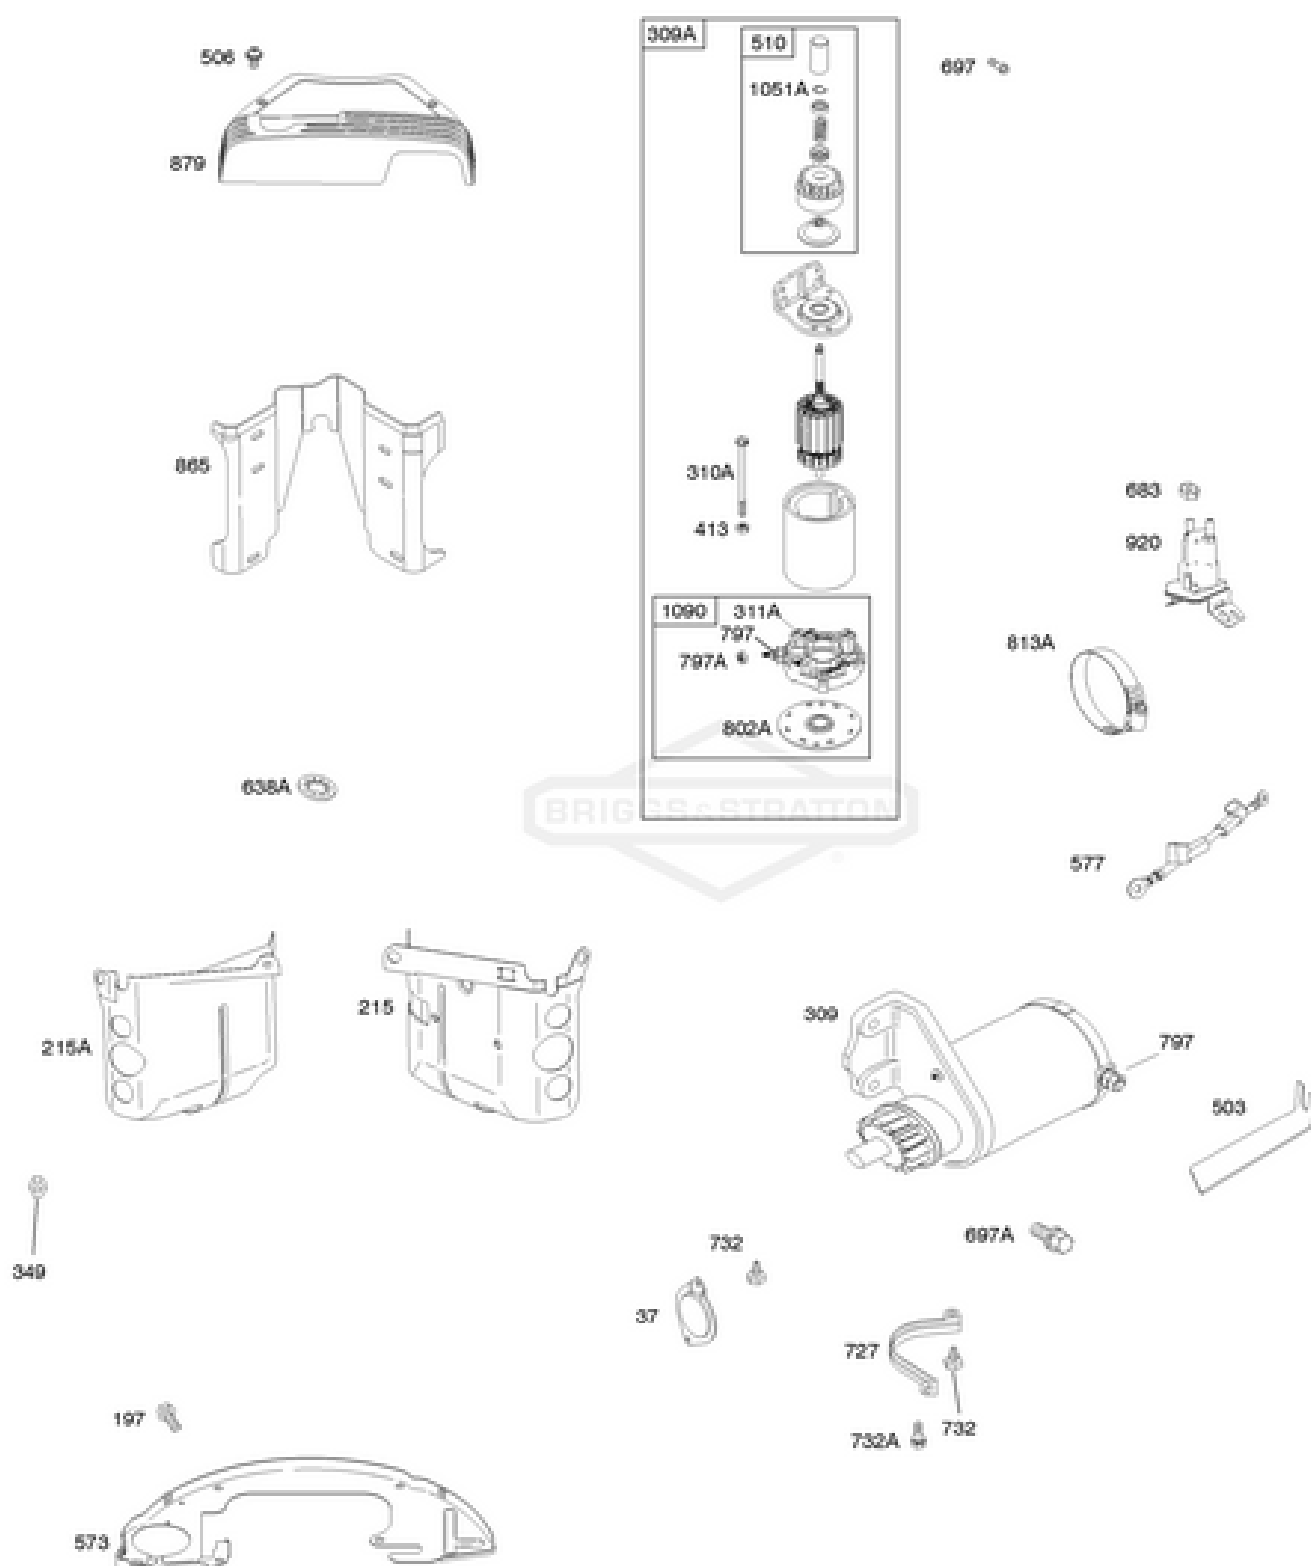


Copyright © Briggs & Stratton, LLC. All rights reserved.

Ref #	Part #	Description	Qty	Context Note	Foot Note
37	841309	GUARD-FLYWHEEL			
197	807163	SCREW		(Back Plate)	
215	841183	GUIDE-AIR		(Cylinder 2)	
215A	841182	GUIDE-AIR		(Cylinder 2)	
309	844717	MOTOR, Starter		(Steel Ring Gear Only)	
310A	690323	SCREW		(Starter Motor)	
311A	497608	SET, Brush			
349	690238	NUT		(Cylinder Head Cover)	
413	693587	NUT		(Starter Motor)	
503	845016	STRAP, Starter			
506	807120	SCREW		(Carburetor Cover)	
510	496881	DRIVE, Starter		(Steel Pinion Gear)	
573	841310	PLATE-BACK			
577	690795	CABLE-STARTER			
683	691029	NUT		(Starter Solenoid)	
697	692062	SCREW		(Drive Cap)	
697A	691902	SCREW		(Drive Cap) (M8x20mm)	
727	841313	COVER-STARTER DRIVE		(Black)	
732	690688	SCREW		(Starter Drive Cover)	
732A	841233	SCREW		(Starter Drive Cover)	
797	691029	NUT		(Brush Retainer)	
797A	693167	NUT		(Brush Retainer)	
802A	691286	CAP-END			
813A	690635	CLAMP			
865	843768	COVER-AIR GUIDE			
879	807460	COVER, Carburetor/EFI			
920	557067	SOLENOID, Starter			
1051A	691124	RING, Retaining			
1090	691293	RETAINER-BRUSH			

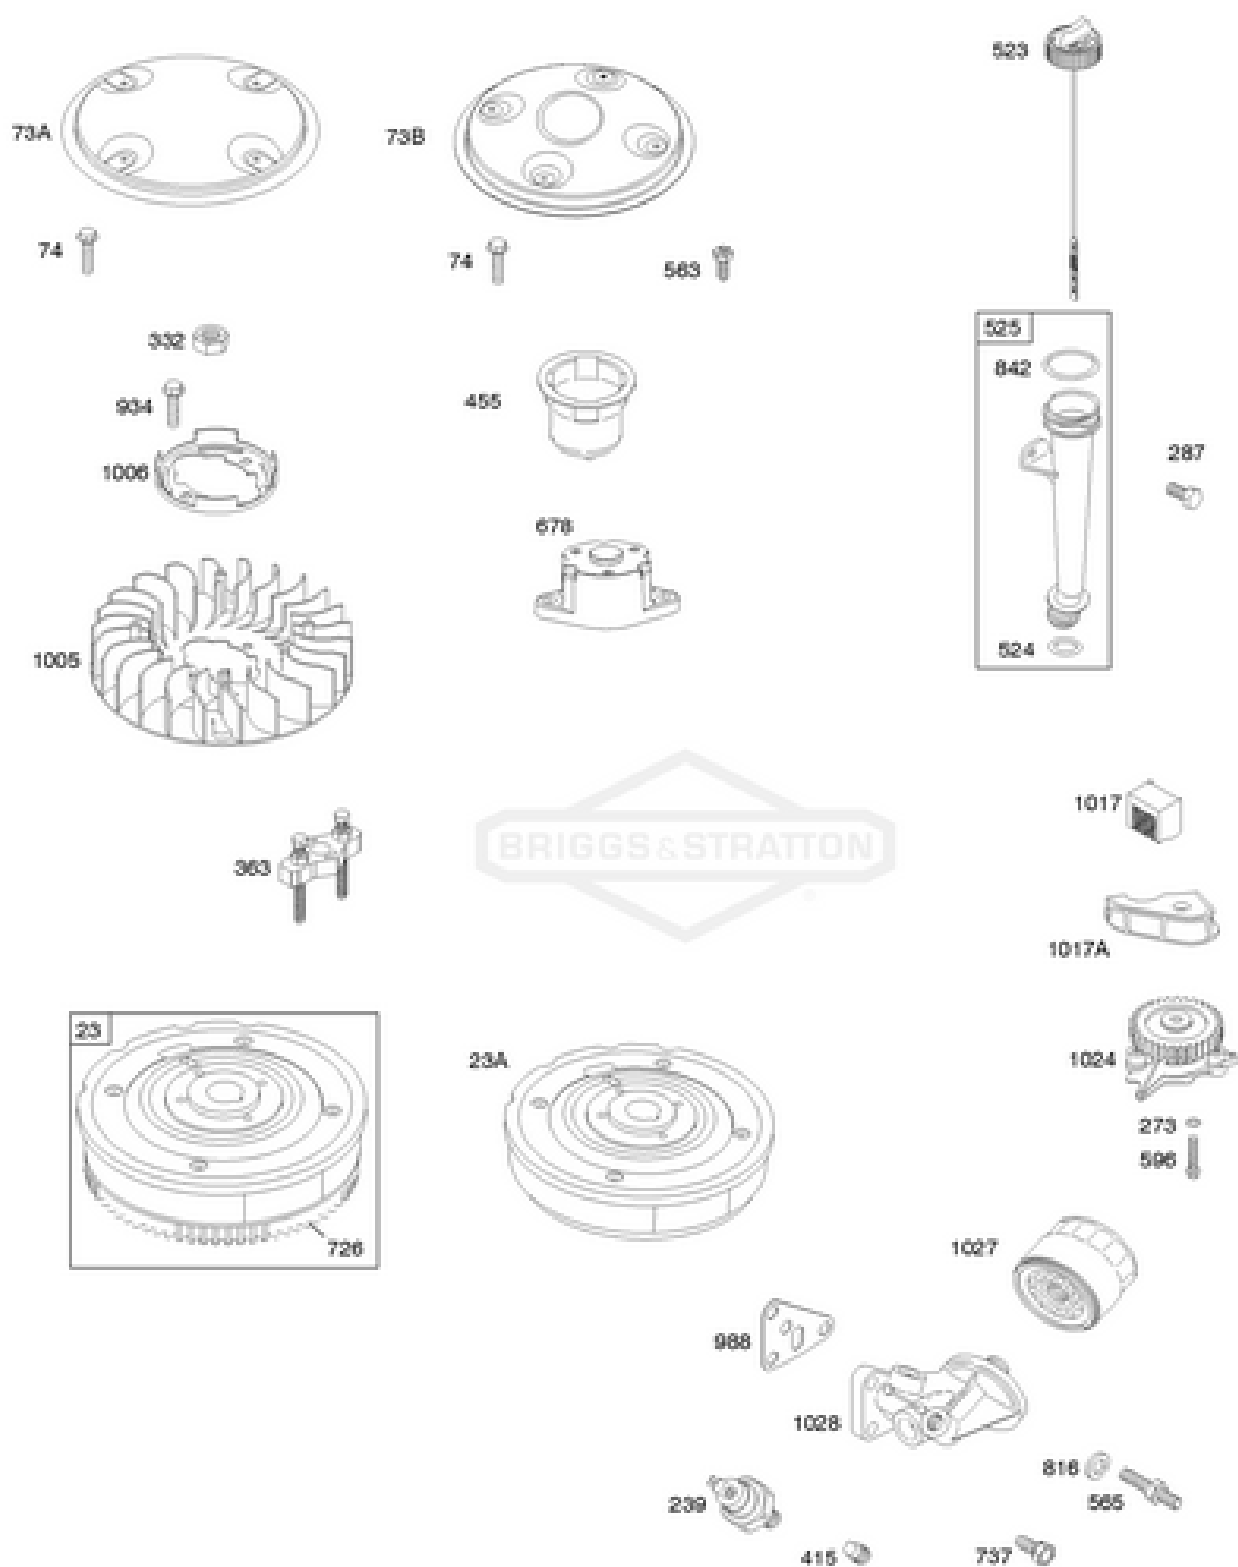

Ref #	Part #	Description	Qty	Context Note	Foot Note
23	809236	FLYWHEEL		(Steel Ring Gear)	
23A	841957	FLYWHEEL			
73A	841440	SCREEN, Rotating		Used After Code Date 04011800	
73A	807111	SCREEN, Rotating		Used Before Code Date 04011900	
73B	841662	SCREEN, Rotating		Used Before Code Date 04011900	
74	841441	SCREW		(Rotating Screen) Used After Code Date 04011800	
74	807112	SCREW		(Rotating Screen) Used Before Code Date 04011900	
74	841441	SCREW		(Rotating Screen)	
239	690233	SWITCH, Oil Pressure			
273	690681	SEAL, O-Ring		(Oil Pump)	
287	807084	SCREW		(Dipstick Tube)	
332	690887	NUT		(Flywheel)	
363	19203	PULLER, Flywheel			
415	794903	PLUG		(Square Head)	
455	841794	CUP, Flywheel			
523	692101	DIPSTICK			
524	692053	SEAL, O-Ring		(Dipstick Tube)	
525	692093	TUBE-DIPSTICK			
563	841735	SCREW		(Debris Screen Guard)	
565	690682	STUD		(Oil Filter Adapter)	
596	691492	SCREW		(Oil Pump) (M6x30mm)	
678	841730	SPACER		(Rewind)	
726		Gear-Ring		(Steel)(See Reference 23 for Service)	
737	690679	SCREW		(Oil Filter Adapter)	
816	690706	WASHER		(Oil Filter Adapter)	
842	691870	SEAL, O-Ring		(Dipstick Tube)	
934	691058	SCREW		(Fan Retainer)	
988	692063	GASKET, Oil Adapter			
1005	809179	FAN, Flywheel		Used Before Code Date 04011900	
1005	841439	FAN, Flywheel		Used After Code Date 04011800	
1006	690452	RETAINER, Fan			
1017	690878	SCREEN, Oil Pump		Used Before Code Date 08022700	
1017A	843960	SCREEN, Oil Pump		Used After Code Date 08022600	
1024	843959	PUMP, Oil		Used After Code Date 08022600	
1024		Pump-Oil		Used Before Code Date 08022700	
1027	842921	FILTER, Oil			
1028	808235	ADAPTER, Oil Filter			

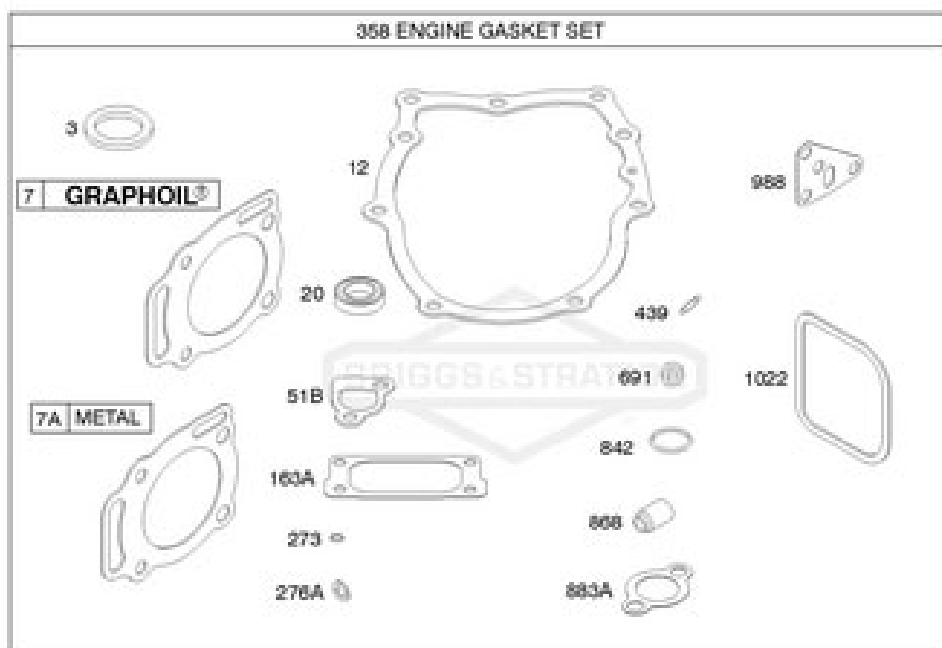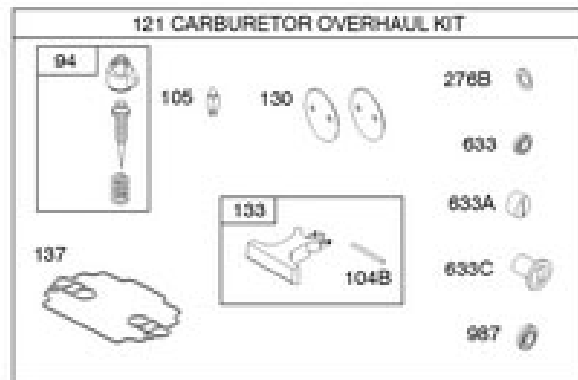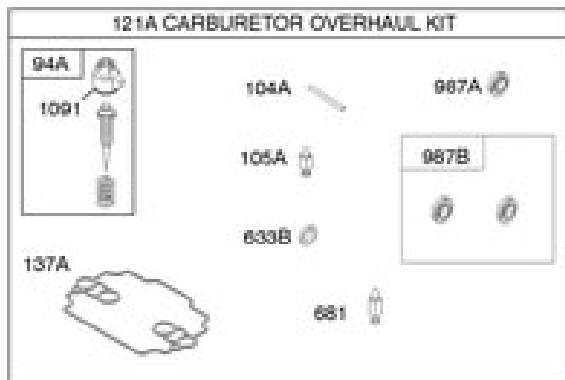

Ref #	Part #	Description	Qty	Context Note	Foot Note
3	805101S	SEAL, Oil		(Magneto Side)	
7	690888	GASKET, Cylinder Head		(Graphoil)	
7A	805653S	GASKET, Cylinder Head		(Metal)	
12	846487	GASKET, Crankcase			
20	805049S	SEAL, Oil		(PTO Side)	
51B	692035	GASKET, Intake		(Manifold/Heads)	
94	842883	KIT, Idle Mixture			
94A	842870	KIT, Idle Mixture			
104A	690882	PIN, Float Hinge			
104B	690739	PIN, Float Hinge			
105	809759	VALVE, Float Needle			
105A	808798	VALVE, Float Needle		(19mm)	
105A	797410	VALVE, Float Needle		(16mm)	
121	843787	KIT, Carburetor Overhaul			
121A	842873	KIT, Carburetor Overhaul		Used Before Code Date 05022800	
130	809642	VALVE, Throttle			
133	809637	FLOAT, Carburetor			
137	809645	GASKET, Float Bowl			
137A	693711	GASKET, Carburetor Body			
163A	692087	GASKET, Air Cleaner		(Used With Metal Air Cleaner Base)	
273	690681	SEAL, O-Ring		(Oil Pump)	
276A	807085	WASHER, Sealing			
276B	806476	WASHER, Sealing			
358	808390	GASKET SET, Engine		Used Before Code Date 01120300	
358	841188	GASKET SET, Engine		Used After Code Date 01120200	
439	692154	O-RING, Oil Gallery		(Crankcase Cover/Sump or Cylinder Assembly)	
633	809641	SEAL, Choke/Throttle Shaft			
633A	809644	SEAL, Choke/Throttle Shaft			
633B	690722	SEAL, Choke/Throttle Shaft			
633C	809638	SEAL, Choke/Throttle Shaft			
681	808798	VALVE, Float Needle			
691	842826	SEAL, Governor Shaft			
812	692055	NUT		(Rocker Cover)	
842	691870	SEAL, O-Ring		(Dipstick Tube)	
868	691963	SEAL, Valve			

Ref #	Part #	Description	Qty	Context Note	Foot Note
883A	691613	GASKET, Exhaust			
987	809639	SEAL, Choke/Throttle Shaft			
987A	691000	SEAL-THROTTLE SHAFT			
987B	808183	SEAL, Choke/Throttle Shaft			
988	692063	GASKET, Oil Adapter			
1022	806039S	GASKET, Rocker Cover			
1091	691516	CAP, Limiter			
1095	841191	GASKET SET, Valve			